
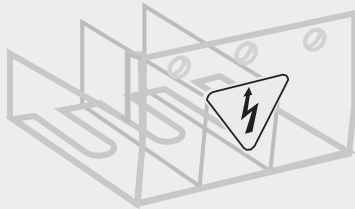


—
INSTALLATION INSTRUCTION



Terminal shroud

OTS40...125_

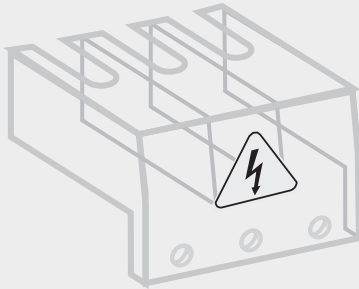





Terminal shroud

OTS40...125_

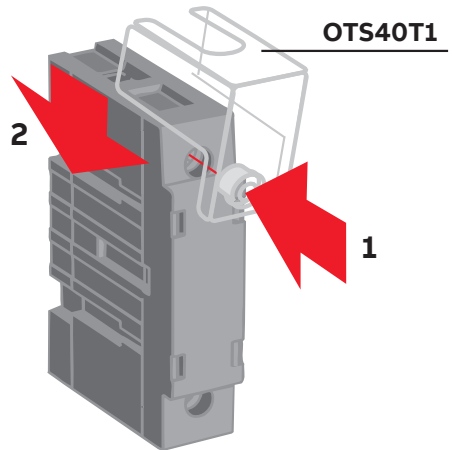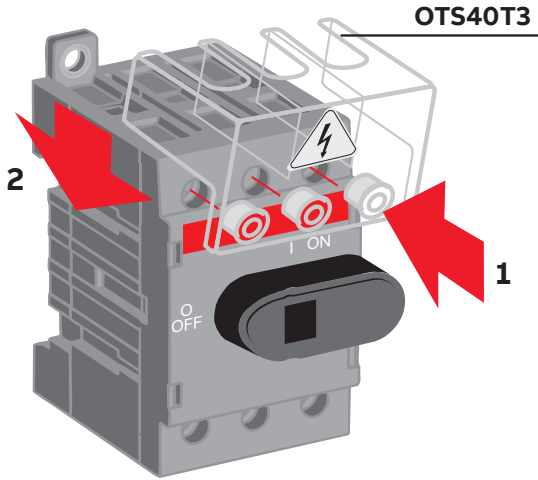

Terminal shroud

OTS40...125_

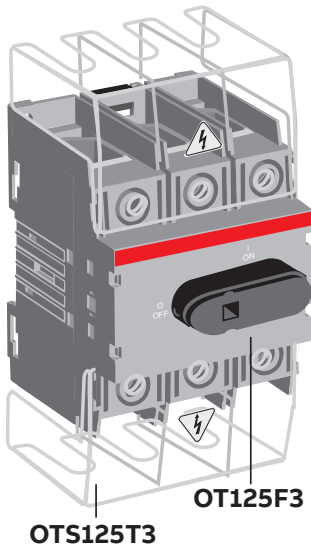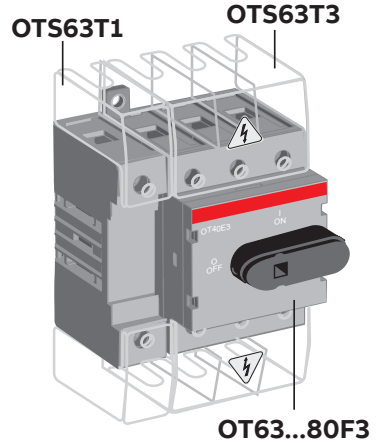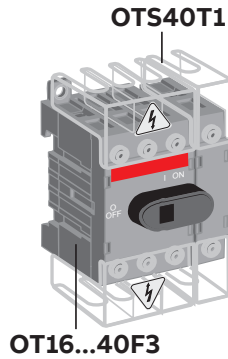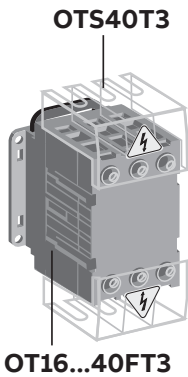

Listed for use with

OTS40T1:

OT16, -25, -40F4, -FT4

OTP_40FP, -FD

OTS40T3:

OT16, -25, -40F3, -FT3

OTS63T1:

OT63F4, -80F4, -63FT4, -80FT4

OTP_80FP, -FD

OTS63T3:

OT63F3, -80F3, -FT3

OTS125T1:

OT100F4, -125F4, -FT4

OTP_125FP, -FD

OTS125T3:

OT100F3, -125F3, -FT3



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage