
 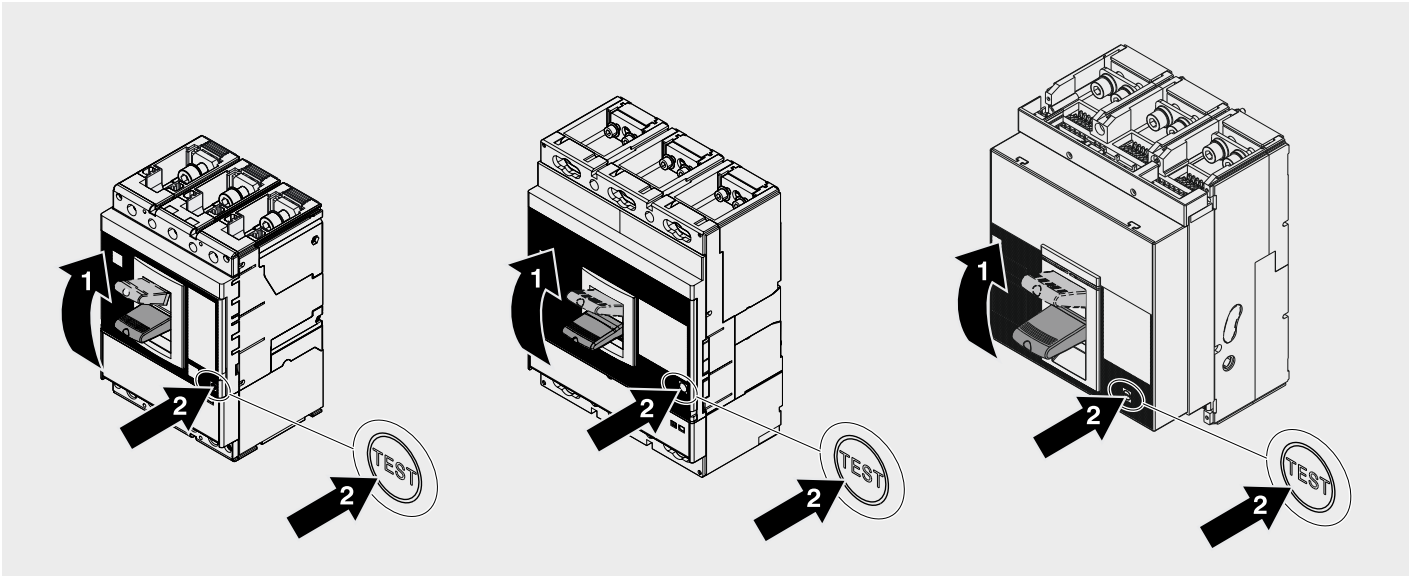
 
 


SACE Tmax XT

RHL - Blocco a chiave (in aperto) per frontale/maniglia rotante XT5-XT6-XT7
RHL - Key lock for XT5-XT6-XT7 front/rotary handle (open position)
RHL - Schlüssellverriegelung (AUS-Stellung) für Frontplatte/Drehhebelantrieb XT5-XT6-XT7
RHL - Verrouillage par clé (en position ouverte) pour frontal/poignée rotative XT5-XT6-XT7
RHL - Bloqueo con llave (posición de abierto) para frontal/mando giratorio XT5-XT6-XT7
RHL - 钥匙锁(分闸位置) 手柄操作机构前面板/旋转手柄操作机构 XT5-XT6-XT7


XT5-XT6-XT7



													
XT5 RHD XT5 RHE_B XT5 FLD		1	1	1	1		1			1	1	1	1
XT6-XT7 RHD XT6 RHE_B XT7 RHE_B XT6 FLD		1	1	1	1	1		1	1		1	1	


1

XT5-XT6 RHD / RHE_B

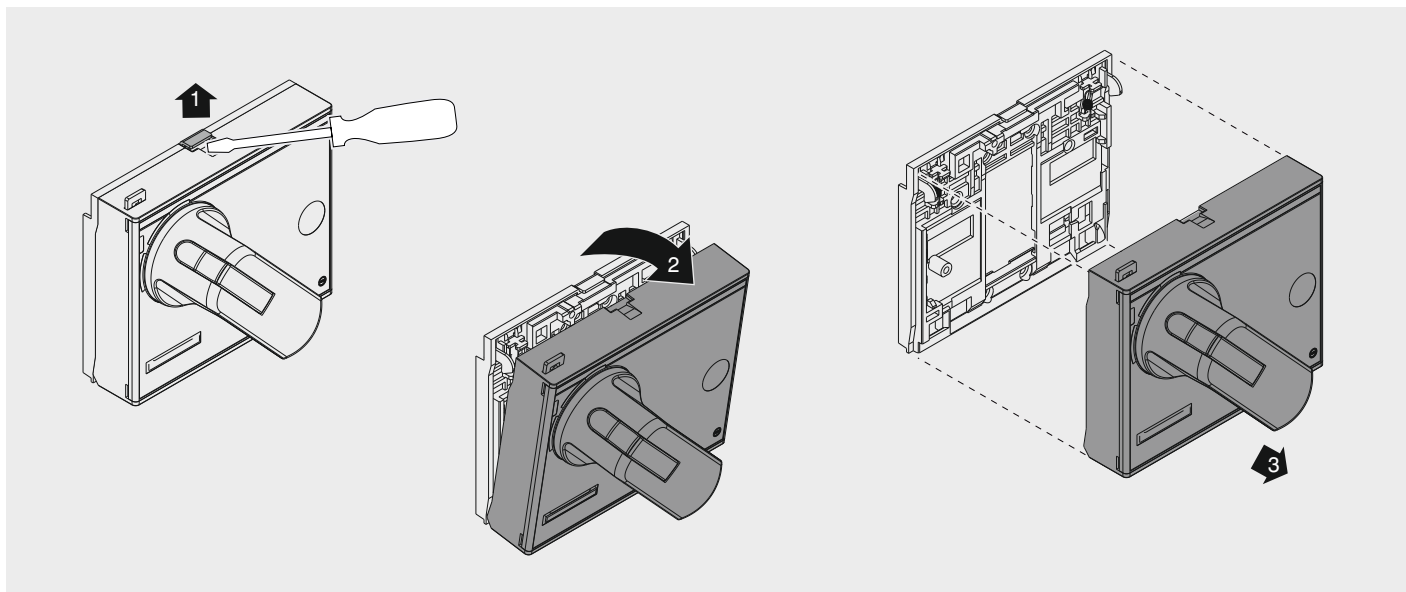


2

XT5-XT6 RHD / RHE_B

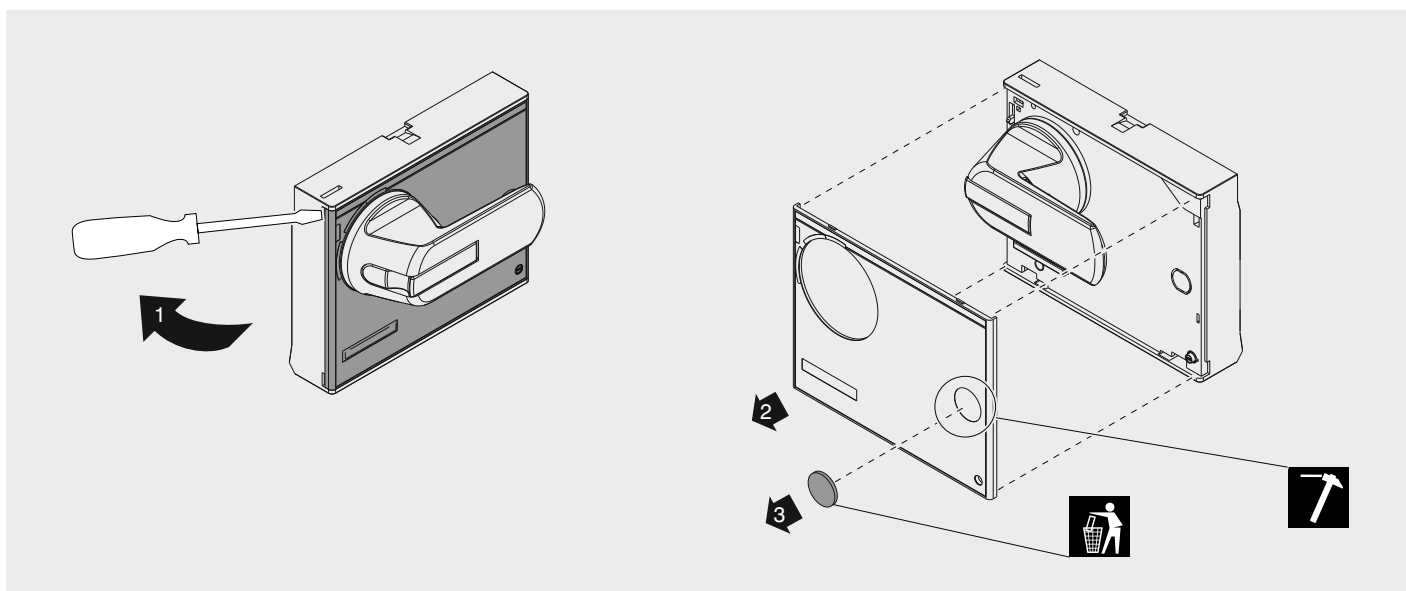


3

XT7 RHD / RHE_B

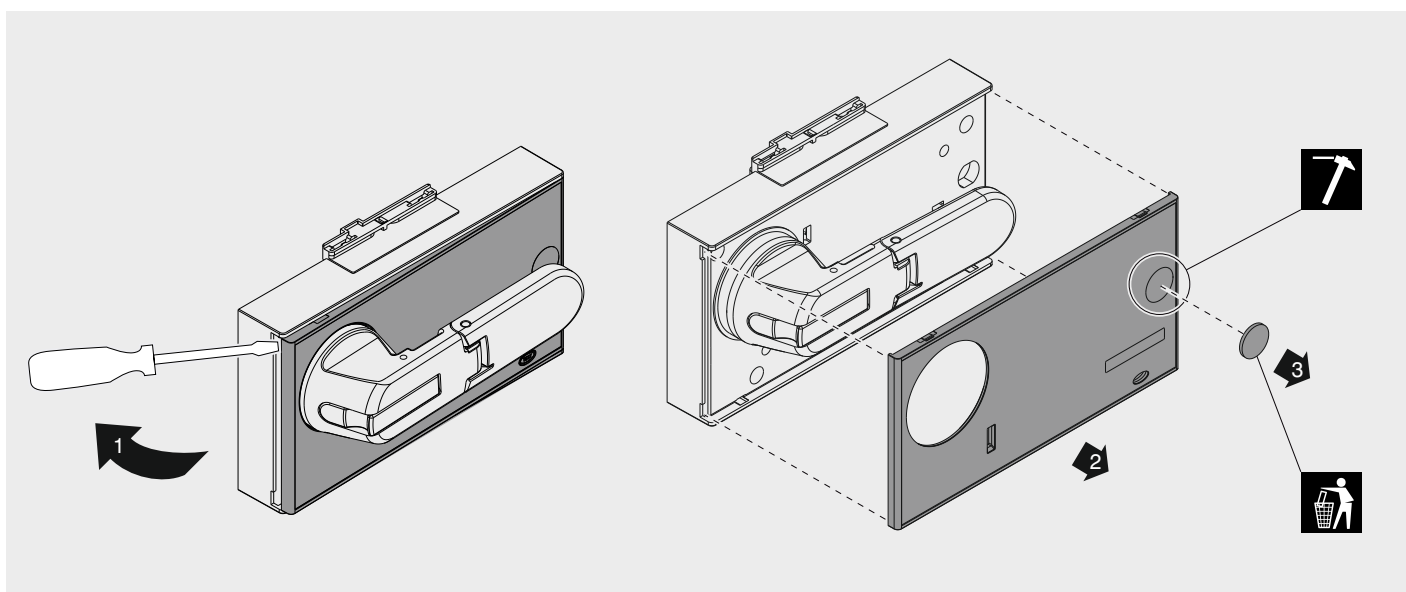


4

XT7 RHD / RHE_B

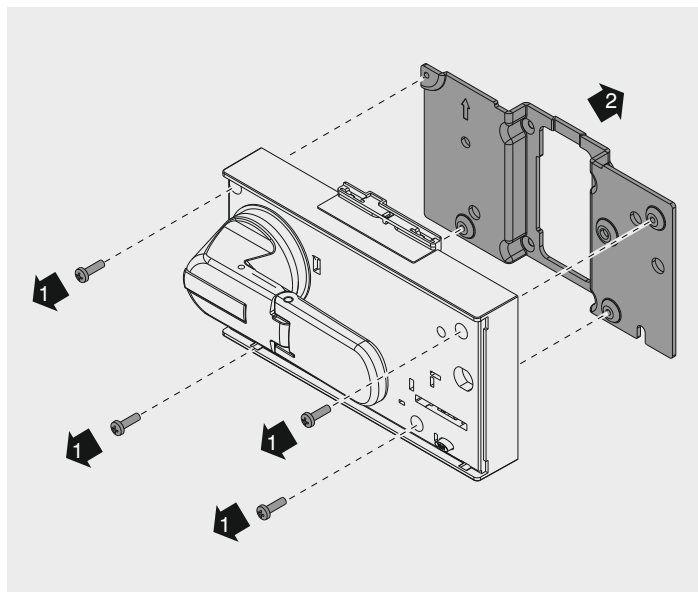


5

XT5 RHD / RHE_B

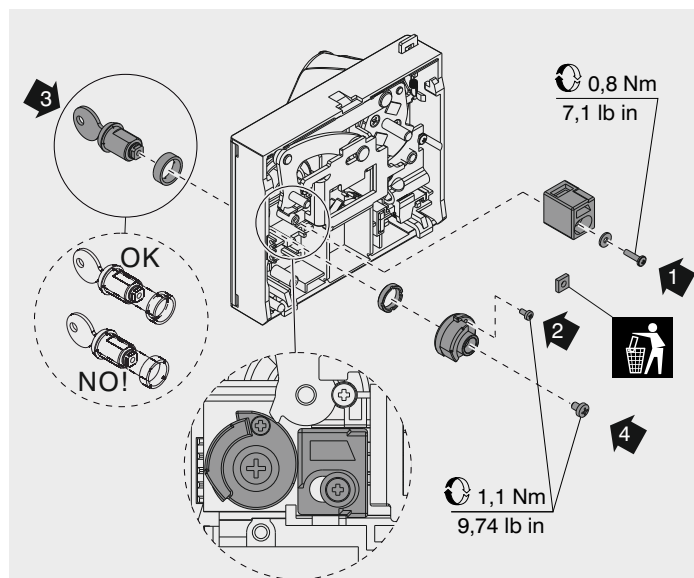


6

XT6-XT7 RHD / RHE_B

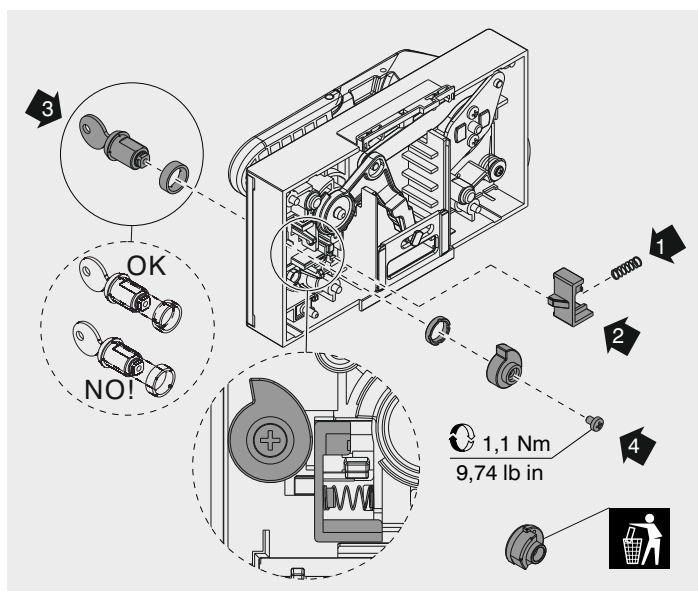

7

XT5-XT6-XT7 RHD / RHE_B

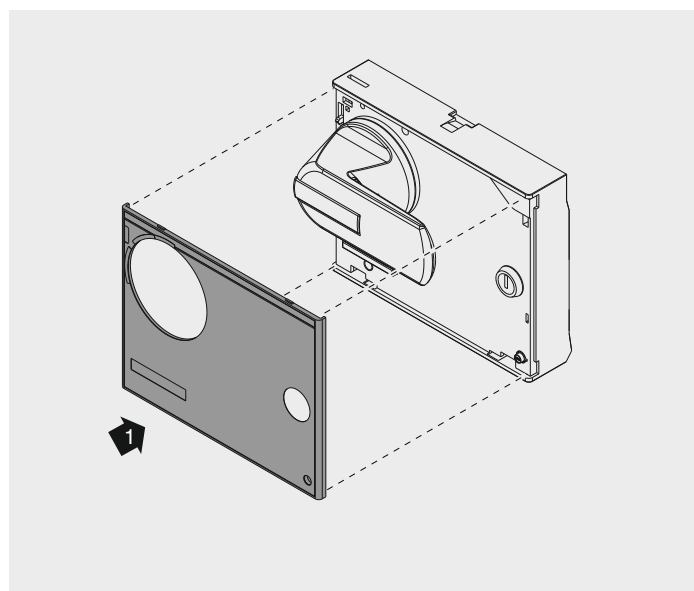

8

XT5-XT6 FLD

