



—
INSTALLATION INSTRUCTION

Fourth pole


OTP_40FP, OTP_40FD

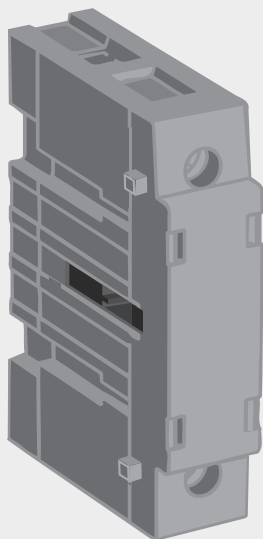

OTP_40FP

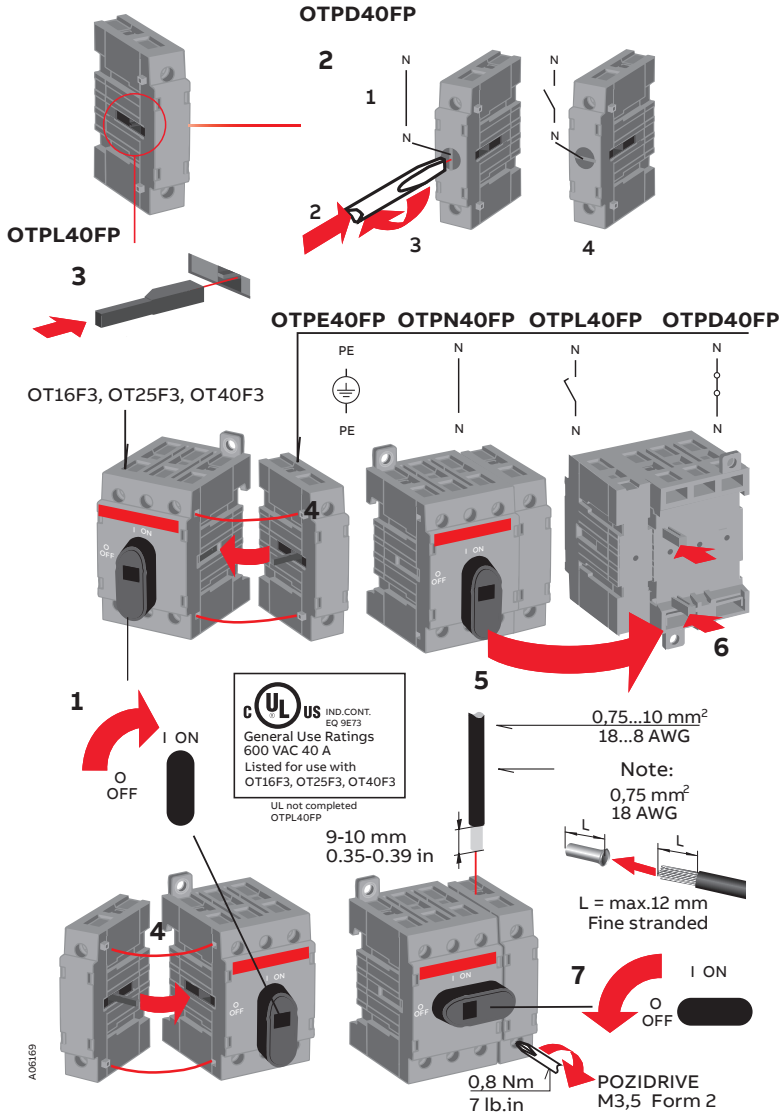

OTP_40FD

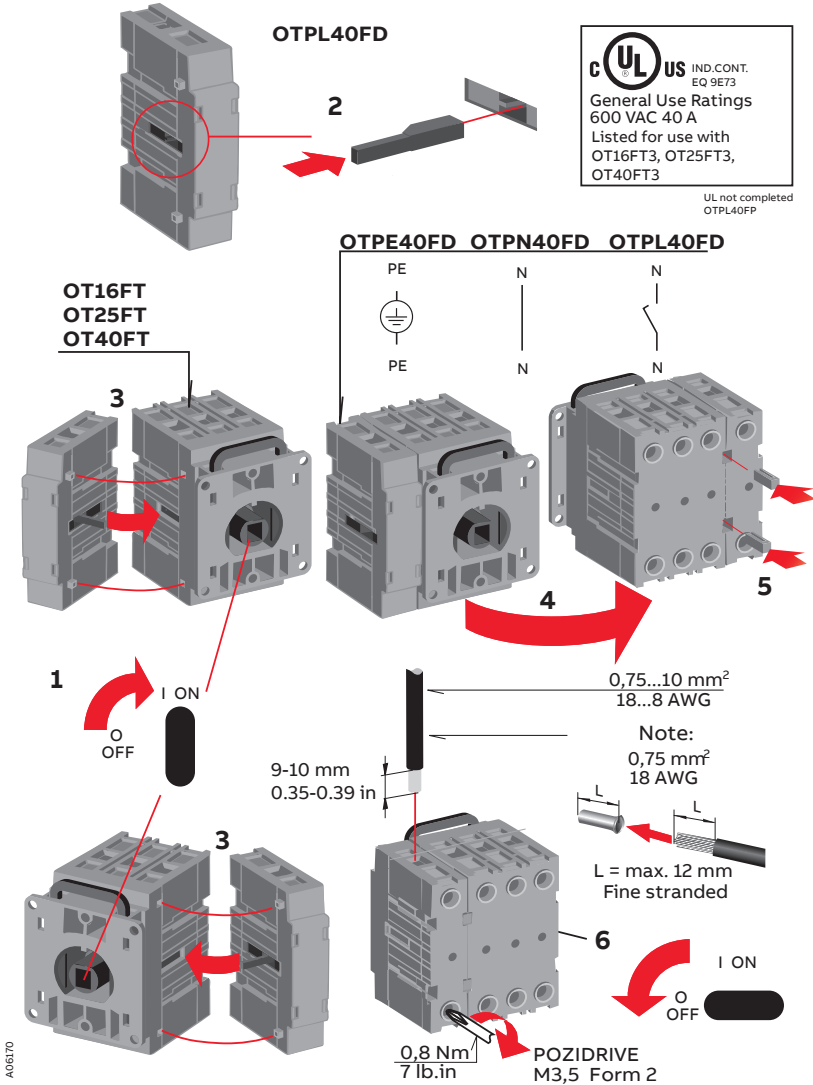



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage