


NOTES:

1. Prior to any installation in a classified hazardous location, verify installation methods by the Control Drawing referenced on the product's name tag.
2. To access the BTU XMTR termination board, remove the I/O Junction Box cover.

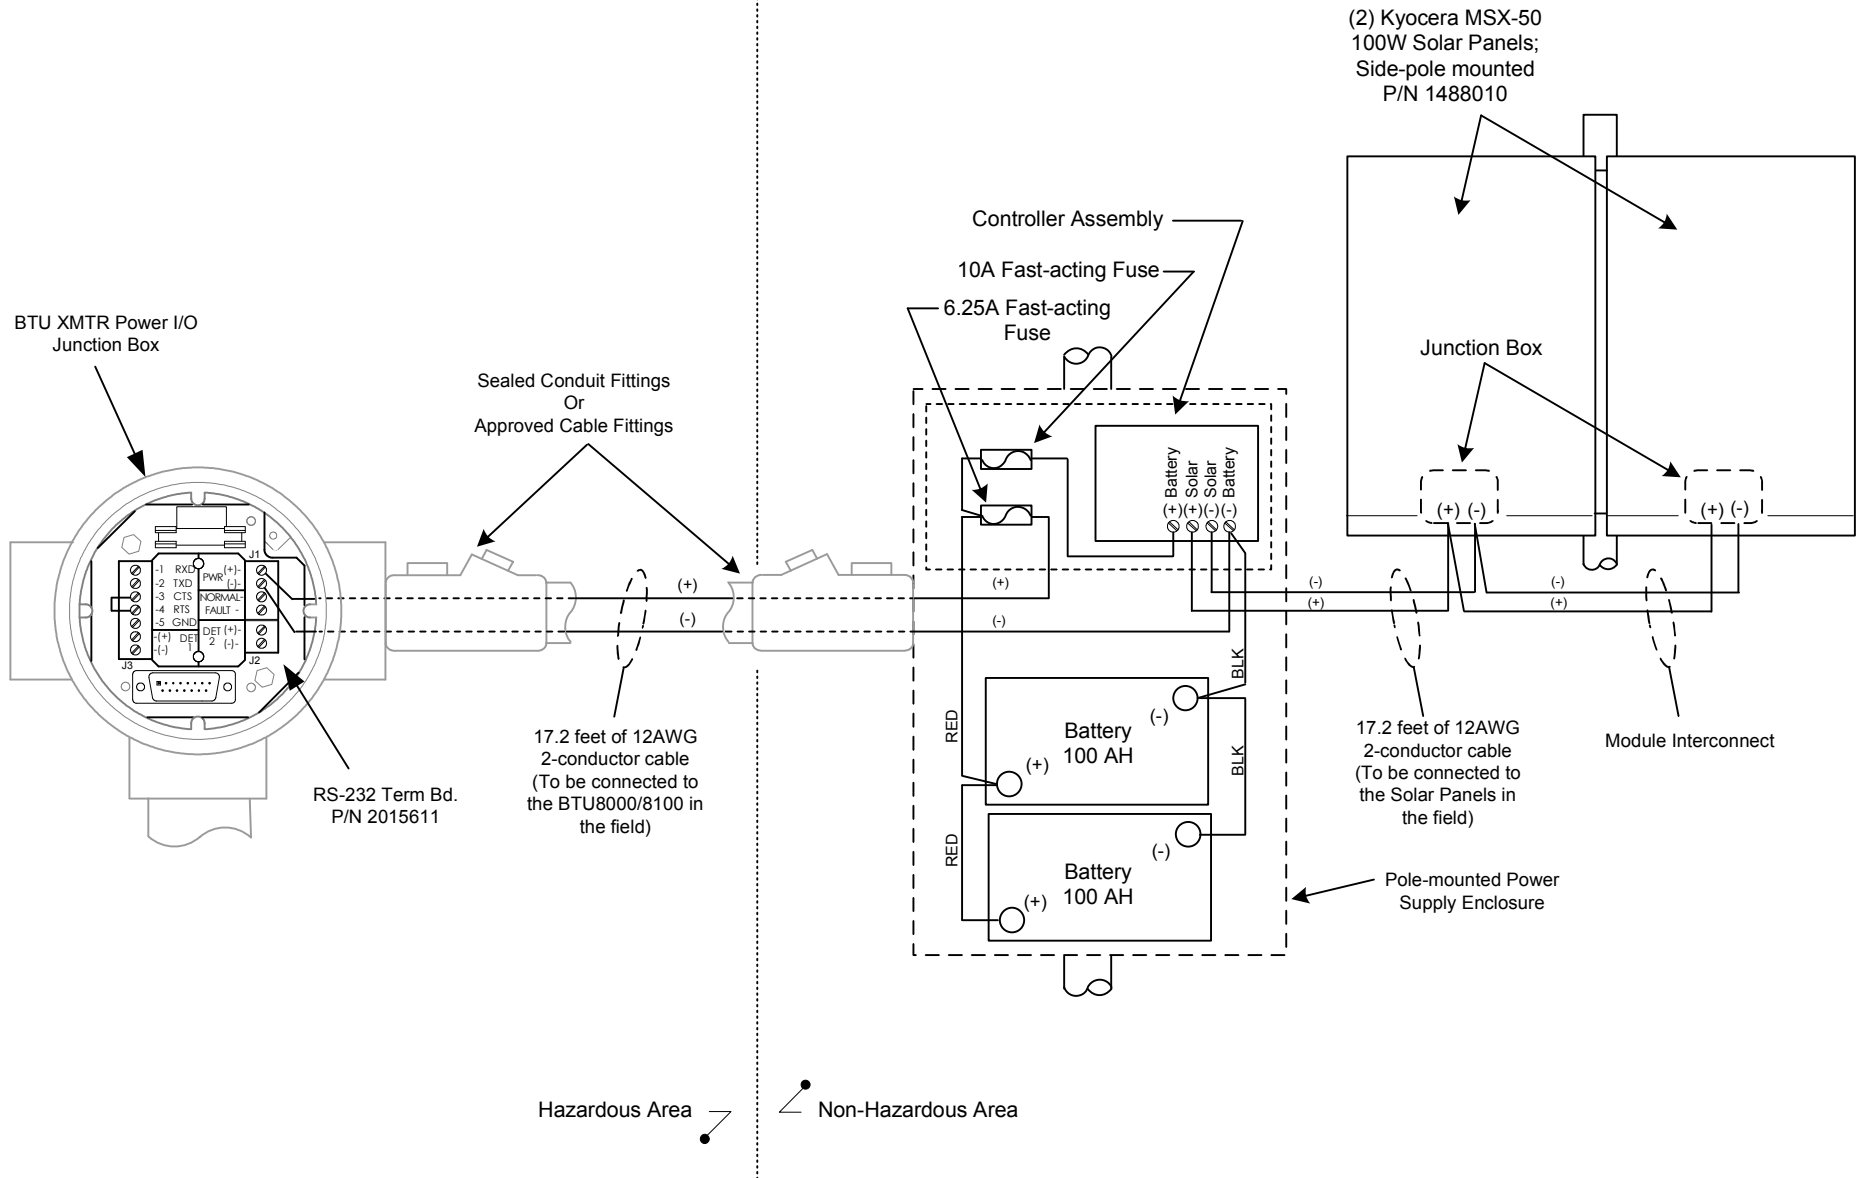

REF: N/A

<b>ABB</b> TOTALFLOW Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
	L18394	UD	BTU8000/8100 RS-232 TERM (2015611 BD) TO SOLAR/BATTERY POWER SUPPLIES (100W)	2102463	AA	1 OF 1