


# SACE Tmax XT



PLL - Blocco a lucchetti XT5-XT6 in aperto.  
PLL - Padlock device XT5-XT6 in open position.  
PLL - Schlobverriegelung XT5-XT6 für ausgeschaltet.  
PLL - Verrouillage par cadenas XT5-XT6 portatif en position ouverte.  
PLL - Bloqueo por candados XT5-XT6 portátil en posición de abierto.  
PLL - 开关断开位置挂锁装置 XT5-XT6

XT5 - XT6

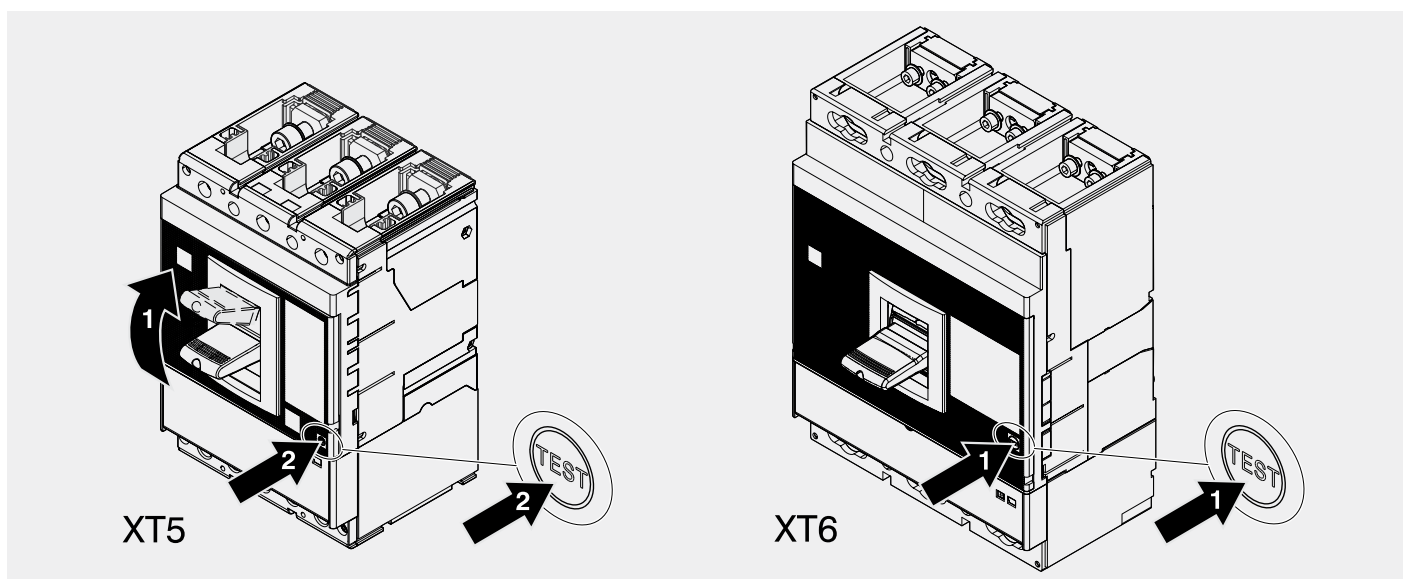


XT5

XT6

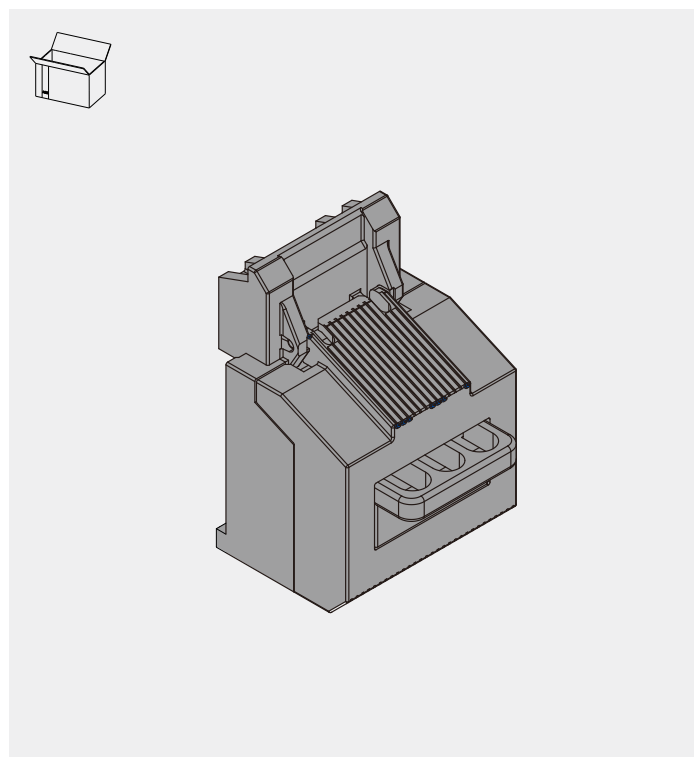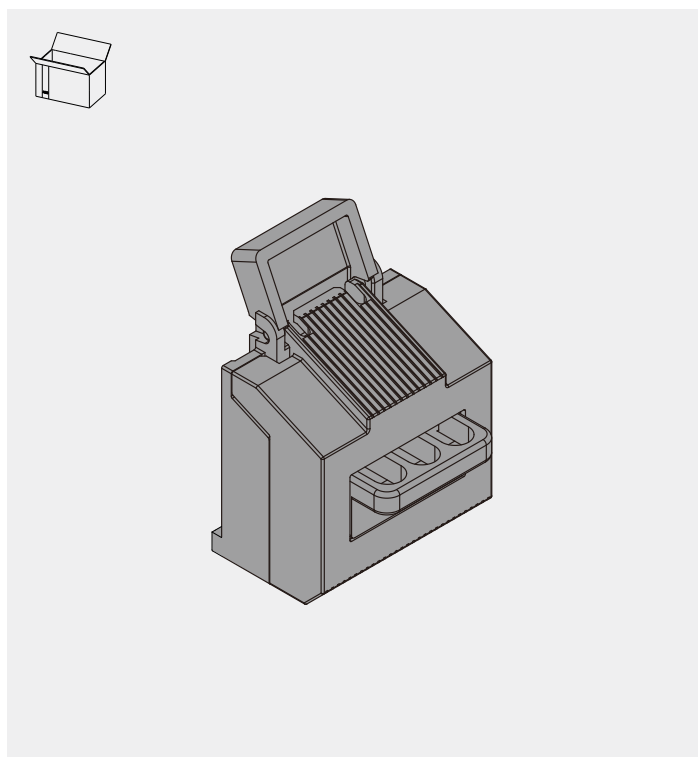


1

⚠ PLL should only  
be installed  
when CB is OFF

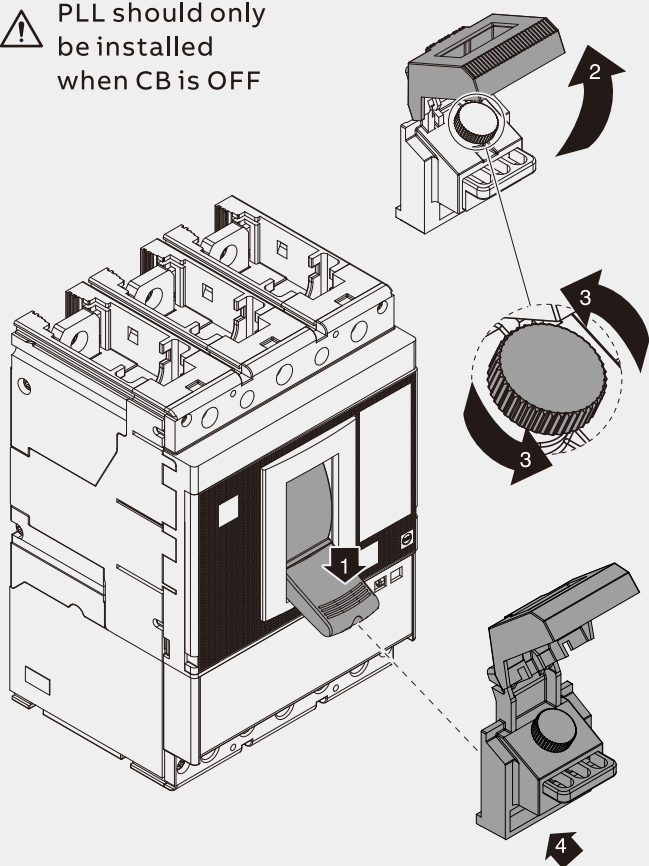


2

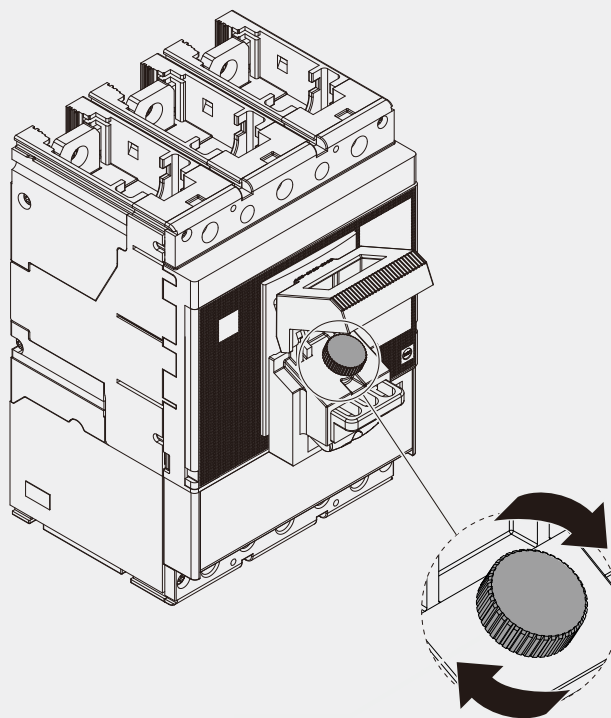


⚠ Please make sure the Screw has  
been tightened enough  
in case the lock function fails.

3

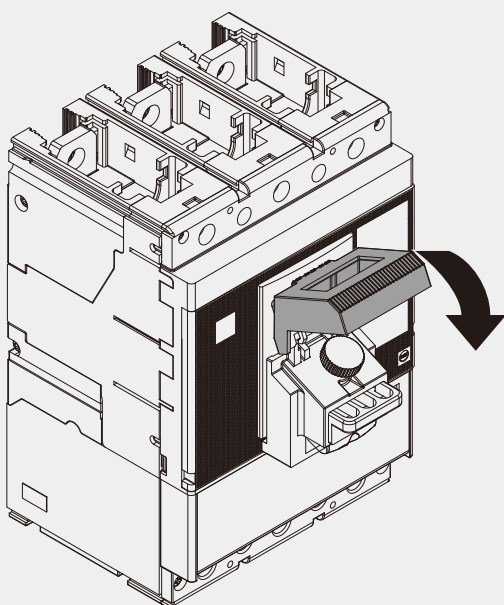

4

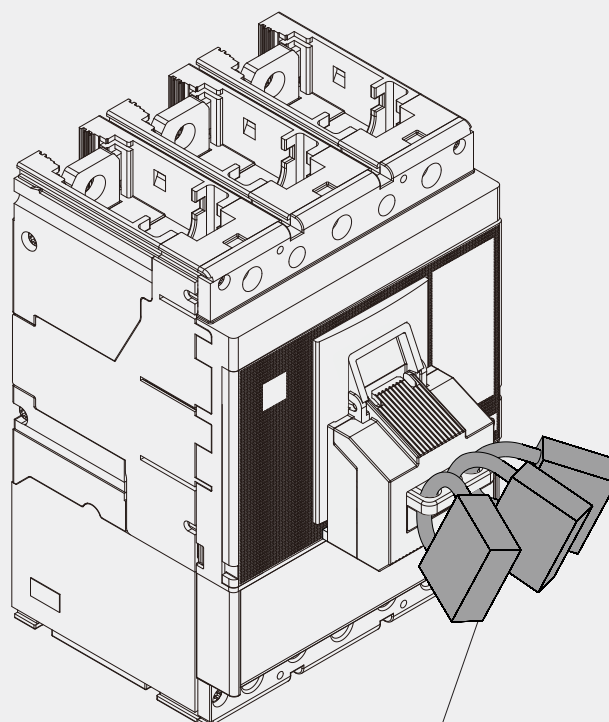

Max 3,  $\varnothing 5\sim 8\text{mm}$   
Max 3,  $\varnothing 0.2''\sim 0.31''$