

UNISAFE SPARES PARTS LIST

SL NO.	ARTICLE NO.	DESCRIPTION	PHOTO
1	2292996-1	WHEEL : IN 2292 0002-3	
2	1VYN302901-AC	SHROUD FOR UNISAFE CUB.[2BUSBAR,2JUMPER]	
3	1VYN302901-AR	SHROUD FOR UNISAFE CUB.{4//BUS,4//JUMP}	
4	1VYN302901-Z	RACK.HANDLE	

5	1vyn402950-044	LOWER CONTACT PLATE	
6	1VYN402950-347	CONTACT PIN-1600A	
7	587912-001	Guide Rail (RHS) 2000/600	
8	587913-001	Guide Rail (LHS) 2000/601	
9	590664-001	CONTACT PIN-DIA 35(1250A)	
10	GCE8004944R0101	BUSHING-2000A/VHE12S/UNISAFE	
11	T27031-05	HANDLE FOR UNISAFE CUBICLE 750/600mm	

12	1VYN402901-XE	ADJ BREAKER TRANSPORT TROLLEY-UNI600-750	 <p>ADJ BREAKER TRANSPORT TROLLEY-UNI600-750</p>
13	1VYN402901-XG	ADJ CB TRANSPORT TROLLEY-UNISA750/2000A	 <p>ADJ CB TRANSPORT TROLLEY-UNISA750/2000A</p>
14	590171-801	MONOBLOCK FOR -1250A	 <p>MONOBLOCK FOR -1250A</p>
15	590171-802	MONOBLOCK FOR -1600A	 <p>MONOBLOCK FOR -1600A</p>
16	1VYN402950-377	CONTACT PIN-2000A	<p>PHOTO PENDING</p>