



RENEWAL PARTS BULLETIN

High voltage contactors IC302C

CA2, CA4, CB2, CB4, CD5, CD6

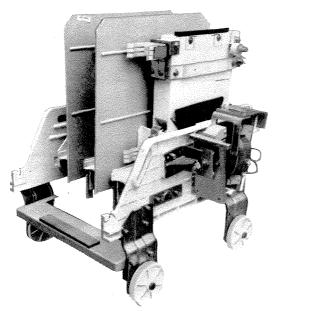

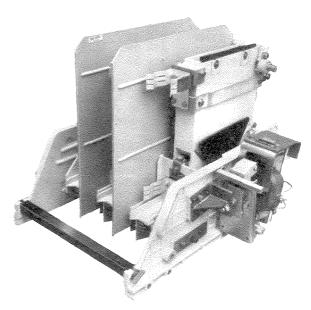

PARTS RECOMMENDED FOR NORMAL STOCK

NOTE: The current is identified by the number following the voltage letter in the IC designation.

EXAMPLE: IC302CA4AA1A47AA2A is a 400 amp. contactor.

Ref.	No. Re IC302C-		Catalog Number	Description
No.	200 Amp	400 Amp	Number	
1	1	1		Operating coils (see table on page 2)
27	3	3	2416875P1	Compression spring (CA or CB) for moving contact
27	3	3	174A4412P1	Compression spring (CD5 or CD6) for moving contact
2 8	3	3	167A8898G1	Main moving contact assembly
31	3	-	188A5535G2	Shunt for moving contact
31	-	3	188A5535G1	Shunt for moving contact
34	3	3	167A8898G1	Main stationary contact
62	78	78	104B9931P1	Arc barrier plate (IC designations AA thru AD only)
62	36	36	177B3253P3	Arc barrier plate (IC designations BA thru BD only)
62	36	36	177B3253P4	Arc barrier plate (IC designations BA thru BD only)
88	12	12	125A4278P3	Contact finger for stab-on (IC designations AA, AB, AD, BA, BB, and BD only)
89	3	3	174AA4422P1	Spring for stab-on finger

In 2018 ABB acquired GE Industrial Solutions. IC302C is now serviced and maintained by ABB. If you need spare parts or your installed equipment has aged and requires modernization or replacement – ABB is your first point of contact (look for contact details on the last page).

REF. NO. 1 - OPERATING COILS - 1 Required

NOTE: The operating coil is identified by the number following the armature in the IC designation.

EXAMPLE: IC302CA4AA1A47AA2A requires coil No. 47, Cat. No. 1D300G124.

	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		11	Number	No.	Number
3 1D30 4 1D30 5 1D30 6 1D30 7 1D30 8 1D30 9 1D30 10 1D30 11 1D30 12 1D30 13 1D30	0G102 15 0G103 16 0G123 17 0G105 18 0G106 19 0G107 22 0G108 23 0G109 24 0G110 25 0G111 26 0G112 28 0G113 29 0G114	1D300G103 1D300G104 1D300G115 1D300G116 1D300G117 1D300G120 1D300G121 1D300G121 1D300G122 1D300G123 1D300G123 1D300G124	30 31 32 33 34 35 38 39 40 41 42 46	1D300G125 1D300G126 1D300G127 1D300G108 1D300G122 1D300G128 1D300G129 1D300G107 1D300G103 1D300G130 1D300G131 1D300G133	47 48 49 50 51 52 53 54 55 56 57	1D300G124 1D300G134 1D300G135 1D300G136 1D300G133 1D300G135 1D300G145 1D300G138 1D300G144 1D300G139 1D300G140 1D300G151

LATCH ASSEMBLY ONLY - 1 Required

NOTE: The latch assembly is identified by the form letter following the coil number in the IC designation.

EXAMPLE: IC302CA4AA1A47AB3A requires Form Letter AB, Cat. No. 136C1754G9.

Form	Catalog	Form	Catalog	Form	Catalog	Form	Catalog
Letter	Number	Letter	Number	Letter	Number	Letter	Number
AB* AC*	136C1754G9 136C1754G7	AD* AE	136C1754G8 136C1754G5	AF AG	136C1754G7 136C1754G8	АН	136C1754G9

^{*} Wire harness (Cat. No. 7128R73) must be ordered separately, if used.

#### LATCH AND TRIP BAR ASSEMBLIES - 1 Required

NOTE: The latch and trip bar assemblies are identified by the form letter following the coil number in the IC designation.

EXAMPLE: IC302CA4A1A47BB3A requires Form Letter BB, Latch Assy Cat. No. 136C1754G9 and Trip Bar Assy Cat. No. 685D963G1.

Form	Latch Assy.	Trip Bar Assy.	Form	Latch Assy.	Trip Bar Assy.
Letter	Cat. No.	Cat. No.	Letter	Cat. No.	Cat. No.
BA BB¶ BC¶ BD¶	136C1754G9 136C1754G7 136C1754G8	685D963G1 685D963G2 685D963G2 685D963G2	BF† BG† BH†	136C1754G7 136C1754G8 136C1754G9	685D963G3 685D963G3 695D963G3

[¶] With wire harness.

#### TRIP SOLENOID FOR LATCH ASSY (1 Required)

NOTE: The solenoid is identified by the number following the latch assembly form letter in the IC designation.

EXAMPLE: IC302CAA4A47AB3A requires Solenoid No. 3, Cat. No. CR9500A201CM7A.

Solenoid Form No.	Solenoid Catalog Number	Solenoid Coil Catalog Number	Rectifier Catalog Number	Solenoid Form No.	Solenoid Catalog Number	Solenoid Coil Catalog Number	Rectifier Catalog Number
2	None used						
3	CR9500A201CM7A	15D2G55		53	CR9500A201CM2A	15D2G2	
4	CR9500A201CM8A	15D2G69		54	CR9500A201CM3A	15D2G3	
5	CR9500A201CM3A	15D2G80		55	CR9500A201CM7A	15D2G7	*** *** *** ***
6	CR9500A201CM5A	15D2G88		75	CR9500A201CM9A	15D2G14	IC3500A403C2
***************************************				76	CR9500A201CM11A	15D2G3	IC3500A403C6

[†] Without wire harness.


NOTE: The arc chute and buse base assembly is determined by the ninth and tenth digit in the IC designation.


EXAMPLE: IC302CA4AA1A47AA requires arc chute and fuse base assembly designation AA. Listed below are the different designation and voltage ratings.

#### ARC CHUTE AND FUSE BASE ASSEMBLY

AA - 2300 VOLT, FUSE, STABS, NON U.L.
AB - 4800 VOLT, FUSE, STABS, NON U.L.
BA - 2300 VOLT, FUSE, STABS, U.L. FOR LIMITAMP ONLY
BB - 4800 VOLT, FUSE, STABS, U.L. FOR LIMITAMP ONLY
DA - 7200 VOLT, FUSE, STABS, NON U.L.

Ref. No.			l for BA		esig. DA	Catalog Number	Description
	<del> </del>						
	3	3	-	-	-	177B8794G1	Arc chute assembly
	-	-	-	-	3	177B8794G3	Arc chute assembly
	-	-	3	3	-	177B8794G8	Arc chute assembly
30	3	3	3	3	3	501D196P1	Arc chute side, left
31	3	3	3	3	3	501D196P2	Arc chute side, right
32	78	78	-	_	-	104B9931P1	Arc barrier plate
32	-	-	36	36	36	177B3253P3	Arc barrier plate
32	-	-	36	36	36	177B3253P4	Arc barrier plate
63	3	3	3	3	3	149B1784G2	Barrier holder
34	3	3	3	3	3	177B3273P1	Chute insert, left
65	3	3	3	3	3	177B3273P2	Chute insert, right
66	3	3	3	3	3	245A1235P1	Deflector
	3	3	3	3	3	151A7164P10	Mica tubing
67	3	3	3	3	3	139B8999G1	Chute block assembly
68	6	6	6	6	6	577A177P5	Mounting bolt for chute block
69	- 3	3	3	3	3	188A5554G1	Nut plate
••	_	_	_	_	_	245A4320P1	Shims (as required) (for tight bundle of barriers)
	_	_	_	_	_	245A4320P2	Shims (as required) (for tight bundle of barriers)
	3	3	3	3	_	194B8338G1	Arcing horn assembly, front
	"	-	0	-	3	194B8338G3	Arcing horn assembly, front
70	3	3	3	3	-	194B8340P1	Main arcing horn
70	-	-	-	-	3	194B8340P4	Main arcing horn
	1	6	6	6	6	1	Spacer
71	6			1	1	259A8786P1	
72	3	3	3	3	3	259A5550P1	Hooked shaped end plate
	6	6	6	6	6	N57P16008C6	Screw fastening spacer or end plate to horn (10-32, 1/2 in., pan )
			_				pro. fin.)
	3	3	3	3	-	194B8338G2	Arcing horn assembly, rear
	-	-	-	-	3	194B8338G4	Arcing horn assembly, rear
73	3	3	3	3	-	194B8340P2	Main arcing horn
73	-	-	-	-	3	194B8340P5	Main arcing horn
74	3	3	3	3	-	259A5543P1	Block Block Block Block
74	-	-	-	-	3	259A5543P3	Block _ / 9 4 B 8 55 7 .
74A	3	3	3	3	-	259A5543P2	Block
74A	_	_	-	-	3	259A5543P4	Block
75	6	6	6	6	6	259A8786P1	Spacer
76	3	3	3	3	3	194A8337P1	Spacer
77	2	2	2	2	2	139B7619P1	Barrier between arc chutes
78	1	1	1	1	1	158C1805G1	Fuse base and shunt plate assembly
79	3	3	3	3	3	193A7125P4	Lower fuse support
80	3	3	3	3	3	139B8179P12	Ground strap
81	6	6	6	6	6	N22P23024B6	Mounting screw for ground strap and bus spacer (5/16-18, 1/2 in., hex
01		١	"	"	"	11221 2002 100	pro. fin.)
82	9	3	3	3	3	139B8179P3	Nut block
	3 3	3	3	3	3		Support for nut block
82A		3	3		3	188A5292P1	Saddle
83	3	1	1	3		194A7125P1	
83A	-	-	-	-	3	205A9613P6	Bus spacer
83B	-	-	-	-	3	205A9613P5	Shorting bar
	3	3	3	3	9	577A177P5	Mounting screw for saddle, bus spacer, and shorting bar
84	1	1	1	1	1	116C9907P1	Chute tie bar
84A	1	1	1	1	1	194A6900G2	Shaft assembly for left-hand arc chute assembly
84B	1	1	1	1	1	194A6900G1	Shaft assembly for right-hand arc chute assembly
85	1	1	1	1	1	118C9908P4	Operating shaft left-half for shaft assembly
	1	1	1	1	1	116C9908P3	Operating shaft right-half for shaft assembly
	3	3	3	3	-	195B7789G1	Stab assembly
	-	-	-	-	3	195B7789G2	Stab assembly
88	12	12	12	12	12	125A4278P	Contact fingers
89	3	3	3	3	3	174A4422	Spring
90	12	12	12	12	12	125A4279P1	Spacer for stab-on finger
91	3	3	3	3	3	125A4280P1	Retainer
92	3	3	3	3	3	125A4281P1	Retainer
	6	6	6	6	6	125A4281P1 125A4282P1	Retainer
93 94	3	3	3	3	3	N22P21048B6	Screw for contact finger assembly
	6	6	6	6	6	284A403P7	Mica washer for screw
95		1		1	1		
96	3	3	3	3	3	577A251P2	Lock nut for screw
97 98	6	6	6	6	6	233A2394P	Spacer
	6	6	6	6	6	N22P21010B6	Bolt

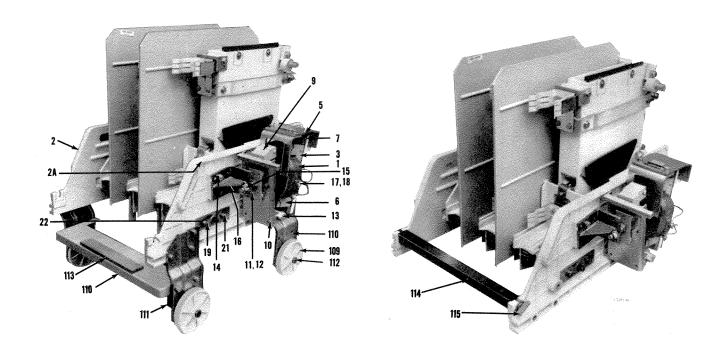


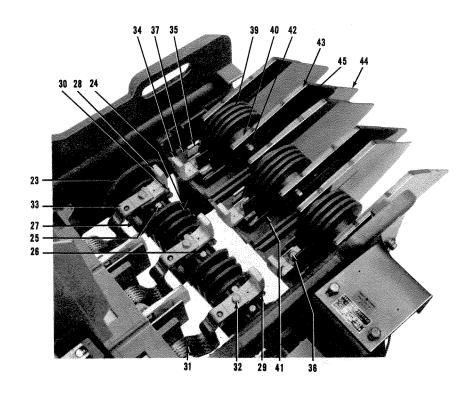

NOTE: The current is identified by the number following the voltage letter in the IC designation.

EXAMPLE: IC302CA4AA1A47AA2A is a 400 amp. contactor.

Ref.		or IC302C-	Catalog	Description
No.	200 Amp	400 Amp	Number	
2	1	1	918D625P1	Frame, right-side
2A	1	1	157C8183P1	Frame, left-side
$\frac{3}{4}$	1 2	$\frac{1}{2}$	233B523G6 284A962P2	Magnet frame for operating coil Pole shader
5	1	1	218A5593G1	Coil holder
6	1	ı 1	188A5536P1	Clamp for magnet frame, bottom
7	1	1	188A5536P2	Clamp for magnet frame, top
	1	1	194A7822P /	Plate for lower clamp
	2	2	N22P25032B6	Bolt fastening clamp to magnet frame (3/8-16, 2 in. hex. hd, pro. fin.)
	2	2	218A6880P1	Washer for bolt Armature assembly, complete with armature, bracket and fulcrum
9	1 1	1 1	139B7623G1 233B523G2	Armature assembly, complete with armature, bracket and furcium  Armature
10	1	1	139B8161G1	Armature bracket
11	1	ı î	284B964P2	Fulcrum
12	2	2	N22P25012B6	Bolt fastening fulcrum to bracket
13	2	2	PFC #41439	Bolt fastening armature bracket to shaft
	2	2	PFC #43685	Lock washer for Ref. 13
14	1	1 1	139B8162G1	Armature stop Stop screw for armature stop
15 16	1 2	2	188A5553P1 577A177P2	Mounting bolt for stop assembly
17	2	2	188A5542P1	Terminal for operating coil
18	2	2	N144P16010B6	Screw with lock washer for terminal (10-32, 5/8 in. pan hd, pro. fin.)
	2	2	8617022P1	Terminal clamp
	2	2	N144P16008B6	Screw with lock washer for mounting terminal clamp
19	2	2	188A5527G1	Stub shaft assembly
$\begin{array}{c} 21 \\ 22 \end{array}$	4	4 2	577A176P2 286A113P27	Mounting bolt for stub shaft assembly Bolt for end of stub shaft
23	2 2	2	188A5537G1	Bearing plate assembly for moving contact shaft
20	2	2	181A4108P2	Collar for end of moving contact shaft
	4	4	245A6128P1	Set screw for collar
24	1	_	187B5651G1	Shaft assembly (CA or CB) complete, with shaft, moving contacts,
0.4			107776100	support, shunt, spring and adjusting screw
24	1	-	187B5651G2	Shaft assembly (CD5) complete, with shaft, moving contacts, support shunt, spring and adjusting screw
24	_	1	139B7622G7	Shaft assembly (CD6) complete with shaft, moving contacts, support
		1		shunt, spring and adjusting screw
	1	1	685D924G1	Main shaft
25	3	3	188A5539P1	Pin for moving contact support
26	6	6	N22P21012B6	Bolt fastening moving contact support to shaft
$\begin{array}{c} 27 \\ 27 \end{array}$	3	3 3	2416875P1 174A4412P1	Compression spring (CA or CB) for moving contacts Compression spring (CD5 or CD6) for moving contacts
28	3 3	3	167A8898G1	Moving contact assembly
29	3	3	139B8165G1	Support for moving contact
30	3	3	188A5551P1	Adjusting screw for contact support
31	3	-	188A5535G2	Shunt for moving contact
31	-	3	188A5535G1	Shunt for moving contact
32	3	3	577A177P4	Bolt fastening moving contact and shunt to support
33	3	3	N22P23016B6	Screw for contact support to position shunt (5/16-16, 1 in. hex. hd, pro. fin.)
34	3	3	167A8898G1	Stationary contact
35	3	3	139B8171G1	Clip for arcing horn
36	3	-	286A113P44	Bolt for clip
36	-	3	577A177P2	Bolt for clip
37	1	1	685D952P1	Base
	3 3	3 3	N22P23022B6	Bolt fastening blowout coil to base Tee nut for bolt
39	3	- -	577A328P2 233A2386G1	Blowout coil
39	-	3	167A8581G1	Blowout coil
	3	3	139B8170G1	Core for blowout coil
40	3	3	194A1454P2	Insulation tube for core
4.5	2	-	233A2387P1	Back-up strip for blowout coil
42	6	6	PFC #40265	Insulation washer for pole pieces
43 43	3	3	171B3144G1 139B8168G1	Pole piece, left-hand Pole piece, left-hand
43 44	3	-	171B3144G2	Pole piece, rest-nand Pole piece, right-hand
44	-	3	139B8168G2	Pole piece, right-hand
45	6	-	N22P23016B6	Bolt fastening pole pieces to core (5/16-18, 1 in. hex. hd, pro. fin.)
45	-	6	N647P23012C6	Bolt fastening pole pieces to core $(5/16-18, 3/4 \text{ in. button hex. hd})$
	6	6	205A7742P105	Washer for Ref. 45

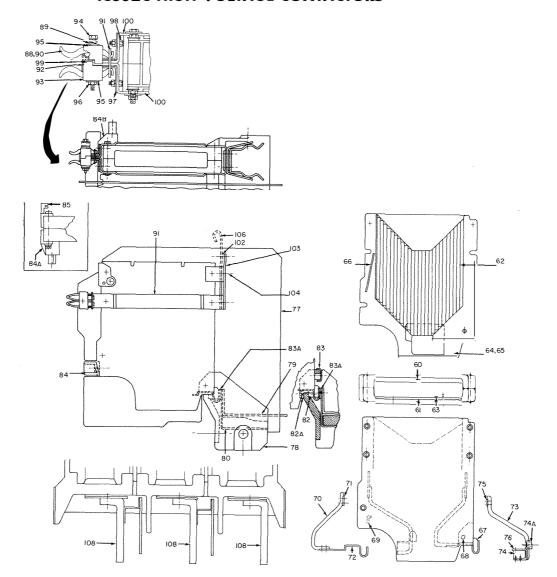

ARC CHUTE AND FUSE BASE ASSEMBLY (CONT'D)

Ref. No.	No. I			IC D BB	esig. DA	Catalog Number	Description
99	6	6	6	6	6	139B8172P6	Spacer
100	6	6	6	6	6	139B8172P12	Connection strap
101	3	3	3	3	-	259A5536G1	Bracket assembly
	_	_	_	_	3	259A5536G2	Bracket assembly
102	3	3	3	3	3	245A8108G2	Spacer
103	3	3	3	3	_	245A8111P3	Strap
	-	_	_	_	3	193A7125P5	Strap
104	12	12	12	12	12	577A176P2	Bolt
	3	3	3	3	3	245A8015P1	Copper strip
106	3	3	3	3	3	273A2755P1	Fuse bracket (if used)
	6	6	6	6	6	N57P16008B6	Mounting screw for fuse bracket (10-32, 1/2 in. pan hd, pro. fin.)
108	2	1	2	1	-	149B1754G8	Intermediate stab assembly
	1	2	1	2	-	149B1754G7	Intermediate stab assembly
	-	-	_	-	3	188A5686P2	Stab
	3	3	3	3	-	195B7789G1	Stab assembly
	-	-	-	-	3	195B7789G2	Stab assembly
	1	1	-	-	-	195B6267G1	Wheel assembly
109	4	4	-	-	-	149B1762P1	Wheel
110	4	4	-	-	-	259A5525P1	Wheel support
	1	1	_	-	-	259A5546G1	Spacer assembly
111	1	1	-	-	-	259A5545P2	Fastener assembly
112	4	4	-	-	-	162A2894P1	Wheel bolt
113	2	2	-	-	-	151A4894P1	Gasket
114	2	2	-	-	-	162A4950P32	Spacer
115	-	-	1	-	-	188A5532G3	Handle
	-	-	2	-	-	188A5688G2	Thumb screw

**ABB Inc.** 

**Electrification Services** 305 Gregson Dr. Cary, NC 27511 USA

For further information, please visit:

www.electrification.us.abb.com/services

For service, call: 1-888-434-7378 (US) 1-540-387-8617 (International)

The information contained in this document is for general information purposes only. While ABB strives to keep the information up to date and correct, it makes no representations or warranties of any kind, express or implied, about the completeness, accuracy, reliability, suitability or availability with respect to the information, products, services, or related graphics contained in the document for any purpose. Any reliance placed on such information is therefore strictly at your own risk. ABB reserves the right to discontinue any product or service at any time.