


—
INSTALLATION INSTRUCTION

Terminal set

OZXT4

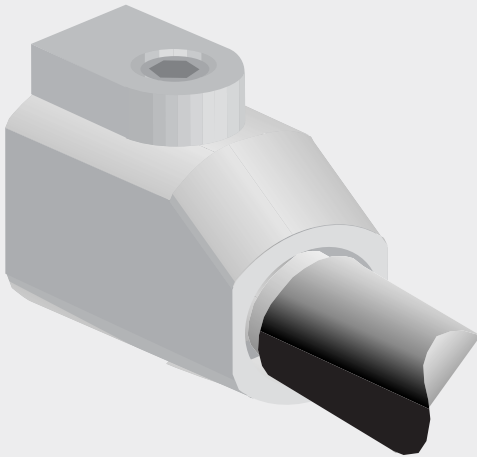


OZXT4

OZXT 4
OZXT 4/ 1



S 201_
S 202_
S 203_
S 204_

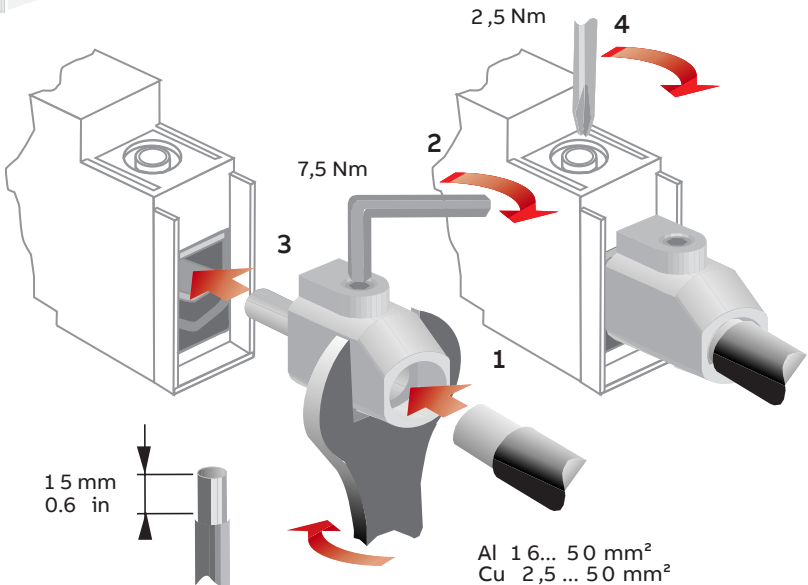



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage