



—
INSTALLATION INSTRUCTION

Fourth pole

OTP_40FP, OTP_40FD

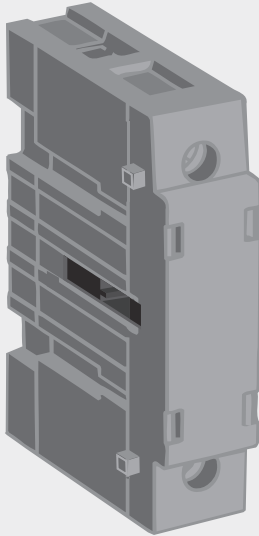

OTP_40FD

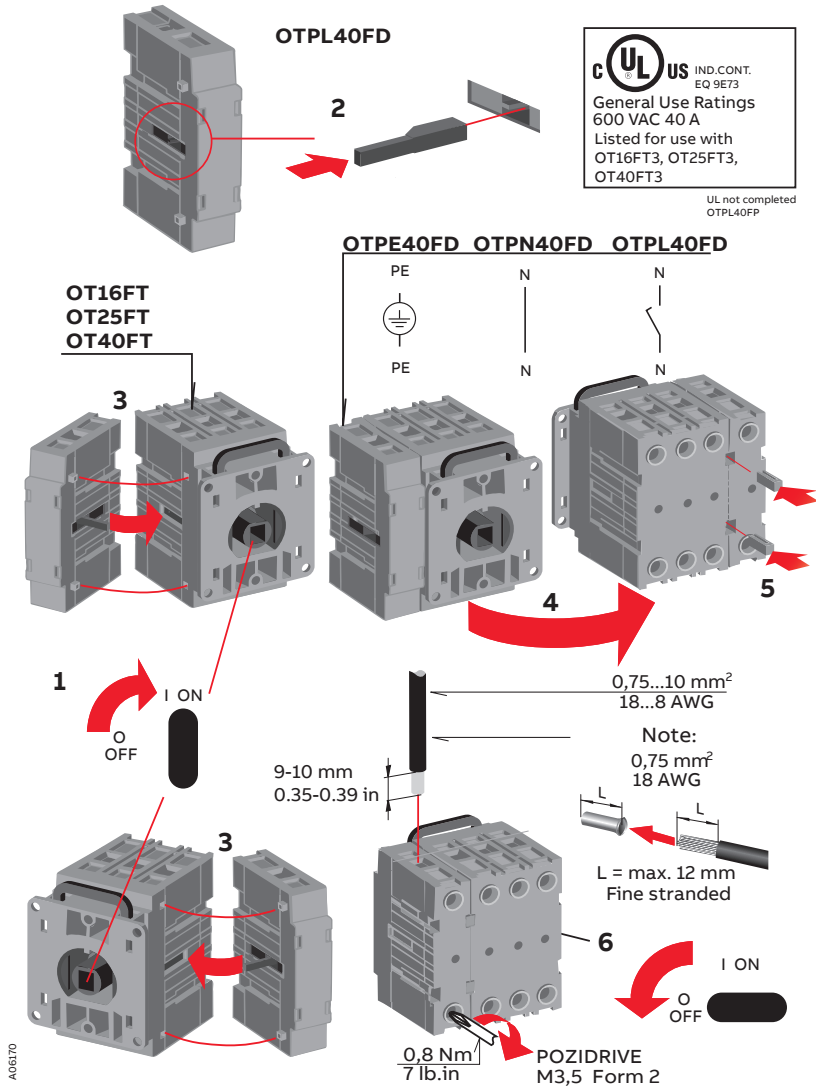



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

[abb.com/lowvoltage](https://www.abb.com/lowvoltage)