


Montasjeveiledning
Installation Instruction
Montage- und Betriebsanleitung

SLK-E
SLK-E
SLK-E

Adapter

NHP 403202P0907 Rev.D

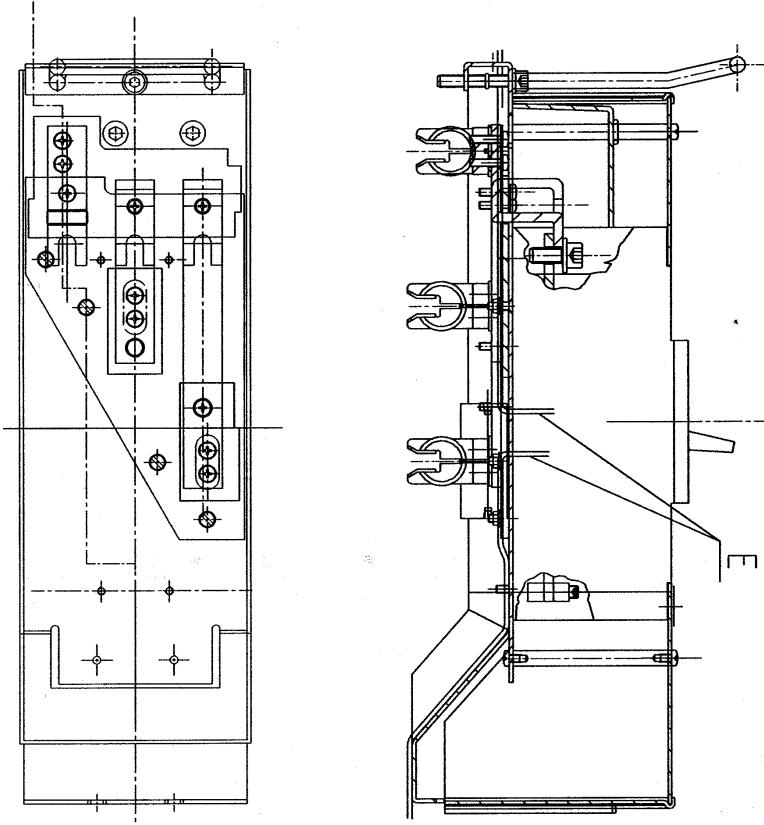

NHP 200714P1

- Signalkabel E føres ut opp/nede på mont.plata i utsparingen på dekk-kappa.
- Signalcable E going out up/down on the mountingplate in puncture to the cover.
- Furung das signalkabeln E hinauf/ab an der montageplatten zu öffnung an die Deckel.

SLK-E
S5



ABB Control AS
P.O. Box 100 - Sentrum
N-3701 Skien, Norway
Tel. : +47 35 58 25 00
Fax : +47 35 58 28 00
E-mail : abb.control@no.abb.com

