


SOFTWARE TOOLS FOR ABB DRIVES

Drive Composer start-up and maintenance PC tool

User's manual

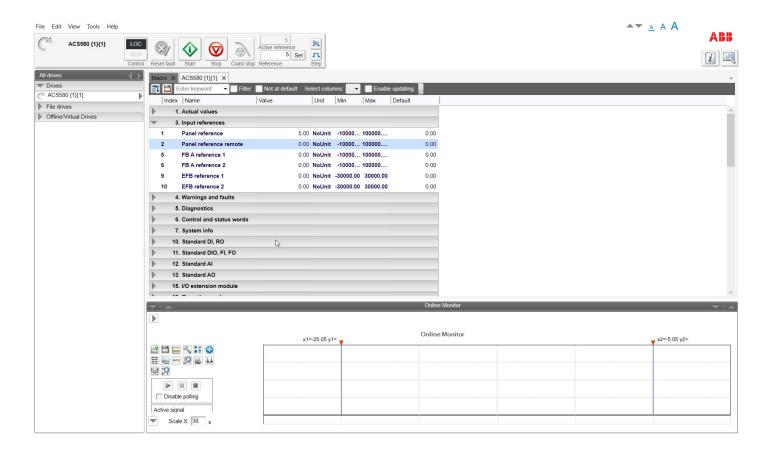

Drive Composer start-up and maintenance PC tool

User's manual



1 Introduction	
Contents of this chapter Purpose of the manual Applicability Compatibility Target audience Terms and abbreviations used in this manual Related documents	11 12 12 13
2 Overview of Drive Composer	
Contents of this chapter Drive Composer PC tool overview Supported features Drive Composer entry Vs pro System requirements Drive Composer hardware requirements Computer minimum hardware requirements Software requirements	17 18 20 20
3 Installation and uninstallation of Drive Composer	
Contents of this chapter Determining the current Drive Composer version Drive Composer update notification Installing Drive Composer with the installer Uninstalling Drive Composer with the installer Activating Drive Composer pro	21 22 23
4 Connections	
Contents of this chapter The USB device drivers Connecting to a drive through an Assistant control panel for the first time Cable type Connecting to drive Connecting to drive with Bluetooth assistant control panel or connectivity panel (Entry)	29 29 30
Changing the language settings	35 37 37
adapter module	39 43 43
Install Client certificate	13

Configuring OPC server Creating HTTPS certificates Checking TLS version Connecting network drives (pro) Panel bus network connection Creating a panel bus with Drive Composer(pro) Checking the visibility of the drives in the panel bus Sharing connection (pro)	49 50 50 50 51 52
5 Main user interface components	
Contents of this chapter	55
Drive Composer UI overview	56
Title bar	57
Closing the application	57
Alternate methods to close the application	
Saving the workspace with unsaved changes	
System menu	
System menu commands description	
Menu bar	
Using the menu bar	
File menu	
File menu commands description	
Edit menu	
View menu	
View menu commands description	
Tools menu	
Tools menu commands description	
Help menu	
Help menu commands	
Drive control panel	
•	
Using the drive control panel to start the drive	
Drives list panel	
Drives list panel: status indication	
Working area	
Using the working area	11
6 Parameter window	
Contents of this chapter	73
Parameter window overview	
Parameter window command icons	74
Parameter window: view parameters	75
Parameters list representation	
Note:	
Navigating parameters and groups	
Updating parameter values	
Hidden parameters	
Alternate formats to view parameters	
Viewing bit names	
Pointer parameters overview	
Inverting a bit pointer	
5 5 - 4.0 pointer	



9	Setting fieldbus data in/out parameters	. 79
	Note:	. 83
Bin	ary parameters	. 83
Sea	rch for groups and parameters	. 82
Cus	stom parameter window	. 83
(Custom parameter window features	. 83
9	Saving custom parameter window	. 83
\	/iewing copied parameter values	. 83
A	Adding parameters to a custom parameter window	. 85
Wo	rking with offline files	. 88
7	Гуреs of offline files	. 88
9	Saving parameters to a parameter file	. 88
(Opening a parameter file (entry)	. 88
(Opening an offline file containing parameter values (pro)	. 89
	Downloading parameter values to a drive	. 89
(Comparing drive data (pro)	. 90
Use	er set functionality (Pro)	. 9:
ι	Jser set overview	. 9:
ι	Jser set system requirements	. 9:
L	_imitations	. 92
9	Starting the user set function	. 93
(Creating user set	. 95
A	Active and unsaved user set	. 96
9	Saving user set	. 96
	Note:	. 96
(Copying user set parameter values	. 97
F	Removing user set	. 98
9	Show/hide user set	. 98
ι	Jser set parameters limitation	. 99
_		
7	Monitor window	
Cor	ntents of this chapter	.10
Mo	nitor window overview	.10
F	Resizing the monitor window	.10
Add	ding parameters/signals for monitoring	.103
1	Monitor window components	
	Configuration and control settings	.105
	Monitor controls	. 106
Zoc	oming the graph	.107
Pan	nning the graph	. 108
Leg	end area functions	. 108
Gra	ph area functions	. 109
	Double cursor tool	. 109
0	Waykanaga handling	
	Workspace handling	
	ntents of this chapter	
	rkspace overview	
Cre	ating a custom parameter set and using it as a default workspace	. 11
9	Event logger	
	ntents of this chapter	115
COL	itents of this chapter	. 113

Event logger view	
10 Diagnostics	
Contents of this chapter	119
Support package	120
Creating a support package	120
Sending a support package to Drive InstalledBase	
Opening a support package (pro)	
Drive application programming license	
System info	
Datalogger (pro)	
Datalogger settings	
Datalogger commands	
Datalogger content configuration	
Datalogger trigger configuration	
Adding a trigger	
Using the level triggers	
Using bit mask trigger	
Uploading triggered or stopped Datalogger data	
Amplitude logger (pro)	
Macro (pro)	
Macro commands	
Macro language	
Simple example	
Additional macro commands	
Target	131
Target name	
ParWrite	131
ParWriteInt	131
ParRead	133
ParReadInt	133
ParReadFromDevice	134
ParReadIntFromDevice	134
Wait	134
EndMacro	135
GotoMacro	135
MessageBox	135
11 Control diagrams (Pro)	
•	407
Contents this chapter	
Control diagrams overview	
Note:	
Viewing control diagrams	137
12 FSO configuration (Pro)	
Contents of this chapter	141
Configuring FSO-12 and FSO-21	141
Note:	141
Hardware connection	
Setting the safety functions with Drive Composer pro	142




Printing the safety functions configuration report (Online)	
Printing the safety functions configuration report (Offline)	
Changing FSO module password	
Reading FSO module parameters	157
13 Drive configuration	
_	150
Contents of this chapter	
Loading firmware (entry)	
Loading firmware (pro)	
Loading firmware to an empty memory unit	
Loading firmware to an empty ZMU memory unit	
Loading firmware to an empty UMU memory unit	
Loading the fieldbus adapter firmware	
Drive backup	
Creating a backup of a drive	
Creating a backup in drive parameter view	
Creating a quick parameter backup (pro)	
Notes:	
Restoring a drive	
Restoring a drive backup	
Restoring a backup in the drive parameter view	
Restoring a set of components/parameters settings (pro)	
Note:	196
14 Other fractions	
14 Other functions	
Contents of this chapter	197
Using Drive Installed Base service	197
Registering an ABB drive to Drive Installed Base service	198
Searching a registered ABB drive in Drive Installed Base	202
Setting the Drive Installed Base server location	204
Creating a service report from Drive Installed Base	205
Create online service report	206
Creating offline report	211
Recovery and prevention of FB14 fault in drive	212
FB14 Recovery pack	213
FB14 Service pack	214
Sending FB14 Service pack event	216
Sending offline FB14 Service pack event	216
FB14 Recovery and Service pack failure	216
Checking the status of Service pack	217
Using the Drive text editor	218
Using the Drive parameter conversion tool (pro)	220
Using the PSL2 data logger (pro)	
Uploading PSL2 data logger files	222
Using the PSL2 data viewer (pro)	
Viewing PSL2 data logger files	
PSL2 Data Viewer instructions	
Adaptive programming	
Locking user interface	
Locking user interface	
Lock state in System info page	

Lock state in Backup/Restore page	
Lock state in Safety settings page (pro)	
Lock state in Drive text editor (pro)	229
15 Annexure A: Creating drive installed base service report template	
Contents of this chapter	231
Creating a template for Drive Installed Base service report (Internal use or	•
Generic wizard step	233
Components	233
Common properties of components	234
ComboBox properties of components	234
Data Grid View properties	235
DataBindings	
DataSource	
DataTarget	
DataTarget objects	237
DataTarget examples	238
Saving the DC wizard template in StepDesigner	
Note:	
Deploying a template file	240
Localizing service report templates	

Further information



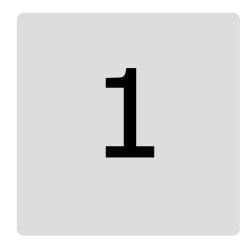

Introduction

Contents of this chapter

This chapter contains information on the applicability, compatibility, target audience, and purpose of the manual. It also describes the contents of the manual.

Purpose of the manual

This manual describes the Drive Composer PC tool and instructs how to use it in the commissioning and maintenance of ABB drives.

Applicability

This manual applies to the Drive Composer PC tool, version 2.9.1 available in two different variants:

- Drive Composer entry, DCET-01
- Drive Composer pro, DCPT-01 (code: 3AUA0000108087).

You can download Drive Composer entry for free by navigating to www.abb.com/drives and selecting **Drive Composer** from the Software tools menu. Drive Composer Pro includes all features and is available through ABB sales channels.

Note: In this manual, the features applicable only with Drive Composer Pro are indicated as "(Pro)".

Compatibility

Drive Composer is a software tool for all ABB common architecture drives and devices. The tool recognizes the connected drive based on type code and firmware version and then adapts the availability of features accordingly. For example, if any of the feature is not applicable to the connected drive type, then Drive Composer user interface does not display that particular module to the user.

The tool supports following drive families:

ACSxxx	ACHxxx	ACQxxx	Others
ACS180	ACH480	ACQ531	DCS880
ACS380	ACH531	ACQ580	DCT880
ACS480	ACH580	ACQ80	HES880
ACS530			
ACS560			
ACS580			
ACS580MV			
ACS860			
ACS880			
ACS6080			

Drive Composer version	Compatible features
Drive Composer entry	 Offers basic features common to all compatible drives. Connections to the drive with an Assistant control panel is common for all compatible drives and devices. Allows configuring safety settings using FSO module when Drive Composer entry is in demo mode. Allows adaptive programming in demo mode.
Drive Composer pro	 Offers a variety of features and software modules. The features and software modules are based on the drive type. Recognizes the connected drive based on type code and firmware version and then adapts the availability of features accordingly. For example, if any of the features are not applicable to the connected drive type, the Drive Composer UI does not display that particular module to the user. For non-recognized, but compatible drives, the same common basic features are available than with Drive Composer entry. For ACS800 drives: Has limited support (parameter editing and monitoring) and requires DriveWindow 2.40 installation on the same PC.

Target audience

The reader is expected to be an automation or electrical engineering professional familiar with drive products and the concepts regarding their commissioning and operation, including the parameter system of ABB drives. Also, a basic knowledge of Microsoft Windows operating system is needed.

Terms and abbreviations used in this manual

Term	Explanation
Alarm limit of monitoring	You can set a low or high alarm limit for monitoring. Color(s) of the signal(s) change(s) on the monitoring graph area if the limit is reached.
Assistant	Provides predefined steps for setting the parameters of the drive. For example, the basic start-up assistant.
Assistant control panel	Control panel with a USB connector enabling a PC tool connection for
	common architecture drives. The assistant control panel is a generic name, for example, ACS-AP-I and ACS-AP-S panels.
Autoscaling	Y-axis scaling is set automatically when this button is enabled. User-defined y-axis limits are then disabled.
	Note: Zooming is not possible in the Autoscaling mode.
Backup	Backup of the drive. Backup can be created with Drive Composer or with control panel*. The Drive Composer backup file (.dcparamsbak) includes all parameters, adaptive program and user sets.
	With a backup file from an old drive, you can quickly configure a new drive or restore configuration after firmware update.
	Note: Backup file does not include firmware, IEC program or license. * Refer to control panels user's manual.
Basic control panel	Control panel with limited basic functionality used with common architecture drives.
Bit mask of monitoring	You can filter bits of the Status word and monitor them individually.
BOL	Business Online. A common customer interface with electronic integration and order entry to all ABB business units.
CCE	Common Connectivity Engine
Common architecture drives	For example, ACS880, DCS880, ACS580, ACH580, ACQ580, ACS560 and ACS480.
Compare parameters	You can compare parameters between drives or between a drive and a file to find out differences.
Control diagrams	Graphical presentation of the drive reference chain or other function. Shows online values of a parameter, switch positions and signals.
	Parameters can be modified online. Functionality is not available for all drives.
Copy/Download parameters	Visible parameters of a parameter window or custom parameter window are copied/downloaded to a drive.
Cursor tool	Monitor window has a double cursor tool and the positions of cursors can be freely set in the monitor window. y2—y1 and x2—x1 differences are calculated.
Custom parameter window	You can create windows and drag drop (copy) parameters to these windows. You can also change parameter values in the window and save the changes for using in offline mode. The Filename extension for custom parameters is *.dccustparams.
Data file viewer	In the Demo/Offline mode, the monitor window can be used as a data file viewer when saved monitored data (*.dcmon) or data logger data is analyzed.
Data logger	Signals are buffered inside a drive with a fast sample interval. Can be triggered and uploaded to the monitor window to be analyzed.
Demo/Offline	In Demo mode you can only view the default parameter values and settings in a pre-configured file. The FSO configuration file can be edited only in Demo mode (for offline configuration).
	In Offline mode you can set/view the saved parameter files offline.

14 Introduction

Term	Explanation
DOFS	Drives Online Firmware Storage
DriveAP	Adaptive Programming of a drive. Functionality of a drive can be modified by adding some IEC 61131 -based blocks. Adaptive Programming can be done also with an Assistant control panel.
	Note: Adaptive Programming is not available with all drives.
Drive Installed Base	Drive Installed Base (DIB) is a knowledge base containing information about drives. Drive Composer is the client application for Drive Installed Base service which is used to register a drive and to create service reports.
EDS	Electronic Data Sheet. EDS files are simple text files used by network configuration tools to identify products and describe the properties of these products and to commission them on a network.
Event logger	Consist of faults, warnings and pure events. Only faults stop the drive. Latest faults and all Electronic Data Sheet arms are also seen in the parameter interface group 4, Warnings and Faults.
FENA-xx	Ethernet adapter module for ABB drives.
FPNO-xx	PROFINET fieldbus adapter module for ABB drives.
LOC/REM	LOC denotes local control of the drive, either with an Assistant control panel or with Drive Composer PC tool.
	REM denotes that drive is remotely controlled by the fieldbus master PLC or by I/O connections.
Lock/Unlock parameter	Parameter can be locked by a drive. You can only view the parameter values, but cannot modify them.
Macro script	User-written sequence of macro statements for reading and writing parameters/signals. Filename extension for macro scripts is *.p.
Monitoring	You can set parameters or signals to the monitor window. Values are collected with the sampling interval and drawn to a window.
NLS support	National Language Support, the user interface (UI) of Drive Composer can be easily modified by editing language files found in the LANG folder of the Drive Composer PC tool.
Online/Offline	In Online mode PC tool is connected with the drive.
	In Offline mode PC tool is not connected with the drive. In Offline mode it is possible to open parameter files, save monitored data, etc.
OPC server	OPC DA server interface for Drive Composer pro that allows other programs, such as Control Builder Pro (Advanced drive programming), to communicate with the drive.
Quick parameter backup	Backup of the drive parameters that are viewed, edited or expanded. When the drive parameter backup is slow, user has the option to perform a quick parameter backup or proceed with regular parameter backup.
RADIUS	Remote Authentication Dial-In User Service. RADIUS is an authentication protocol to manage access to the Internet or internal networks, wireless networks, and integrated e-mail services.
Refresh the parameter	Parameter values are updated when a group is opened. You can set parameters to the Auto-update mode or refresh the value manually. Signals are always updated automatically. In the parameter list, signals are shown in bold text.
Report	You can use report templates for energy savings, commissioning and maintenance. Templates can be modified.

Term	Explanation
Restore	You can restore the drive. You can select the parameters to be restored during the restore operation. For example, motor identification run results can be restored or deleted during the restore operation. Can be used for cloning drives.
Save parameters	Visible parameters of a parameter window or custom parameter window are saved to a file. Filename extension for saved parameters is *.dcparamsbak. Note: Some values are not editable in the Offline mode.
Support diagnostics package	You can collect all data from a drive for troubleshooting purposes by clicking a button in Drive Composer or on an Assistant control panel.
TLS	Transport Layer Security. Protocol to protect data transfer on an Ethernet connection.
UMU	Type of memory unit, attached to the control unit.
Workspace	Workspace consists of the user interface status, such as parameters shown in the custom parameter window(s) and their status. You can save the current workspace status to a file and restore it later. Custom parameter windows with their contents and the monitor window contents (signals selected, scalings, colors) are saved to a workspace. You can set one default workspace. Filename extension for the workspace is *.dcxml.
ZMU	Type of memory unit, attached to the control unit.

Related documents

Drive firmware manuals and guides	Code (English)	
Appropriate drive firmware manuals		
Option manuals and guides	'	
FENA-01/-11/-21 Ethernet adapter module user's manual	3AUA0000093568	
FSO-12 safety functions module user's manual	3AXD50000015612	
FSO-21 safety functions module user's manual	3AXD50000015614	
FPBA-01 PROFIBUS DP adapter module user's manual	3AFE68573271	
FMBT-21 Modbus/TCP adapter module user's manual	3AXD50000158607	
FEIP-21 EtherNet/IP fieldbus adapter module user's manual	3AXD50000158621	
FPNO-21 PROFINET fieldbus adapter module user's manual	3AXD50000158614	
FSPS-21 PROFIsafe safety functions module user's manual	3AXD50000158638	
Tool manuals		
ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels user's manual	3AUA0000085685	
Drive Composer Start-up and maintenance PC tool user's manual	3AUA0000094606	
Virtual drives quick installation and start-up guide	3AXD50000422128	
Ethernet tool network for ACS880 drives application guide	3AUA0000125635	
Adaptive programming application guide	3AXD50000028574	

2

Overview of Drive Composer

Contents of this chapter

This chapter briefly lists the main features of the Drive Composer software and instructs how and where it can be run, and how to get help and additional information.

Drive Composer PC tool overview

Drive Composer is a 32-bit Windows application for commissioning and maintaining ABB common architecture drives.

The full version is called Drive Composer pro and the limited version is called Drive Composer entry. Both versions allows you to test the user interface functionality, edit parameter files offline (pro) or open and analyze the saved or monitored files without connecting to a physical drive.

Supported features

With Drive Composer, you can:

- control a drive: start, stop, direction, speed/torque/frequency reference
- monitor the operation and status of a drive
- view and adjust drive parameters
- preview and add customized text to parameters
- monitor signals in numerical and graphical (trending) format
- work simultaneously with multiple drives like master and follower drives (pro)
- display control diagrams of a drive for parameter setting and diagnostic purposes (pro)
- create user-specific workspaces by customizing parameter windows

- configure the optional FSO-12, FSO-21 safety functions module (pro)
- create a secured network connection with OPC server configuration
- handle workspaces
- create and execute macro scripts (pro)
- create and work with user set parameters (pro)
- use Ethernet-based fieldbus adapter modules for PC tool communication (onewire solution, Profinet, Ethernet IP) (pro) or a drive-embedded Ethernet port
- use the USB port of an Assistant control panel for an USB connection
- use an OPC-based commissioning and maintenance tool (pro)
- connect to Drive Installed Base service portal and do following tasks: register a drive, search drive information, create service reports
- recover drive from FB14 fault state
- prevent FB14 fault
- · check the status of Service pack installation
- update FSO module firmware
- update drive firmware.

Drive Composer entry Vs pro

The table lists the features supported in the two versions of Drive Composer.

Feature	Drive Co	omposer
	entry	pro

Parameter window features		
Search/Modify/Print parameters	Yes	Yes
Parameters changed by user (or automatically updated) have an orange background	Yes	Yes
Save parameters to a file	Yes	Yes
Quick drive parameter backup	No	Yes
Copy/download parameters to a drive	Yes	Yes
Customize parameter windows	Yes	Yes
Edit parameters offline	No	Yes
Compare parameters between parameter lists or drives	No	Yes
Create and work with User set functionality	No	Yes

Diagnostics and monitor window features		
Collect data for support service using Support package icon	Yes	Yes
Monitor up to eight signals as a simple monitoring method for basic purposes	Yes	Yes
Monitor maximum 26 signals for professional analysis of a single drive or multidrive	No	Yes
Save the monitored data to the hard drive of a PC	Yes	Yes

Diagnostics and monitor window features		
Export monitored data to a PC using tab separated file	Yes	Yes
View contents of an event logger (faults, warnings)	Partly	Yes
View contents of System info (drive serial number, modules, versions, SW, etc.)	Yes	Yes
Restore or clone a drive using Backup/Restore feature	Yes	Yes
Restore a set of components/parameter settings using Advanced restore feature	No	Yes
Create a backup of complete multidrive with a single click using the Network Backup feature	No	Yes
Use PC to analyze data logged in a drive by a data logger	No	Yes
Create and execute macro scripts	No	Yes
Update drive firmware	Yes	Yes
Fieldbus adapter loader	No	Yes

Connections		
Connect network drives via Ethernet or with a panel bus	No	Yes
Connect point-to-point USB through a panel port	Yes	Yes
Creating a secured network connection with OPC server configuration	No	Yes
Connecting drives via Bluetooth connection	Yes	No

Safety features		
Configure safety settings to a safety functions module (FSO)	No	Yes

Other Feature		
Use control diagrams of a drive for parameter setting and diagnostic purposes	No	Yes
User interface is available in different languages	Yes	Yes
Create and edit Adaptive programs	Yes	Yes
Support Virtual drive smart components	No	Yes
Connect to Drive Installed Base service portal to: register a drive, search for drive information, create service report	Yes	Yes
Recover drive from FB14 fault state	Yes	Yes
Recover and prevent FB14 fault without updating drive firmware	Yes	Yes
Check the status of Service pack installation	Yes	Yes
Add customized text to parameter with drive text editor	Yes	Yes
New Drive Composer version notification	Yes	Yes

System requirements

Drive Composer hardware requirements

Cable type	For
USB type A (PC) type mini B (panel) cable Note: ABB recommends to use ferrite core cables.	connecting Drive Composer entry/pro through the USB port of the control panel to a drive (maximum 3 meters)
Ethernet cable RJ45	connecting through Ethernet adapter module or embedded Ethernet

Computer minimum hardware requirements

Hardware	Specification
Processor	With virtual drive: Intel i5 or equivalent Without virtual drive: Intel i3 or equivalent
Memory	With virtual drive: 8GB Without virtual drive: 1GB
Display	1024 x 600 display resolution with 256 colors
Storage	At least 4.5 GB free hard disk space
Communication port	One free USB port or Ethernet port

Software requirements

Software	Specification
Operating system	Windows 11 (32- or 64-bit) and later
Framework	.Net framework 4.8 or higher



Installation and uninstallation of Drive Composer

Contents of this chapter

This chapter describes how to install and uninstall the Drive Composer software.

Determining the current Drive Composer version


To know the version of the Drive Composer PC tool, go to $Help \rightarrow About \ the \ product$. The **About the product** dialog box displays the Drive Composer version.



Drive Composer update notification

If any new version of Drive Composer is available, a **DRIVE COMPOSER UPDATES ARE AVAILABLE** dialog box appears. In the dialog box, you can click **HERE** and download the latest package file.


If you click **OK**, the dialog box appears again the next time you open Drive Composer. If you select the **Don't remind me again for this version** check box and click **OK**, the dialog box does not appear again.

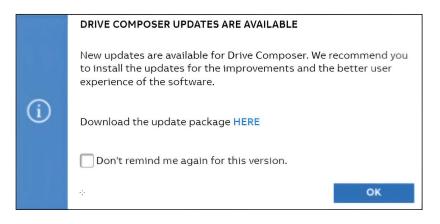


Installing Drive Composer with the installer

Note:


- ABB recommends to uninstall all previous versions of Drive Composer before you install a new version. See section Uninstalling Drive Composer with the installer.
- Close all applications before starting the installation.
- 1. Run the *setup.exe* file from the folder where you unzipped the Drive Composer files.
- 2. Right-click on the setup.exe file and select Run as administrator.

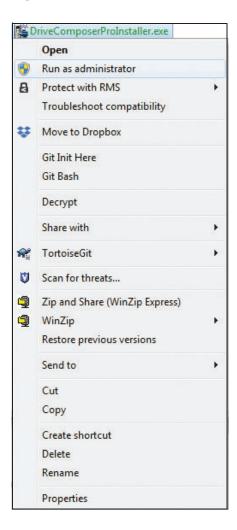


3. In the **Drive Composer- Setup Wizard**, click **Next**.

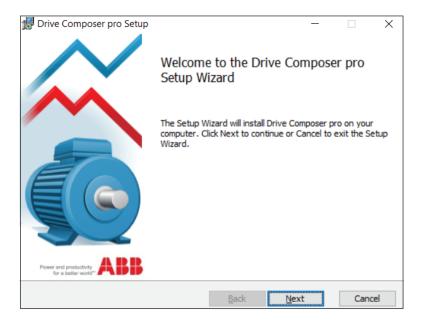


4. Choose a destination folder and click Next.

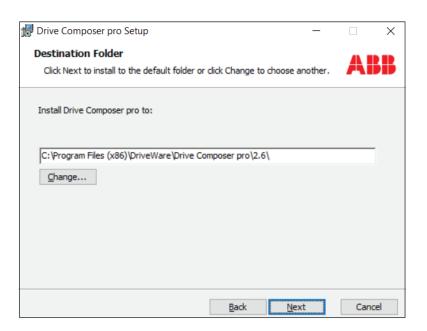

5. Click **Install** to start the installation.

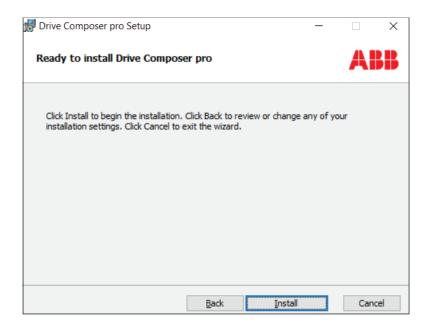


If Drive Composer installation is complete, click **Finish**. Now Drive Composer is ready for use.

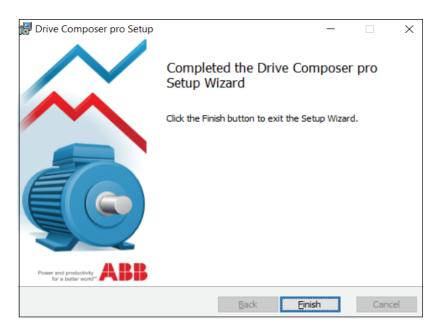


On running the application for the first time, it displays a notification seeking permission to collect the tool's usage data to sent it to ABB. This is used for improving the performance and user experience. ABB does not collect any personal data. This is optional and is not mandatory to accept.

26 Installation and uninstallation of Drive Composer

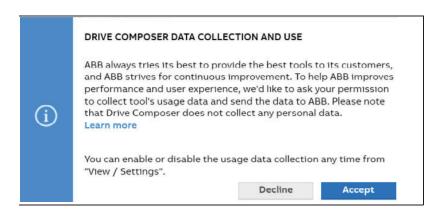


You can enable or disable the usage data collection any time from View → Settings.

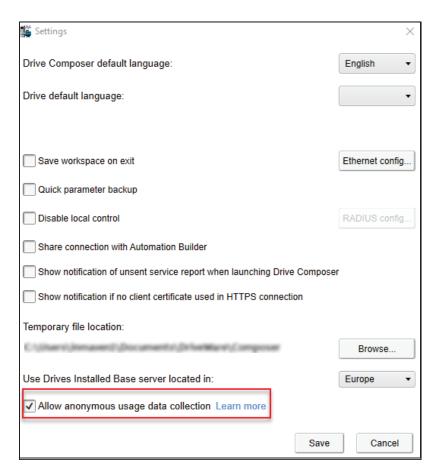


Uninstalling Drive Composer with the installer

Drive Composer can be uninstalled either through the Settings window or the Control Panel.


1. Navigate to **Settings** → **Apps** → **Installed apps**, and select the installed Drive Composer pro installer. Click the ellipsis icon and then click **Uninstall**.

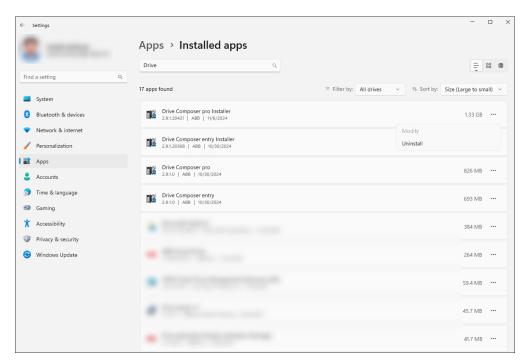


Alternatively, navigate to **Control Panel** → **Programs** → **Programs** and **Features**, and select the installed Drive Composer Pro installer program. Click **Uninstall**.

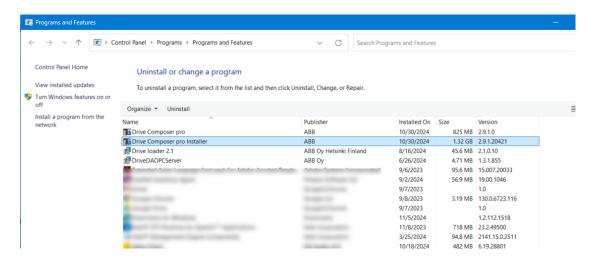

2. In the Drive Composer pro Installer Setup, click Uninstall.

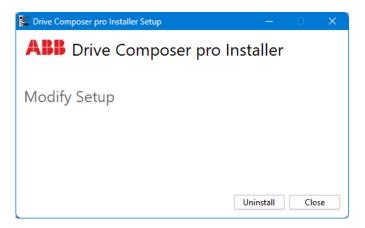

3. Wait for the uninstallation to complete.

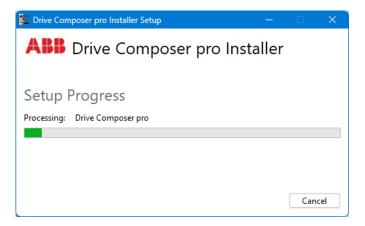

The progress bar turns green and the application is removed from your PC.

Activating Drive Composer pro

Drive Composer pro includes a license key and requires activation. You can run Drive Composer pro for 30 days in fully functional evaluation mode.

During the first launch, Drive Composer pro prompts to enter the registration code (license key). Fill in the code and click **Activate**.



You can also later at any time, enter the registration code or the license key. Go to $Help \rightarrow Enter$ license code and fill in the code and click **Activate**.

4

Connections

Contents of this chapter

This chapter describes how to make a Bluetooth connection, USB connection or an Ethernet connection to an ABB drive with Drive Composer.

The USB device drivers

You can connect a PC with Drive Composer to an Assistant control panel through USB after installing the required USB device drivers or through Bluetooth connection. The Drive Composer installer installs the required drivers automatically, so no user actions are needed.

If the installer failed to install the drivers automatically, you can manually install the USB drivers by downloading the tool from software tools website: http://new.abb.com/drives/software-tools/drive-composer

Obey the instructions provided with the drive package.

Connecting to a drive through an Assistant control panel for the first time


Cable type

To establish a connection between Drive Composer and drive,

- connect a USB type A (PC) type mini B (panel) cable to the USB port of the computer and the USB port of the Assistant control panel.
- use a USB cable of maximum length three meters.
- use separate USB/485 adapter if the drive is used without an Assistant control panel or with a Basic control panel.

Connecting to drive


1. Connect your PC to the Assistant control panel with a USB cable.

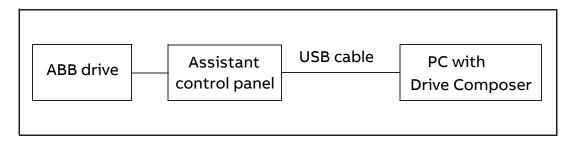


This text appears on the Assistant control panel screen: "USB connected"

Note: It is not possible to use the Assistant control panel when it is connected to a PC.

- 2. For the entry version, double-click **Drive Composer entry.exe** file and launch Drive Composer.
- Click USB connection. In the COM port drop-down list, select the appropriate COM port.

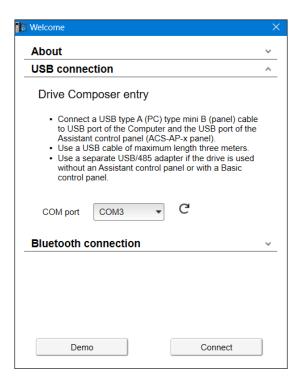

- 4. For the pro version, double-click **Drive Composer pro.exe** file and launch Drive Composer.
- 5. In the Welcome wizard, click **Connect** to connect to the drive. If you want to connect in Offline mode, click **Offline/Virtual Drives**.

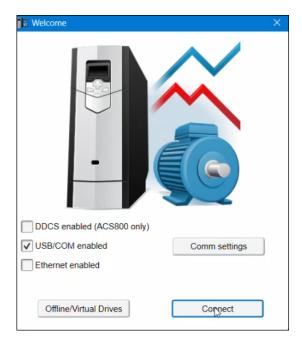

For more information on Offline/Virtual Drives connection, refer Virtual drives Quick installation and start-up guide (3AXD50000422128 [English]).


You can also select the dedicated connections to the drive:

Connections	Description
DDCS enabled (ACS800 only)	Connects to the drive through DDCS (fiber optic) communication. This option is applicable only with ACS800 drive type.
USB/COM enabled	Connects to the drive through USB connection. Use this option only when you want to connect to the drive through serial connection, example, USB cable to the Assistant control panel.
Ethernet enabled	Connects to the drive through Ethernet network.
Comm settings	Opens a dialog where you can configure the connections in more detail.

Note:


- The status LED starts flickering in the Assistant control panel to indicate data transfer between drive and PC. The LED keeps blinking as long as there is a PC tool connected to the drive. The welcome dialog box is shown on the screen indicating that the application is initialized.
- First time connection, parameter texts are loaded from the drive and this may take a few minutes depending on the drive type.

If Drive Composer is connected online with the drive, the drive parameters are loaded and this window appears.

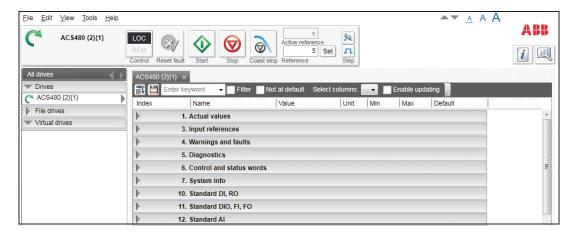

If you have a single drive and a point-to-point connection, refer to chapter Parameter window.

If Drive Composer failed to connect online with the drive, the **NO DRIVE FOUND!** message appears. Make sure that all the instructions displayed in this window are satisfied.

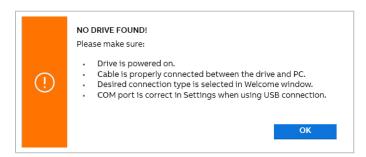


Go to View → Settings to check COM settings and click View → Refresh (Ctrl+R) to connect Drive Composer to the drive.


Connecting to drive with Bluetooth assistant control panel or connectivity panel (Entry)

To establish a connection between Drive Composer and drive using Bluetooth connection,

- 1. Double-click **Drive Composer entry/pro.exe** and launch Drive Composer.
- Click Bluetooth connection and from the Available Bluetooth devices, select the drive.

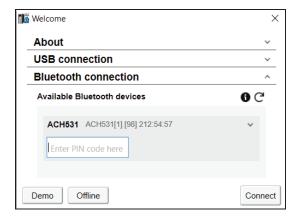

- 3. Enter the Bluetooth pairing code. For information on pairing Bluetooth of your computer with the drive, click **6**. To reload the drives, click **C**.
- 4. Click **Connect** to connect to the drive. Click **Demo** or **Offline** if you want to choose the demo or offline mode.
- 5. To disconnect any connected drive(s), navigate to the **Drive list** and click **Disconnect**.

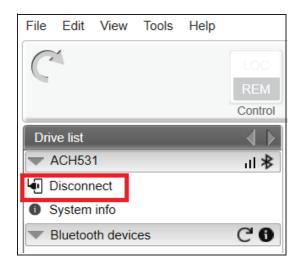


Note:

- The status LED starts flickering in the Assistant control panel to indicate data transfer between drive and PC. The LED keeps blinking as long as there is a PC tool connected to the drive. The welcome dialog box appears on the screen indicating that the application is initialized.
- At first time connection, the parameter texts are loaded from the drive and this may take a few minutes depending on the drive type.


Changing the language settings

To change the language setting of the Drive Composer user interface,

1. Go to **View** → **Settings**.

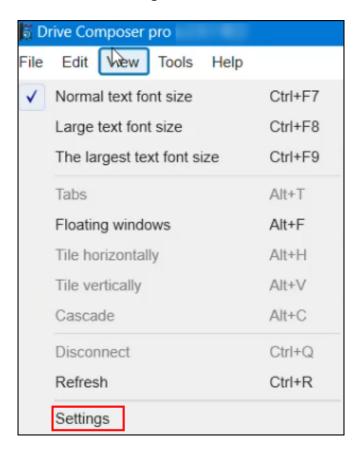

2. In the **Settings** window, choose the required language for the Drive Composer user interface.

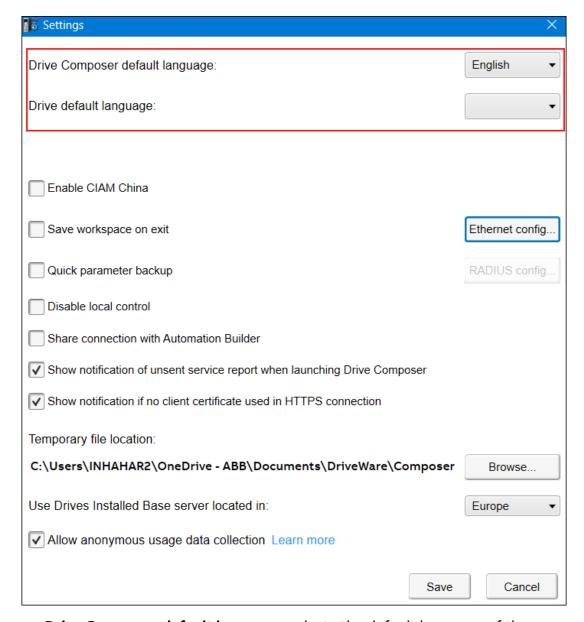

- **Drive Composer default language**—selects the default language of the menu or button text in Drive Composer.
- **Drive default language**–selects the default language for parameters.

By changing language settings you can always use the same language when you connect Drive Composer to the drive.

3. After changing the language settings, click **View** → **Refresh (Ctrl + R)** or restart the Drive Composer tool.

Note: Some elements might require to restart Drive Composer to update the selected language.

Connecting to a drive through an Ethernet network

Ethernet network connection

It is possible to connect a PC to the drive with an Ethernet cable through optional adapter modules that support the Ethernet connection. If the drive type supports an embedded tool Ethernet network, it is also possible to connect the PC directly to the drive through its embedded tool Ethernet connector.

Refer to the drive manuals for information on:

- availability and type of optional adapter modules with the Ethernet connection
- availability of embedded tool Ethernet network connector and support.

For the installation of the adapter modules, see the related user's manual.

Configure the PC/Ethernet Switch firewall to allow a connection for Drive Composer (port HTTP 80 and UDP), or disable firewall.

■ Creating an Ethernet network connection through FENA-01, -11 or -21 Ethernet adapter module

- Install a FENA module to the drive. If you plan to have an Ethernet link between several drives, install a FENA module to each drive. Connect the Ethernet link between the FENA modules according to the FENA-01, -11- and -21 user's manual (3AUA0000093568 [English]).
- 2. Double-click the **Drive Composer.exe** file to launch Drive Composer.
- 3. Make the preparatory Ethernet communication settings in each drive (steps 3...6) using control panel or Drive Composer. In case of Drive Composer, connect the PC with the Drive composer to each drive over the USB link and the control panel. If you plan to have several drives in the same Ethernet link, repeat the settings in steps with each drive separately. Use either the control panel or the Drive composer. Connect the PC with the Drive Composer with point-to-point to each drive over the USB link and the control panel.
 - a. If you use only one fieldbus adapter module with the drive, enable FENA by setting parameter 50.01 FBA A enable = Option slot 1 (if fieldbus adapter is connected to option slot 1) and parameter 50.21FBA A Timelevel sel = Fast (or Monitoring for Tool network only).
 - b. If you use two fieldbus adapters with the drive and FENA is installed as FBA
 B, enable FENA by setting parameters 50.31 FBA B enable = Enable and 50.51
 FBA B Timelevel sel = Fast (or Monitoring for Tool network only).
- 4. Set a static IP address for each drive in parameter group 51. If you plan to have only one drive in the link, you can use address: xxx.xxx.xxx.xxx. If you plan to have several drives in the link, each drive must have a unique address.

For example:

drive 1: xxx.xxx.xxx.xxx drive 2: xxx.xxx.xxx.xxx drive 3: xxx.xxx.xxx.xxx etc.

_	51. FBA A settings					
1	FBA A type	Ethernet	NoUnit			None
2	Protocol/Profile	PNIO ABB Pro	NoUnit			0
3	Commrate	Auto	NoUnit			Auto
4	IP configuration	Static IP	NoUnit			Static IP
5	IP address 1		NoUnit	0	255	0
6	IP address 2	-	NoUnit	0	255	0
7	IP address 3	0	NoUnit	0	255	0
8	IP address 4		NoUnit	0	255	0
9	Subnet CIDR	24	NoUnit	0	32	0

5. Refresh the settings with parameter **51.27 FBA par refresh**.

Note: Refreshing the Node setting will lose the communication to the drive. To establish the connection with the drive, select **View** \rightarrow **Refresh**.

- 6. Disconnect the PC with the Drive Composer from the USB-panel link (if it was used). If you plan to connect the PC to one drive only, connect it to the FENA module of the drive using an Ethernet cable. If you plan to connect the PC to an Ethernet link of several drives, connect the PC to a suitable connection point in the link (a router or a FENA-21 module).
- 7. Make sure the TCP/IP address of your PC is configured. In this example the TCP/IP address is xxx.xxx.xxx.xxx. Refer to section Configuring the TCP/IP address (page 39).
- 8. Name each drive to facilitate the recognition of drives when creating an Ethernet network connection.

In the **System info** tab, type the **Drive name** and click **Set**.




Note: The drive name changes only after you refreshed the view. The previous names in other existing workspaces are not affected.

If you use Assistant control panel, name the drive from the **Setting** menu of the panel.


9. Configure the TCP/IP address of your PC. In this example the TCP/IP address is xxx.xxx.xxx. For more information on configuring the TCP/IP address, refer section Configuring the TCP/IP address (page 39).

Configuring the TCP/IP address

1. Go to Control Panel and click network and Sharing Center.

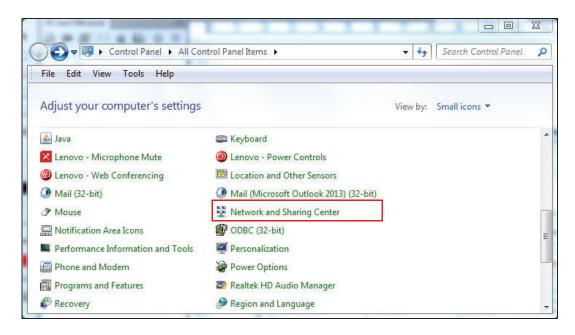


Click Change adapter settings on the left pane. A Network connections window displays.

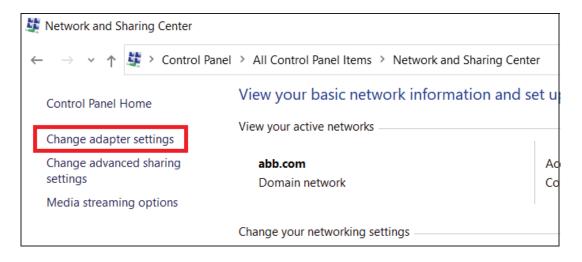


3. Double-click Local Area Connection.



4. Select Internet Protocol Version 4 (TCP/IPv4) and click Properties.

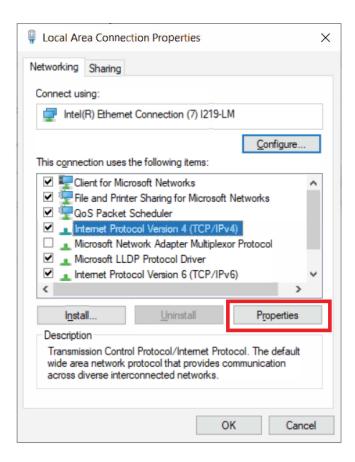

5. Select **Use the following IP address**, type the IP address and subnet mask and click **OK**.

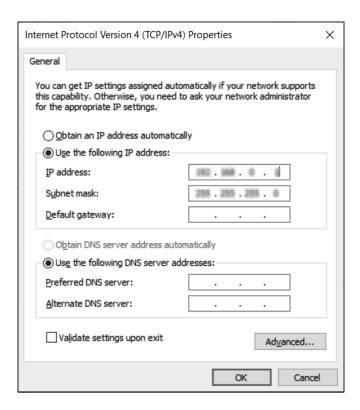

6. Connect the RJ45 cable between the FENA module and PC. Alternatively, connect all drives and PC to the same Ethernet switch.

7. Open command prompt (cmd.exe) and ping all the drives that you have configured.


```
C:\ping
... with 32 bytes of data:
Reply from ...: bytes=32 time(1ms ITL=128
Ping statistics for ...:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\>
```

8. Open http port 80 of the firewall in your computer to enable Drive Composer pro to communicate with drives.

9. Open Drive Composer pro. In the Welcome window, make sure **Ethernet enabled** is checked and click on **Comm settings** button.



10. In the Drive Ethernet Configuration Tool window, click **Scan** → **Scan Network**. Make sure **Auto configuration mode** is checked.

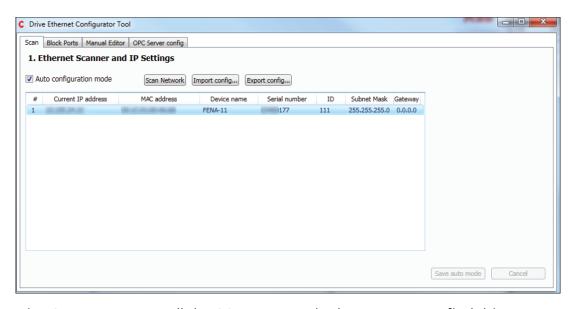

Drive Composer scans all the COM ports and Ethernet ports to find drives. If problems arise, see *Ethernet tool network for ACS880 drives application guide* (3AUA0000125635 [English]).

Creating a secured network connection with OPC server configuration

The FPNO-21 fieldbus adapter module supports HTTPS (secured network) for PC tool communication. Refer FPNO-21 PROFINET fieldbus adapter module user's manual (3AXD50000158614 [English]). The module and OPC server configuration in the Drive Composer configuration tool allows a secured connection between the drive and Drive Composer. To create a secured network connection, make sure that following pre-requisites are available.

Prerequisite 1

Windows TLS 1.2 is needed for communication between drive and Drive Composer through the FPNO module. If not available, Drive Composer prompts to update TLS or set TLS 1.2 as default.

Prerequisite 2


Client and Server certificates are needed for Cybersecurity requirement. Client certificate is a self-signed certificate used by PC tool and Server certificate is used by the FPNO module. See sections, Install Client certificate and Install Server certificate.

See also instructions for Checking TLS version.


Install Client certificate

To install Client certificate follow the below steps:


- In your local PC, go to Manage computer certificates → Personal → Certificates and import the certificate to this folder.
- 2. Right-click on the Client certificate \rightarrow All Tasks \rightarrow Manage private keys.

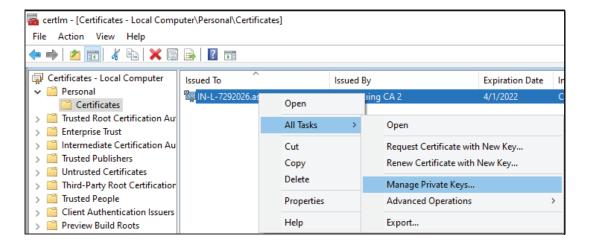

 Click Add and type Authenticated users. Domain can be hostname or current network domain. Then allow full control rights and click Apply.

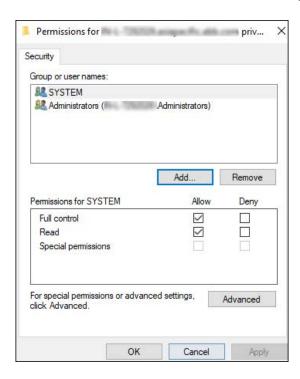

4. Allow full control rights and click Apply.

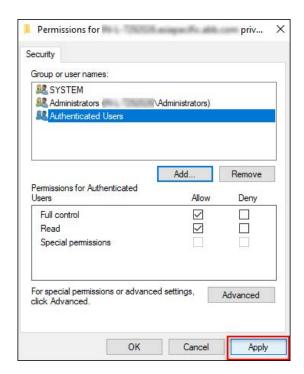

Client certificate is installed and available for authenticated users.


Install Server certificate

To install Server certificate, follow the below steps:

1. Open the browser and enter the IP address if the module and press **Enter**. When prompted, enter the Username (admin) and password (last 6-digits in macID of the module).



2. In the FPNO configuration window, under Drive Composer certificate settings, upload the certificate and click **Submit all**.

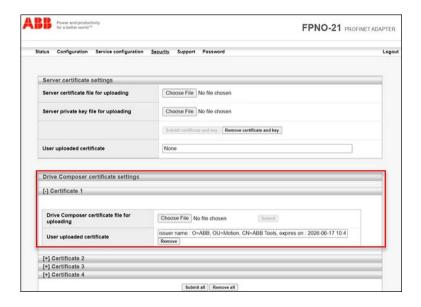

The selected certificates are installed. Proceed with Configuring OPC server


Configuring OPC server

If Prerequisite 1 and Prerequisite 2 are available, configure the OPC server.

1. Open Drive Composer pro. In the Welcome window, make sure **Ethernet enabled** is selected and click on **Comm settings** button.




2. In the Drive Ethernet Configuration Tool window, click **Scan → Scan Network**. Make sure **Auto configuration mode** is selected.

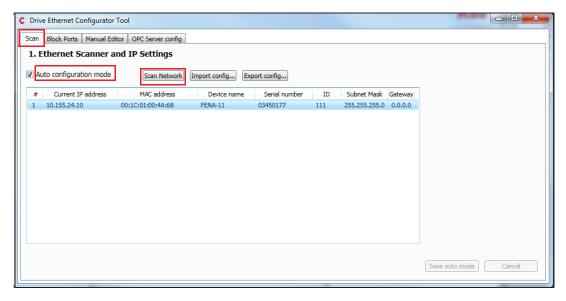

Drive Composer scans all the COM ports and Ethernet ports to find drives. For more information, see *Ethernet tool network for ACS880 drives application guide* (3AUA0000125635 [English]).

- 3. Click **OPC Server config** tab.
- 4. In Certificate settings, check the option **Customized certificate** and select a certificate. Click **Save**.

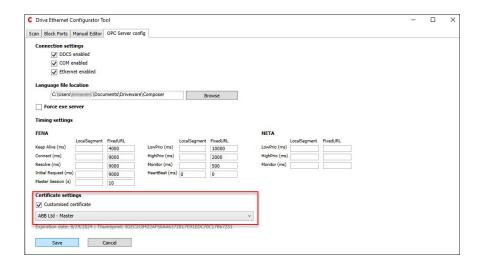


5. You will be prompted to restart the drive. Click **OK** to proceed. If certificate is validated, the drive successfully connects through HTTPS mode and indicates "Secure connection with custom certificate".



Note: There are other instances of network connectivity between drive and Drive Composer:


- If drive connects through HTTP mode, it indicates as "
 Not secure connection".
- If drive connects through HTTPS mode without a client certificate, it indicates as "
 Encrypted communication without client certificate" and displays the following error message:

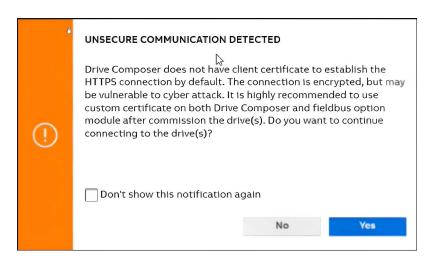

This notification setting can be changed from View → Settings. Select the option

48 Connections

Show notification if... in HTTPS connection and click Save.

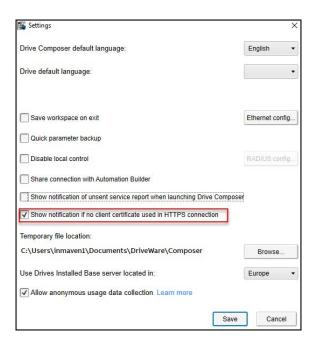

For more information on OPC foundation, refer the OPC website.

Creating HTTPS certificates

The instructions below is an example to create a matching pair of certificates, to make Common Connectivity Engine (CCE) work with HTTPS client authentication. The certificates are created using **openssI** installed from an unofficial installer **Win64 OpenSSL v1.1.1k Light** from slproweb.com.

To create HTTPS certificates, perform the below steps:

- 1. Install openssl.
- 2. Create a folder for the files created during the steps.
- 3. Open command prompt (cmd) in the folder and run the following commands.

Note: Make sure that the openssl found via the PATH environment variable is the one you installed. You may have other old openssl executables that come as part of other software installations. Edit the path accordingly, or replace openssl with C:\Program Files\OpenSSL-Win64\bin\openssl.exe in beginning of each command to run the correct openssl.exe.

Command	Result
openssl genrsa -out TestCCE01_RootKey.key 2048	Creates 2048 bit root certificate RSA key.
openssl req -x509 -new -days 3650 -key Test- CCE01_RootKey.key -out TestCCE01_RootCert.crt -subj "/O=ABB/OU=Testing/CN=TestCCE01_RootCA_2048"	Creates root certificate.
openssl genrsa -out TestCCE01_ClientKey.key 2048	Creates 2048 bit client key.
openssl req -new -key TestCCE01_ClientKey.key -out Test- CCE01_ClientCert.csr -subj "/O=ABB/OU=Testing/CN=Test- CCE01_Client_2048"	
openssl x509 -req -days 1000 -in TestCCE01_ClientCert.csr -CA TestCCE01_RootCert.crt -CAkey Test-CCE01_RootKey.key -CAcreateserial -out TestCCE01_ClientCert.crt	Signs client certificate.
openssl pkcs12 -export -in TestCCE01_ClientCert.crt -inkey TestCCE01_ClientKey.key -out TestCCE01_ClientCert.p12 -name "clientPrivateKey"	_
Note: This command prompts to choose a password, required later for certificate installation.	

4. After the commands are run, make sure that the following files are available.



- 5. Install the following certificate files:
 - File to upload to FPNO (Drive): TestCCE01_RootCert.crt
 - File to install on Local Computer store: TestCCE01_ClientCert.p12

Note: Double click to install the required password.

Checking TLS version

Make sure that the Windows TLS version is 1.2 or later if trying to make a HTTPS connection.

Check if the Microsoft update 'kb3140245' is installed (does not apply to Windows 10).

Check if the registry key

'HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Internet Settings\WinHttp\DefaultSecureProtocols' has a value '0x00000A00' or '0x00000800' (refer the table below).

1. Check if registry key

'HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Internet Settings\WinHttp\DefaultSecureProtocols'

has a value '0x00000A00' or '0x00000800' (refer the table below)

2. In 64-bit PC, check also key

'HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Microsoft\Windows\CurrentVersion\Internet Settings\WinHttp\DefaultSecureProtocols'

has a value '0x00000A00' or '0x00000800'

DefaultSecureProtocols Hex value	Decimal value	Protocol on
0x00000008	8	SSL 2.0
0x00000020	32	SSL 3.0
0x0000080	128	TLS 1.0
0x00000200	512	TLS 1.1
0x00000800	2048	TLS 1.2
0x00000a00	2560	TLS 1.1 + TLS 1.2
0x00000a80	2688	TLS 1.0 + TLS 1.1 + TLS 1.2
		TLS 1.2 (Experimental) available with Win10 build 1903

Connecting network drives (pro)

Panel bus network connection

Depending on the drive type, it is possible to construct a panel bus between the drives using either of these methods:

- Use the twin panel bus connectors in the control panel holders of the drives. The ACS880-01 drive has twin connectors, but not available in most of the other drive types. Refer to the hardware manual of the drive, and the below instructions.
- Connect the panel bus connectors of FDPI-02 option modules installed onto the drive control units. The option is available for ACS880 drive series. Refer to the ordering information of the drive (availability), and FDPI-02 diagnostics and panel interface unit user's manual (3AUA0000113618 [English]).
- Connect the panel bus connectors of CDPI-01 or -02 panel bus adapters installed onto the drive control panel holders. The option is available for ACH480, ACS480, ACH580, ACQ580, and ACS580 drive series. Refer to the ordering information of

 
the drive (availability) and CDPI-01/-02 panel bus adapters user's manual (3AXD50000009929 [English]).

Creating a panel bus with Drive Composer(pro)

- Create a point-to-point connection from the Assistant control panel or Drive Composer to each drive.
- 2. Set an independent node ID for each drive (with parameter 49.01 Node ID number). The node ID must be between 1...32.
- 3. Refresh the settings (with parameter 49.06 Refresh settings).

Note: Refreshing the Node setting will lose the communication to the drive. To re-establish the connection with the drive, select **View** → **Refresh**.

4. With parameter 49.05 Communication loss action, define how the drive reacts to a control panel (or PC tool) communication break by selecting **No action**.



5. Give a name for each drive to facilitate the recognition of drives when creating a panel bus connection.

In the System info tab, type the **Drive name** and click **Set**.



Note: The drive name changes only after you refreshed the view. The previous names in other existing workspaces are not affected.

If you used Assistant control panel, name the drives through the Setting menu of the panel.

- 6. Remove all panels connected to drives.
- 7. For connecting the drives in a daisy-chain, connect a standard RJ45 (straight CAT5) cable on the left-hand side connector of the Assistant control panel holder in the first drive to the control panel. Refer to below figure. This is possible with ACS880-01 drive with the twin panel connectors in the control panel holder. For other connection options, refer to Panel bus network connection (page 50).



- 8. Connect a standard RJ45 (straight CAT5) cable from the right-hand side connector of the Assistant control panel holder in the first drive to the left-hand side connector of the Assistant control panel holder in the second drive.
- 9. Continue chaining the rest of the drives as described above.
- 10. Set the bus termination resistor to ON position in the last node. The switch is located in between the twin connectors of the control panel holder.

Checking the visibility of the drives in the panel bus


- 1. Connect a USB cable between the Assistant control panel and your PC.
- 2. Double-click **Drive Composer pro.exe** to launch Drive Composer. The status LED starts flickering on the Assistant control panel.
- 3. Drive Composer starts scanning all selected networks and loads the connected drives
- 4. Make sure you see all drives in the Drives list.

Note:

- If you see a missing drive, close the PC tool and try again. If you still do not see all drives, check Group 49 Panel port communication for the settings of the missing drives.
- Drive Composer does not automatically open any parameter window or other object.
- 5. Select and click a drive from the Drive list.

Sharing connection (pro)

- 1. Go to **View** →**Settings**.
- 2. In the **Settings** screen, select the option **Share connection with Automation Builder** to enable simultaneous connection to the same drive from both applications.

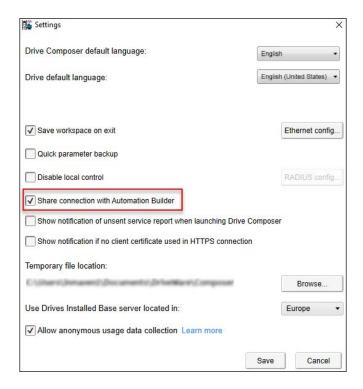

- 3. Click **Save** to save the new settings.
- 4. You may be prompted to restart Drive Composer. Click **OK**, to restart.

5


Main user interface components

Contents of this chapter

This chapter describes the user interface (UI) components and how to use them.


Drive Composer UI overview

The Drive Composer user interface consists of the following parts.

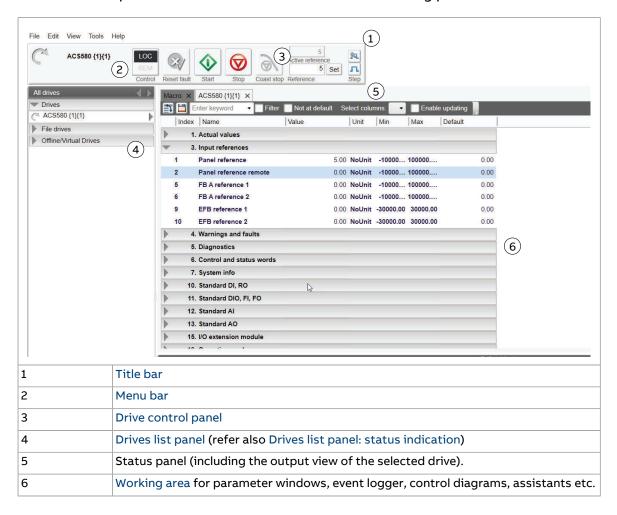

Title bar

 The title bar is located at the top of the main window. It consists of the following parts:



1	System menu icon. See description in System menu.
2	Application name and version number (Drive Composer entry/pro)
3	Name of the workspace (if there is an active workspace)
4	Minimize button–has the same function as Minimize in the System menu. With this button, you can reduce the main window to the task bar or a sub-window to the bottom of the window area.
5	Maximize/Restore Down button (the name depends on the status of the maximized window)– has the same function as Maximize or Restore in the System menu.
	 With the Maximize button, you can enlarge the window to fill the available space. With the Restore Down button or the Restore (from system menu), you can restore the window to the size and position it had before it was maximized.
	Note:
	 You can also maximize or restore the window by double-clicking the title bar. You can move a window by dragging the title bar or you can move a dialog box by dragging its title bar. But you cannot move a window by dragging the title bar if you have maximized or minimized a window.
6	Close button–has the same function as Close in the System menu. With this button, you can end the Drive Composer session. See also description of Closing the application.

Closing the application

When you close the application, system prompts to confirm. Click \mathbf{Ok} to close the application. Before closing, Drive Composer may:

- warn you about releasing control of the drive if the drive is controlled locally by Drive Composer
- prompt you to save the workspace with unsaved changes. See Saving the workspace with unsaved changes.
- · remind you to save your monitor data
- remind you of unfinished printing.

Note: If you disconnect the cable from the drive before closing Drive Composer there might be a long delay in operation.

Alternate methods to close the application

You can also close Drive Composer by


- double-clicking the System menu icon
- · selecting Close in the System menu

- selecting Exit in the File menu
- pressing the shortcut key Alt+F4.

Saving the workspace with unsaved changes

You can close Drive Composer without saving the changes to workspace.

- 1. Go to **View** → **Settings**.
- 2. In the Settings window, check the option Save workspace on exit.

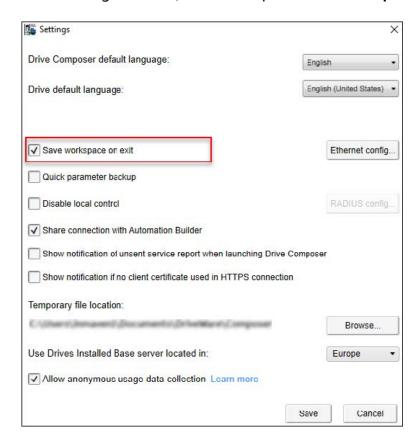


The function that prompts to save the workspace with unsaved changes is disabled.

System menu

You can open the System menu by

- left- or right-clicking the System menu icon 🎉
- pressing the shortcut key Alt+space bar
- right-clicking within the non-button area of the title bar.

The System menu contains the following commands:

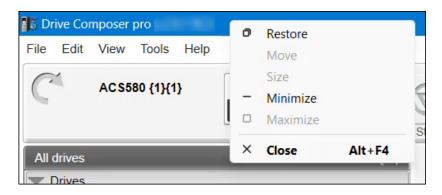

System menu commands description

Command	Description
Restore	Restores the window to its size and position which it had before it was maximized.
	This command is the same function as Maximize/Restore Down button in the title bar when the window is maximized.
Move	Allows moving the window with arrow keys. To stop moving the window, press ENTER. To cancel the move, press ESC.
	This function can also be performed by dragging the title bar.
Size	Allows resizing the window with arrow keys. To stop resizing the window, press ENTER. To cancel resizing, press ESC.
	This function can also be performed by dragging any of the sides or corners of the window.
Minimize	Reduces the window to the task bar or to the bottom of the window area. This command is the same function as the Minimize button in the title bar.
Maximize	Enlarges the window to fill the available space.
	This command is the same function as the Maximize button in the title bar when the window has not been maximized.
Close	Ends the Drive Composer session.
	This command is the same function as the Close button in the title bar.

Menu bar

The menu bar is located below the title bar. It contains the following drop-down main menus:

- File
- Edit
- View
- Tools
- Help


Using the menu bar

- · Click on a menu name to execute a command
- Use arrow keys to navigate between the menus
- Press ENTER to execute a highlighted command
- · Press ESC, to close a menu
- Use also shortcut keys to execute the commands.


File menu

The File menu is always located in the menu bar. See description in View menu commands description.

File menu → New

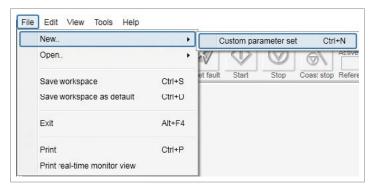

File menu → Open

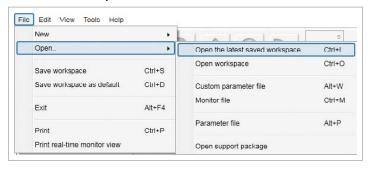

File menu commands description

Command	Sub-command	Description	Keyboard short- cut
New	Custom parameter set	Creates a new parameter set window. You can also set this window as the default.	Ctrl+N
Open	Open the latest saved workspace	Opens the latest saved workspace.	Ctrl+L
	Open Workspace	Opens a new window where you can select the saved workspace to be opened.	Ctrl+O
	Custom parameter file	Opens a new window where you can open the saved custom parameter file.	Alt+W
	Monitor file	Opens a window to open the parameter file for monitoring.	Ctrl+M
	Parameter file	Opens a new window where you can select the saved parameter file to be opened.	Alt+P
	Open support package	Opens a new window where you can select the saved support package file to be opened.	
Save workspace	-	Saves the active workspace of a file.	Ctrl+S
Save workspace as default	-	Saves the active workspace to default workspace. The default workspace opens automatically when Drive Composer is opened.	Ctrl+D
Exit	-	Ends the Drive Composer session.	Alt+F4
Print	-	Prints the parameter screen.	Ctrl+P
Print real-time monitor view (pro)	-	Prints the monitor screen.	-

Edit menu

The Edit menu is always located in the menu bar.




The menu contains the language commands with which you can select the language for the Drive Composer user interface.

Note: Restart the Drive Composer to see the language changes.

View menu

The View menu is always located in the menu bar.

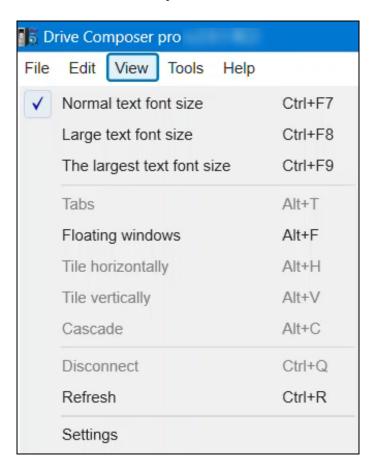


View menu commands description

Command	Description	Keyboard shortcut
Normal text font size Selects normal font size. Note: The change in the font size does not affect the size of the monitor window font.		Ctrl+F7
Large text font size	Selects larger font size.	Ctrl+F8
The largest text font size	Selects the largest font size. You can also change the font sizes using the following A-letter icons. A A A A B B B	Ctrl+F9
Tabs	Changes working area to be viewed as tabs. Note : The monitor window cannot be tabbed.	Alt+T
Floating windows	Changes working area to a separate window. Note : The monitor window cannot be a floating window.	Alt+F
Tile horizontally	Changes floating windows to be tiled horizontally.	Alt+H
Tile vertically	Changes floating windows to be tiled vertically.	Alt+V
Cascade	Changes floating windows to cascade. You can resize and freely locate the cascaded windows in the working area.	Alt+C
Defines language and connection configuration. Enables to save workspace settings disable local control share connection to the same drive Allows to select temporary file location set the appropriate Drive Installed Base server location.		-
Disconnect	Disconnects Drive Composer from the drive.	Ctrl+Q
Refresh	Creates a new connection between Drive Composer and the drive, which means, uploading parameter information from a single drive and creating a new connection with multidrives.	

Tools menu

The Tools menu is located in the menu bar. The commands of the Tools menu may vary between different software versions and drives.

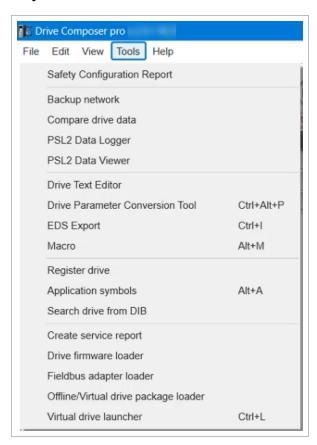


Tools menu commands description

Command	Description	Keyboard shortcut
Safety Configuration Report	Prints safety functions configuration report if FSO module is installed.	-
Backup network	Creates backup of all connected drives in a PC tool network.	-
Compare drive data	Compares parameters of two drives or a parameter file and a drive or two parameter files.	-
PSL2 data logger	Uploads PSL2 data logger files from the drive flash memory to PC local hard drive. This option is applicable only in BCU-x2 control unit. See Using the PSL2 data logger (pro) (page 222).	-
PSL2 Data Viewer	Opens and views contents of the uploaded PSL2 data logger files in the PC local hard drive. See Using the PSL2 data viewer (pro) (page 223).	-
Drive Text Editor	Allows reading texts from the drive to make changes and to update texts to the drive. See Using the Drive text editor (page 218)r.	-
Drive Parameter Conversion Tool	Converts parameters. See Using the Drive parameter conversion tool (pro) (page 220).	Ctrl+Alt+P
EDS Export	Creates EDS files of a connected drive.	Ctrl+I

Command	Description	Keyboard shortcut
Macro	Sets parameter values to multiple networked drives when custom window functionality is not sufficient. See Macro (pro) (page 129) and Macro commands (page 130).	Alt+M
Register drive	Registers an ABB drive in the Drive Installed Base service (DIB) portal. See Registering an ABB drive to Drive Installed Base service (page 198).	-
Application symbols	Shows symbols exported from Control Builder Plus application to the drive. The application list will remain empty if drive does not have Control Builder Plus.	Alt+A
Search drive from Drive Installed Base	Retrieves information of a registered ABB drive in Drive Installed Base. You will need access permissions to Drive Installed Base portal. See Searching a registered ABB drive in Drive Installed Base (page 202).	-
Create service report	Creates service report of a registered ABB drive in Drive Installed Base. You will need access permissions to Drive Installed Base portal. See Creating a service report from Drive Installed Base (page 205).	-
Drive firmware loader	Downloads firmware to the drive. See Drive configuration (page 159).	-
Fieldbus adapter loader	Downloads firmware to the Fieldbus adapter module. See Loading the fieldbus adapter firmware (page 179).	-
Offline/Virtual drive package loader	Downloads Offline/Virtual drive packages to the Drive Composer.	-
Virtual drive launcher	Launches the Offline/Virtual Drive Launcher window if Offline/Virtual Drives button is enabled on the Drive Composer tool start-up screen.	Ctrl+L

Help menu

The Help menu is always located in the menu bar.

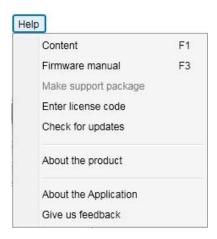


Help menu commands

Command	Description		
Content	Opens Drive Composer user manual as a PDF file.	F1	
Firmware manual	Opens firmware manual of the connected drive type in a separate window as a PDF file. If you selected a parameter or some other significant item when you clicked this command or pressed F3 key, the appropriate chapter in the firmware manual is displayed. You can also read the firmware manual of the connected drive by clicking on the <i>i</i> button.	F3	
Make support Creates a single file that can be sent to the local ABB support contact i you need any support.		-	
Enter licence Registers the Drive Composer license code, during the first-time launch of the software. See steps for Activating Drive Composer pro (page 28)		-	
Check for up- dates	Checks for newer version of the software.		
About the product	Displays Drive Composer software version and copyright text.		

Drive control panel

 The drive control panel is located below the menu bar. It has buttons for controlling a connected drive. It also shows the status of the drive.



Item no.	Button name	Description
1	-	Motor icon (clockwise open circle arrow) for drive status indication. For description, refer Drives list panel: status indication (page 70).
2	-	The name of the connected drive and "{1}{1}" represent the channel number and node number of the connected drive, respectively.
3	Control	Allows controlling the selected drive through Drive Composer or allows releasing control of the drive.
4	Reset fault	Sends a reset command to the drive. If the fault is not active, the drive clears it.
5	Start	Starts the currently controlled drive. A motor connected to the drive starts rotating according to the set reference value.
6	Stop	Stops rotation of the motor connected to the currently controlled drive.
7	Coast stop	Coasts the currently controlled drive to stop.
8	Reference	Allows entering a new reference value. The Reference field will show the current reference value used in the drive. When you click the Reference field, a tooltip shows the minimum and maximum limits for the reference and current/actual reference value. Actual value: Orpm 1219 Set Min: -1500 Max: 1500 For reverse direction, set the value manually with negative (-) sign.
9	Active reference	Displays the active reference value.
10	Set	Enforces the value in the reference value field to the currently controlled drive. You can also perform the same command by pressing ENTER.
11	Step	Activates step cycle with the reference value. Allows modifying Step type, Step value and Step duration with reference value. The available configuration is dependent on the connected drive.

Using the drive control panel to start the drive

- 1. Set the drive parameter values necessary to start the drive. See firmware manual of the drive.
- 2. Click **Control** button.

The control box indicator changes to LOC.

- 3. Enter a reference value and press ENTER or click the **Set** button.
- 4. Click **Start**.


The drive starts. The indicator box arrow changes to green.

Note: Limit settings in parameter group 30 affect the reference limits.

Drives list panel

The drive list panel shows all connected drives and open files. The drives status is indicated with a motor icon (clockwise open circle arrow). For description of status, refer Drives list panel: status indication.

When you click on a connected drive type, a pop-up window/context menu appears with different drive view types.

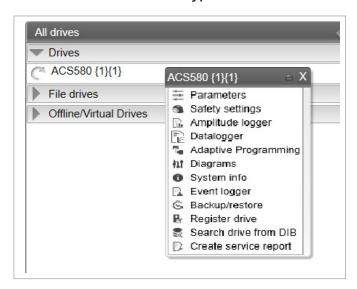

Drive view	Description
Parameters	See Parameter window.
Amplitude logger	See Amplitude logger (pro).
Datalogger	See Datalogger (pro).
Adaptive Programming	See Adaptive programming.
Diagrams	See Control diagrams (Pro).
System info	See System info.
Event logger	See Event logger.
Backup/restore	See Using Drive Installed Base service and Restoring a drive.
Register drive	See Registering an ABB drive to Drive Installed Base service.
Search drive from Drive Installed Base	See Searching a registered ABB drive in Drive Installed Base.
Create service report	See Creating a service report from Drive Installed Base.

You can open those views either as new tabs or floating windows. If an active window is associated with a drive or a file, the corresponding tree item is highlighted in the drive list.

Drives list panel: status indication

Status	Description
All drives USB- drives Test Drive	A Grey circle arrow indicates a stopped drive.
All drives USB- drives Test Drive	A green circle arrow indicates a running drive.
Faulty drive All drives USB- drives Test Drive	A red circle with a white cross (x) indicates a faulty drive.
All drives USB- drives ACS880 {1}{2}	An orange background means that a drive has an alarm.
Broken connection AC \$880_1	A red broken line (—/ /—) means that the connection to a drive has broken.
ACS880 WTD {1}{1} All drives Drives ACS880 WTD {1}{1}	A lock symbol next to the Drive name means drive is enabled with RADIUS authentication and you must login for specific operations of the drive.

Working area

The working area shows the following views:


- Parameter windows
- Custom parameter windows
- Event logger
- System info
- · Control diagrams
- · Assistants, and so on.

Using the working area

In the working area, you can

- · use either tabs or floating windows
- adjust the size of the working area by dragging the white separating line up/down
- · adjust the size of the drive list to the left/right
- · resize the windows that are not maximized by dragging any corner
- scroll the content using scroll bars on the side or bottom of a window.


The user interface is tabbed by default. You can change the order of tabs by dragging them. You can open tabs for a single drive or for multiple drives.

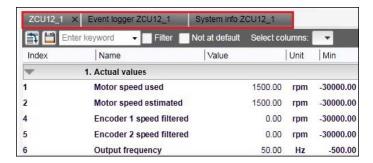

You can set the working area to a floating window. For example, parameter window, event logger, system info, etc. can be shown as floating windows. You can also tile

72 Main user interface components

the floating windows vertically or horizontally, or cascade using the **View** menu commands.

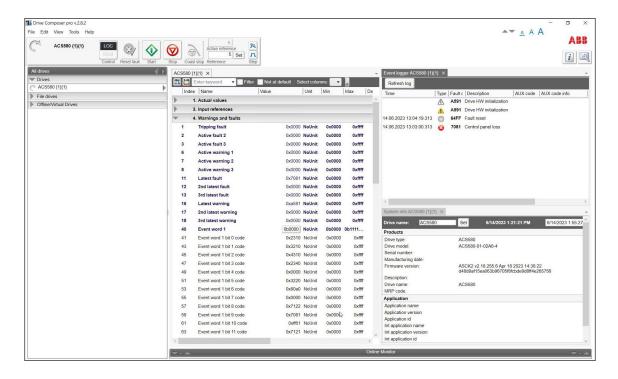



Parameter window


Contents of this chapter

This chapter describes the parameter and custom parameter windows.

Parameter window overview

The parameter window view displays parameter groups, parameters and their values for the associated drive or a file. The working area can show several parameter windows. The headline of each parameter window shows which drive it belongs to.


- With Drive Composer entry, the parameter window opens only when the drive is connected.
- With Drive Composer pro, the parameter window opens by clicking on the selected drive in the drive list panel and selecting **Parameters**.

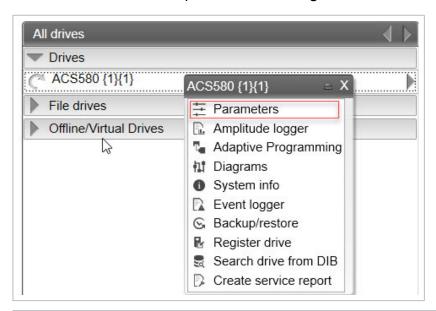

Parameter window command icons

Icon	Description
Fi	Expands/collapses parameter groups. When parameter groups are expanded, all parameter values are read once from the drive.
	Saves parameters to a file. Saves visible parameters to a file. File extension is dcparams(bak).
User set 🔺	Enables User set function and allows to add, remove, copy and save User set parameters.
Enter keyword ▼ Filter	Enables you to search parameter lists with a keyword. Search is activated/deactivated by clicking the Filter check box. When the Filter check box is unchecked all parameters are seen.
	Note: If parameter groups have not been expanded, the first search takes about 3060 seconds.
Select columns:	Allows you to select/deselect columns to be seen in a parameter window.
Enable updating	Parameters are updated only when a group is opened. With the Enable updating function it is possible to set all open and visible groups to be updated automatically. Parameters that have been set to be updated automatically have a yellow background.
	Allows you to download parameters from a file to a drive. With a custom parameter window allows downloading offline values to a drive.
Change drive	Enables you to change the window target, which is useful if you have Drive Composer pro and you have to check certain parameters of another drive. Included only in custom parameter windows.
Not at default	Provides you with a list of all user-changed parameters if you click the check box. These parameters have an orange background.
•	Allows you to add or remove one parameter or signal or several parameters or signals to/from a custom parameter window.

Parameter window: view parameters

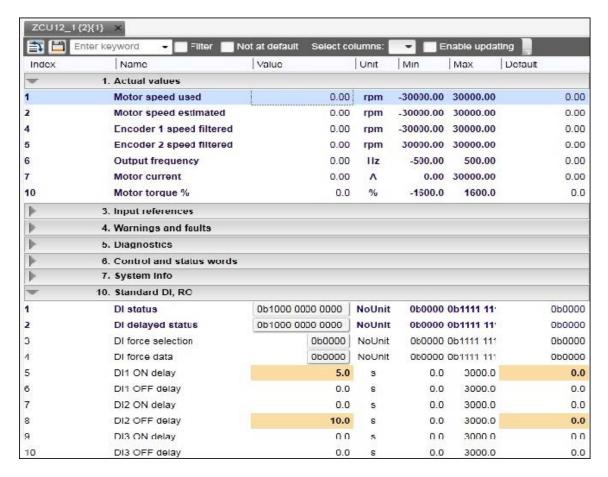

Parameters list representation

The parameter window contains different types of parameters. Some of these types are identified by colors or bold fonts as shown in the table below:

Illustration	Explanation
20.3 Ext1 In1 source D1	Normal parameters
1.1 Motor speed used 0.00 rpm	Signals (bold)
10.21 RO status 0b0100	Bit names of a parameter can be seen by double-clicking on the parameter. New window opens.
11.6 DIO1 output source P.10.1.1	Parameter value is set from another parameter, for example, parameter group 10, index 1, bit 1.
11.6 DIO1 output source P.10.1.1 -	Parameter value is an inverted bit of another parameter, group 10, index 1, bit 1.
20.1 Ext1 commands In1 Start	User has changed the value of a parameter (shown with an orange background).

Note:

- The most common type is the regular parameter.
- Parameters are normally readable and writable. However, when the drive is running, some parameters may be write-protected.
- The parameter view shows: Parameter names, values, units, default values and different user sets. The number of user sets depends on the drive type.

- The value of a parameter is read only once. If is necessary to update this value, right-click and select **Refresh the parameter**.
- You can set all visible parameters to update automatically by clicking the Enable updating button.
- You cannot modify values of signals. If you attempt to modify a signal, an error is indicated. Signals are updated cyclically in the parameter window.
- Parameter signals are also updated frequently, but you can modify these values.

Navigating parameters and groups

Updating parameter values

Parameter values are updated if they are modified.

- To modify a parameter value, double-click the parameter or press ENTER on the highlighted parameter.
- To update a parameter group value, right-click the group name and select **Refresh** group parameters.

Hidden parameters

In special cases, hidden parameters and groups become available by modifying some parameter values. The **View** → **Refresh** command updates the whole parameter table. For example, group *51 FBA A Settings*: When the adapter module is enabled in group 50, you can see parameter names by selecting **View** → **Refresh**.

Note: Close the parameter window before refreshing and open again after refreshing.

Alternate formats to view parameters


There are five alternative formats in which parameters are shown: default, binary, hexadecimal, integer and float format.

To change the format of a parameter, right-click and select either **Use default format**, **Use binary format**, **Use hexadecimal format**, **Use integer format** or **Use float format**.

You can change the widths of the columns by dragging the vertical lines between the column headers.

Viewing bit names


To see the bit names of certain binary parameters, double-click the value field box. For example, refer the below parameter 10.1 DI status.

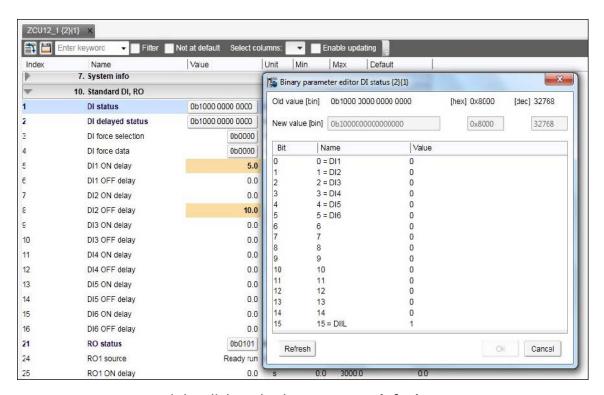

To reset a parameter, right-click and select Reset to default.

Parameter values are read once when a group is opened. You can set independent parameters from different groups to the Auto-update mode by right-clicking and selecting **Add to auto-update**. The parameters that are updated automatically are seen with a yellow background as shown in the following figure.


Note: Signals are automatically updated cyclically

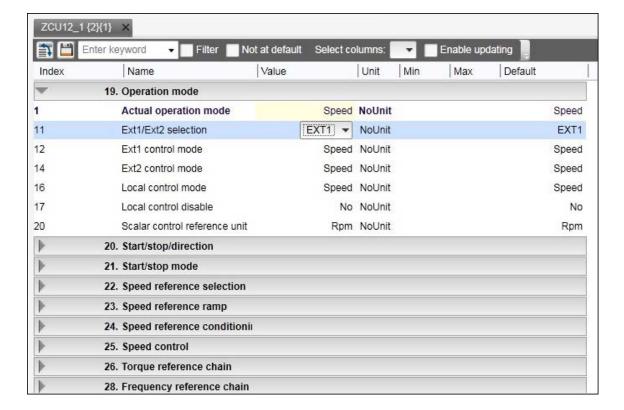

Parameters or signals can be sent to the monitor window by right-clicking them and selecting **Send to monitor**. Parameters can be copied to a custom parameter window by right-clicking them and selecting **Copy**. In addition, you can drag and drop parameters to a custom parameter window.

Pointer parameters overview

Pointer parameter is a special type of parameter that reads value from the parameter it points to. Depending on the pointer parameter, value or bit pointer, its target can be another parameter or one of its bits. You can assign Active (false) or Inactive (true) status to some pointer parameters.

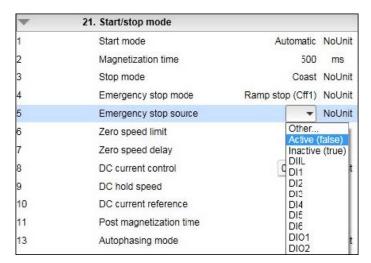


Typically, common settings are offered as a selection list. If the selection list does not offer the correct pointer, you can set the pointer by selecting **Other...** from a selection list. Select a parameter from the list for a value pointer and then its bit from 0 to 31 for a bit pointer.

You can also enter a value manually by selecting the Edit manually check box. Use the value form P.#.#.#, where the first # is the parameter group number, the second # is the parameter number and the third # is the bit number without leading zeros (for example P.2.1.2). The constant values are Active (false) or Inactive (true).

Inverting a bit pointer

In the Set pointer parameter window, select Invert value check box.

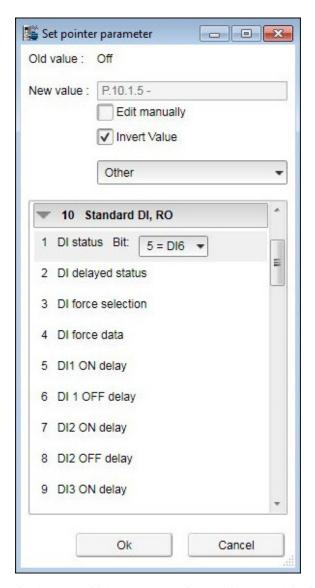


The inverted bit pointer value is shown with the minus sign at the end of the parameter.




Setting fieldbus data in/out parameters

Process data transferred to and from the drive/PLC is set with parameter groups 52 and 53. With an ACS880 drive it is possible to select the data type for each selected parameter/signal in these groups.


1. Double-click FBA data in/out parameter and select **Other**.

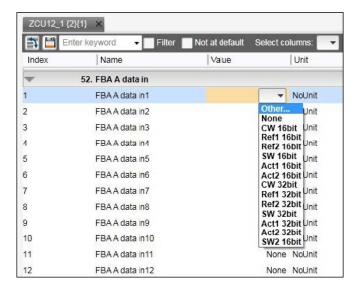

2. Select the format in which the value is handled:16-bit, 32-bit or floating point format.

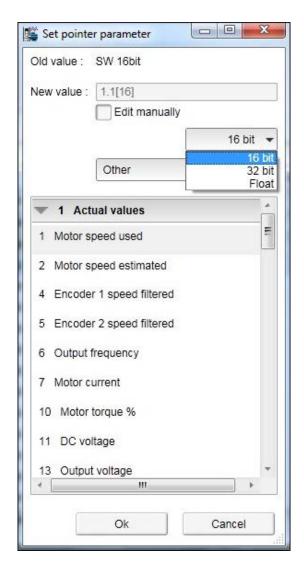

In the parameter window the selections are shown inside brackets: [16], [32] or [F].

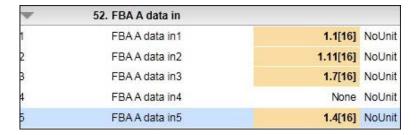

Note:

The floating point or 32-bit value reserves two slots in the configuration. Consequently, if you try to select a value for parameter 52.04 as in the figure above, a Parwrite failed error message appears. See the scalings of parameters/signals in ACS880 primary control program firmware manual (AUA0000085967 [English]).


Always check the parameter mapping from the manual of the used fieldbus protocol. Example, FENA-01/-11/-21 Ethernet adapter module user's manual (3AUA0000093568 [English]) or *FPBA-01 PROFIBUS DP adapter module user's manual* (3AFE68573271 [English]).

Binary parameters

Binary parameters have a special meaning for each of their bits. These parameters are modified in a special Set binary parameter dialog. You can modify the value numerically in binary, hexadecimal or decimal format.


- One way to modify the value in the field is, double-click the value field for each bit. Some bits may be greyed out or disabled to edit.
- Another way to modify a bit is to type the bit value directly to the New value [bin]
 / [hex] / [dec] field.

You can view the binary format of signal values in a similar dialog.

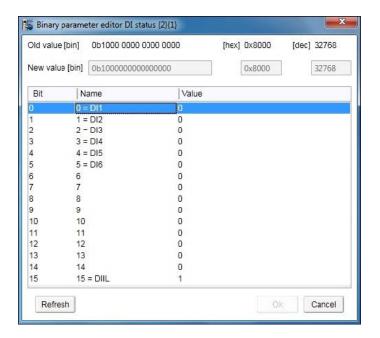

Search for groups and parameters

You can search the names of parameters and groups inside the parameter window. The search result is a list of all parameters matching the search text criteria. For example, all torque-related parameters can be found by entering search criteria "torque" in the Enter keyword field and clicking the Filter check box. To uncheck the Filter box, click it again.

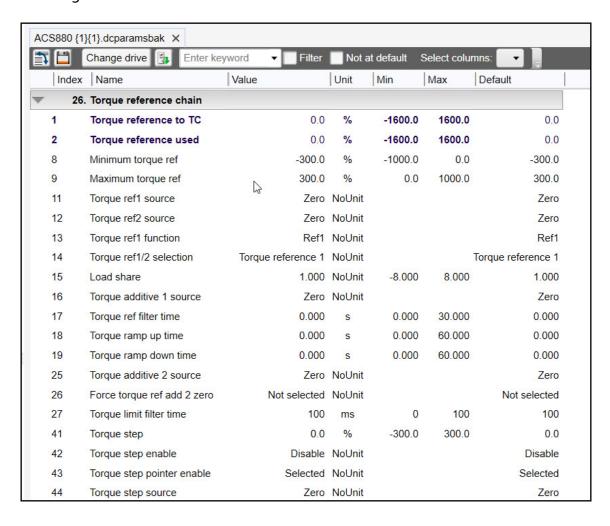

Note: The first search takes about 30...60 seconds, because Drive Composer goes through the whole parameter structure. The next searches are fast. All searches are in memory of the PC as long as Drive Composer is on.

Custom parameter window

In Drive Composer you can customize parameter windows by:

- dragging and dropping parameters/signals
- changing parameter values
- copying from the main parameter window or from any other custom parameter window
- renaming custom parameter windows.

For example, you can

- collect all the typical parameter sused in a quick start-up to one window or
- create separate windows for separate functions (example: references, limits, ACS880 I/O).

Custom parameter window features

The Custom parameter window

- opens automatically when a connection to a drive is made because they are saved with the workplace.
- can be used both in tabbed and floating windows environment.
- can also be opened separately.

Saving custom parameter window

To save a separately opened custom parameter window to a file, select **Save parameters to file**. Note that changed values in the Offline value column are also saved. You can use the saved file for parameterization of another drive. You can also send this file to other users to open the file with Drive Composer and view the parameters list.

Note: When you saved a custom parameter window, the actual drive values of the Value column are copied to the Offline value column. During loading, the values in the Offline value column are shown in comparison with the current actual values. From the saved customer parameter window file you can copy the values of the Offline value column to another drive by clicking the **Download to device** button.




Viewing copied parameter values

In a network of drives, you can create a custom parameter window including parameters/signals selected from different drives. To have a view where all parameters are from one drive, click the **Change drive** button and select the drive.

To see the value of a parameter/signal used in another drive, right-click the parameter/signal and select **Change drive**.


84 Parameter window

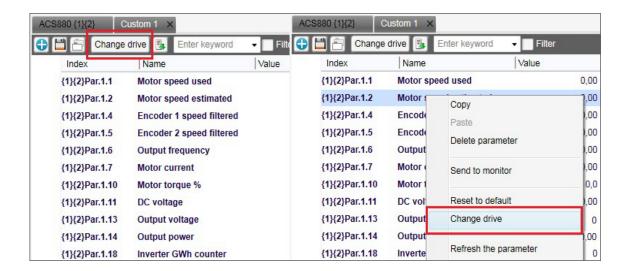

Adding parameters to a custom parameter window

The following example shows how to:


- create a new custom parameter window
- add parameters to a custom parameter window
- modify the Offline value column in the custom parameter window
- copy/download parameters to a drive.
- 1. Click **File** →**New** → **Custom parameter set**.

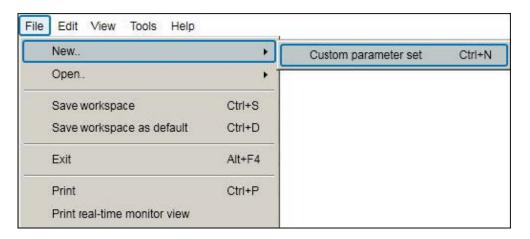


2. Name the custom parameter window.




3. Click **Add** button to add parameters/signals to the new custom parameter window or copy paste from other parameter window.

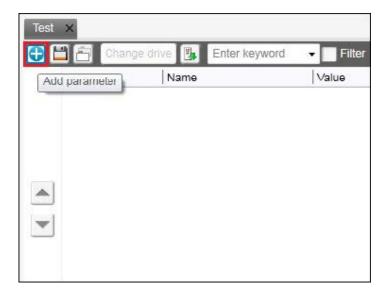


For example, select minimum and maximum speed values from the parameter group 30 Limits and click Apply changes.

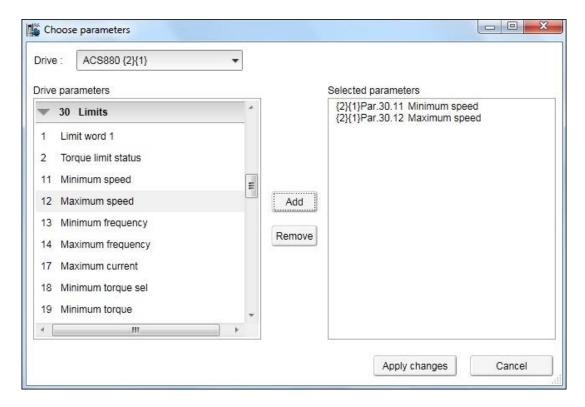

5. The **Value** column shows the values of connected drive. Enter values in the **Offline** value column to be same as **Value** column or you can type new values.

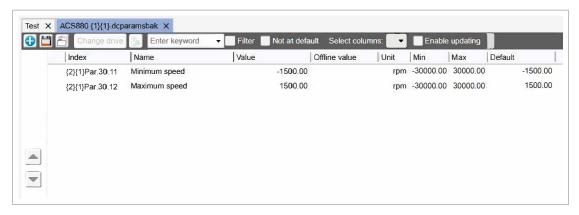


6. Click on **Save parameters to file icon to** save the custom parameter window.

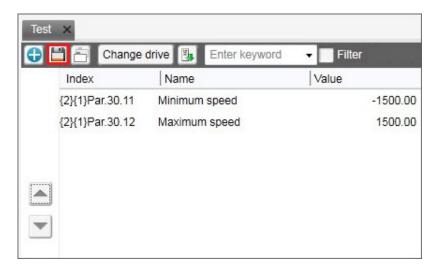

Drive Composer saves to file the values in the **Offline value** column. If the **Offline value** column was empty, then values in the **Values** column is saved.

- 7. When connecting the next drive open the created custom parameter window by clicking File → Open → Custom parameter file.
 - You can now see the online values of the new drive.
- 8. Copy the offline parameter values to a new drive by clicking on **Download to device** icon.

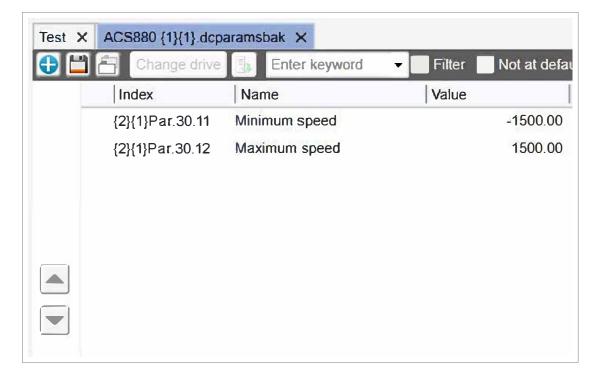

Working with offline files


Types of offline files

There are two types of offline files containing parameter information.


- Parameter file is an offline file containing all parameter values.
- **Support package** is an offline file package that contains a collection of drive information, including all parameter values. You can open a support package file using Drive Composer pro. For further information on support package, refer chapter Diagnostics (page 119).

Saving parameters to a parameter file

- 1. Connect Drive Composer to a drive and open the parameter window.
- 2. In the parameter window, click **Save parameters to file** icon.

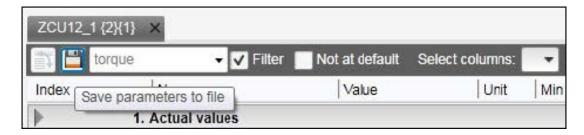

3. Select a folder, enter a name for the *dcparamsbak* file and click **Save**.

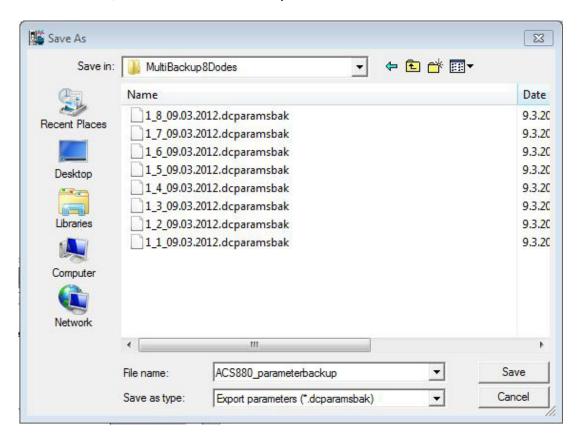

Opening a parameter file (entry)

To open a parameter file and view the parameter values offline, proceed as follows:

- 1. Connect to a drive.
- 2. Go to File \rightarrow Open \rightarrow Parameter file.
- 3. Parameter window displays.

Opening an offline file containing parameter values (pro)

To open a file and view the parameter values offline, proceed as follows:

- 1. Connect to a drive.
- 2. Go to File → Open → Parameter file / Open Support package.
- 3. New item appears under **File drives**.
- 4. Select **Parameters** to open parameter window.

Downloading parameter values to a drive

Note: The operation do not perform full restore. Only visible parameters and ID run results are copied to a drive when the download command is used. Also, drive type and software version are not checked when downloading parameter values from an offline file to a drive. For further information on Restore function, refer chapter Other functions (page 197).

To download offline parameter values to a drive, proceed as follows:

- 1. Open an offline parameter window.
- 2. If you have multiple drives connected online, click **Change drive** to select a drive you want to download the parameters.



3. Download the parameter values to a drive by clicking the **Download to device** icon.



4. If you get a message indicating that the upload of parameter values is going on, click **OK**.

You will get a report of the operation at the end of the restore operation.


5. Check the parameters that are failed during the restore operation.

Comparing drive data (pro)

Note: Both versions of Drive Composer have **Not at default** function for listing user-changed parameters. The **Compare drive data** function compares parameter values.

With Drive Composer pro you can compare parameters between


- two drives
- two parameter files
- drive and parameter file.
- 1. Go to Tools → Compare drive data (Alt+C).

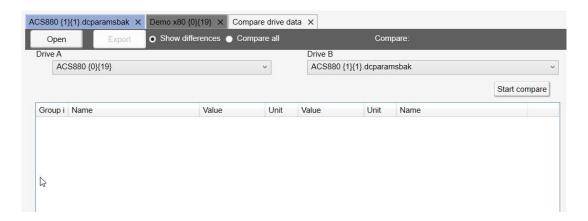

- 2. In a PC tool network, select drives from **Drive A** and **Drive B** drop-down menus.
- 3. To open a parameter file for comparison, click **Open**.
- 4. To see the parameter list without differences, deactivate **Show differences** check box.
- Click Start compare.

Note: The operation may take some time to compare two different parameter structures.

The following figure shows an example of the result.

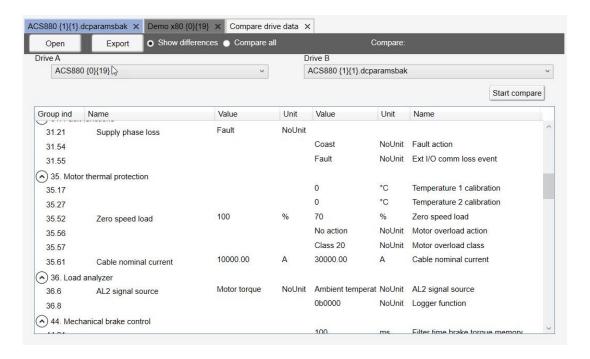

To export the result to a text (*.txt) file, click the Export.

Note: Click the >> << buttons to copy parameter values from Drive A to Drive B.

User set functionality (Pro)

User set overview

User set or user parameter set functionality is an interface to work with user set parameters. The user set parameters can be saved to the permanent memory of the drive and recalled using specific parameters. Digital inputs allow switching between the user sets. Multiple user sets can be used to control multiple motors through a single drive.

With the User set function, you can:

- Creating user set (page 95)
- Saving user set (page 96)
- compare user set values side-by-side
- Copying user set parameter values (page 97)
- Removing user set (page 98)

User set system requirements

The User set functionality is available only if the following requirements are satisfied:

- PC must have the configurations listed in System requirements (page 20).
- Virtual drives software must be installed in your PC, otherwise the User set function is hidden.
- You must have a valid Virtual drives license.
- You must register the Virtual drives license with ABB license manager. Note that ABB license manager is installer together with the Virtual drives software.

Limitations


The User set function

- is supported only in ACS880 drive
- works only in the parameter window from where it was enabled.
- works only in one parameter window, i.e., you must disable the function (if enabled) in any other parameter window to allow the function in the current window.

Starting the user set function


To start or stop the user set function,

1. In the Drive Composer pro Welcome window, click **Connect**.

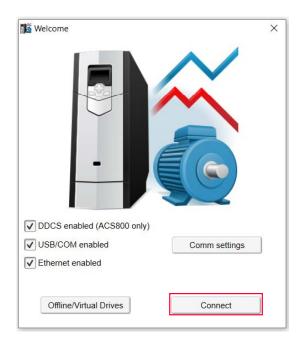


- 2. Open the Parameters file or the parameters backup file.


 The User set function is visible in the parameter window tool bar.
- 3. Click the User set drop-down menu. By default the User set function is disabled.

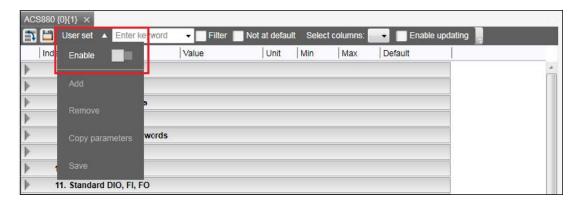


- 4. Click on the **Enable** switch.
 - If drive firmware version or the parameter backup file is deviated from the virtual drive, then Drive Composer notifies that User set parameters may be incompatible for editing. Note that small deviations may not affect the User set functionality. Click Yes, to proceed.

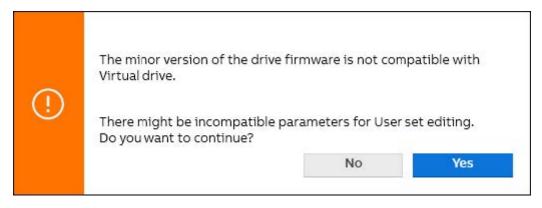


• If drive firmware version is not compatible with the virtual drive version, then User set functionality can not be started. Click **OK**. to close the window. You can either update the Virtual drive version or contact your local ABB representative for support.

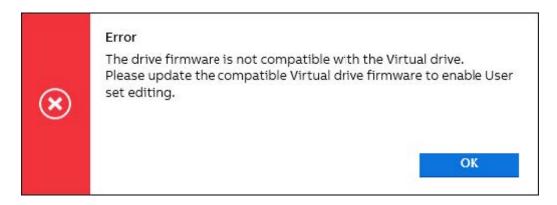

5. User set initialization starts. If initialization is complete, click **OK**.

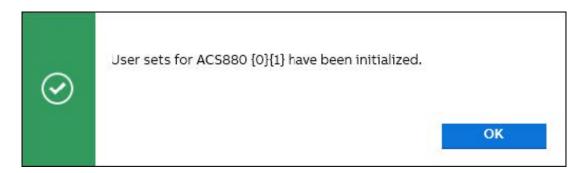

6. User set function is enabled. The enable switch color appears in blue.

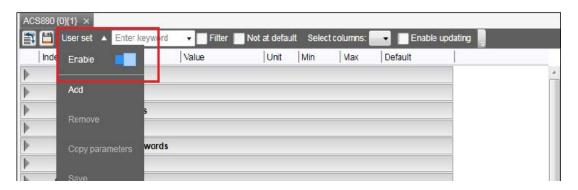


Note: To disable or stop the User set function, click the enable switch again. The switch color appears in Grey.


If user sets was configured in the connected drive or saved in the parameter backup file, the available user set is displayed in different columns next to each other.

Creating user set

1. In the User set menu, click Add.

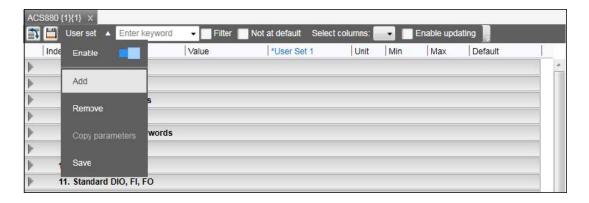

2. From the user set options, select the appropriate option and click **OK**.

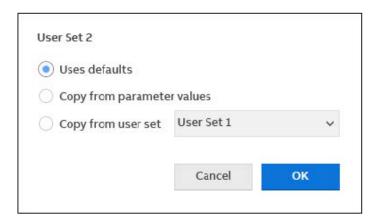


- Uses defaults—takes the parameter values from defaults
- · Copy from parameter values—copies the current parameter values
- Copy from user set—copies from another user set.

The new user set is displayed in the parameter window.

Note: If the maximum number of supported user sets is reached, the **Add** option is disabled in the user set menu. The maximum number of user sets is determined by the drive firmware. For example, the current virtual drive firmware version 2.82 supports four user sets.

Active and unsaved user set

 
The active user set is highlighted in blue in the header row of the parameter window. To change the active user set, configure parameter 96.11 User set save/load = Load user set X.



The unsaved user set is highlighted with * symbol in the header row of the parameter window.

Saving user set

1. In the User set menu, click Save.

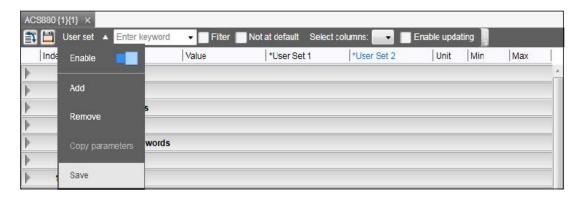

2. User sets are saved. Click OK.



Note:


- When all user sets are saved, the Save option is disabled in the User set menu.
- If there are unsaved user sets at the time of disabling the user set function, closing the parameter window or exiting Drive Composer, a reminder appears to save the unsaved user set(s).
- You can also save user sets using parameter 96.11 User set save/load. ABB recommends to save user sets using the Save option in the User set menu.

Copying user set parameter values

You can copy specific parameter values between user sets.


Note: Parameter(s) in the backup file only can be used as the source of copy operation.

In the parameters window, select the parameters to copy.

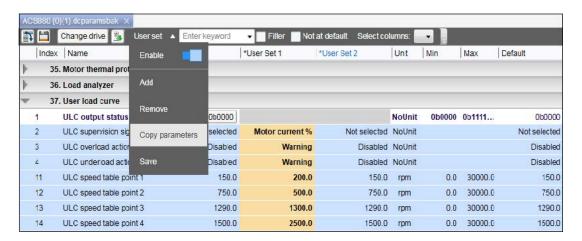


Note: If no parameters are selected, the Copy parameter option will be disabled.

- 2. In the User set menu, click Copy parameters.
- 3. In the Copy parameters window, select the source and destination parameters. Click **OK**.

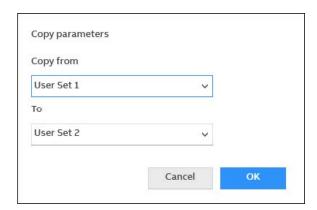


The selected values in User Set1 is copied to User Set2.

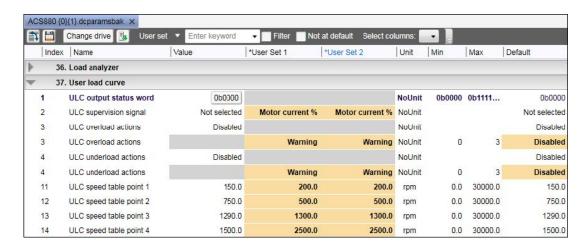


Removing user set

1. In the User set menu, click **Remove**.

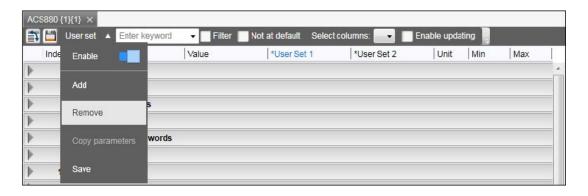

Note: The Remove option is disabled if no user sets are available.

Select user set(s) to remove and click Remove.

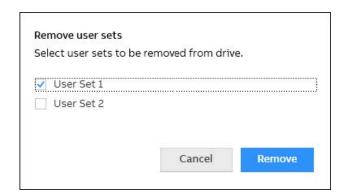


The selected user set is removed.

Show/hide user set

You can show/hide a user set in the columns list.


1. In the Parameter window, click **Select columns**.

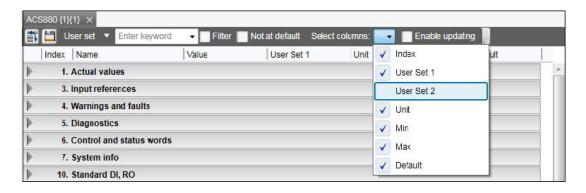

Check/uncheck the desired User set to show/hide.

User set parameters limitation

- Parameters not valid for user set are disabled and appears as Grey boxes. For information of invalid user set parameters, refer the firmware manual.
- · All signal parameters are disabled, by default.

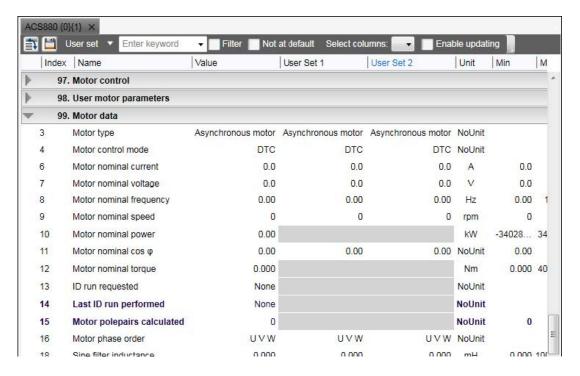

 User set parameters with different unit/min/max/default values are displayed in different rows.



Monitor window

Contents of this chapter

This chapter describes the monitor window and its use.

Monitor window overview

In Drive Composer you can monitor the operation of connected drives. In the online mode, the monitor window shows signal values in graphical or numerical format. The monitor data can be saved to a file for later use.

With Drive Composer entry you can monitor up to 8 signals.

With Drive Composer pro you can monitor up to 26 signals. If Drive Composer pro is used with an ACS880 drive, it is possible to monitor 1 signal per 1-ms time interval.


The monitor window is always a tabbed window, in other words, there is only one monitor window available.

User-made monitoring settings (selected signals, y-scalings for signals, pen colors, number of grids etc.) are saved by default. In other words, when you open the tool, there are always the latest settings available.

Resizing the monitor window

When you start Drive Composer the monitor window is in the minimized position and you have to lift it in the following way before you can start monitoring.

 You can resize the monitor window by clicking the title bar with the primary mouse button and dragging it upwards.

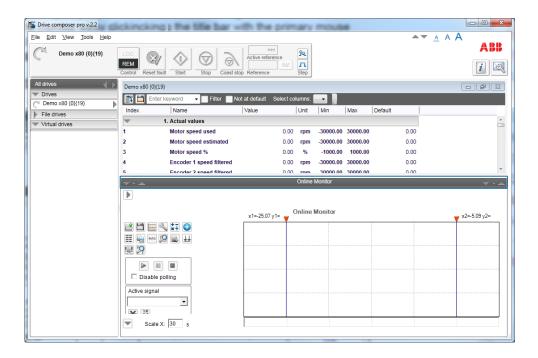


- You can resize the monitor window with the Minimize, Maximize and Split monitor buttons included in the Monitor menu bar.
- You can lift the monitor window by clicking the arrow buttons in the title bar.


Adding parameters/signals for monitoring

There are two ways to add parameters/signals to the monitor window:

 Right-click a parameter/signal in the parameter window and select Send to monitor.

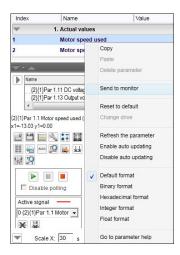


 Click the Add signal icon on the configurations and control area in the monitor window.

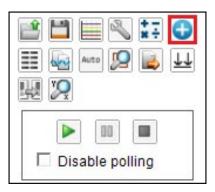

Select parameters from the Drive parameters list by double-clicking them or select a parameter and click **Add** button. You can add maximum of 26 parameters in Drive Composer pro and eight parameters in Drive Composer entry.

Note:

- With Drive Composer pro you can select signals/parameters from different drives. Change the drive from the Drive list as shown in the following figure.
- In the PC tool network via Ethernet or with a panelbus, ABB recommends you
 to select **Disable polling** to enable the best sampling result for monitoring.
 The status of the drive(s) cannot be read before you have unselected **Disable**polling.

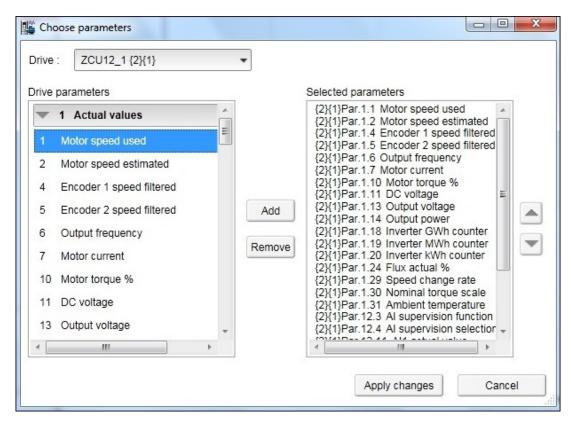

The selected signals appear in the legend area.

To change the scalings of the y-axis of selected parameters/signals, click the Min or Max column in the legend area.

Active signals can be changed from the pull-down menu on the left side of the graph

All the other signal scalings are performed on the right side of the legend area. The right side y-scalings can be hidden by removing the check mark from the Y-scale column check box.



You can change the color and thickness of the pen only after you have minimized, that is hidden the legend area with the **Arrow** button on the left (refer the figure above).

To change the scalings of the y-axis for selected parameters/signals, click the Min or Max column in the legend area.

Monitor window components

The monitor window consists of the following parts:

- Configuration and control settings
- Graph area
- Y-axis
- X-axis
- Legend area
- Limit, color settings.

Configuration and control settings

Icon	Description
	Opens the saved monitored file to the graph area, which can be done only after monitoring has been stopped. File extension is *.dcemon or *.dcpmon. Note: If you have an online connection and want to start a new monitoring session after viewing opened monitored data, you can click the Monitor configuration icon.
	Saves the accumulated monitor data to a monitored data file. File extension is *.dcemon for the entry version and *.dcpmon for the pro version.
	Chart configuration can be used to set the colors for grids, number of grids, background color, color of alarm pen etc.
	Opens the Monitor settings window where you can modify the monitor settings and the select the sample interval time for monitoring. You can also set the method for starting and/or stopping monitoring (by hand/time). You have to select the HD where the saved data is stored. Note: The monitored data is saved cyclically to the selected file. Created monitoring configuration can be saved and restored from Monitor settings window.
* -	Allows you to create an arithmetic signal for monitoring by using two signals used in monitoring. Available operations are ADD, SUB, MUL and DIV. Select new ignal
	Opens a dialog where you can add or remove one signal or several signals from the monitor configuration. Note: You can use the Add signal function only when monitoring has been stopped.
	Shows the signal values in text format. Only the values seen in graph area are included in the numeric signal value list.
	Copies the monitoring graph to a clipboard.
Auto	Scales the y-axis automatically. Note: Zooming is not possible in the Autoscaling mode.
9	Resets both x- and y-axis zooming to original 100%.
	You can export the monitored data in csv format to a PC. Exported data can analyzed with other tools. Use the Tab key for delimiting the columns.File extension is *.dcexp.
11	Aligns signals.

106 Monitor window


Icon	Description
	Selects or changes the drive.
Y	Zooms in the x- and/or y-axis up to 1000%.

Monitor controls

Icon	Description
	Starts recording data in the selected drives and displaying it on the screen.
00	Pauses monitoring on the screen but monitoring continues on the background. When you click the Pause icon again, all values are seen and monitoring continues normally.
	Stops recording data in the selected drives. The graph or numerical values remain on the screen. The graph can be saved for later purposes.


Active signal area overview

The Active signal area consists of functions that can be done with the selected active signal. The signal can be changed from the pull-down menu.

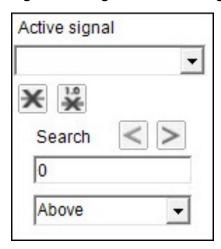

The main functions are the following:

Icon	Description
*	Allows you to see the measuring points of the active signal. See figure Monitor window: Measuring points for active signal.
	Note: This functionality works only if you have zoomed in enough in the graph area, that is, if the length of the x-axis is short enough.
1.0	Allows you to see the numeric values of the measuring points for the active signal. See figure Monitor window: Measuring points for active signal.
	Note: This functionality works only if you have zoomed in enough in the graph area.
<	Searches backwards. The following search conditions can be selected from the
	pull-down menu: Above, Below or Either. See figure Monitor window: Search functionality.
>	Searches forwards. The following search conditions can be selected from the
	pull-down menu: Above, Below or Either. See figure Monitor window: Search functionality.

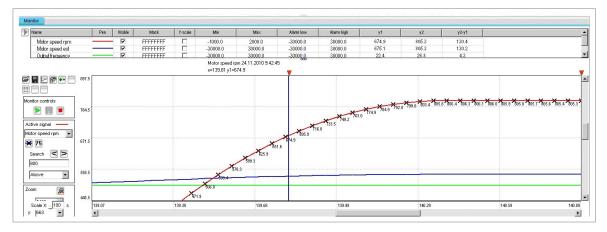



Zooming the graph

To enlarge the graph and take a closer look at the details, follow these steps:


- 1. To set the starting corner for the enlargement, place the mouse cursor in the graph area and press down the primary mouse button.
- 2. Drag to the opposite desired corner, and release the button.

The part of the graph that was inside the selection rectangle zooms out to fill the graph area.

3. To reset the zoom tool, click the **Reset zoom** icon.

You can also use the zooming tool by selecting independent values from x and y pull-down menus.

Note: Monitoring is paused during zooming. To continue monitoring, click the **Reset zoom** icon shown in the figure below.

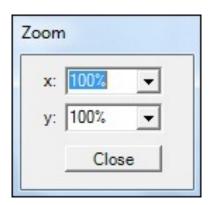



Panning the graph

The graph can be panned by dragging the graph with the right mouse button pressed down.

 
Legend area functions

The legend area shows selected signals. You can perform the following actions in the legend area:

- Change the color of the pen, thickness and style of the pen by minimizing the legend area and setting the values of each signal. See figure Monitor window: Legend area functions.
- Make signals visible or invisible by clicking the check box in the Visible column.
- Set a bit mask for monitoring. When you double-click the value in the Mask column, a new window opens allowing you to select bits for monitoring.
- Make Y-scalings visible or invisible by clicking the check box in the Y-scale column.
- Set values for y-axis scaling. You can modify the minimum and maximum values by clicking them and entering a new value. Press Enter to enforce the new value or press Esc to restore the value.

Note: If you do not see immediate changes in the graph area, check that autoscaling is not enabled.

- Set alarm limits for monitored signals. The color of a signal changes when the limit in the Alarm low or Alarm high column is reached. The color and style for the pen are selected from **Chart settings**.
- See the double cursor tool, y1 and y2 values and y2—y1 and x2—x1 differences.



Graph area functions

The monitor window and data logger window have similar graph area facilities for displaying signal values. Their usage is described here. Before Drive Composer starts monitoring online, the OnLine monitor text is seen in the graph area. When monitor files are viewed, the Data File Viewer text is seen in the monitor window.


The graph area shows the selected signal values with different colors. The x-axis represents Time and can be set from 1 to 120s. You can change the values in online monitoring mode. Scalings of the y-axis are changed in the legend area.

For data logger files, an orange arrow-head on the x-axis indicates where triggering has occurred. Data can be combined from several files to one graph.

Double cursor tool

With the cursor tool, you can see the exact values of the signals at two positions in the graph area. You can move the position of cursors by clicking the primary mouse button down on the red cursor tool icon and moving it. While the mouse button is pressed down, you can move the cursor line to the left and right.

 The time stamp of the cursor tool is shown in the header of the cursor tool. This is shown for the active signal. The time stamp changes if active signal is changed. The values for y1 and y2 are shown in the legend area. Signal value differences are shown in the column y2—y1. The time difference for x2—x1 is also shown in the figure below.





Workspace handling

Contents of this chapter

This chapter describes the workspace functionality.

Workspace overview

Workspace consists of the user interface status, such as parameter windows and custom parameter windows.

The current workspace status can be saved to a file and restored later.


Note:

- You cannot save/restore the following status data:
 - drive control status
 - If a drive is controlled locally with Drive Composer when the workspace is saved, the workspace is saved without the change in the drive control status.
 - content, status and zooming levels of a stopped, paused or running monitor.
- Do not edit a workspace or graph file. The workspace (.dcxml) and monitored data (.dcmon) files can contain binary data. For example, if the default workspace file is corrupted, Drive Composer does not open. If Drive Composer does not open, delete your default (.dcxml) file from the PC and open Drive Composer again.


Creating a custom parameter set and using it as a default workspace

- 1. Make a connection to a drive.
- 2. Resize the monitor window to half of the screen.
- 3. Create a new custom parameter window by clicking **File** → **New..** → **Custom** parameter set and name it "Own limit window".


112 Workspace handling

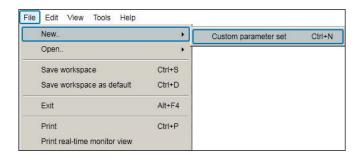

- 4. In the File menu, click **Save workspace** to save the workspace.
- 5. Create another custom parameter window and name it "Own reference window".
- 6. Select floating windows by clicking View → Floating windows.
- 7. Enter keyword "Limit" in the Enter keyword field of the main parameter window.
- 8. Select parameters in the main parameter window and drag and drop or copy them to custom parameter window Limit.
- 9. Clear the search result and enter keyword "ref" in the Enter keyword field.
- 10. Select parameters in the main parameter window and drag and drop or copy them to custom parameter window Own reference window.
- 11. Close the main parameter window.
- 12. Click **Event logger** icon in the drive list on the left.
- 13. Click File → Save workspace and name it "OwnWorkspaceFor ACS880".

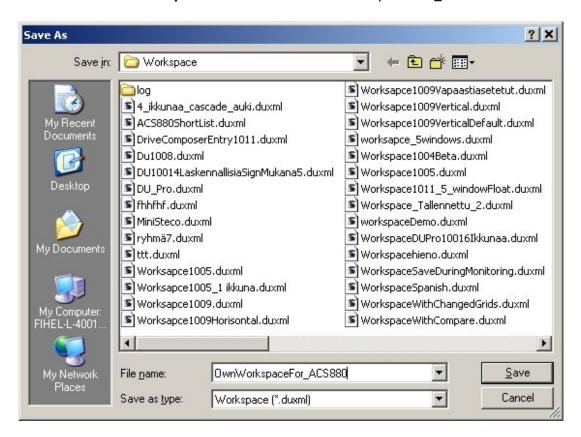

 - 14. Close the connection to the drive and make a new connection.
- 15. Click **File** → **Open..** → **Open workspace** and open the workplace that you have saved.



The workspace is ready to use for commissioning and maintaining drives. The workspace can also be saved as a default workspace which opens automatically when Drive Composer is started.



Event logger

Contents of this chapter


This chapter describes the event logger and fault data logger view and its use.

Event logger view


The event logger view displays the event logs of a connected drive. The event logs can be faults (stopping the drive), alarms or events. With some drives there can be more data of a fault in the monitor window.

Note: Fault logger data can also be seen from other faults than the latest active faults.

In the drive list, click on a connected drive and select **Event logger**.

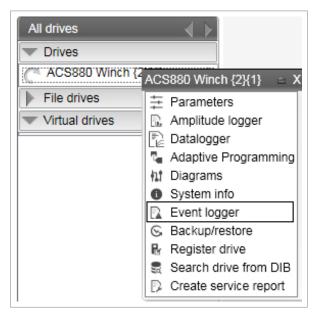


The event logs of the connected drive appears in a separate tab.

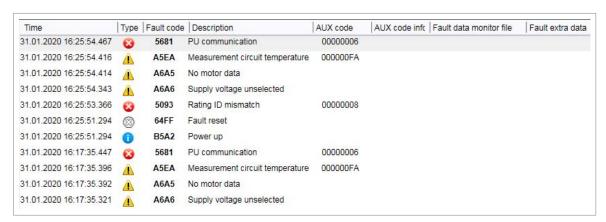

The event logger always relates to a single drive and resides in its window.

The Icon column shows the following alarm and fault icons:

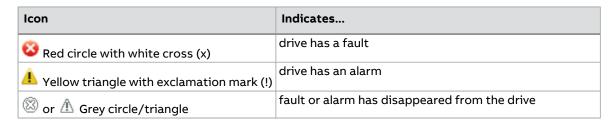

The time stamp for faults, alarms and events comes from the drive.


You can view the sorted list of faults, alarms and events by clicking the header of the Fault column.

Fault data logger

The **Fault data** icon in the Event logger view shows that the drive has fault data that can be seen with a monitor component. The icon is visible only if the drive sports the functionality.

1. In the Event logger window, click on theicon.

The message "Please wait. Loading fault data" appears. The data is loaded after the message box disappears.

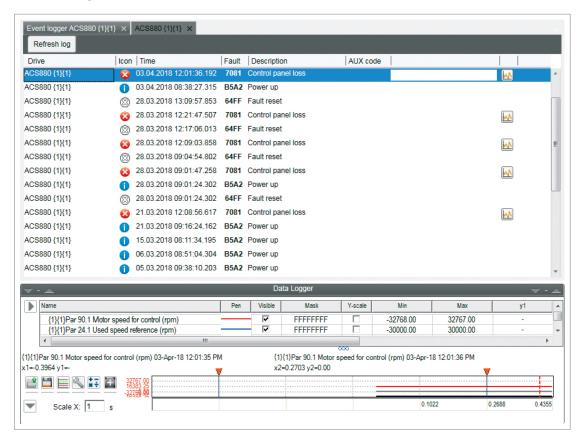

- 2. When Drive Composer prompts to save the fault data, click Yes.
- Give a file name for the monitor file.
 The file is saved with .dcpmon extension.


Note: You can continue the normal monitoring by clicking the Monitor configuration

 $\stackrel{ extstyle imes}{\sim}$ icon in the Monitor controls box of the Data Logger window.

The message "This operation will change monitor into measuring mode and restore the last used configuration. Data on display will be lost. Do you want to continue" appears.

If you clicked Yes, the monitor settings window appears. Select necessary settings and click **OK**.

118 Event logger

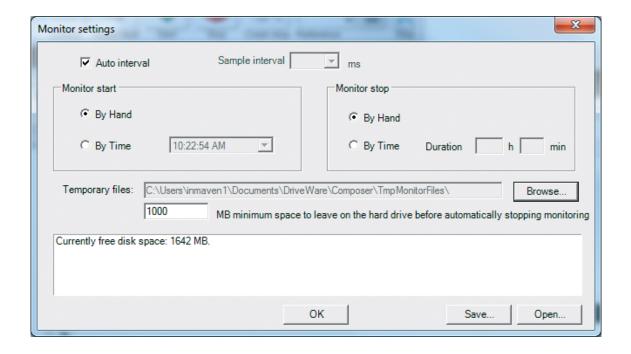

10

Diagnostics

Contents of this chapter

This chapter describes how to troubleshoot a drive with the **Support package** button of Drive Composer and a Datalogger included in the drive. It also includes how to register an ABB drive to the Drive Installed Base (DIB) portal and create service reports.

Support package

Support package is an offline package file that contains, for example, full parameter backup, system information, and event logger contents. The main purpose is to collect troubleshooting data and send it to the support personnel for analysis.


Creating a support package

By clicking the **Support package** button, you can create and save a support package file (.dcsupport format). You can also do this function from **Help** \rightarrow **Make support package**.



Sending a support package to Drive InstalledBase

After you saved the support package file (.dcsupport) in your PC, Drive Composer prompts to send the package to Drive Installed Base. Select the server location and click **Next**.

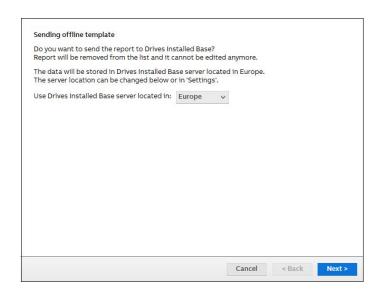

If package is sent, in the completed message window, click **OK**.




Opening a support package (pro)

You can open a Support package file in Drive Composer pro by selecting **File** \rightarrow **Open** \rightarrow **Open support package**, a new **File drive** appears. There is similar menu available with online drives.

For further information on each module, refer section System info (page 122), chapters Parameter window (page 73) and Event logger (page 115).


Drive application programming license

The drive application programming license N8010 is required for downloading and executing the program code on the ACS880 drive. In Drive Composer Pro, select **System info** tab. Check if the appropriate license is loaded to the drive. If the required license code is not available, contact your local ABB representative.

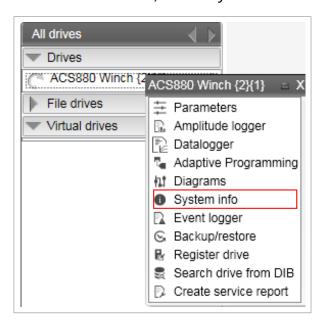

System info


The System info tab provides basic information about the drive and its options, for example, drive type code and firmware version. You can also check the status of Service pack installation. See Checking the status of Service pack (page 217).

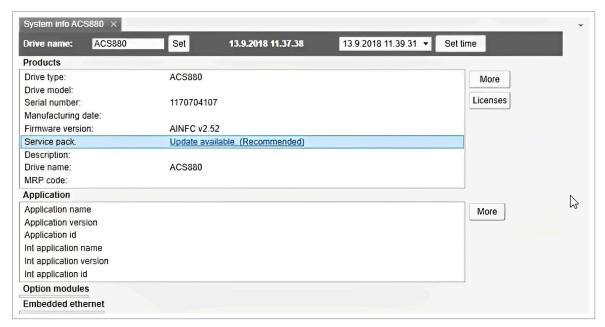

You can also set the time for the drive and name the drive.


Datalogger (pro)

ABB drives have Datalogger(s) that can record data from various signals of a drive even if the drive is not connected to a PC. A Datalogger is operated with the Datalogger view.

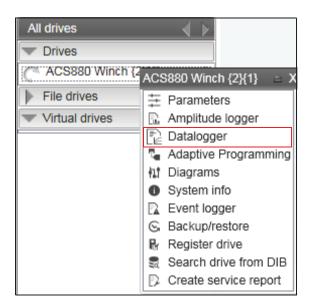

The data collecting can be stopped with a specific stop command or automatically when a triggering condition is true in the drive. After data collection stops you can read and study the data in Drive Composer pro.

The Datalogger view resembles the monitor window. Normally the Datalogger view provides data from a single drive.

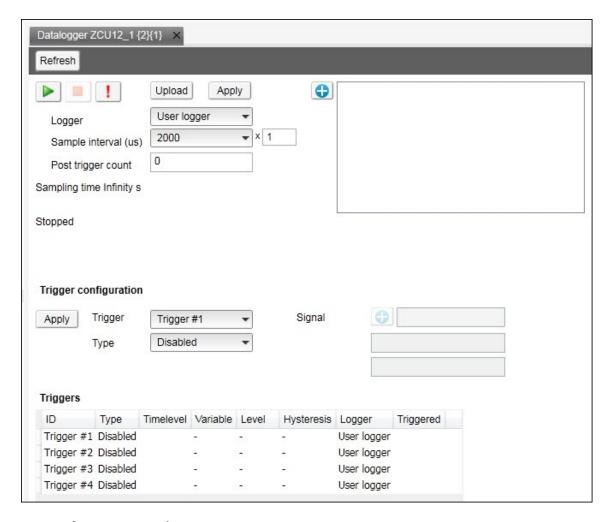

Datalogger settings

The Datalogger settings window contains the following functions:


- Datalogger commands
- Datalogger content configuration
- Datalogger trigger configuration.

Datalogger commands

Button	Description
►	Start button records data in the current logger of the drive until Datalogger is triggered or stopped.
-	Stop button ends recording immediately without any post trigger recording.
1	Trigger button triggers the associated logger in the drive. Trigger Datalogger is displayed in Datalogger status with trigger code 15.
Upload	Upload button moves data from the drive to PC and draws it to the monitor window. Datalogger replaces any previous data in monitor window.
Apply	Apply button applies monitored signal and Datalogger sampling settings.

Datalogger content configuration

With the Datalogger content configuration you can determine which Datalogger of a drive is used.

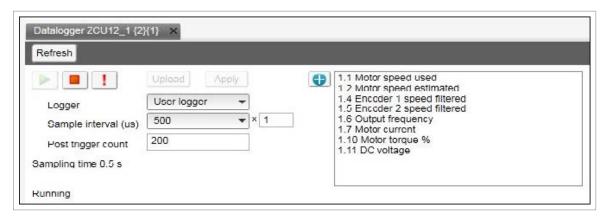


Datalogger configuration commands	Function
Logger	Determines which logger settings are modified. A drive has user logger(s) and factory logger(s). Factory logger settings cannot be modified.
Sampling interval	Determines in microseconds how often the logger reads samples of the signal values. The time level shows the available lengths of the internal cycle time of the drive. Sample interval is formed from multiplier (1-65535) and time level selection.

Datalogger configuration commands	Function
Post trigger count	Specifies how many samples are stored after the triggering condition occurs when the value is smaller than Datalogger total space count. The Datalogger total space count depends on drive type, selected signal types and total signal count. If the post trigger count value is bigger than Datalogger total space count, the triggering point is not visible anymore in the Datalogger.
Sampling time	Shows the minimum sampling time with a selected number of signals and a selected sample interval.
Logger signals panel	Shows a list of signals selected to record. You can add/remove a signal by clicking the Add signal icon.

To add parameters to the logger, proceed as follows:

- 1. In the Datalogger screen, click to © add parameters.
- 2. Select a parameter in the **Drive parameters** list and double-click or click **Add**. The parameter is added to Selected parameters.

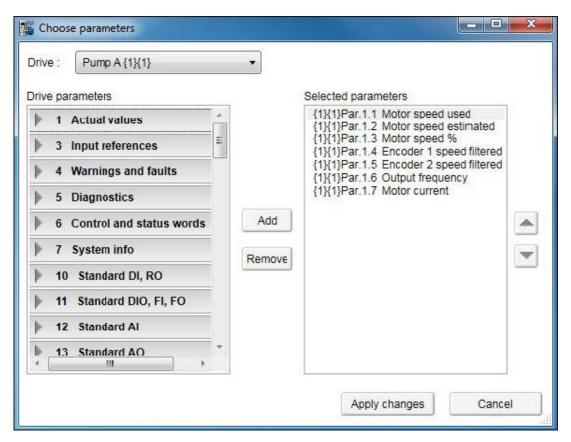


Note: The maximum number of signals that a logger can record at one time depends on the drive. Add button is disabled when maximum number of parameters are reached.

- 3. To remove the parameter from Selected parameters, select the desired parameter and click **Remove**.
- 4. Click **Apply changes** after making the changes.

Datalogger trigger configuration

Datalogger has four triggers that can be configured to stop the Datalogger. After Datalogger has triggered, the Datalogger samples post trigger the amount of new samples.

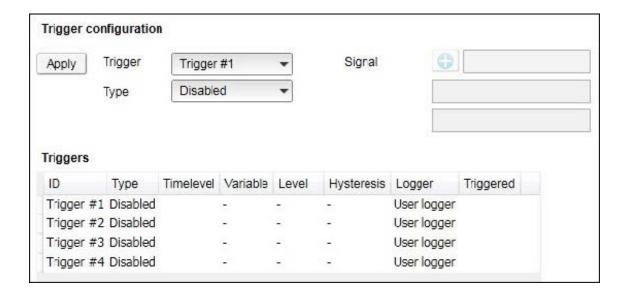

Adding a trigger

- To modify the conditions of a trigger, select the trigger from the Trigger drop-down menu.
 - Trigger 1 is normally used for user logger 1, Trigger 2 for user logger 2 etc.
- 2. Choose the type for the triggering condition from the **Type** drop-down menu. Following are the alternatives (however, not all of them are available at all times):
 - **Bit mask** stops according to the bit mask of the selected signal.
 - **Disabled** can temporarily disable a trigger condition.
 - **Falling edge** level stops according to the selected signal, triggering level and hysteresis values.
 - Fault stops when the drive reports a fault.
 - **Event** stops when the drive reports an event.
 - **Rising edge** level stops according to the selected signal, triggering level and hysteresis values.
 - Warning stops when the drive reports a warning.
- 3. If you use Rising edge level or Falling edge level as the type for the triggering condition, refer Using the level triggers.
- 4. Click Apply.

Using the level triggers

When condition Rising edge level is used, the function wakes up when the actual value of the triggering signal is below the triggering level - hysteresis. Similarly, when condition Falling edge level is used, the function wakes up when the actual value of the triggering signal is above the triggering level + hysteresis.

Rising edge	Triggering signal is below the triggering level when the Datalogger is started:
	Triggering occurs when the signal goes above the triggering level.
	Triggering signal is above the triggering level when the Datalogger is started:
	Triggering occurs when the signal goes above the triggering level, but before that the signal must go below the triggering level - hysteresis.
Falling edge	Triggering signal is above the triggering level when the Datalogger is started:
	Triggering occurs when the signal goes below the triggering level.
	Triggering signal is below the triggering level when the Datalogger is started:
	Triggering occurs when the signal goes below the triggering level, but before that the signal must go above the triggering level + hysteresis.

Using bit mask trigger

Bit mask trigger reads signal value and masks out user selected bits with given mask. Masking is done by using a logical AND operation. Masked value is compared to user given bit values selection. When masked value and bit values match, Datalogger is triggered.

Uploading triggered or stopped Datalogger data

- 1. In the Datalogger view select a logger from the **Logger** drop-down menu. If the logger status is stopped or triggered, data can be uploaded.
- 2. Click **Upload** to upload data to the monitor window.

Note: If you want to continue normal monitoring after using the Datalogger, click **Monitor configuration** icon and select a sampling interval for monitoring.




3. Click Add signal icon to add signals for monitoring.



Amplitude logger (pro)

ABB drives have an amplitude loggers that can record data from various signals of a drive. The results of an amplitude logger 1 (current) are displayed by the following curve. Each parameter represents an amplitude range and shows what portion of the samples fall within that range.


Note: Dataloggers or amplitude loggers are not available for all ABB drives.

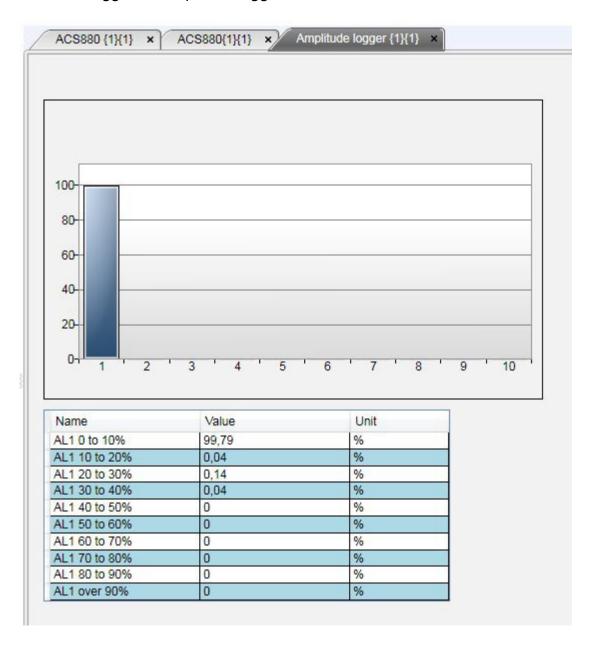


Macro (pro)

ABB drives have Macro functionality that can automatize a task or sequence of tasks. You can use macros is set parameter value to multiple networked drives when the Custom window functionality is not sufficient. You can also use macros for tasks which require logical or conditional parameterization of a drive.

• From the Drive Composer title bar, navigate to **Tools** → **Macro**.

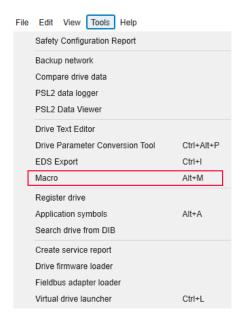

A Macro screen is displayed.

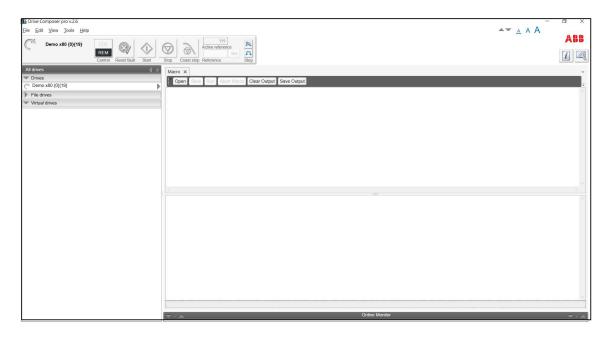

Macro commands

Macro language

Macro language is based on PAWN. For general programming guidelines, refer to PAWN manual.

Note: Some PAWN features are disabled for security reasons, such as file operations and other external IO functions.

Simple example

Macro tries to read parameter 1.1 value from each target in 100 network channels.

```
main()
{
for(new i = 0; i < 100; i++)
    {
        //note the channels are indexed instead of nodes
        // this should be modified according network topology
        //change target
        Target(i+1,1)
        new targetName[100]
        //get target name TargetName (target name)
        //read parameter 1.1 value
        new Float:val0101 = ParRead(1,1);
        //output to console
        printf"%s(%d,%d): %f\n", target name, 1, 1, val0101;
      }
}</pre>
```

Additional macro commands

Target

Changes the target of the macro command after target command is issued.

Syntax	Returns	Example
Target (Channel, node)	0 if success, 1 if failed	Target (1, 10)

Target name

Command reads the current target name as string.

Syntax	Returns	Example
TargetName (string)	0 if success, 1 if failed	//reserve name string
		<pre>new name[100] if(Target- Name(name)==0) { printf "target name is %s\n" name }</pre>

ParWrite

Command writes parameter value to current target.

Syntax	Returns	Example
ParWrite (group, index,value)	0 if success, 1 if failed	//write value 1 to group 12 index 16
		{ ParWrite (12, 16, 1) }

Note: The command does not write pointer or bit pointer type parameter values. Use the ParWriteInt command to write pointer or bit pointer type parameter values.

ParWriteInt

Command writes parameter value to current target.

Syntax	Returns	Example
ParWriteInt (group, index, value)	O if success, 1 if failed. If an error was detected, the error message appears in the log.	//write parameter 06.17.b0 to parameter 06.60 main () { ParWriteInt (6, 60, 1073743377) } To get the integer value 1073743377, 1. In Drive Composer offline mode, set parameter 06.60 User status word 1 bit 0 sel = 06.17.b0 Set pointer parameter

ParRead

Command reads the parameter value to current target.

Syntax	Returns	Example
ParRead (group, index)	Parameter value or 0 if failed.	//Read value of the parameter in
	If an error is detected, the error message appears in the log.	group 10 index 5
		main ()
		{
		<pre>new Float.val = ParRead(10,5);</pre>
		printf "Value of (%d,%d):
		%f\n", 10,5, val105;
		}

Note: The command does not read pointer or bit pointer type parameter values. Use the ParReadInt command to read pointer or bit pointer type parameter values.

ParReadInt

Command reads parameter value to current target from the same source as in the parameters window. The values are cached and refreshed on a notification or every half a second, if you selected the **Enable updating** option in the parameters window. When real time values are required, you can use the command *ParReadIntFromDevice*.

Syntax	Returns	Example
ParReadInt (group, index)	Parameter value casted to integer or 0 if failed.	//Read value of the parameter in group 7 index 11
	If an error is detected, the error message appears in the log.	<pre>main () { new val = ParReadInt (7,11); printf "Value of (%d, %d) : %d\n", 7,11, val; }</pre>

ParReadFromDevice

Command reads the parameter value to current target directly from drive.

Syntax	Returns	Example
ParReadFromDevice (group, index)	Parameter value or 0 if failed. If an error is detected, the error message appears in the log.	<pre>//Read value of the parameter in group 1 index 11 each second. main() { new Float:val; do { val = ParReadFromDevice(1, 11); printf "Value of</pre>
		<pre>(%d,%d):%f\n", 1, 11, val; Wait(1000); } while (1); }</pre>

ParReadIntFromDevice

Command reads the parameter value to current target directly from the drive.

Syntax	Returns	Example
ParReadIntFromDevice (group, index)	Parameter value casted to integer or 0 if failed. If an error is detected, the error message appears in the log.	<pre>//Read value of the parameter in group 7 index 11 each second. main() { new val; do { val = ParReadIntFromDevice(7,</pre>
		<pre>11); printf "Value of (%d,%d):%d\n", 7, 11, val; Wait(1000); } while (1); }</pre>

Wait

Command delays the macro execution for given time in milliseconds.

Syntax	Returns	Example
Wait (milliseconds)	0 in all cases	//wait 0.1 seconds
		Wait(100)

EndMacro

Command ends the macro execution.

Syntax	Returns	Example
EndMacro()	0 in all cases	//End execution
		EndMacro()

GotoMacro

Command changes the macro execution. Currently running macro execution is terminated.

Syntax	Returns	Example
GotoMacro(string)	0 in all cases	<pre>//Change execution to macro jeejee new macrofilename[100] macrofi- lename = "jeejee.p" GotoM- acro(macro filename)</pre>

MessageBox

Command shows message box with ok button.

Syntax	Returns	Example
MessageBox (string)	0 in all cases	<pre>//show message box new message[100] message = "dingalongdangdong" MessageBox (message)</pre>



Control diagrams (Pro)

Contents this chapter

This chapter describes the use of control diagrams that help in understanding the behavior of a drive.

Control diagrams overview


Control diagrams provide a graphical presentation of, for example, the control chain of a drive, the speed and torque control chains and the logic of Start and Stop functions. With these diagrams it is possible to see parameter values related to certain functions. Diagrams also illustrate the position of switches according to parameter values, which helps to understand how the drive logic works. The values of parameters can be changed via control diagrams. A control diagram consists of two levels. The top level shows an overview of the diagrams and connections between them.

Note:


- Control Diagrams are drive-specific and they are not available for all drive types.
- When you connect a drive for the first time, it takes some time to upload control diagrams from the drive. If Control Diagrams are not found in the drive, Drive Composer asks to upload diagrams from the local source (PC).

Viewing control diagrams


1. In the drive list, click on a connected drive and select **Diagrams**.

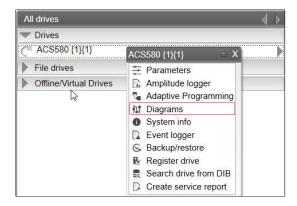

2. The top level of a control diagram consists of several diagrams and appears in a separate tab. See the example screen below. To open a specific diagram, click on a top level control diagram box.

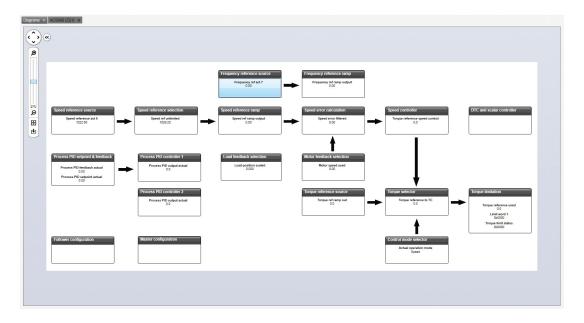


The lower level control diagram appears in a separate tab. See the example diagram below.

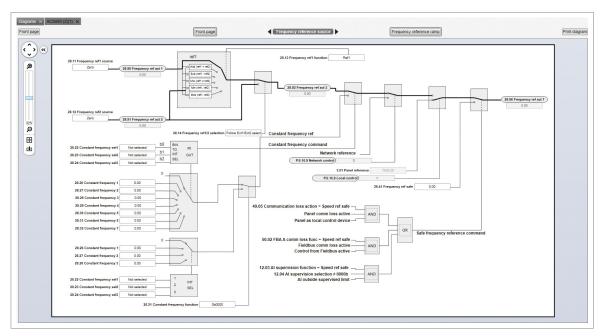

To navigate back to the top level of a Control Diagram, click the **Diagrams top** icon. To navigate through the reference chain, click the buttons circled in the figure above.

To zoom the control diagrams, use the zooming tool in the top left-hand corner of a Control Diagram.

 

12

FSO configuration (Pro)

Contents of this chapter

This chapter contains the configuration procedure of FSO-12 and FSO-21 safety functions with Drive Composer pro and provides an example of how to configure these optional FSO safety functions modules.

Configuring FSO-12 and FSO-21

The safety configuration of FSO-12 and FSO-21 safety functions module is available only in Drive Composer pro, DCPT-01 (code: 3AUA0000108087).

Note:

- Only trained persons are allowed to configure the safety functions.
- Stop the drive before configuring the safety functions modules. You cannot download/upload the configuration file to/from safety functions module or change the password when the drive is modulating.
- You need a password to copy the configuration to the safety functions and also to validate the safety parameter settings.

For detailed information about FSO-12 and FSO-21, refer the respective safety functions module user's manual:

- FSO-12 safety functions module user's manual (3AXD50000015612 [English]).
- FSO-21 safety functions module user's manual (3AXD50000015614) [English]).

Hardware connection

The hardware connection is common for both FSO-12 and FSO-21 safety functions module. For instructions on the hardware connections, refer *FSO-12 safety functions module user's manual* (3AXD50000015612 [English])/ *FSO-21 safety functions module user's manual* (3AXD50000015614 [English]).

The following configuration description assumes that all hardware-related connections are made properly and the ID run procedure of the drive is completed.


Setting the safety functions with Drive Composer pro



WARNING!


The motor must be stopped. Safety configuration file can be edited (and sanity checked) in Offline/Virtual Drives mode for offline configuration. Edit and save the file to PC without connecting to the drive/FSO.


- 1. Power up the drive. Make sure that the motor is not running. See Working area (page 71).
- 2. Right-click on drive and select **Safety settings**.

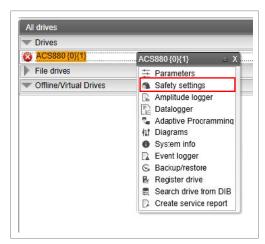

In online mode with FSO installed, the safety configuration already available in the drive is displayed (refer figure below). In offline mode the view is always empty before opening the safety file.

You can switch between Graphical view and Parameter view. Refer Figures FSO configuration: Graphical view and FSO configuration: Parameter view.

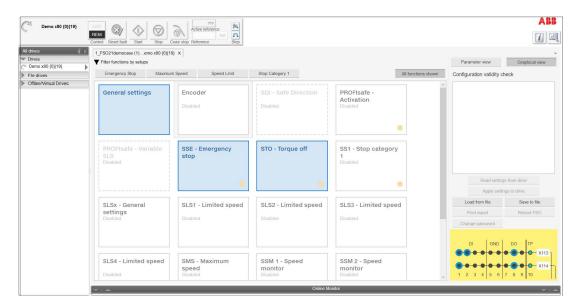

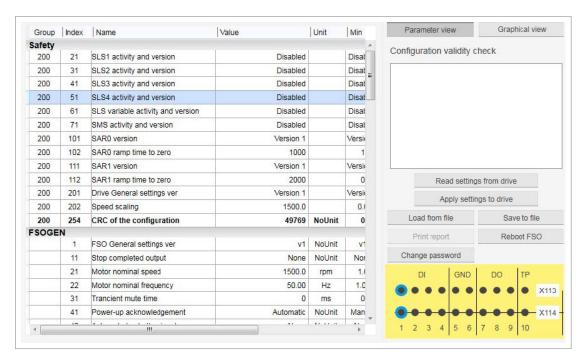

Click Read settings from drive.

Note: When you upload the safety settings from FSO module to PC tool, the FSO goes into Configuration state and indicates a fault. You can exit the Configuration state by rebooting the FSO module if you do not want to download the settings but want to keep the existing setting.

The Fault FSO general fault: 7A8B appears on the drive.



4. Type the password (8 numbers). The factory default password is "12345678".



Note: You can change password by clicking Change password (refer figure FSO configuration: Parameter view). Make sure the drive is not modulating. The password must contain 4...8 digits. Do not forget the new password; otherwise you have to do a factory reset to the FSO which clears the configuration and resets the parameters to the factory defaults.

5. Configure the safety parameters. Set the following safety function parameters:


- <u>General parameters</u>: Check that the motor parameters are correct.
- I/O: Check that I/O parameters are set according to the installation (wiring) plan. Remove diagnostic pulsing from any unused I/O. The test pulses are off by default. Check possible safety relays and cascade connections.
- <u>Safety functions</u>: Check all safety settings. You must at least check and set the STO and SSE related settings, regardless of whichever FSO safety functions you use. The FSO activates the STO and SSE functions (also in internal fault situations). The FSO uses the STO and SSE functions for making the system safe. All other functions are used only for monitoring the drive.

Note:


- Graphical view cannot be used for setting safe IO, cascade function or for SBC function (refer Figure FSO configuration: Graphical view). Instead use the Parameter view (refer Figure FSO configuration: Parameter view).
- Parameter groups (200, 91 and 92) that include common parameters to drive and FSO are referred with group numbers and index numbers.
- Group names like FSOGEN, STO and so on have only index numbers (refer Figure FSO configuration: Edit parameters).

For detailed information about FSO-12 and FSO-21 configuration settings, refer the respective safety functions module user's manual:

- FSO-12 safety functions module user's manual (3AXD50000015612 [English]).
- FSO-21 safety functions module user's manual (3AXD50000015614) [English]).
- 6. If required, click **Filter functions by setups** and filter the safety functions tile. You can click any of the filtering options to view safety functions related to the selected selection.

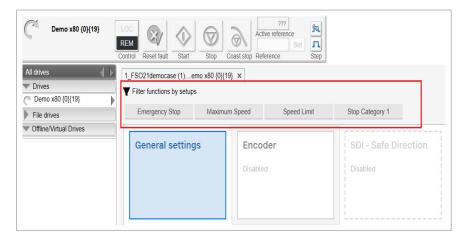

7. In the Graphical view, double-click to open the function. Use the slider switch to enable or disable a function.

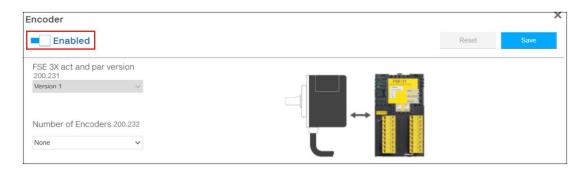


Note:

- By default, **General settings**, **SSE-Emergency stop**, and **STO- Torque off** groups are enabled and cannot be disabled.
- Some functions are dependent on their main functions. Enable the main function to activate its dependent functions. For example:
 - **SDI-Safe direction** can be enabled only if you enable the main Encoder function.
 - Profisafe-Variable SLS can be enabled only if you enable the main
 Profi-Safe Activation
 - SLSx General Settings is automatically activated if you enable any of these main functions: SLS1...SLS4 or the ProfiSafe-Varialbe SLS.


See also the representations of enabled and disabled functions in below figure. Note that a dependent disabled function appears in a dotted box.




 After you make changes and if you try to disable a function, a warning message dialog box appears. Click Yes to save the changes and disable the function. This helps to make the changes available during the edit. To discard the changes, click No.

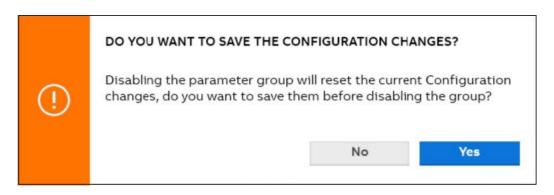


8. In the opened tile view, configure the function and edit the necessary parameters.

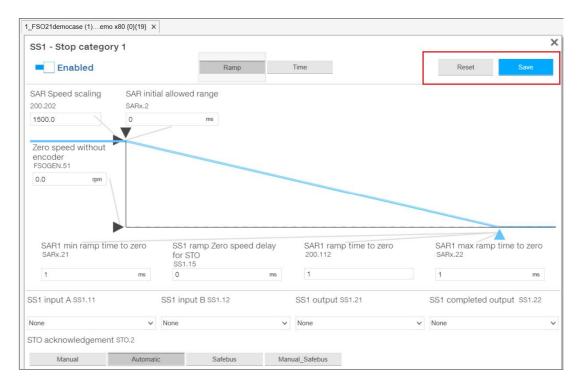

9. Click **Save** to save the changes. Click **Reset** if you want to disable the function and reset the values to default values. A yellow circle appears in the function, if you change the default values in the function.

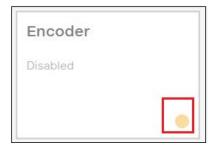


If you close the window before you save the changes, a warning message dialog box appears. Click **Yes** to save the changes. To cancel the changes, click **No**.

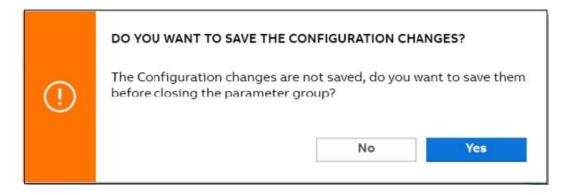


Note: In graphical view the SAR settings are combined with safety function parameters. Using the reset option for parameters that are used crosswise (e.g. SAR1 is used with SS1 and SLS functions) resets the particular settings for both functions. The function works the same in parameter view in which the parameters are in separate groups.

10. In Parameter view, double-click on the value field and change all necessary configuration settings to match the safety configuration.

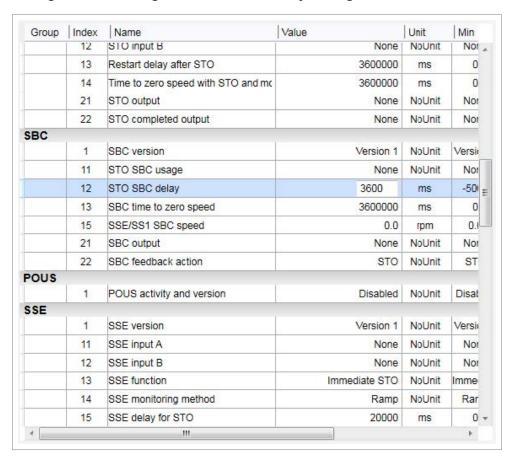


- 11. Test your safety configuration when the motor is running.
- 12. Right-click on drive and select Parameters to check the values in parameter group 200.

You can also validate the safety function parameters using the signal monitoring feature. See the instructions for Adding parameters/signals for monitoring. It is possible to check the ramp times and the status of bit changes in the time domain.

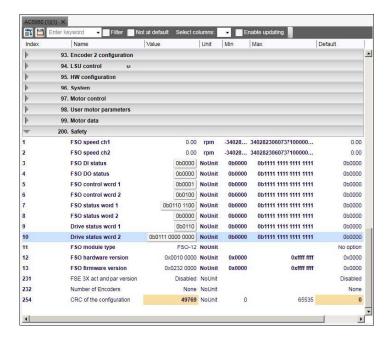


- 13. Check the values in online mode while testing the safety functions. If there are unexpected values, right-click the parameter and select **Refresh the parameter**.
- 14. After testing save the FSO configuration to PC. In Parameter view, click **Save to file**.

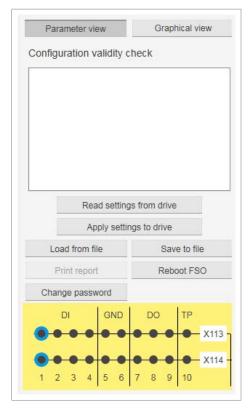


The file is saved as *dcsafety* format and the File written successfully dialog appears. Click **Ok**.

- 15. Click Apply settings to drive.
- 16. Enter the password to apply the settings to the drive and click **Ok**. The following Validate dialog appears. Click **Yes**.

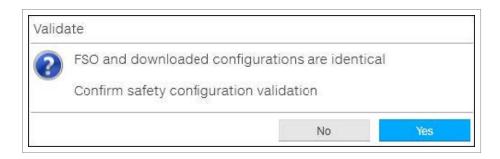

Note: If you do not want to download the changes in safety parameters, you can boot FSO without downloading to FSO using Reboot FSO (refer figure FSO configuration: Saving the safety settings).

17. Click **Ok** to close the dialogs.

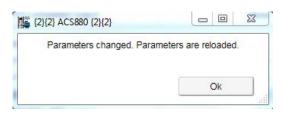





Printing the safety functions configuration report (Online)

With the FSO module installed, you can print the online safety functions configuration report.


1. From the Safety settings view, click **Print report**.

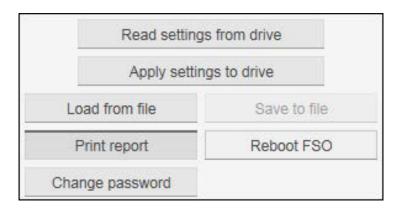

2. Select a print template and click Continue.

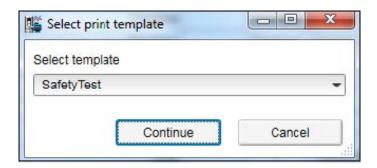


3. Fill in the Drive and FSO version information. Click Next.

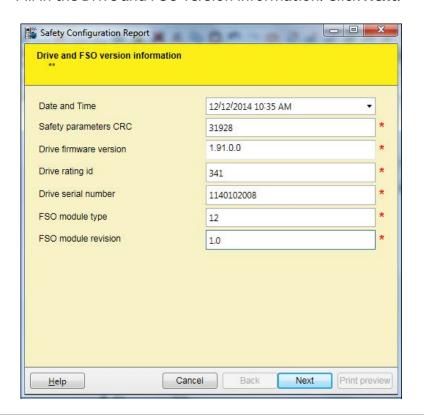


The next screen(s) contain different aspects of safety configuration such as configured safety functions, commissioning checklist, and so on.

The List of configured safety functions and acknowledged methods appears. Click **Next**.

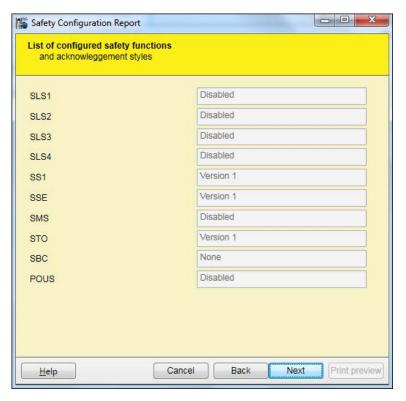


In the FSO commissioning checklist, click on the check boxes to mark configurations are ok. Click **Next**.

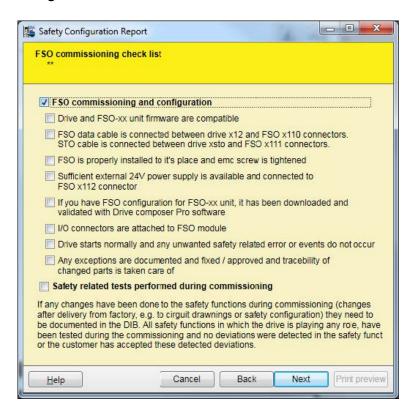


In the FSO changes/repair details, type the required details and click **Next**.



4. In the final screen fill in the required details and click **Print preview**.

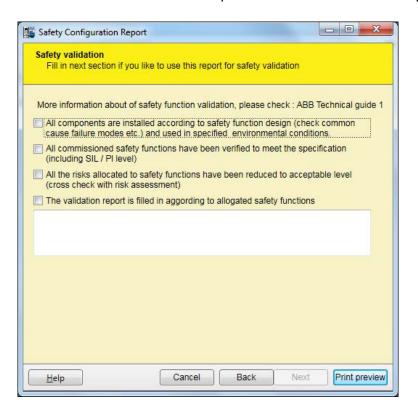

5. Select the required printer settings and click Print.

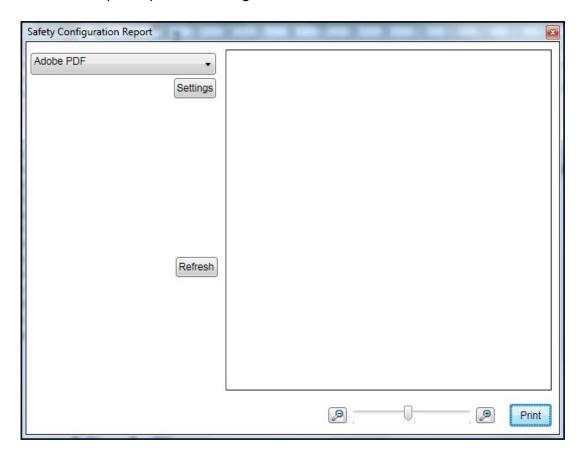


The configuration and commissioning report is printed based on the selected printer settings.

Printing the safety functions configuration report (Offline)

To print a FSO safety functions configuration report in the Offline mode, you must have a saved safety file. See section Setting the safety functions with Drive Composer pro (page 142).

1. Click **Tools** → **Safety Configuration Report**.

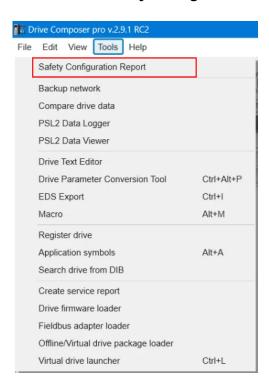


2. Select the saved file to print and click Continue.




Continue from step 3 in section Printing the safety functions configuration report (Online) (page 150).

Changing FSO module password

1. Right-click on drive and select **Safety settings**.

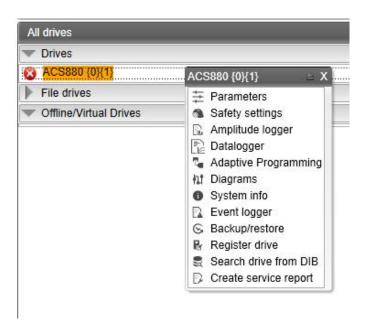


2. In the Safety settings window, click Change password.

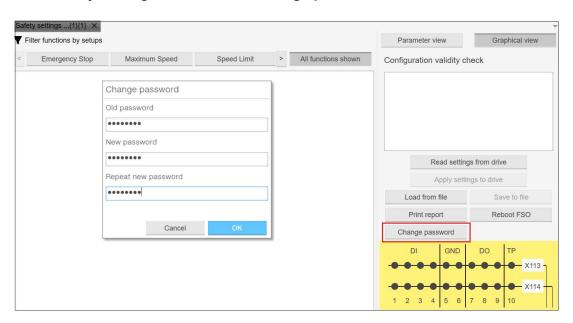

3. In the Change password dialog, type the old or default password and type the new password. Click **OK**.

Note: The password should contain 4...8 numbers. For more information, refer FSO module manual.

4. Wait while the password change is in progress and the parameters are reloaded. Click **OK**.

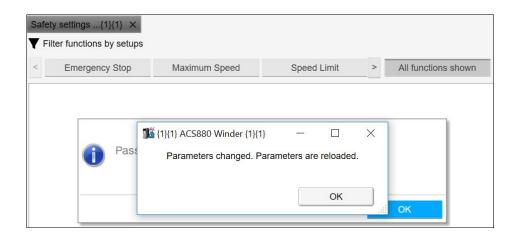


5. Click **OK**, to confirm the password change. You can test the new password, for example, to log in to FSO module (refer section, Continue from step 3 in section Printing the safety functions configuration report (Online) (page 150), page 152.) or to read FSO drive parameters (refer section, Reading FSO module parameters).




Reading FSO module parameters


To read the FSO module drive parameters:

1. In the Safety settings window, click **Read settings from drive**.

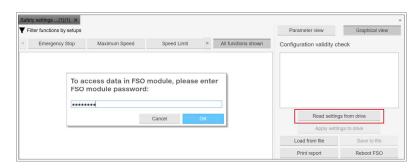

- 2. Type the FSO module password. Click OK.
- 3. Wait while Drive Composer is updating the safety parameters file and displays the safety settings dashboard. Click **Parameter view** to switch to parameter window and vice versa.

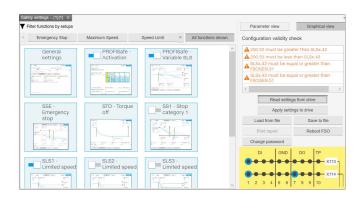

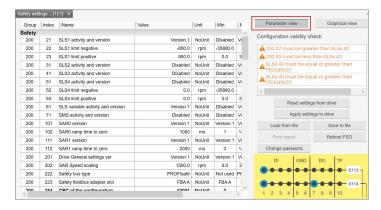

13

Drive configuration

Contents of this chapter

This chapter contains the configuration procedure of the drive.


Loading firmware (entry)

To load the drive firmware.


- Make sure that the drive is connected to Drive Composer via USB cable. For more information, refer section Connecting to drive (page 30).
- 2. Power up the drive.

Note: Make sure that the motor is not running (inverter) or the unit is not operating (supply unit).

3. Select the COM port to which the drive is connected, and click **Connect**.

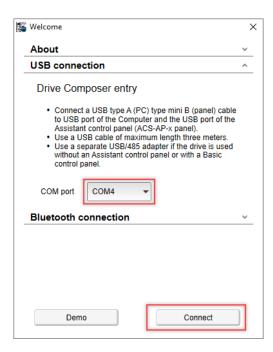

4. Click **Tools** → **Drive firmware loader**.

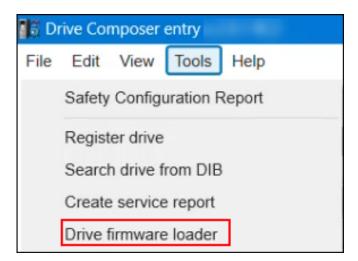


The Firmware update window appears.

If you have connected the Drive Composer in the demo mode, and you open the drive firmware loader, a FIRMWARE UPDATE warning message appears. Click **OK**.




5. Click **Browse** to upload the firmware package from your computer.

Note: Login and cloud update features are only available in Drive Composer Pro.

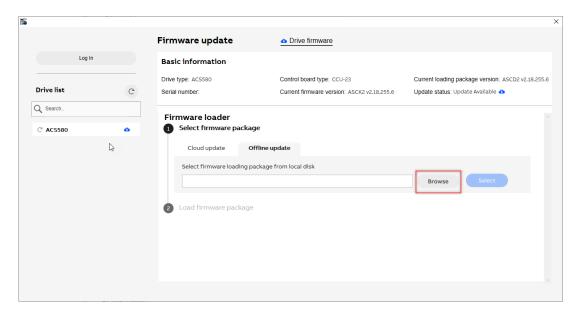


Note: The tool displays an error message when:

- You try to load an invalid loading package file.
- You upgrade Drive Composer without first uninstalling the previous version.

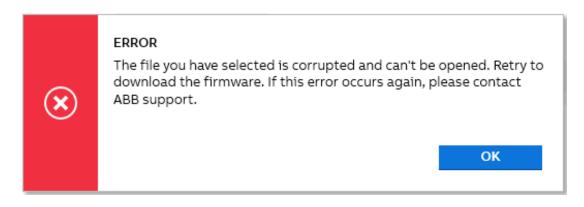


6. In the firmware update window, Click **Next.**

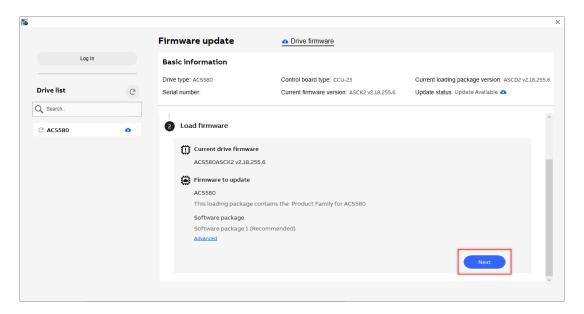


- 7. Select the desired check boxes to,
 - create a parameter backup file before updating the firmware.
 - restore the parameters automatically after the firmware update.
 - delete the parameter back file after the parameter restore.

Select a custom location or use the default backup storage to save the file if you want to create a backup.


Note: In ACS380, for successful parameters back up and restore, the drive needs to be in local control mode. Hence, during a firmware update, if the drive is in remote control mode, the tool automatically changes it to local control mode. After the firmware update, the control mode is restored to its original mode. Click **Start**.

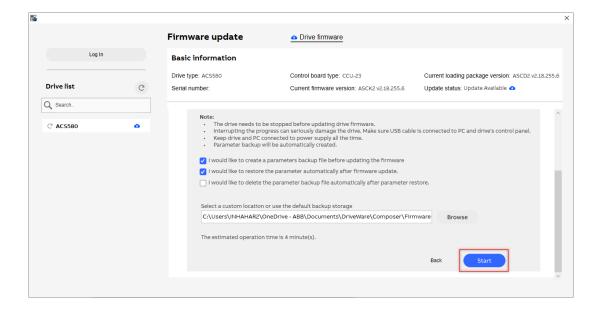


8. Wait for the firmware to be loaded. The loading time can be more if you select the parameter backup option.

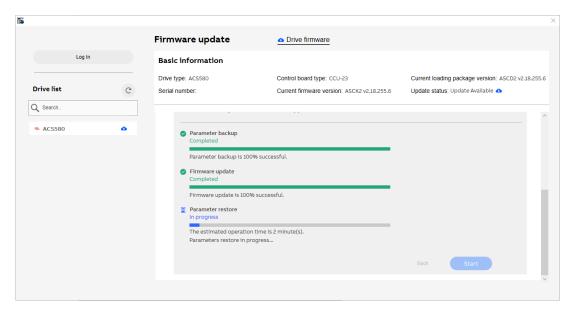

 The message Parameterschanged. Parameters are reloaded appears. Click OK.



9. The firmware update is complete when the progress bars turns green and a message appears that the **Drive firmware update is successfully done!** Click **Close.**

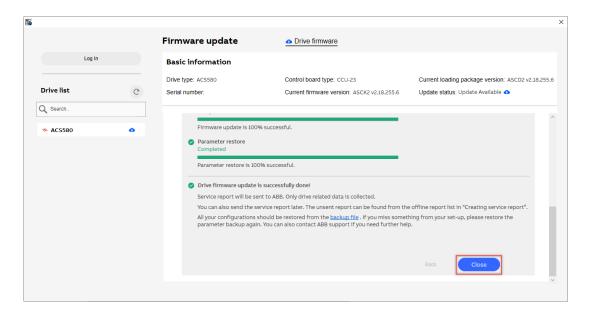

Loading firmware (pro)


To load the drive firmware,

- Make sure that the drive is connected to Drive Composer via USB cable. For more information, refer the section Connecting to drive (page 30).
- 2. Click Connect.



Note: If drive is connected via a USB cable, Drive Composer automatically discovers the drive.

- 3. Power up the drive. Make sure that the motor is not running (inverter) or the unit is not operating (supply unit). Refer section Using the working area (page 71). If drive is connected via USB cable, Drive Composer automatically discovers the drive.
- 4. Click **Tools** → **Drive firmware loader**.

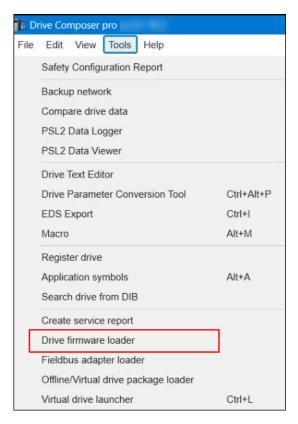


The Firmware update window appears.

If you have connected through Ethernet cable or the Drive Composer in the Offline/Virtual Drives mode, and you open the firmware loader, a FIRMWARE UPDATE warning message appears. Click **OK**.




5. Click **Log in** to view the firmwares.

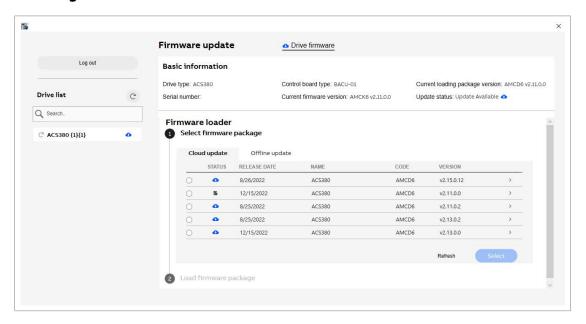


- 6. Select the firmware package. You can either select the firmware from cloud or upload from your computer.
 - To select the firmware package from the cloud, click **Cloud update**, select the firmware package and click **Select**.


Note: Availability of drive firmware depends on the drive model and configuration.

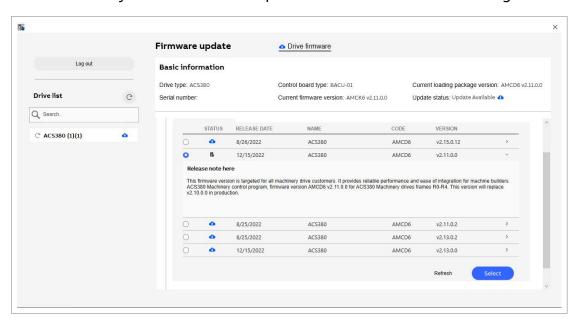


An error message is displayed if the system cannot connect to the cloud.

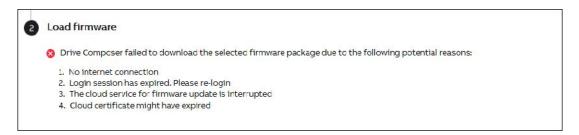


To select the firmware package from your computer, click Offline update,
 Browse the package and click Select.

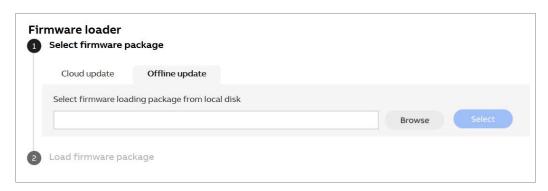


Note: If you try to load a corrupted or invalid loading package file, the application displays an error message.

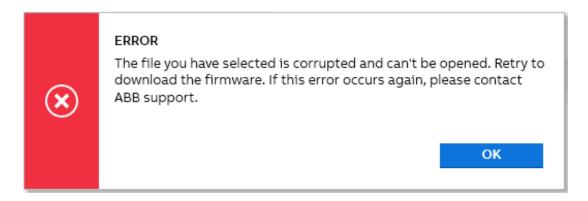


7. If multiple drives are connected, from the selection list, select the drive to load the firmware and click **OK**.

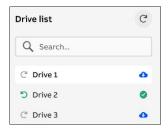

8. In firmware update window, Click Next.

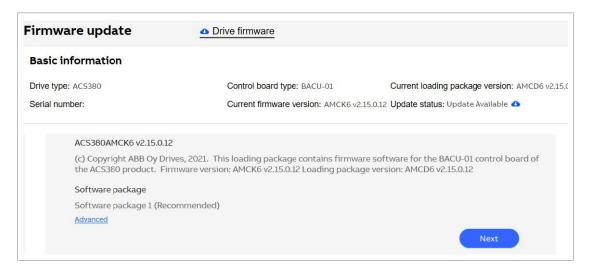


9. Select the desired check box if you want to create backup, restore parameters from backup file or delete the file automatically after parameter restore. Select the location to save the file if you want to create a backup. Click **Start.**

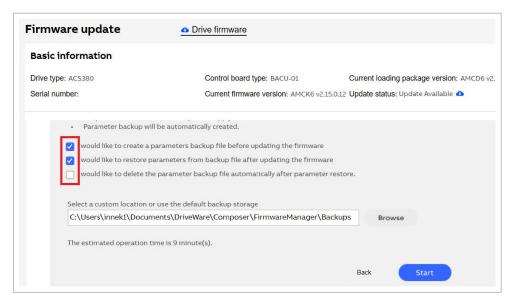


Note: In ACS380, for successful parameters back up and restore, the drive needs to be in local control mode. Hence, during a firmware update, if the drive is in remote control mode, the tool automatically changes it to local control mode. After the firmware update, the control mode is restored to its original mode.

10. Wait for the firmware to be loaded. The backup time can be more if you select the parameter backup option.

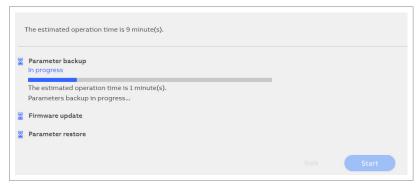

 
The message Parameters changed. Parameters are reloaded appears. Click OK.



11. Optional (only with access to DIB): Enter the service report information. For more information, refer section Create online service report (page 206). **Note:** You need access to Drive installed base to send the service report.

12. Optional (only with access to DIB): Click Send.

The installation successful page appears.

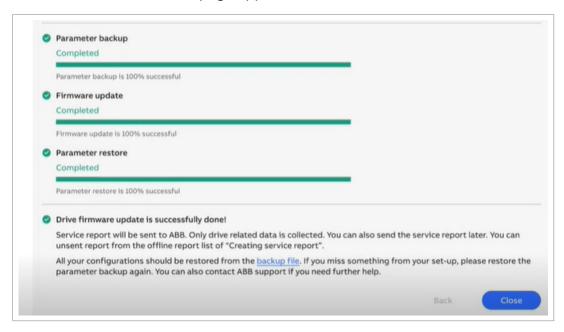


13. Click Close.

Loading firmware to an empty memory unit


You can load firmware to a drive with an empty memory unit, for both ZMU and UMU memory units.

Loading firmware to an empty ZMU memory unit

- 1. Make sure that an empty ZMU memory unit is connected to the drive.
- 2. Start Drive Composer.
- 3. Select USB/COM enabled, and click on Offline/Virtual Drives.

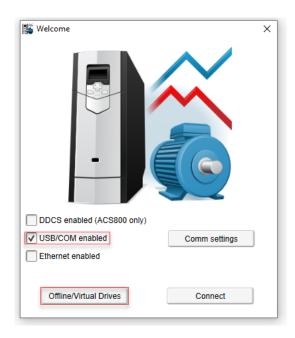


4. Click **Tools** → **Drive firmware loader**.

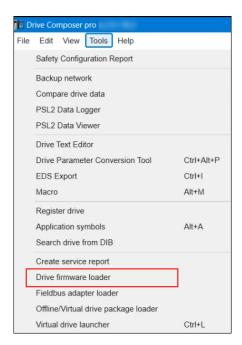


The Drive firmware loader window appears.

5. Click **Browse** and select the bootloader file (.lp) in your PC.

172 Drive configuration

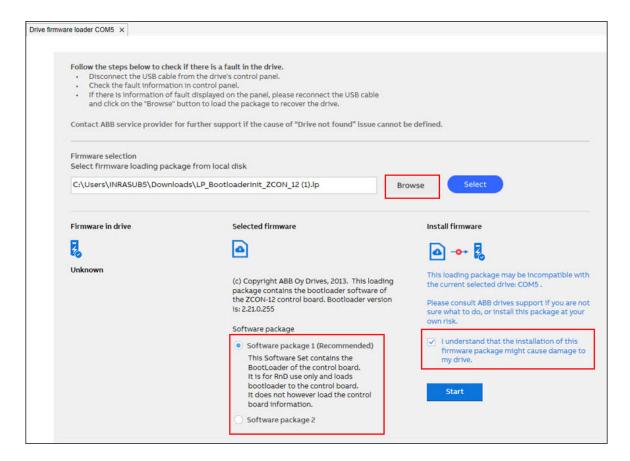


- 6. Click Select.
- 7. Enable the required software package to be loaded (Eg. Software package 1.), as shown in above figure.
- 8. Read and accept the agreement to install the firmware package, as shown in above figure. Click **Start**.

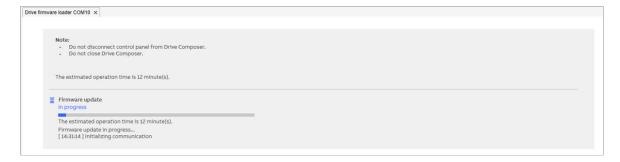

The firmware update begins.


9. After the firmware is updated the Completed message appears.

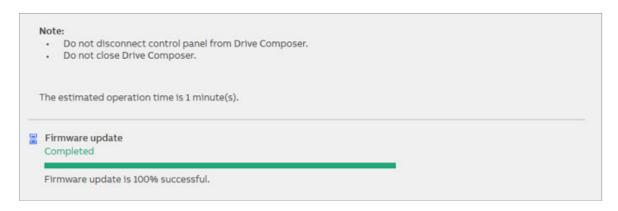

10. An error mesage appears to prompt on rebooting the drive. Click Next.




11. The firmware installed successully message appears. If drive is not connected, make sure that all the instructions displayed in the message are satisfied.

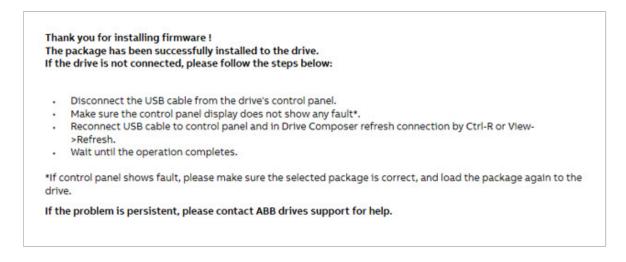

12. Start Drive Composer again and repeat steps 3 & 4.

- 13. To install the CBinfo package to the drive, do the below steps:
 - a. Click **Browse** and select the CBinfo package file (.lp) in your PC.

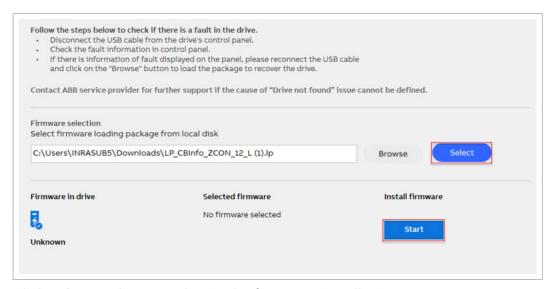

- b. Click **Select** and **Start** to begin the firmware installation.
- c. After the firmware is updated the Completed message appears.




14. An error mesage appears to prompt on rebooting the drive. Click Next.



15. Start Drive Composer again and repeat steps 3 & 4.

- 16. To install the Drive firmware loading package to the drive, do the below steps:
 - a. Click **Browse** and select the Drive firmware file (.lp) in your PC.

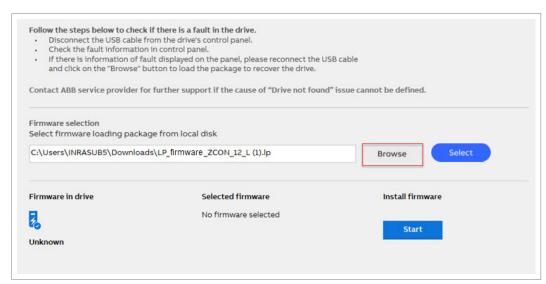

- b. Click **Select** and **Start** to begin the firmware installation.
- c. After the firmware is updated the Completed message appears.




17. The firmware updated message appears. Click **Next**.




The firmware is successfully updated.

Loading firmware to an empty UMU memory unit

- 1. Make sure that an empty UMU memory unit is connected to the drive.
- 2. Start Drive Composer.
- 3. Select **USB/COM enabled**, and click on **Offline/Virtual Drives**.

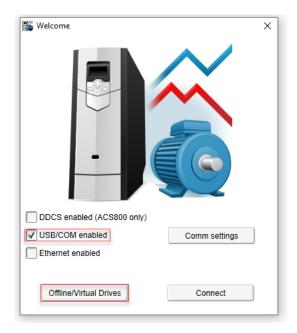


4. Click **Tools** → **Drive firmware loader**.

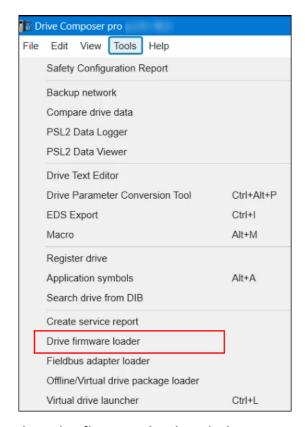

The Drive firmware loader window appears.

5. To install the CBinfo package to the drive, do the below steps:


a. Click Browse and select the CBinfo package file (.lp) in your PC.

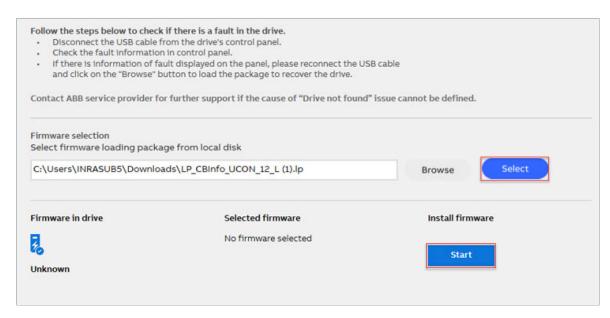

- b. Click **Select** and **Start** to begin the firmware installation.
- c. After the firmware is updated the Completed message appears.




6. An error mesage appears to prompt on rebooting the drive. Click **Next**.

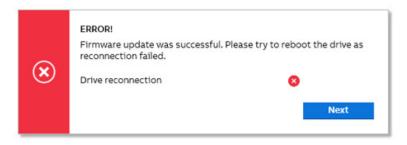

7. Start Drive Composer again and repeat steps 3 and 4.

- 8. To install the Drive firmware loading package to the drive, do the below steps:
 - a. Click **Browse** and select the Drive firmware file (.lp) in your PC.

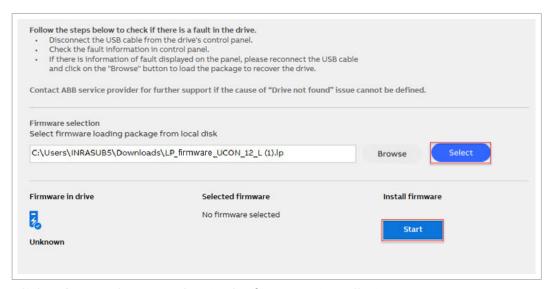

- b. Click **Select** and **Start** to begin the firmware installation.
- c. After the firmware is updated the Completed message appears.



9. The firmware updated message appears. Click **Next**.



The firmware is successfully updated.

Loading the fieldbus adapter firmware

These fieldbus types are supported:


- FPNO-21 PROFINETFieldbus adapter module
- FEIP-21 EtherNet/IP fieldbus adapter module
- FBIP-21 BACnet/IP adapter module
- FMBT-21 Modbus/TCP adapter module

Note: It is not possible to use the drive and fieldbus adapter loader simultaneously. To update the fieldbus adapter firmware, do the below steps:

1. Go to **Control Panel** and click **network and Sharing Center**.




2. Click **Change adapter settings** on the left pane. A Network connections window displays.

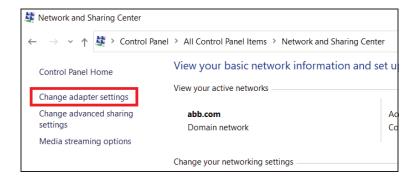


3. Double-click Local Area Connection.




Select Internet Protocol Version 4 (TCP/IPv4) and click Properties.

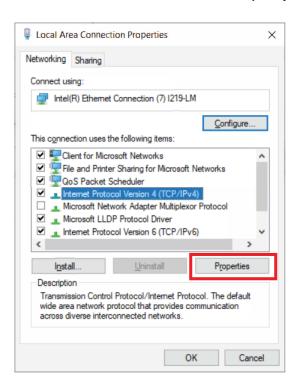

5. Select **Use the following IP address**, type the IP address and subnet mask and click **OK**.

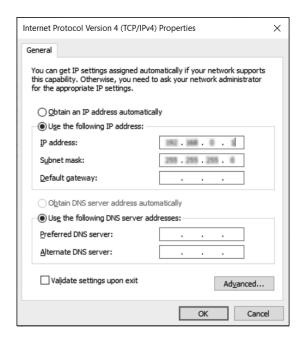


6. To enable the fieldbus adapter module in the drive, select the slot connected to the adapter module in parameter **50.1 FBA A enable**.

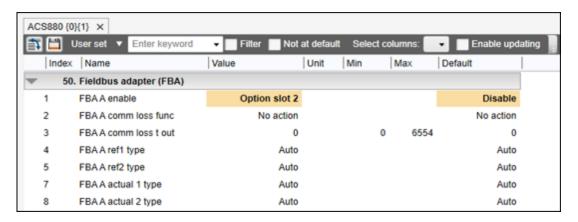


- 7. To connect the drive to the fieldbus adapter module,
 - Set a static IP address in parameter group 51. You can use address: xxx.xxx.xxx. The drive must have a unique address. For example:

drive 1: xxx.xxx.xxx.xxx drive 2: xxx.xxx.xxx drive 3: xxx.xxx.xxx


etc.

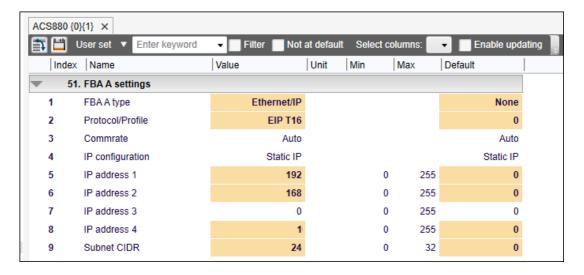


8. Refresh the fieldbus adapter in parameter **51.27 FBA A par refresh**.

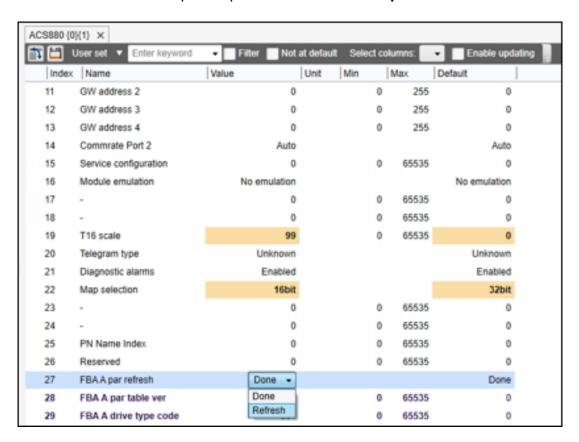


9. Go to View → Settings.

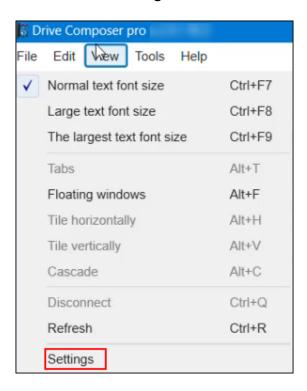

10. In the Setting window, click Ethernet config...

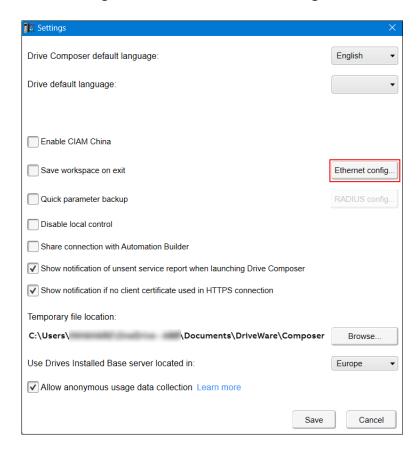


11. Enter the same IP address configured in the parameter group 51 into the drive Ethernet configurator tool.

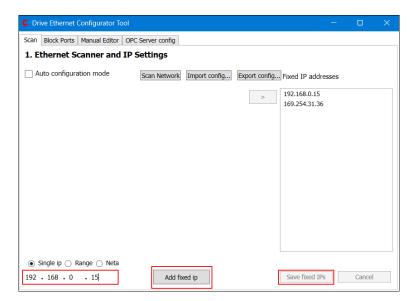


- 12. Click **Add fixed ip** and the new IP addresses appear in the Fixed IP address list as shown in the above figure.
- 13. Click Save fixed IPs and the new IPs are saved. Click exit to close the window.

14. Go to Tools → Fieldbus adapter loader.

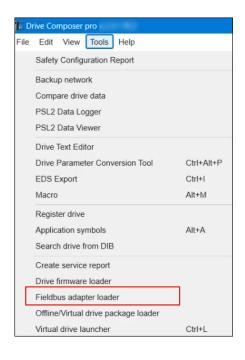


- 15. In the Fielbus firmware update window, select the firmware package. You can either select the firmware from cloud or upload from your computer.
 - update cloud
 - **Firmware** a. To select the firmware from the cloud, click on **Log In**.

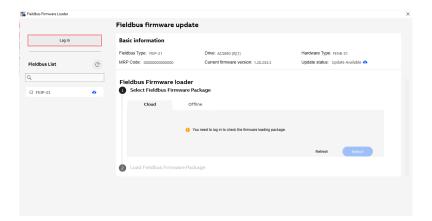


Drive Composer login window appears.

b. Enter email address and click Login.

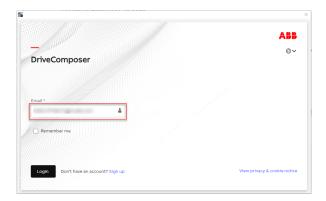

The available fieldbus firmware packages appears.

c. Select the package from the list and click **Select** to update the firmware.

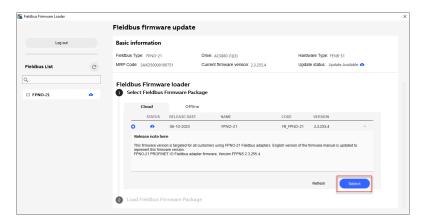

If Drive Composer failed to downlod the selected firmware package, due to, eg. Network failure, the below error message appears.

Check the possible occurrences and do the update again.




2 Load firmware

- Orive Composer failed to download the selected firmware package due to the following potential reasons:


 - No internet connection
 Login session has expired. Please re-login
 The cloud service for firmware update is interrupted
 Cloud certificate might have expired

Firmware update - Offline

Firmware a. To select the firmware offline, click on **Offline**.

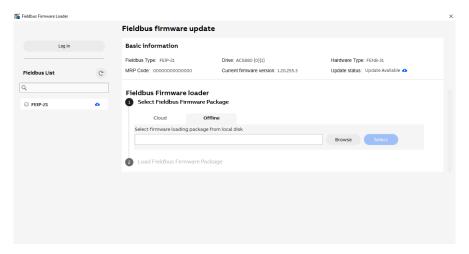

b. Click **Browse** and select signed PKI package for the offline firmware loading and then click **Select**.

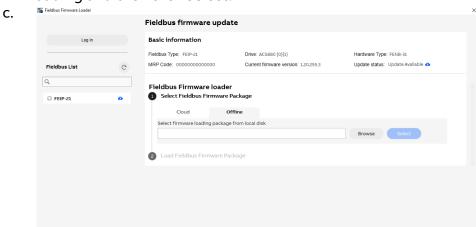


Note: The tool displays an error message when:

- You try to load an invalid loading package file.
- You upgrade Drive Composer without first uninstalling the previous version.



It is not possible to save the signed PKI packages to the PC for offline firmware loading.


16. Click **Next** to update the firmware.

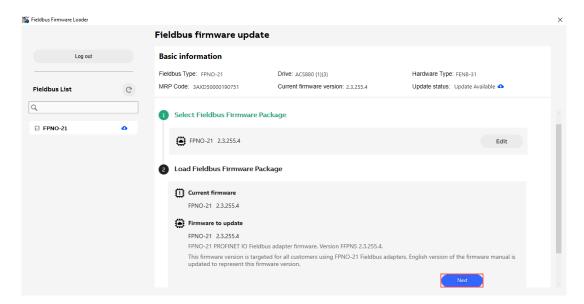

The installation successful message appears.

Note: Make sure the Ethernet cable is properly connected to the drive/fieldbus to prevent any failure with the firmware updates.

17. After the firmware is updated the completed message appears. Click Close.

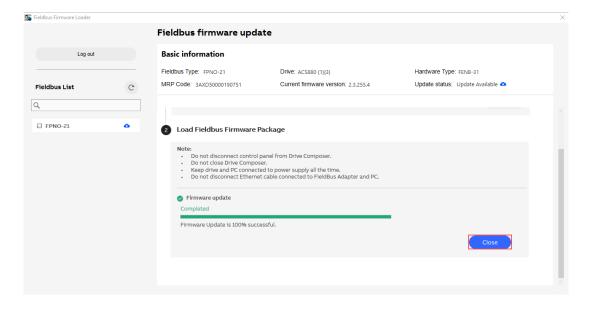


Drive backup


Creating a backup of a drive

Note: Creating a drive backup is possible only when parameter **96.102 User lock functionality**, bit 6 **Protect AP** has value 0, that is backup/ restore backup function is enabled.

1. Click on a connected drive and select **Backup/restore**.

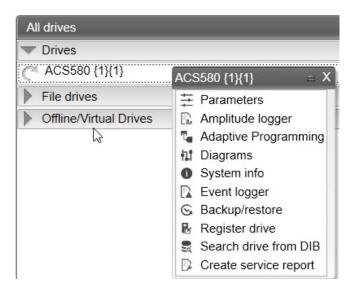

2. Select the file location for the backup and give a name for the backup file.

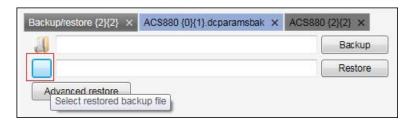


3. Click **Backup** to start the backup process. The backup process takes a few minutes.

You can also create a backup in the drive parameter view. See Creating a backup in drive parameter view.

Creating a backup in drive parameter view

Note: Creating a drive backup is possible only when parameter **96.102 User lock functionality**, bit 6 **Protect AP** has value 0, that is backup/ restore backup function is enabled.

1. In the parameters view, click on **Save parameters to file** icon.

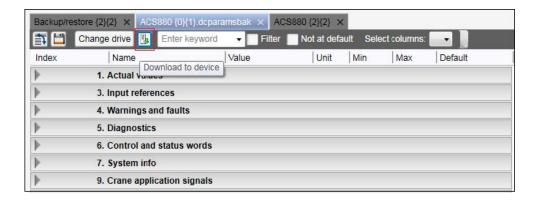

2. Select a file location in your computer for the backup and give backup file name. Click **Save**.


The backup process takes a few minutes.

Creating a quick parameter backup (pro)

Note: Creating a drive backup is possible only when parameter **96.102 User lock functionality**, bit 6 **Protect AP** has value 0, that is backup/ restore backup function is enabled.

The quick parameter backup feature helps to create a faster parameter backup, when the network speed is slow and effects the communication speed between Drive Composer and the drive. In quick parameter backup, the Drive Composer stores only the parameter groups that are viewed, expanded or edited. This helps to save the parameter backup time and avoids parameter backup failure.

When the drive parameter backup is slow, the function automatically detects the connection speed between the Drive Composer and the drive, and provides you an option of quick parameter backup. You can select between a full parameter backup or a quick parameter backup.

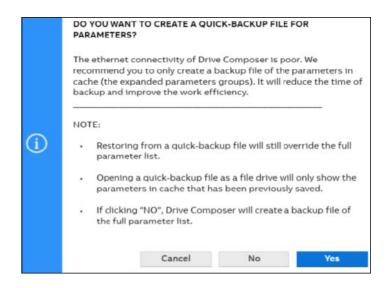


Notes:

- This function is applicable when the drive is connected to the Drive Composer via Ethernet cable.
- The restore function works as usual, i.e. the function restores the complete parameter list.

To create a quick parameter backup,

- 1. Go to **View** →**Settings**.
- 2. In the **Settings** screen, select the option **Quick parameter backup**.

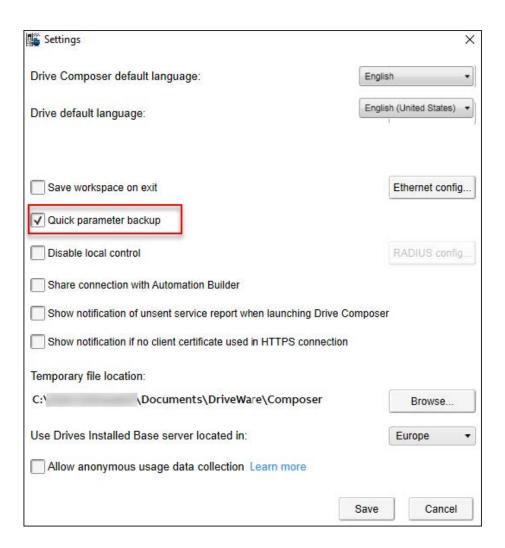

- 3. Click **Save** to save the new settings.
- 4. You may be prompted to restart Drive Composer. Click **OK**, to restart.

You can select this option, and create a backup in the parameters view for a quicker save operation and a smaller backup file. See Creating a backup in drive parameter view.

Restoring a drive


Restoring a drive backup

Note: Restoring a drive backup is possible only when:

- The drive is in Local control mode.
- Parameter **96.102 User lock functionality**, bit 6 **Protect AP** has a value of 0, enabling the backup/restore backup function.

Restoring a parameter file will overwrite the Adaptive program.

1. Click on a connected drive and select **Backup/restore**.

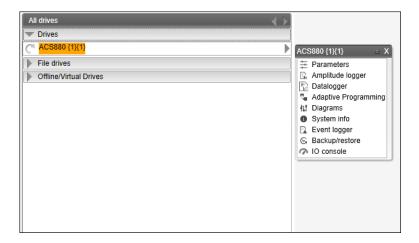


Select the backup file to restore to the drive.



Click Restore.

Note: Make sure not to disconnect the USB cable from the drive during the restore. All available components are restored from the backup file and all unavailable components are preserved in the drive. A detailed status is available in a log file that is saved on the PC.

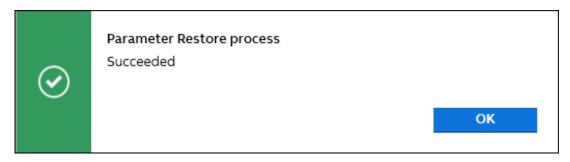

If the restore fails, an error message will appear. Click OK.



Restart Drive Composer, and check the connections before attempting to restore the backup again.

You can check the log file saved at
 C:\Users\CurrentUser\Documents\DriveWare\Composer\Logs.


Restoring a backup in the drive parameter view

Note: Restoring a drive backup is possible only when:

- The drive is in Local control mode.
- Parameter 96.102 User lock functionality, bit 6 Protect AP has a value of 0, enabling the backup/restore backup function.

Restoring a parameter file will overwrite the Adaptive program.

Open a parameter backup file. Click Download to device icon.

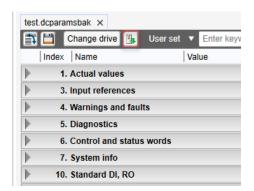

All available components are restored from the backup file and all unavailable components are preserved in the drive.

Restoring a set of components/parameters settings (pro)


Note: Restoring a drive backup is possible only when:

- The drive is in Local control mode.
- Parameter **96.102 User lock functionality**, bit 6 **Protect AP** has a value of 0, enabling the backup/restore backup function.

Restoring a parameter file will overwrite the Adaptive program.

With the **Advanced restore** function you can restore separate items or group of items in the backup file.


1. Click on a connected drive and select **Backup/restore**.

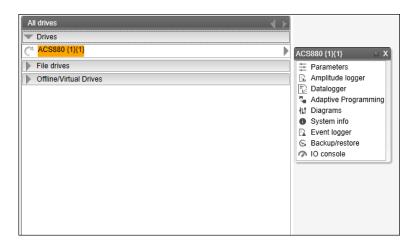

2. Click **Advanced restore** to select a restored backup file.



- 3. Select a saved backup file and click **Open**.
- 4. In **All Items**, you can select single item(s) or a total group to restore. Click right arrow (>>) to move the selected items to **Selected items**.

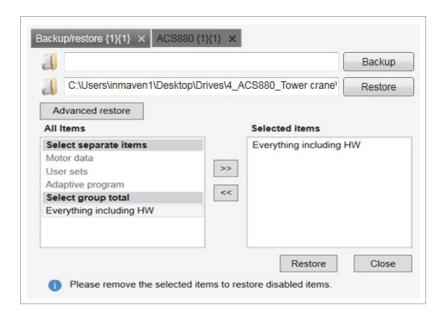

Note: The message "Please remove the selected items to restore disabled items." appears inside the restore window only when you select

- · single item(s) and all other items are disabled, or
- a group item and all single items are disabled.

5. Click Restore.

The selected items are restored from the backup file. A restored successful message appears. Non-selected items are preserved in the drive.

Note:

- The parameter values that are not written to the drive are listed in the restore report after the restore process.
- The drive does not allow to restore the grey items in the advanced list.

Other functions

Contents of this chapter

This chapter describes common functions that are not associated with any view or window.


Using Drive Installed Base service

Drive Installed Base (Drive Installed Base) is a knowledge base for all information about drives. Using Drive Installed Base service you can,

- register an ABB drive through Drive Composer
- obtain the required drive information
- create service reports.

Registering an ABB drive to Drive Installed Base service

From the drive context menu select Register drive, or go to Tools → Register drive.

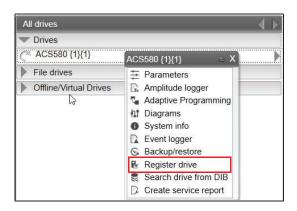


If you used the drive context menu, make sure that Drive Composer is connected online with the drive for successfully registering the drive. If you used **Tools** → **Register drive**, you can register the drive when Drive Composer is either in online/offline mode with the drive.

2. In the Drive registration tab, type the drive serial number (for example, 7350008) and click **Validate**. You can see the drive serial number on the type designation label or see the drive's hardware manual for more information.




Drive Composer connects to Drive Installed Base portal (external website) and validates the serial number with an associated type code. If the number is valid, the drive type code is automatically filled. For example, FREQUENCY CONVERTACS580 DEMOSUITCASE.

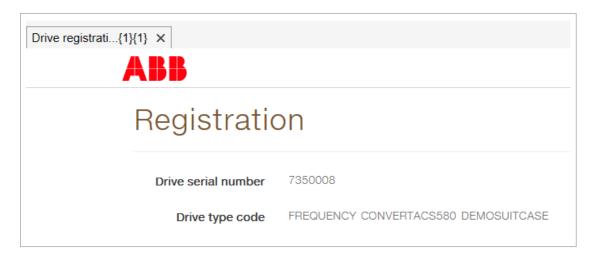


Note: You can register a serial number for first-time only. If attempted second time, the message "*This serial number has been already registered*" is displayed.

3. Enter drive location details in the appropriate fields.

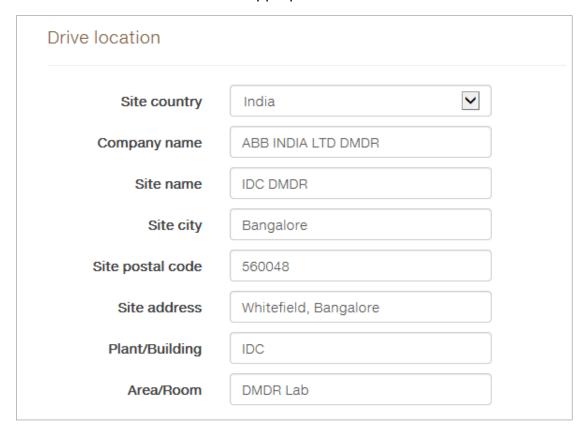


Field name	Information
Site country	Name of country where the drive is located, for example, India.
Company name	Name of company where the drive is located. For example, ABB India.
Site name	Site name where the drive is located.
Site city	Name of the city where the drive is located.
Site postal code	Postal code
Site address	Site address.
Plant/Building	Optional. Plant /building name where the drive is located.
Area/Room	Optional. Area/room where the drive is located.

4. Type First name, Last name and email address of the drive owner or the contact person details. Phone number is optional.

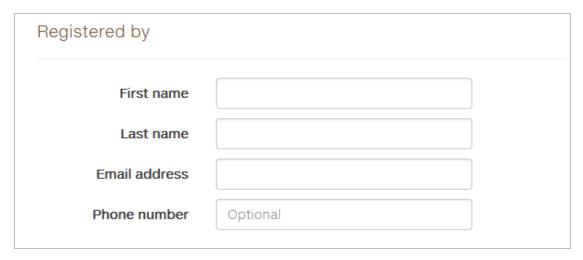


5. Type/select drive information in the appropriate fields.

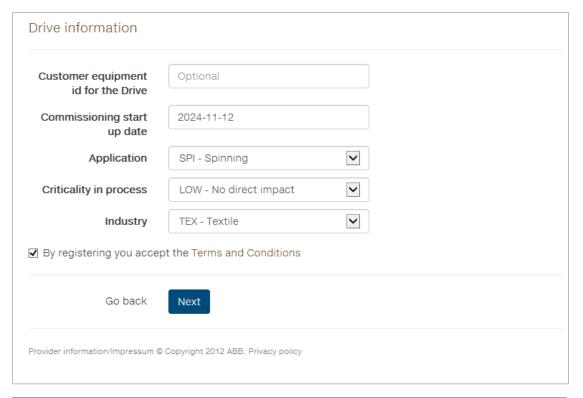

Field name	Information
Customer equipment id for the Drive	Optional. Customer identification of drive, if available.
Commissioning start up date	Drive commissioned startup date.
Application	Application where the drive is used (for example, Spinning).
Criticality in process	Criticality of the application based on the time required to stop the drive in the event of a fault.
	Low - No direct impact Medium - Delayed stop High - Immediate stop
Industry	Industry where the application is in use.

- 6. Check and accept the Terms and conditions, and click **Next**.
- 7. Check the summary of registered information and click **Save**.

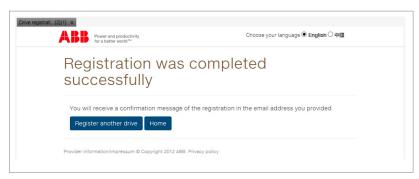


The "Registration was completed successfully" message is displayed. You will also receive an email to the registered email address


Searching a registered ABB drive in Drive Installed Base

You can search for information about an ABB drive that is registered in Drive Installed Base service portal. **Note**: Make sure you have access permissions to Drive Installed Base service portal.

 From drive context menu select Search drive from DIB or go to Tools → Search drive from DIB.

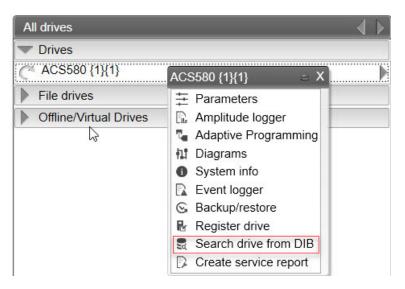

- If you used the drive context menu, Drive Composer extracts the drive serial number directly from the connected drive. Otherwise the "Drive has not got serial number" message is displayed.
- If you used Tools → Search drive from DIB, Drive Composer asks for serial number.
- 2. Type the serial number and click Ok.

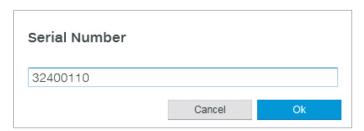

 If the serial number matches with the drive data in Drive Installed Base, Drive Composer downloads all data related to the drive and opens in a separate tab.




- 3. Click **Product info**, to view the drive information, for example, serial number, type code, commissioning date, etc.
- 4. Click **Service history**, to view the maintenance history of the drive, for example, event or service type, date of service, name of service engineer, etc. You can download the attached service report file, if the file was added to the report.



5. Click **Recommended services**, to view the recommended drive services.




6. Click Components, to view the details of service components.

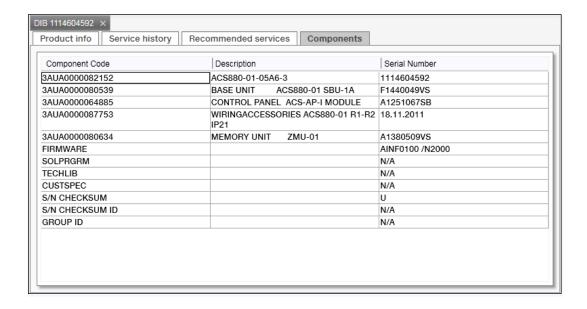

Setting the Drive Installed Base server location

The drive data is stored only in two server locations: Europe and China. The default location is Europe. For drives located in China, select China and for drives located in countries other than China, select Europe.

- 1. Go to **View** →**Settings**.
- 2. In the Settings window, select the appropriate Drive Installed Base server location. Example: Europe.

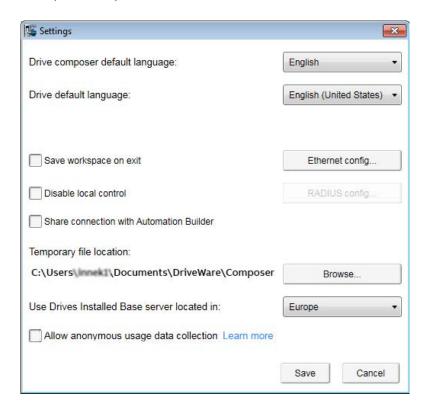

3. Click Save.


The Drive Installed Base server location is set to the selected country.

Creating a service report from Drive Installed Base


You can create a service report for an ABB drive registered in Drive Installed Base, if you have access permissions to the Drive Installed Base portal.

Note: The service report templates are predefined. However, if it is necessary to change the template, contact your local ABB representative.


 Click on the drive list, select Create service report or go to Tools → Create service report.

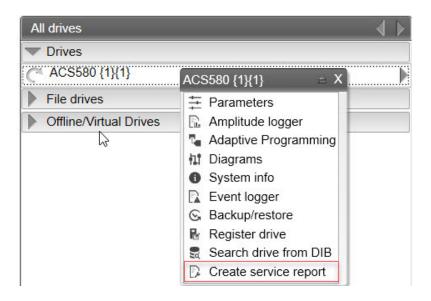

2. In the Service reporting page, click Select.

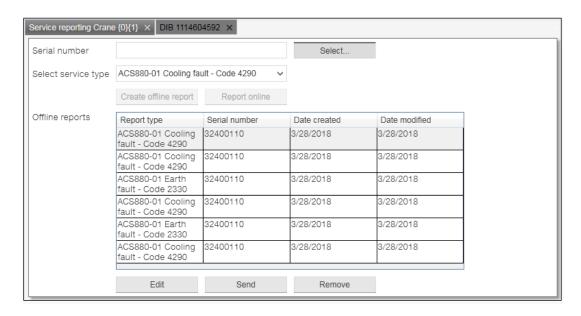

3. Select the appropriate drive. Click **Ok**.

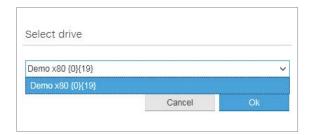

- 4. In the Service reporting page, type the drive serial number.
- 5. In **Select service type** field, select the necessary service type, for example, ACS880-01 Cooling fault Code 4290.

Note: Drive Composer downloads the selected service type. If downloading failed due to network error, you can use the previously downloaded Service pack.


6. If the registered drive serial number and service type matched with the Drive Installed Base data, you can Create online service report or Creating offline report. See sections below.

Create online service report

Note: The contents in the report page are based on the service type and some contents in the wizard may be filled with information from the drive if the serial number matched with the drive.


In the below steps, refer an example report of ACS880-01 Cooling fault.

- Click on the drive list, select Create service report or go to Tools → Create service report.
- 2. Wait while Drive Composer connects to the Drive Installed base.
- 3. In the service reporting page, click **Select** to select a connected drive or enter the drive serial number.
- 4. Click Report online.

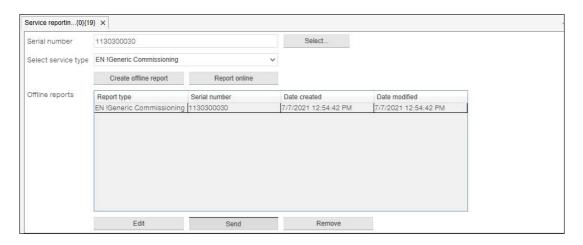


5. In the General Info page, fill the necessary information. Click **Next**.

Note: All mandatory fields in this page and in the consecutive pages are marked with an asterisk (*).

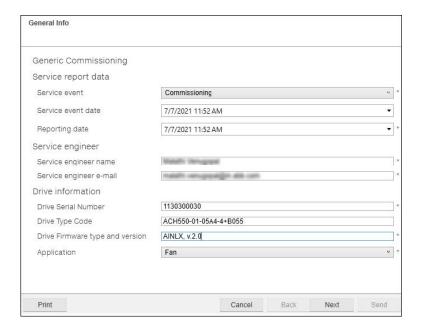


6. In the End customer page, type details of location where the drive is installed. Click **Next**.

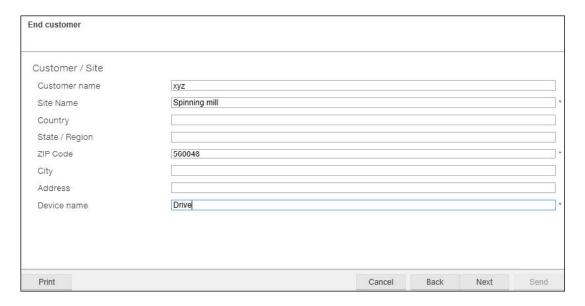


7. In the Onsite check list, check and confirm that all actions are completed. Click **Next**.


208 Other functions

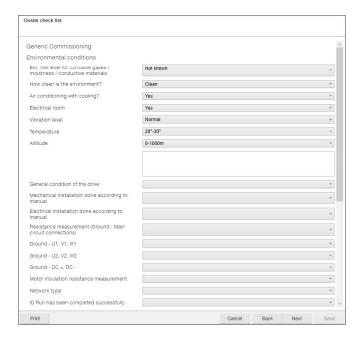


8. The Attachments page is optional. You can add the required attachments to support the service report.

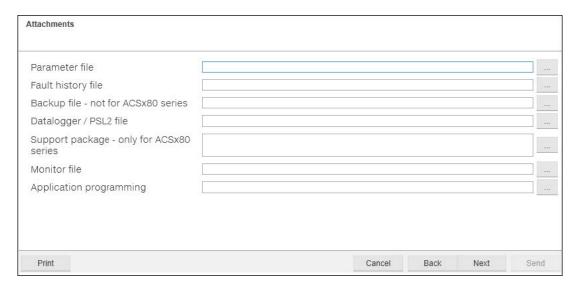

9. In the Components list, confirm that the listed components are available in the drive. Check against the listed component to report to Drive Installed Base service. Click **Next**.

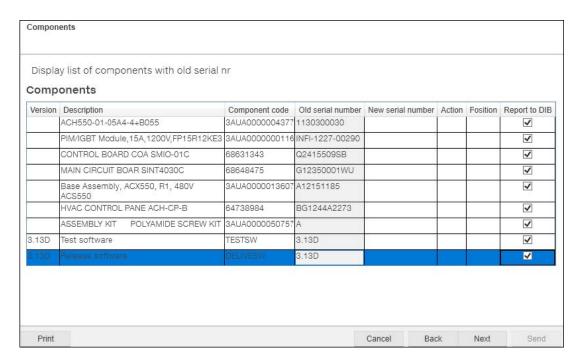


10. The consecutive pages for Material data are optional. You can fill up to five material data. Type the information if necessary and click **Next**.

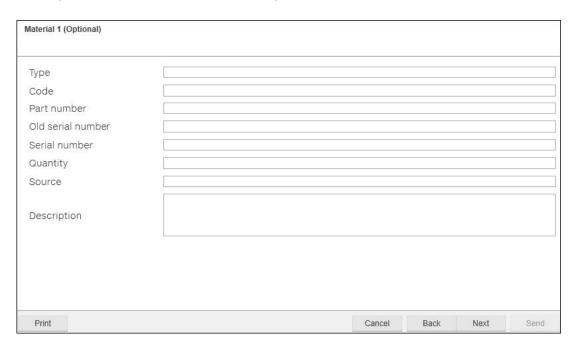


11. Navigate to Material data 5 and fill required data. Click Send.

210 Other functions

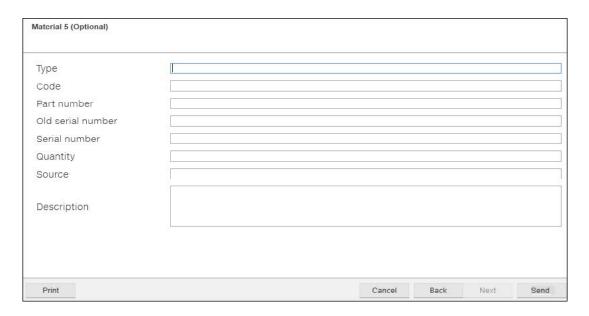

12. Read and accept the privacy terms and conditions. Click Next.

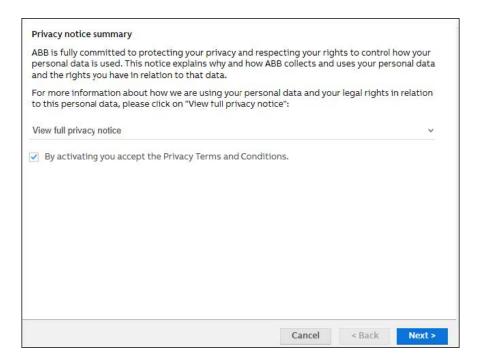

13. If report is sent, the message "Sending to Drive Installed Base completed" appears. Click **OK**.




If report sending failed, Drive Composer prompts to save the report as Offline reports, which you can try sending later. See Creating offline report.

Creating offline report


Note: The contents in the report are based on the service type and some contents in the wizard may be filled with information from the drive if the serial number matched with the drive.

1. In the service reporting page, click **Create offline report**.

A service report is generated and appears in the Offline reports table.

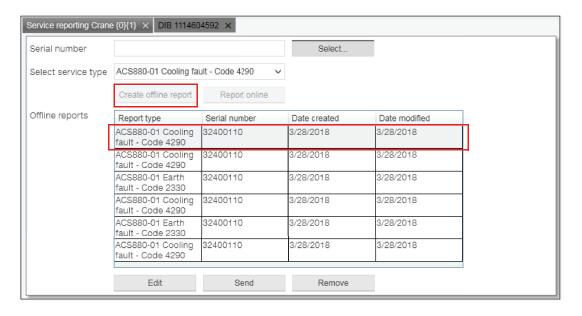

- 2. Select the report and do the necessary actions:
 - Click **Edit**, if it is necessary to modify the report. See section Create online service report (step 3 onwards).
 - Click Send, if the report is ready to send to Drive Installed Base.
 - Click Remove, to delete a report. Confirm the message "The offline report has not been sent to Drive Installed Base. Are you sure you want to remove it and lose all changes?"
- 3. If you clicked **Send**, read and accept the privacy terms and conditions. Click **Next**.

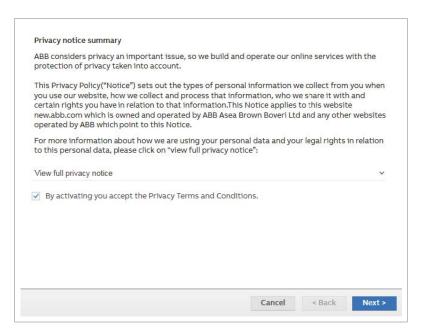


4. If report is sent to Drive Installed Base service portal, the message "Sending to Drive Installed Base completed" appears. Click **OK**.



If report sending failed, Drive Composer prompts to save the report as Offline reports, which you can try sending later.

Recovery and prevention of FB14 fault in drive

When the fault FB14 is active, the drive's control panel displays the fault message (refer figure below).

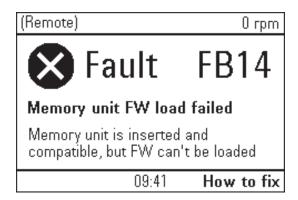


Drive Composer can be used to remedy this fault by:

- 1. recovering the drive (refer FB14 Recovery pack) and
- 2. preventing the fault (refer FB14 Service pack).

You can check the status of Service pack installation in the **System info** window. Refer Checking the status of Service pack (page 217).


FB14 Recovery pack

If there is FB14 fault active in the drive, Drive Composer detects this and prompts
to recover the fault using FB14 Recovery pack. Click Start downloading to run the
Recovery pack. Follow instructions in the note and wait while downloading is in
progress.

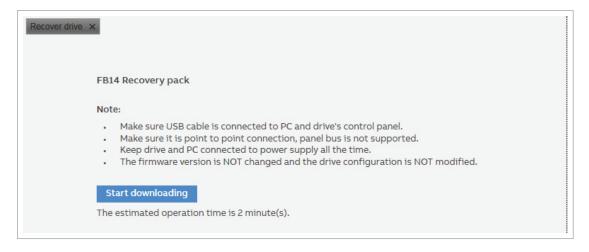

Note: If downloading the Recovery pack failed, follow instructions in FB14 Recovery and Service pack failure.

2. After installation is completed, drive is recovered and FB14 fault is reset.

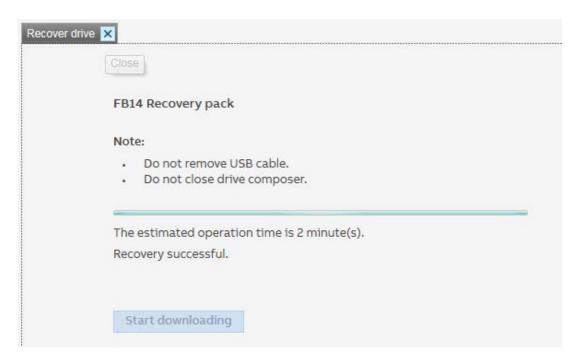


The drive may be functional now, but the fault root cause still exists in the drive. Proceed with installing FB14 Service pack, to completely prevent the FB14 fault.

■ FB14 Service pack


1. In the Recover drive window, click **FB14 Service pack**.



2. In the FB14 Service pack window, click Continue. Follow instructions in the Note.

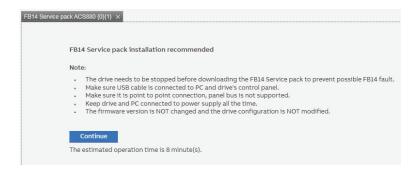

3. Before installing the Service pack, Drive Composer creates a parameter backup. Check **Parameter backup**.

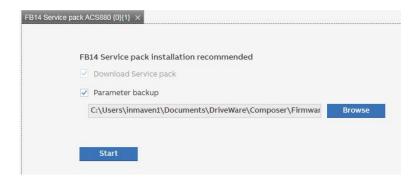


4. If you prefer to change the backup folder, browse to select a new folder and click



WARNING!

Do not interrupt the drive during backup and loading process, this may cause severe damage to the drive.


5. Wait while Drive Composer completes parameter backup and downloading. Follow instructions in the note.

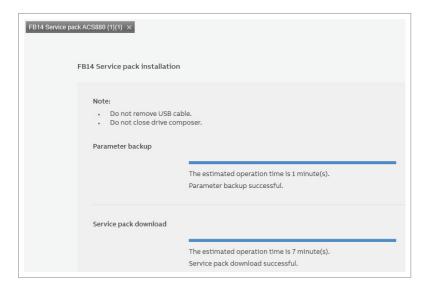

6. After installation is complete, Drive Composer sends the Service pack update event to ABB server. Later this information is maintained in the Drives Installed Base. Click **Next**.



7. A thank you message appears to acknowledge the Service pack installation. You can continue using the drive with the parameter backup saved in your PC. To access the saved location, click on the link **Open file location**.

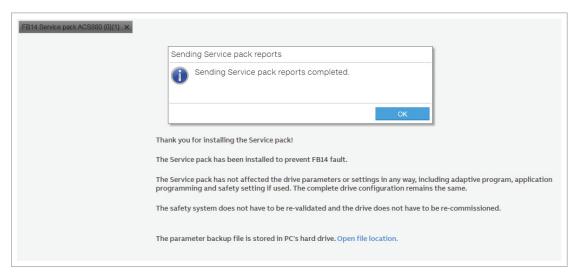

See also,

- Sending offline FB14 Service pack event
- FB14 Recovery and Service pack failure
- Checking the status of Service pack

Sending FB14 Service pack event


After the FB14 Service pack installation and update is completed, Drive Composer automatically sends the service information to ABB server. The server is updated periodically to transfer the service information to Drives Installed Base (Drive Installed Base) in which the Drive history is maintained. See figure FB14 Service pack installation DONE!.

Sending offline FB14 Service pack event

If network was offline during FB14 fault remedy, the "...... no connection to ABB server" message appears. Drive Composer saves the event report locally and confirms if the report can be sent at the next start whenever the drive is online.

■ FB14 Recovery and Service pack failure


If the Recovery and Service pack process failed, Drive Composer opens the default mail client with filled message, for example, drive ID and Drive Composer version. You can check the filled details and send the mail to ABB global technical support to help diagnose the cause of failure.

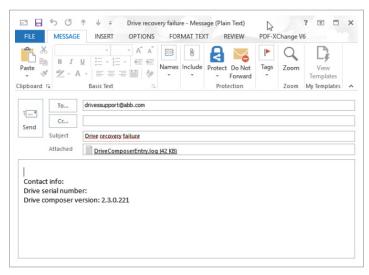

Note: Drive ID is filled only when the Service pack installation fails. Drive Composer attaches the log file to the mail. But you can also attach the backup file.

Checking the status of Service pack

You can check the status of Service pack installation from the System info window.

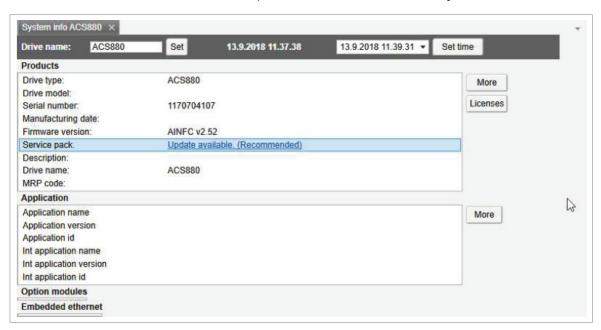


The following status appears in the System info window:

Status	Description	
Update Available (Recommended)	indicates that the drive requires Service pack installation. ABB recommends to install the Service pack to prevent any possible fault in the future.	
	To install,	
	 Click on the status. Note: Make sure that the drive is powered on and USB cable is connected between drive control panel and PC. Follow the instructions on how to proceed with installation. See, FB14 Service pack, step 7 onwards. 	
Updated	indicates that Service pack is installed in the drive, and no further action is required.	
Not Required	indicates that the memory unit or drive firmware includes the FB14 fault remedy and drive does not require Service pack installation.	


Using the Drive text editor

You can manage user editable texts using the Drive text editor. The function allows to read texts from the drive, to make changes and to update texts to the drive.

1. From the Drive Composer title bar, select **Tools** → **Drive Text Editor**.

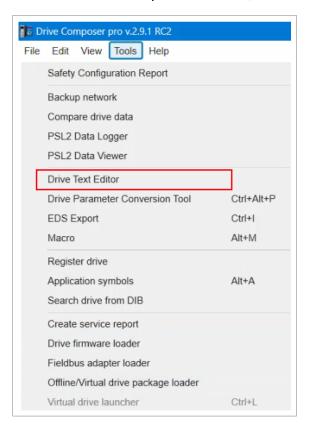


 2. Select the drive to work with and click **Ok**.



The Drive text editor is started and attached to the selected drive.

 Click Read, to read the data from the drive and make the changes in the column Localized text. Also, select the Enable check box to display the contact information in the panel.

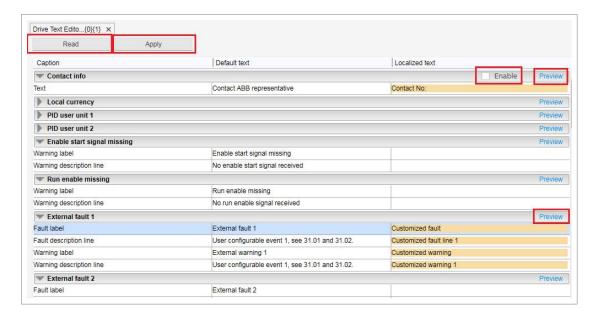


Note:

- The changed text appears as highlighted until it is saved.
- The contact info appears in the preview even if the **Enable** check box is not selected.
- 4. Click **Preview**, to review the changes.



5. In the Drive text editor window, click Apply.

 The changes are written to the drive and the message *Parameters changed. Parameters are reloaded* appears.




6. Click OK.

Using the Drive parameter conversion tool (pro)


The parameter files of ACS800/ACS600 ABB drive types commissioned and maintained with Drive Window can be accessed with Drive Composer via the Drive parameter conversion tool.

Note: Not all ACS800/ACS600 drives and software are supported.


1. From the Drive Composer title bar, select **Tools** → **Drive parameter conversion** tool.

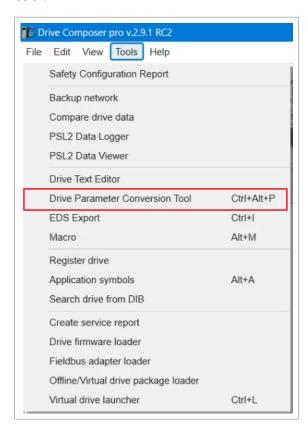

2. In the Drive Parameter Conversion Introduction screen, click Next.

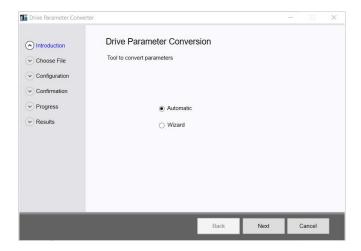

3. Browse and select appropriate source and destination drive parameter files.

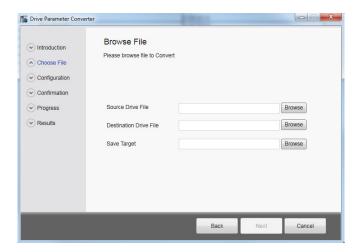


Note: Select an empty parameter file with default values. You must create an offline parameter file (of the destination drive family) to select here.

4. Select a file name to save the target file. Click **Next**.

Note: Do not overwrite the empty file.

5. Answer **Yes**.

The Conversion report shows the parameters which are converted successfully and failed. Read the report carefully and fix the parameter values manually for which the conversion was not successful.

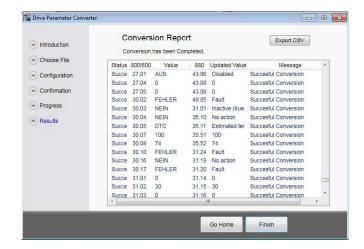


Using the PSL2 data logger (pro)

With BCU-x2 control unit, you can upload the PSL2 data logger files from the drive flash memory to PC local hard drive. The files contain real time data from the converter modules that help in fault tracing and analysis.


Note: The files can be uploaded from drive to local computer only. You cannot read the contents or open the files. For any further assistance contact ABB customer support.

Uploading PSL2 data logger files

From the Drive Composer title bar, select Tools → PSL2 data logger.

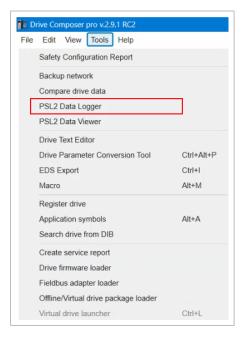

2. Move the PSU data logger file(s) that you want to upload to the right side box. Use the right arrow (>>) or the left arrow (<<) button.

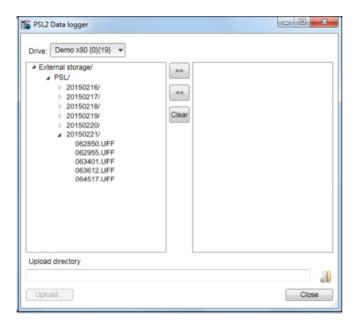

- 3. In the Upload directory field, click 4 and select an upload folder in your PC local hard drive.
- 4. Click **Upload**...


 The selected files are transferred to your local folder.

Using the PSL2 data viewer (pro)


You can open and view contents of the uploaded PSL2 data logger files in the PC local hard drive. The files contain real time data from the converter modules that help in fault tracing and analysis.

Viewing PSL2 data logger files

1. From the Drive Composer title bar, select **Tools** → **PSL2 Data Viewer**.

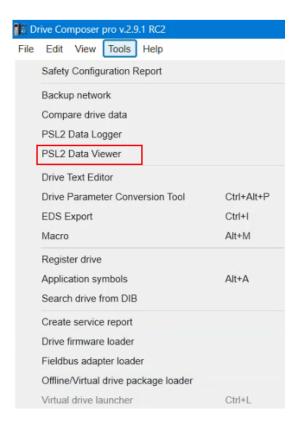

 PSL2 Data Viewer screen with PSL2 plotting tools appears. The plotting area is empty by default. See PSL2 Data Viewer instructions below to open and save the plot.

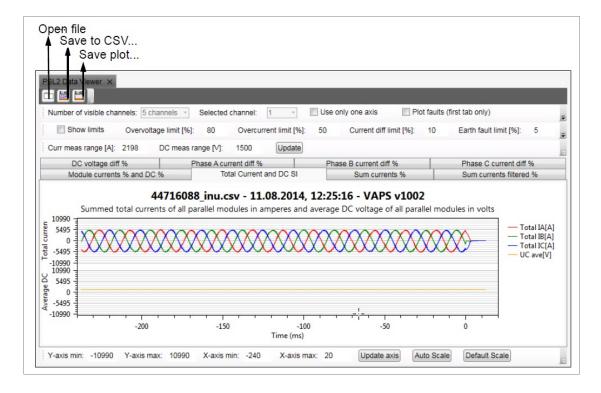

PSL2 Data Viewer instructions

The PSL2 plotting tools can be used to plot current and DC voltage using the *uff* or *csv* file. The table below describes how to use the plotting tools. Match the below instructions with the above PSL2 Data viewer screen.


Action	Instruction
Opening <i>uff</i> or <i>csv</i> file.	In the PSL2 Data Viewer window, click Open file icon and select the file to open.
Saving the plot as csv file.	Click Save to CSV icon.
Saving the plot into different file formats.	Click Save plot icon.
Selecting number of channels to view in the plot.	Select number of channels in the Number of visible channels
	drop-down list.
Viewing the selected channels.	See in Selected channel drop-down list
Aligning selected channels on the same axis	Click on Use only one axis check box.
	Use this option to draw all selected channels on the same axis.
Setting minimum and maximum values of X-axis and Y-axis	Set required minimum and maximum values in the below fields and click on Update axis button.
	Y-axis min
	Y-axis max X-axis min
	X-axis max
	Note : The min/max values of X-axis and Y-axis are equal in all visible plots.
Scaling X-axis and Y-axis automatically	Click on Auto Scale button.
	The largest and smallest values of data are scaled to Y-max Y-min respectively.
	Note : This action does not maintain the same scale in every parallel axis.

Action	Instruction
Resetting min/max values of Y-axis to default values	Click on Default Scale button. The graph is reset to the updated default values.
Updating calculation parameters to plot and recalculate the data	Set current and voltage values in Curr meas range [A] and DC meas range [V]. Click on Update button.
Viewing different plots	Click on the tabs to view the required plot: Total Current and DC SI Sum currents % Phase X current diff % Sum current filtered % DC voltage diff % Module currents % and DC %
Inside the plot you can also do the following actions using keypad and mouse:	 use the right mouse button to move (pan) the plot up/down. The x-/ y-axis moves accordingly. use the mouse wheel to zoom the plot. Zooming multiple channels works best when the cursor is placed on an empty space i.e. top of upper axis, below the lower axis, or between the axis. mark a rectangle with Ctrl+Right mouse button or Ctrl+Left mouse button to zoom the marked area hold the Left mouse button to view the plot tracker press 'A' key to reset the axis to set values press Ctrl+C to copy the bitmap of plot.

Adaptive programming

Adaptive programming is a feature to control the operation of a drive by parameters. Each parameter has a fixed set of choices or a setting range. The parameters make programming easy, but the choices are limited. You cannot customize the operation further.

The Adaptive programming makes easy customizing possible without the need of a special programming tool or language. The program is built of function blocks.

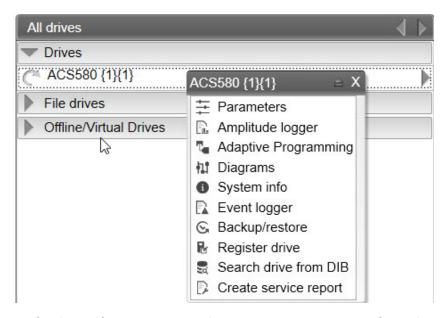

For further information on Adaptive programming, refer *Adaptive programming application guide* in Related documents.

Locking user interface

A user interface lock function is implemented to notify the device lock states, for example, when parameter system is locked or when file downloading is disabled.

The function prevents you from:

- uploading device data, when file download function is disabled or when parameter system is locked
- creating device backup when the device is in protected state.

The function is implemented in DCPT-01 and DCET-01. See below sections that describe the lock states visible in different pages or views in the Drive Composer.

Lock state in System info page

Go to the System info page by right clicking on the selected drive in the drive list and select **System info**. The different lock states displayed in the **System info** page are listed below.

Device lock state	Lock state messages	
Initial state	Set button is enabled.	
	System info ACS880 {1}{1} × Drive name: ACS880 Set 25.05.2017 09:07:51 25.05.2017 08:26:47 ▼ Set time Droducts	
Parameter system is locked	Set button is disabled. When you mouse hover the button, the tooltip "Parameters are locked on drive" appears.	
	Drive name: ACS880 Set 25.05.2017 09:07:51 25.05.2017 08:26:47 ▼ Set time Products Drive type: AC	
File download is disabled	Set button is disabled. When you mouse hover the button, the tooltip "File downloading is disabled on drive" appears.	
	Drive name: ACS880 Set 25.05.2017 09:07:51 25.05.2017 08:26:47 ▼ Set time Products File downloading is disabled on drive. Drive type: ACS880 Set 25.05.2017 09:07:51 25.05.2017 08:26:47 ▼ Set time More	

Lock state in parameter view

The user interface lock states are displayed in the following parameters view:


- · Parameters view for online drive
- Custom parameter view
- · Offline parameter view
- File parameter view

In the parameters view, the device lock states, i.e. Parameter system is locked or the File downloading is disabled, are accessible when you mouse hover the below two buttons:

- Save parameters to file
- Download to device

The table below lists the different device states displayed in the parameters view. The example screens are from the custom parameter view.


Note: The two buttons listed above may be hidden and may not be visible in all views. When data in the view is loaded for different drives, the drive which is connected may not show the correct state of the buttons until you change the drive.

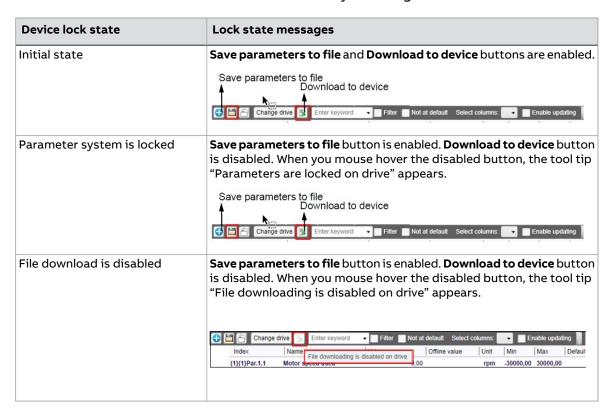

Lock state in Backup/Restore page

Go to the Backup/Restore page by right clicking on the selected drive in the drive list and select **Backup/Restore**. The different lock states displayed in the Backup/Restore page are listed below.


Device lock state	Lock state messages	
Initial state	All buttons, Backup , Restore and Advanced restore are enabled. Backup/restore {1}{1} × ACS880 {1}{1} ×	
	Backup	
	Advanced restore Restore	
	Note: Advanced restore button is available only in Drive Compos pro, DCPT- 01 (code: 3AUA0000108087).	ser

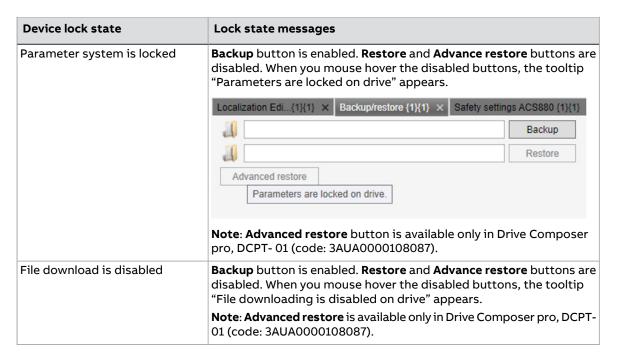

Lock state in Safety settings page (pro)

Go to the Safety settings page by right clicking on the selected drive in the drive list and select **Safety settings**. The different lock states displayed in the Safety settings page are listed below.

Note: The lock state messages are visible only in Drive Composer pro, DCPT-01 (code: 3AUA0000108087).

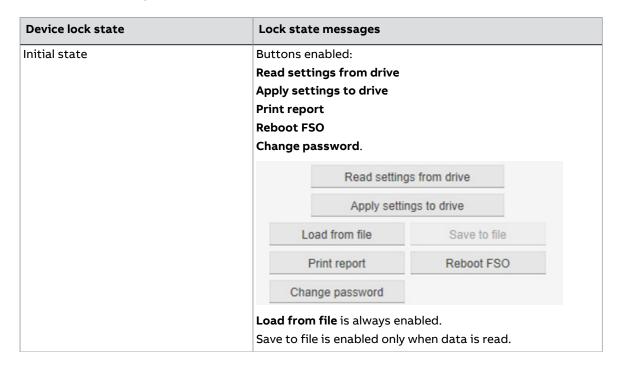


Device lock state	Lock state messages
Parameter system is locked	Buttons disabled: Read settings from drive Apply settings to drive Print report Reboot FSO Change password.
	Apply cottings to drive Parameters are locked on drive. Load from file Save to file Print report Reboot FSO Change password
	When you mouse hover the disabled buttons, the tooltip "Parameters are locked on drive" appears.
	Load from file is always enabled.
	Save to file is enabled only when data is read.
File download is disabled	Buttons disabled:
	Read settings from drive
	Apply settings to drive
	Print report Reboot FSO
	Change password.
	Read settings from drive
	Apply settings to drive
	Load from fi File downloading is disabled on drive.
	Print report Reboot FSO
	Change password
	When you mouse hover the disabled buttons, the tooltip "File downloading is disabled on drive" appears. Load from file is always enabled. Save to file is enabled only when data is read.

Lock state in Drive text editor (pro)

Go to **Tools** \rightarrow **Drive Text Editor**. Select the drive to work with and click **Ok**. The Drive text editor screen appears.

The different lock states displayed in the Drive text editor are listed below.

Note: The lock state messages are visible only in Drive Composer pro, DCPT-01 (code: 3AUA0000108087).

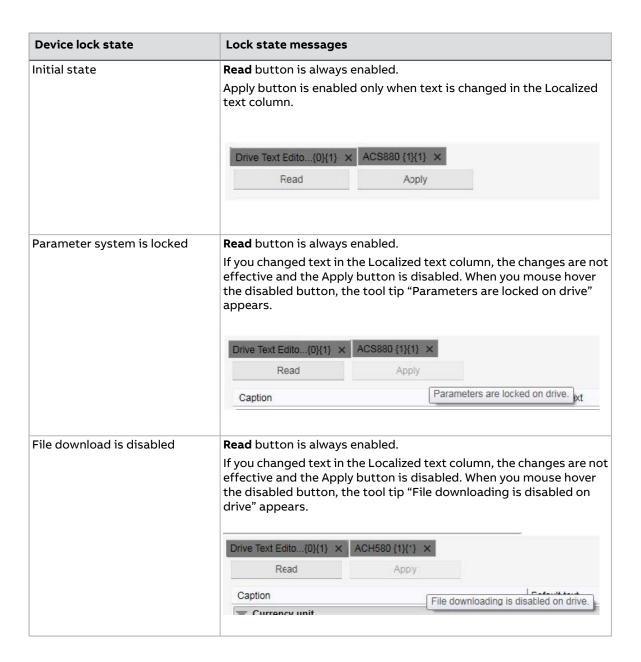

Annexure A: Creating drive installed base service report template

Contents of this chapter


This chapter describes the factors to consider when creating a service report template file for Drive Installed Base (DIB).

Creating a template for Drive Installed Base service report (Internal use only)


Note: Service report templates are created by authorized ABB personnel only. If you need to create template, contact your local ABB representative.

You can create a template file for Drive Installed Base service report using the Step Designer tool. You will need necessary permissions to access the tool. The tool has different steps and components, but not all of them are used in the Drive Installed Base service reporting template.

The project file (*SDDIBTemplate.xml*) is located in the Drive Installed Base service portal. The file contains all currently supported components and data bindings. See descriptions in below sections.

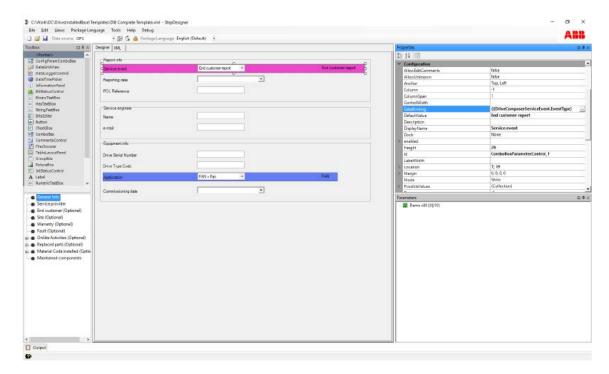

The example screens show General Information for service actions.

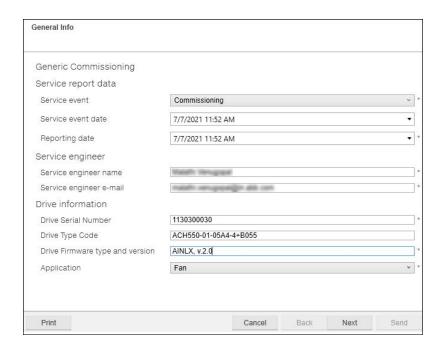

Generic wizard step

The Generic wizard step is used in the Drive Installed Base template structure. Currently, the template supports only this step.

The table below lists the sections and properties of the Generic wizard step used in the Drive Installed Base service report.

Section	Property	Comment
Configuration	Display Name (presented as "Title" in Drive Installed Base service report)	Mandatory to fill this value.
	Description	Appears below "Title"
DC Wizard Printing	AddToReport	Determines that page is visible on print preview.

Components

The table below lists the components used in Drive Installed Base service reports.

Component	Presented as
CommentsControl	multiline text component
NumericTextBox	numeric component
	Note : Accepts numeric values only.
CheckBox, ThreeStateCheckBox	checkbox
TextBox, BinaryTextBox, StringTextBox, HexTextBox	one-line text components
Filechooser	user file selectable component
ComboBox	drop-down list
DataGridView	table

Common properties of components


The following properties are common for the components defined in Drive Installed Base service report.

Section	Property	Comment
Configuration	DataBinding	Defines data input and output of the component. See also DataBinding xx.
	DefaultValue	Defines default value of the component. This value is used if source databinding is not defined.
	Display Name	Appears as "Title" in service report. This is a mandatory value.
	enabled (value)	Defines that component is read- only
	enabled (expression)	Not supported
	ValueRequired	Defines if value must be filled. True = Value is required before navigating to the next page. False = Value is not required
DC Wizard Printing	AddToReport	Determines the print preview of service report page.
	BlankLineAfter	Adds one empty line in print report after this component.
	OmitIfEmpty	Does not print the component if there is no value.
	PageBreakAfter	Adds page break in print report after this component.

ComboBox properties of components


You can use the following combo box property to define the components in Drive Installed Base service report.

Property	Comment
PossibleValues (value)	Shows values in the drop down list. Selecting a value opens a new editor. You can add, change or remove a value. See example screen below.
	In the new editor, you can define name and value of the property. Data in the Value field is sent to Drive Installed Base service. Make sure that this data is synchronized with the expected data value.
PossibleValues (expression)	Not supported

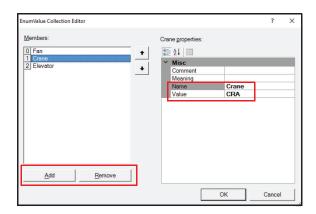

Data Grid View properties

You can use the following data grid view property to define components in Drive Installed Base service report.

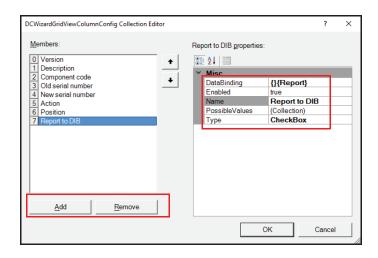

Property	Comment	
DCWizardColumns	Defines columns in the table. Selecting a column value opens a new editor.	
	You can add, change or remove a colum	nn value. See example screen below.
	In the new editor, you can define the co	lumn properties:
	Column property	Comment
	DataBinding	Defines data input and output. See also DataBindings (page 236)
	Enabled	Enables read-only column mode.
	Name	Defines column header text.
	PossibleValue	Defines possible values if column type is DropDown.
		Note: This property is not supported for other column types.
	Туре	Defines following data types: String, Numeric, Date, CheckBox, DropDown
	Note: Columns defined are not visible in Installed Base service report wizard.	Step Designer, but are visible only in Drive

DataBindings

DataBindings define how to fill the component with data and to where the filled data must be sent. The Drive Installed Base service report includes two types of DataBinding properties:

- DataSource
- DataTarget

You can fill the properties using existing DataBinding properties in the StepDesigner tool. See the sample format below:

"{DataSourceBinding}{DataTargetBinding}"

The format is converted to:

```
DataSource = "DataSourceBinding"
DataTarget = "DataTargetBinding"
```

If value in "DataBinding" does not match with the previous format, the value is assigned to

"DataSource" property and "DataTarget" remains empty.

DataSource

DataSource is a DataBinding property that defines how component data must be filled if you started the service report wizard for the first time and default value was empty.

See the data source list supported by Drive Composer PC tool:

Property	Comment	
DateTimeNow	Defines current date	
Par.G.I	Drive parameter group and index.	
	For example, Par.1.11, means that Drive Composer reads value from parameter group 1 and index 11 of the selected drive.	
Info.ID	System info ID number or drive info defined by ID.	
	For example, Info.1, means that Drive Composer reads drive serial number.	
UserEmail	Email ID of user logged in to Drive Installed Base service.	
Drive	Data object received from Drive Installed Base service. For example,	
	Drive.SerialNumber-reads drive serial number	
	Drive.EndCustomer.Name-reads end customer name	
	Drive.Site.StreetAddress -reads site address where the drive is installed	

Property	Comment
Component	Drive components for table data. Each column has an appropriate component
	type property as its DataSource. See below example code:
	<components></components>
	<pre><component <="" c:type="CfrTable" id="DataGridView_1" pre=""></component></pre>
	dataBinding="{Component}{}">
	<dcwizardcolumns></dcwizardcolumns>
	<pre><column <="" databinding="{Version}{}" name="Version" pre="" type="String"></column></pre>
	enabled="tru
	e" />
	<pre><column <="" databinding="{}{De- scription}" name="Description" pre=""></column></pre>
	type="String" enab
	led="true" />
	 Each row fills with a component property The column name Version reads data from Component. Version property The column name Description reads value from Component. Description property.

DataTarget

DataTarget is a DataBinding property that defines how to send value of current component to Drive Installed Base service. Drive Composer sends the value to multiple object types of Drive Installed Base service.

DataTarget objects

The table below list the objects created based on DataTarget definitions:

Object	Subtypes
DriveComposerServiceEvent	ServiceEventWarrranty ServiceEventFault
	Collection of objects of ServiceEventReplacedPart type ServiceEventSite
	ServiceEventEndCustomer ServiceEventFieldServiceEngineer
	Collection of objects of MaterialCodeInstalled type ServiceEventServiceProvider
	OnSiteActivities
	Commissioning
	Collection of Fault type objects
	Collection of Attachment type objects
MaintainedComponent (collection of objects)	-

DataTarget examples

If DataTarget =	Value fills this property
DriveComposerServiceEvent.SerialNumber	SerialNumber in object type
	DriveComposerServiceEvent
ServiceEventEndCustomer.Name	Name in object type ServiceEventEndCustomer, which is defined as property EndCustomer in object type DriveComposerServiceEvent
ServiceEventWarranty.ResponsibleUnit	ResponsibleUnit in object type ServiceEventWarranty, which is defined as property Warranty in object type DriveComposerServiceEvent

The objects defined as collection, use the DataTarget in two ways:

Fault.Code–value from this component fills property *Code* in object type *Fault*. If you added more than one component, Drive Composer sends only the value of first component in the page to Drive Installed Base service.


Fault.Code|1...3-based on components with three different bindings three objects of Fault type are created. You can define more than one collection element on one page.

Saving the DC wizard template in StepDesigner

After you designed a service report template with the StepDesigner tool using components, databindings, etc., save the template file to Drive Composer reporting wizard format (.dcwiz) and set the file as custom printing template file format (.xaml). The custom printing template defines the common appearance of printed pages like header, footer, etc.

To save the template file,

1. In StepDesigner, go to **File** →**Save DC Wizard template**.

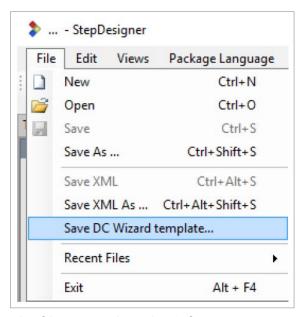

The file is saved in .dcwiz format.

2. Click **Yes**, to set the file as custom printing template file (.xaml format) or click **No**, to use the default printing template.



Note:

- The template must contain a ContentControl named "cc".
- ABB recommends that you use the same name for both files for better identification.

Deploying a template file

The Service reporting (create_service_report.html) module contains all service report template files. You can see a range of entries in the Select service type list. Each entry refers to a template file.

To deploy a template file,

- Create a template structure in StepDesigner tool. See Creating a template for Drive Installed Base service report (Internal use only) (page 232).
- 2. Save the file to StepDesigner format.
- Create a .dcwiz file. See steps for Saving the DC wizard template in StepDesigner.
 ABB recommends that you use the same name for both files for better identification.
- 4. If you have multiple templates, repeat steps 1...3.
- 5. Create a zip file of the multiple files.
- 6. Upload the zip file to Drive Installed Base service portal. If you do not have the necessary permissions, you can request the Drive Installed Base team to upload the files.

Localizing service report templates

Consider the following points,

- Whenever you change the language settings in Drive Composer, see the localized templates list in service types of Service reporting (create_service_report.html) module.
- Language files are recognized by their file names. For example,
- File.dcwiz or File en.dcwiz refers to English template file.
 - File pl.dcwiz refers to Polish template file.
 - File fi.dcwiz refers to Finnish template file.
- When you selected a language, all properties (Display Name, Description, Name, etc.) are translated to their respective languages.
- When you selected a language, the files matching that language selection are only visible. If a particular language file does not exist, then English version is displayed as default.

The below example cases show the list of files visible when you selected a language.

The template file is a zip file of following files.

Example:

- File.dcwiz
- SecondFile.dcwiz
- ThirdFile_en.dcwiz
- File_fi.dcwiz
- FourthFile fi.dcwiz

Annexure A: Creating drive installed base service report template 241

Case	If language selected is	The Select service type dropdown lists the following files:
Case 1	English	FileSecondFileThirdFile_en
Case 2	Finnish	File_fiSecondFileThirdFile_enFourthFile_fi

Further information

Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to www.abb.com/contact-centers.

Product training

For information on ABB product training, navigate to new.abb.com/service/training.

Providing feedback on ABB manuals

Your comments on our manuals are welcome. Navigate to forms.abb.com/form-26567.

Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet at www.abb.com/drives/documents.



www.abb.com/drives

