


## FurseWELD

### Stud to steel surface RS1 & RS2

#### Stud to steel surface RS1 - FurseWELD

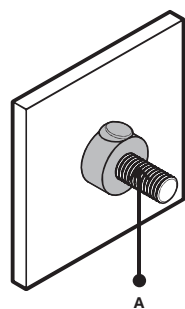

Stud size A	Mould part no.	Order code	Powder cartridge part no.	Handle clamp part no.	Stud part no.
M8	RS1-4-M8	7TCA083910R2232	32P10	HCPK4	RSSM8
M10	RS1-4-M10	7TCA083910R2227	45P10	HCPK4	RSSM10
M12	RS1-4-M12	7TCA083910R2228	65P10	HCPK4	RSSM12


Special moulds for all FurseWELD products can be manufactured to meet specific customer applications on request

For order codes of powder cartridges, handle clamps and studs, see pages 49-50

FurseWELD moulds should only be used with FurseWELD powders, handle clamps and accessories. If moulds, powders, handle clamps and accessories from other manufacturers are utilized, we cannot guarantee the safe use or the integrity of the completed joint

Conductors must be installed in the orientation shown to achieve the correct connection

#### Stud to steel surface RS2 - FurseWELD

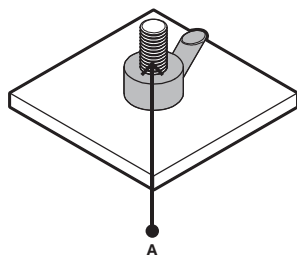

Stud size A	Standard mould part no.	Order code	Powder cartridge part no.	Handle clamp part no.	Stud
M8	RS2-4-M8	7TCA083910R2235	32P10	HCPK4	RSSM8
M10	RS2-4-M10	7TCA083910R2233	45P10	HCPK4	RSSM10
M12	RS2-4-M12	7TCA083910R2234	65P10	HCPK4	RSSM12

Special moulds for all FurseWELD products can be manufactured to meet specific customer applications on request

For order codes of powder cartridges, handle clamps and studs, see pages 49-50

FurseWELD moulds should only be used with FurseWELD powders, handle clamps and accessories. If moulds, powders, handle clamps and accessories from other manufacturers are utilized, we cannot guarantee the safe use or the integrity of the completed joint

Conductors must be installed in the orientation shown to achieve the correct connection