

# User's Guide

Paint PowerPac 2.2

Publ.No.: 3HAC022725-001 en Rev.03

---

**ABB AS, Robotics**





# Table of Contents

Important Information . . . . .	2
About Paint PowerPac . . . . .	3
Installation . . . . .	4
<b>Chapter 1 Introduction . . . . .</b>	<b>7</b>
Introduction . . . . .	8
Selection . . . . .	9
Target tab . . . . .	10
Instruction tab . . . . .	13
Path tab . . . . .	16
Conveyor tab . . . . .	19
Misc tab . . . . .	21
AutoPath . . . . .	23
BrushEditor . . . . .	27
ColorChangeEditor . . . . .	28
Mirror . . . . .	31
<b>Chapter 2 Display Options . . . . .</b>	<b>33</b>
The Display Option button bar . . . . .	34
<b>Chapter 3 Paint related functions . . . . .</b>	<b>35</b>
Motion instructions . . . . .	36
Action instructions . . . . .	37
Eventdata . . . . .	38
Conveyor Tracking . . . . .	39
<b>Chapter 4 How to use Paint PowerPac . . . . .</b>	<b>41</b>
Create a simple program . . . . .	45
How are things connected . . . . .	51
Set up a robot with external axis . . . . .	52
Configure the VirtualController for a Paint robot . . . . .	59



---

# **PAINT POWERPAC 2.2 USER GUIDE**

## **Important Information**

The information in this document is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this document.

In no event shall ABB be liable for incidental or consequential damages arising from use of this document or of the software and hardware described in this document.

We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden. Additional copies of this document may be obtained from ABB at its then current charge.

© 2005 ABB AS, Robotics  
ABB AS, Robotics  
Automation Technology Products Division  
Bryne - Norway

First Edition: 10. May 2004

---

## About Paint PowerPac

---

The Paint PowerPac is a RobotStudio solution for paint simulation and offline programming. It will dramatically reduce installation and programming time, since programming and installation of new robots can be performed offline without disturbing ongoing production.

It can be used for verification of the paint line layout and painting process. Possible program weaknesses, such as singularity, speed deviations etc., can be discovered before production start. Cycle time and robot positioning challenges can be discovered at an early stage instead of after installation.

The user can test if new parts can be produced on the existing line without having to do extensive and expensive programming and testing. Several solutions (mechanical, positioning, movements etc.) can be tested at low cost

Use the Paint PowerPac for controlling the full range of features of the paint process. It includes functions such as:

- Creation and editing of brush tables
- Creation and editing of Color Change sequences
- Executing of special painting related instructions
- Setting paint events
- Graphical editing of paint events and positions
- Conveyor tracking

Paint instructions like UseBrushTab, PaintL, PaintC, SetBrush etc. are supported to give the programmer full control over the painting process.

## Installation

### Install the software

To install the RobotStudio software including the Paint add-in, follow these steps:

- Insert the Robot Studio CD in your computer's CD-ROM drive.
- The installation program will now guide you through the installation procedure. If the CD does not run automatically, double-click the Setup.exe file found in your computer's CD-ROM directory.
- At the end of the installation is the License Key Request Form displayed. To finish the software installation, either continue with completing the License Key Request Form, or cancel it if you want to request a license key later.
- Insert the Paint PowerPac CD in your computer's CD-ROM drive.
- The installation program will now guide you through the installation procedure. If the CD does not run automatically, double-click the Setup.exe file found in your computer's CD-ROM directory.

### Request a License Key for Robot Studio including the Paint option

You request a license key by completing the License Key Request Form and sending it to ABB. The form is automatically displayed during the software installation, but can also be opened from the windows taskbar.

If you don't already have the License Key Request Form open, do this:

- Click the Start button and point to Programs, ABB Automation and then click System Information.
- On the Products tab, go to the Installed products field and select RobotStudio. Then click the Request License Key for RobotStudio button.

To fill out the form and request a license key, do this:

- When the License Key Request Form is open, fill in all requested fields.
- Save the registration information to a file on your computer.



- To obtain a License Key, attach the saved registration information to an E-mail and send it to:

softwarefactory@se.abb.com

Alternatively, print the file and send it by fax to:


ABB Robotics +46 31 773 85 40

A licence Key File will now be returned to you by E-mail within a few hours.

## Register your License Key

When you receive your license key file, you need to authorize the computer you installed RobotStudio on by registering the key.

To register your license key, follow these steps:

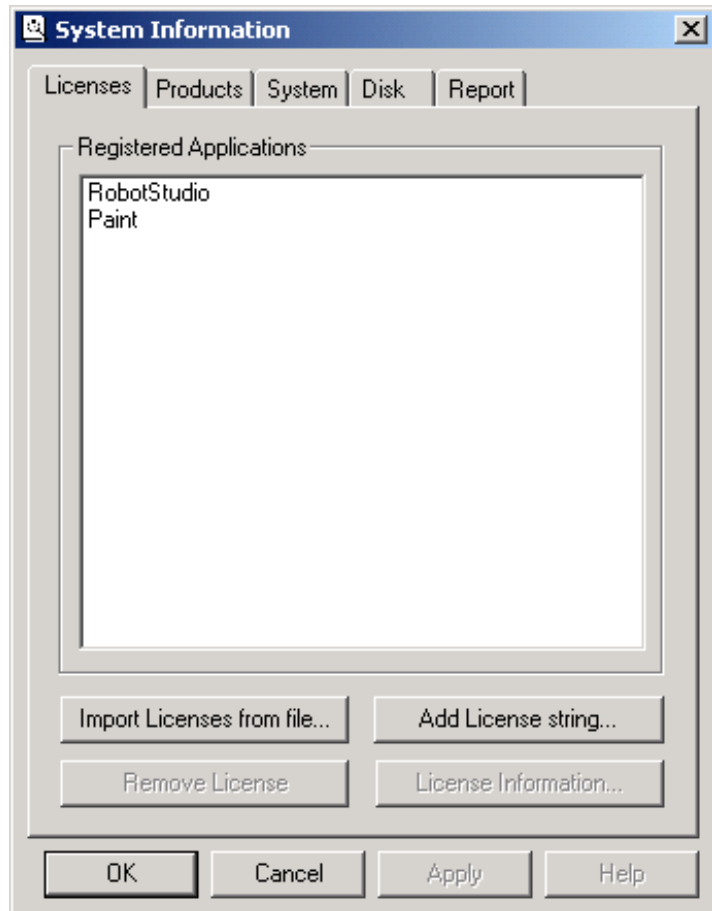


- Click the Start button in the Windows taskbar. Select Programs>ABB Automation >System Information.
- Click the Licenses tab and click the Import Licenses from file. Browse to the license key file, click OK.
- or
- Click the Add License sting button and paste the license key from the clipboard.
- Remember to add the license both for Robot Studio and Paint PowerPac.
- Click OK again to exit the System Information dialog. You can now start using RobotStudio.

---

### Include the Paint Addin in Robot Studio

In order to enable the paint functionality in Robot Studio you need to include Paint as an add-in:

- Start Robot Studio
- Select the Tools / Add-Ins... menu
- In the dialogue select Add and browse into the /Add-ins/Paint/ directory where you select the Paint.dll.

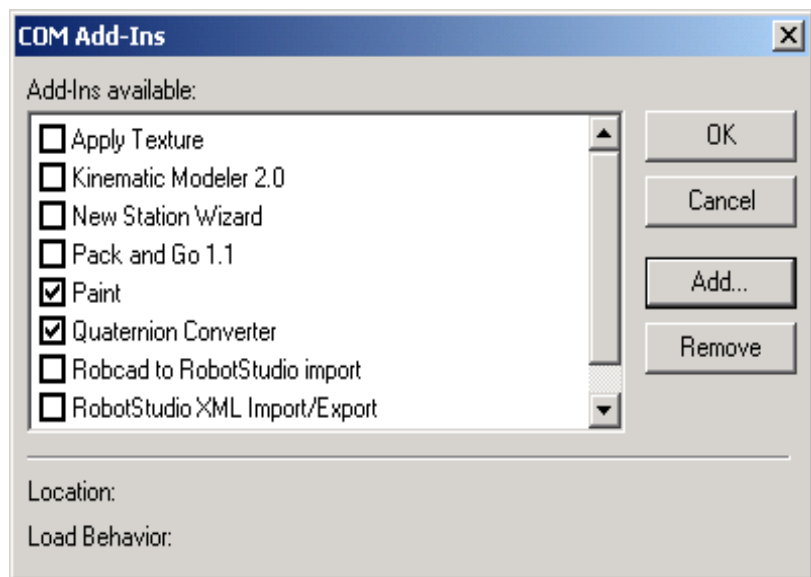

# **Chapter 1 Introduction**

## **Introduction**

---

### **Paint Tab**

The Paint tab is designed so you should be able to perform most of your Paint related operations from it without changing back and forth between the object browser and the Paint tab.

The Paint tab contains tools and functions to create, modify and test your targets, path instructions and paths.

---

### **Help**

The paint tab contains a help button in the upper right corner. Pressing this button opens the Paint PowerPac user guide.

## Selection

### Introduction

This box will show information on selected object.

The image shows a dialog box titled "Selection:". It contains five input fields arranged vertically:

- Type: [Empty text box]
- Name: [Ax1\_Sing]
- Position XYZ: [Empty text box]
- Euler X Y Z: [Empty text box]

### Selection

The selection box will show position information on the selected object.

The following object types are supported:

rsObjectTypeTarget

rsPaintEvent

rsObjectTypeWorkObject

rsObjectTypeMechanism

For other object types only the object name will be displayed.


If multiple objects are selected, only information on the first object is displayed.

For rsPaintEvent the event plane, position and brush number will be displayed instead of XYZ position and euler angles.

## Target tab

### Introduction

The target tab contains a list of targets in the selected path(s), and tools for modifying and testing targets.

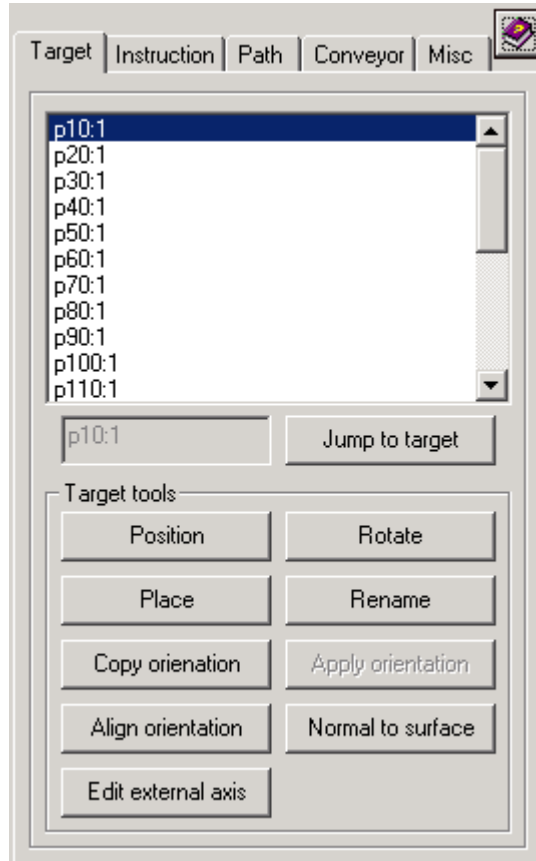

### Target list

The target list contains all targets in the selected path(s). One or more targets can be selected.

Click on the target name to set the target as the active target. If more than one target is selected, the last selected target will be set as the active target.

Press the **DELETE** key on the keyboard to delete the selected target(s).

---

**Jump to target**

Pressing the Jump to target button positions the active robot with the active tool on the selected target.

NOTE: There must be a robot and a running VC for this to work.

---

**Position**

Pressing the Position button opens the positioning dialog box of RS allowing you to position the selected target(s).

---

**Rotate**

Pressing the Rotate button opens the rotation dialog box of RS allowing you to rotate the selected target(s).

---

**Place**

Pressing the Place button opens the place dialog box of RS allowing you to offset the selected target(s).

---

**Rename**

Pressing the rename button will rename the selected target(s). The name will be set to <Prefix>Number<Postfix>. Number will start at 1 and count upwards.

NOTE 1: Prefix and Postfix are user selectable in the Misc tab.

NOTE 2: If a name is already used, Rename will increase Number until a valid name is found.

---

**Copy orientation**

Pressing the Copy orientation button stores a copy of the orientation of the selected object.

NOTE: You can copy the orientation from any object(s) in the station, not only targets.

---

**Apply orientation**

Pressing the Apply orientation button will apply the stored orientation to all selected objects.

NOTE 1: This button is disabled until you have copied an orientation using the Copy orientation button.

NOTE 2: You can apply the orientation to any object(s) in the station, not only targets.

---

**Align orientation**

Pressing the Align orientation button opens the Align Target Orientation dialog box of RS, allowing you to align the selected target(s).

---

**Normal to surface**

Pressing the Normal to surface button opens the Set Normal to Surface dialog box of RS, allowing you to set the selected target(s) normal to a part or surface.

---

**Edit external axis**

Pressing the Edit external axis button opens the Edit Externals dialog box of RS, allowing you to edit the external axis values of the selected target(s).


NOTE: You can only change active external axis.



## Instruction tab

### Introduction

The Instruction tab contains a list of instructions in the selected path(s), and tools for modifying and testing target references and action instructions.

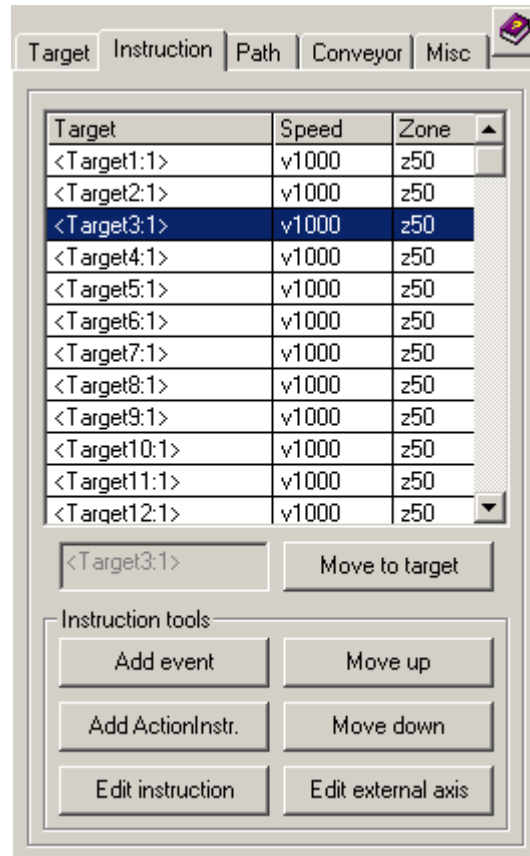

---

**Instruction list**

The instruction list contains all instructions in the selected path(s). One or more instructions can be selected.

Click on the instruction name to set the instruction as the active instruction. If more than one instruction is selected, the last selected instruction will be set as the active instruction.

Press the **DELETE** key on the keyboard to delete the selected instruction(s).

If the instruction is a target reference, you can click on the targets speed or zone value to change the value.

---

**Move to target**

Pressing the Move to target button executes the selected target reference.

NOTE: There must be a robot and a running VC for this to work.

---

**Add event**

Pressing the Add event button opens the Add event dialog box of RS, allowing you to add an paint event to the selected target reference.

NOTE: The target reference must be of process type PaintWare

---

**Add ActionInstr.**

Pressing the Add ActionInstr. button opens the Insert Action Instruction dialog box of RS, allowing you to add an action instruction below the selected instruction.

---

**Edit instruction**

Pressing the Edit instruction button opens the Edit Instruction dialog box of RS if one or more target references are selected, and Edit Action Instruction dialog box of RS is an action instruction is selected, allowing you to edit the parameters of the selected instruction(s).

NOTE: You can not select a mix of action instruction and target references, or more than one action instruction.

**Move up**

---

Pressing the Move up button moves the selected instruction up one instruction.

---

**Move down**

---

Pressing the Move down button moves the selected instruction down one instruction.

---

**Edit external axis**

---

Pressing the Edit external axis button opens the Edit Externals dialog box of RS, allowing you to edit the external axis values of the selected target reference(s).


NOTE 1: You can not select a mix of action instruction and target references.

NOTE 2: You can only change active external axis.

## Path tab

### Introduction

The Path tab contains a list of paths in the active station, and tools for creating, modifying and testing paths.

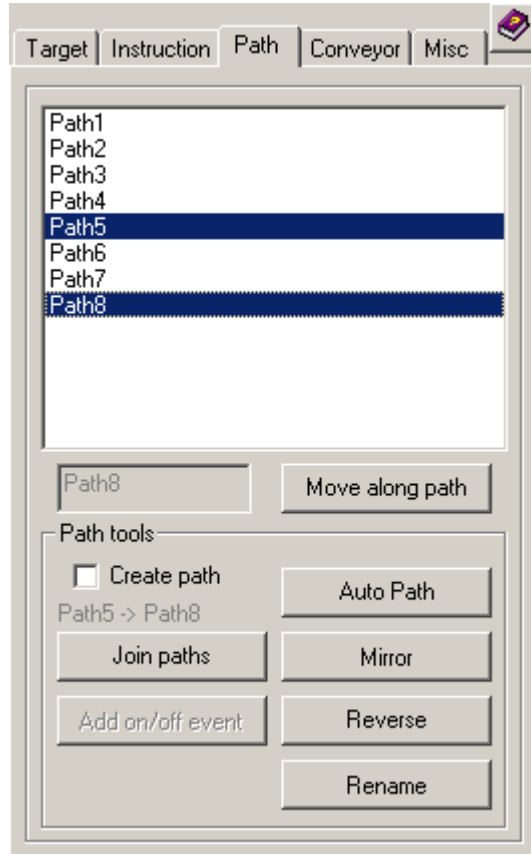

### Path list

The path list contains all paths in the active station. One or more paths can be selected.

Click on the path name to set the path as the active path. If more than one path is selected, the last selected path will be set as the active path.

Press the **DELETE** key on the keyboard to delete the selected path, including targets used in the path.

---

**Move along path**

Pressing the Move along path button executes the selected path.

---

**Create path**

If the Create path checkbox is checked, clicking on a surface will add a target to the active path. A new path is created if there is no active path.

If the **N** key on the keyboard is held down while you click on the surface, a new path will be generated and set as the active path. The target will be created in the new path.

Uncheck Create path to stop creating targets.

---

**Join paths**

Selecting two paths enables the 'Join Paths' button. Above the button you will also see how the paths will be joined. The path selected last will be added to the path selected first.

NOTE: This action can not be undone.

---

**Add on/off event**

Pressing the Add on/off event button will add event E1, brush <On brush> at the position of the first target in the path, and event E2, brush <Off brush> at the position of the last target in the path. The first and last target in the path will then be moved to extend the path by the distance specified in the Misc tab Setup parameter 'Distance from target to event'.

Selecting more than one path is possible, and the procedure will be applied to all paths as individual paths.

NOTE 1: On brush and Off brush are user selectable in the Misc tab.

NOTE 2: The target reference in the path must be of process type PaintWare

---

**Auto path**

Pressing the Auto path button will launch the Paintpath generation tool. See separate chapter for more detailed description.

---

**Mirror** Pressing the Mirror button launches the Mirror dialog box. See the Mirror chapter for more detailed description.

---

**Reverse** Pressing the Reverse button will reverse the direction of the selected path(s)

NOTE: If the path contains instructions other than PaintL, the reverse function will ask if they can be removed. The path will only be reversed if the instructions can be removed.

---

**Rename** Pressing the rename button will rename the selected path(s). The name will be set to <Prefix>Number<Postfix>. Number will start at 1 and count upwards.


NOTE 1: Prefix and Postfix are user selectable in the Misc tab.

NOTE 2: If a name is already used, Rename will increase Number until a valid name is found.

## Conveyor tab

### Introduction

The Conveyor tab contains tools for setting up and using conveyors.

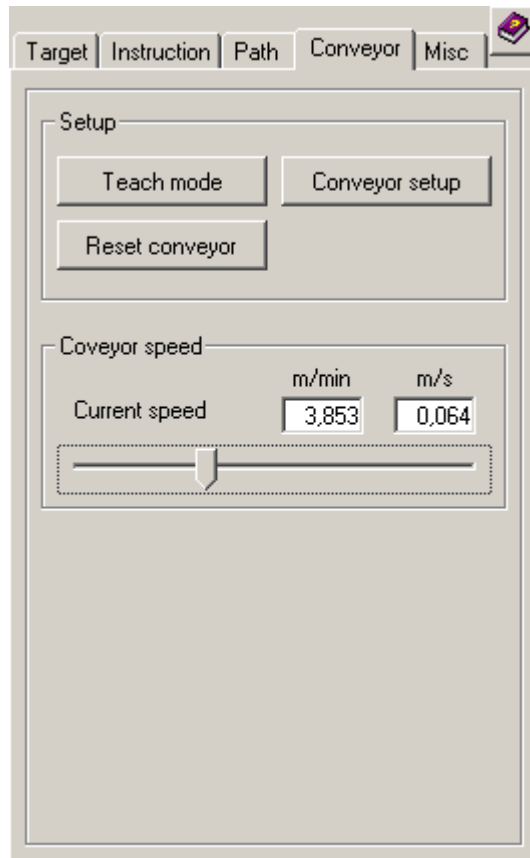

### Teach mode

Pressing the Teach mode button opens the Conveyor Teach Mode dialog box. When this dialog is active you can position the conveyor objects and test parts of the program without connecting to the conveyor.

Use the slider to position the conveyor to a suitable position.

**Conveyor setup**

Pressing the Conveyor setup button opens the conveyor setup dialog box of RS.

---

**Reset conveyor**

Pressing the Reset conveyor button will reset the conveyor.

---

**Conveyor speed**


Use the slider or enter a speed to adjust the conveyor speed during simulation. The speed can be adjusted from zero to the speed entered in the Current speed input box.



## Misc tab

### Introduction

The Misc tab contains miscellaneous tools that did not fit other places.

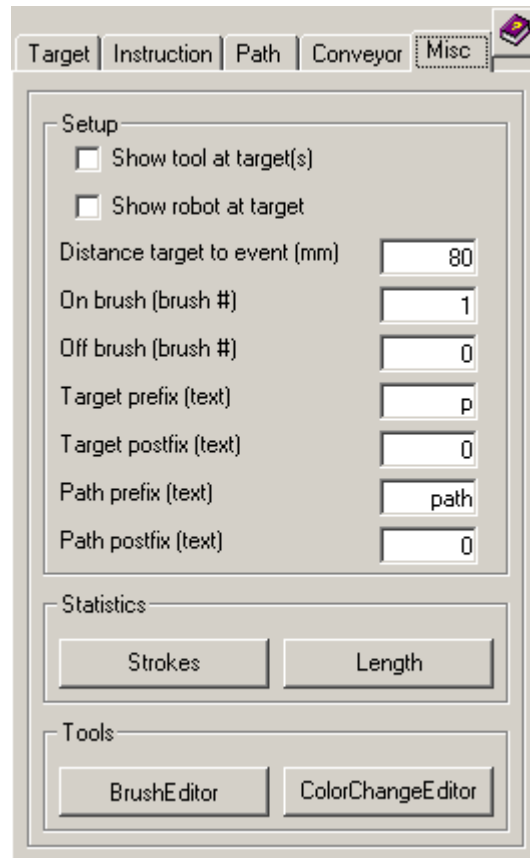

### Show tool at target

If the Show tool at target is checked, a copy of the mounted tool is shown at each selected target whenever it is selected. By stepping through the targets in the Target or Instruction tab it is easy to see how the tool orientation changes.

### Show robot at target

If the Show robot at target is checked, the robot is shown at each selected target whenever a target is selected. By stepping through the targets in the Target or Instruction tab it is easy to see how the robot position changes.

---


<b>Distance from target to event</b>	This is the distance you want from the first and last target in a path to the paint event. If the painting speed is low, the distance can be shorter resulting in a shorter path and lower cycle time. If the distance is too short, the robot must lower the painting speed in the start and/or end of the paint stroke resulting in too much paint in the object. If the painting speed is high, the distance may have to be increased to prevent the robot from lowering the painting speed in the start and/or end of the paint stroke. This parameter is used in the Add on/off event function.
<b>On brush</b>	This is the brush number that will be used as On brush in the Add on/off events function.
<b>Off brush</b>	This is the brush number that will be used as Off brush in the Add on/off events function.
<b>Target prefix</b>	This is the text that is used as prefix in renaming targets.
<b>Target postfix</b>	This is the text that is used as postfix in renaming targets.
<b>Path prefix</b>	This is the text that is used as prefix in renaming paths.
<b>Path postfix</b>	This is the text that is used as postfix in renaming paths.
<b>Strokes</b>	Pressing the Strokes button will show you the number of paint strokes in the selected path(s). The number of paint strokes is counted by counting the number of events with brush off.
<b>Length</b>	Pressing the Length button will show you the total length of the selected path(s).
<b>Brush Editor</b>	Pressing the BrushEditor button opens the BrushEditor. See separate chapter for more detailed description.
<b>ColorChange Editor</b>	Pressing the ColorChangeEditor button opens the ColorChangeEditor. See separate chapter for more detailed description.

---

## AutoPath

### Introduction

AutoPath is a tool to create paths on a part. The path is generated by scanning the surface of the graphics in the part, and creating a path on the surface.

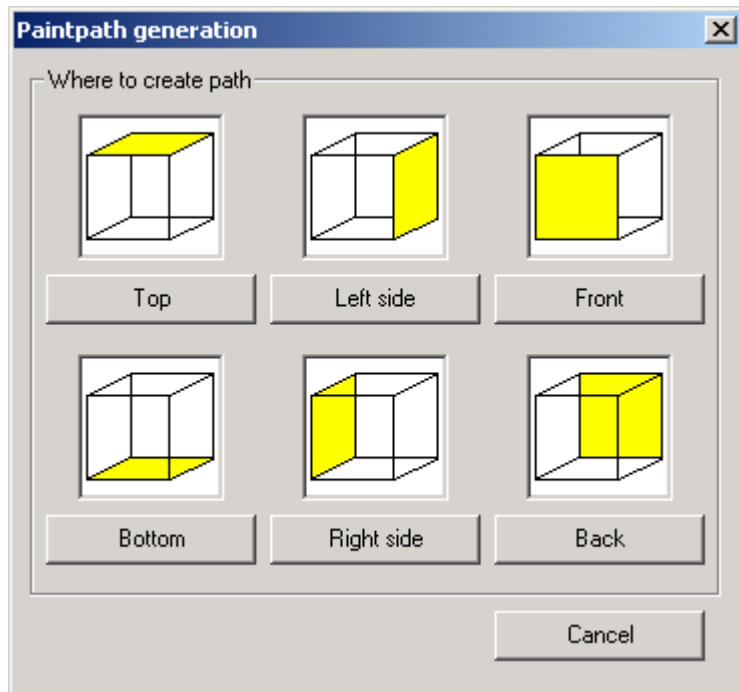

### Where to create the path

Select where on the object you want to create the path.

Top is defined as the side on the most positive Z direction in world coordinate system.

Bottom is defined as the side on the most negative Z direction in world coordinate system.


Left is defined as the side most positive in Y direction in world coordinate system.

Right is defined as the side most negative in Y direction in world coordinate system.

Front is defined as the side most positive in X direction in world coordinate system.

Back is defined as the side most negative in X direction in world coordinate system.


Middle is defined as the XZ plane of the world coordinate system. Please note the the compete part must be placed to the right/left of middle in order to create a path on it.

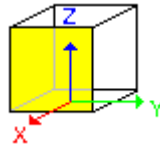

---


## Pitch

The parameter pitch is the distance you want between two parallel paint strokes.

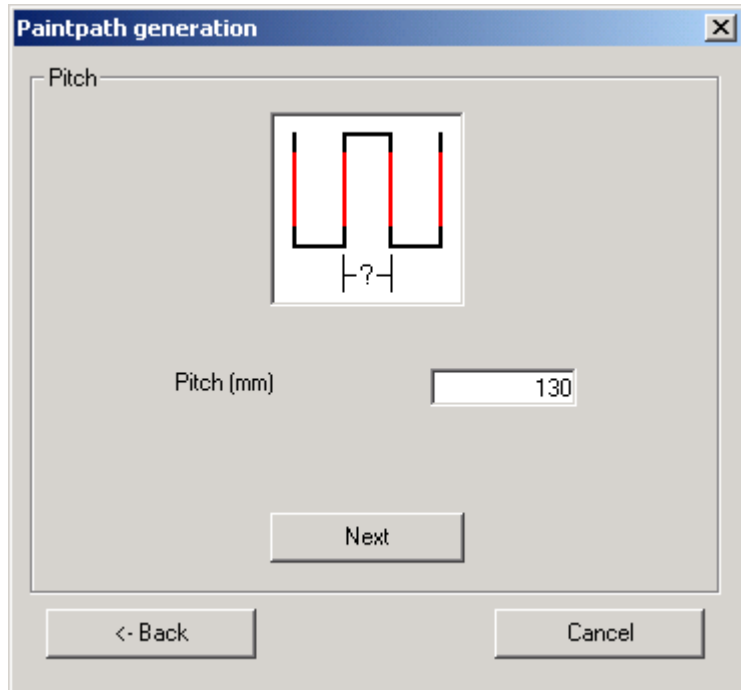

---


<b>Min stroke length</b>	This parameter is a filter that will remove any paths with a length less than the specified value. This is to prevent lots of small paths to be created on for example a long rod or pillar.
<b>Max surface angle</b>	This parameter is a filter to prevent too long paths. If the filter has a value of 1 degree, the path direction can only change 1 degree from the selected plane to be painted, meaning that a sphere will not be painted because only a very small portion of the sphere is parallel to the plane you want to paint. A filter value of 90 degrees will allow any path direction.
<b>Max surface deviation</b>	This parameter is a filter that lowers the number of targets in the path. If no deviation is allowed there would be infinite number of targets in the path. Typically a tool to surface distance deviation of +/-20-40 mm is allowed.
<b>Scan resolution</b>	This parameter is to speed up the path generation process. A lower number will give a more accurate path, but it will take more time to create the path. A scan resolution of 20mm means that the surface is checked for every 20mm.
<b>Overlap</b>	<p>Selecting the 50% overlap button will create paths only on the surface of the object, as typically done when a program with 50% overlap is made.</p> <p>Selecting the 75% overlap button will create one pass outside the object, as typically done when creating a program with 75% overlap.</p>

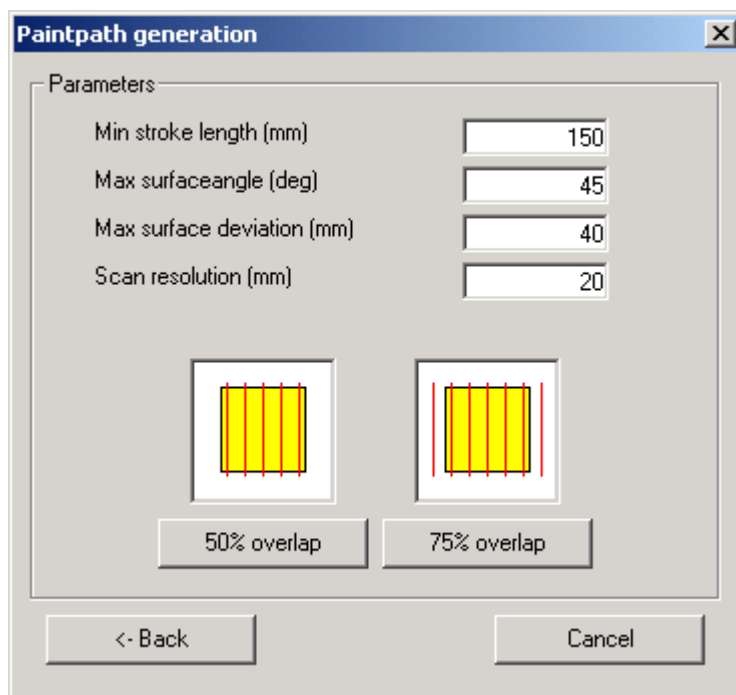

## BrushEditor

### Introduction

The Brush Editor is used to edit Brush Tables. It shows the current brush data in a grid and as a bargraph, and it gives you the possibility to select between the available brush tables in the brush file.

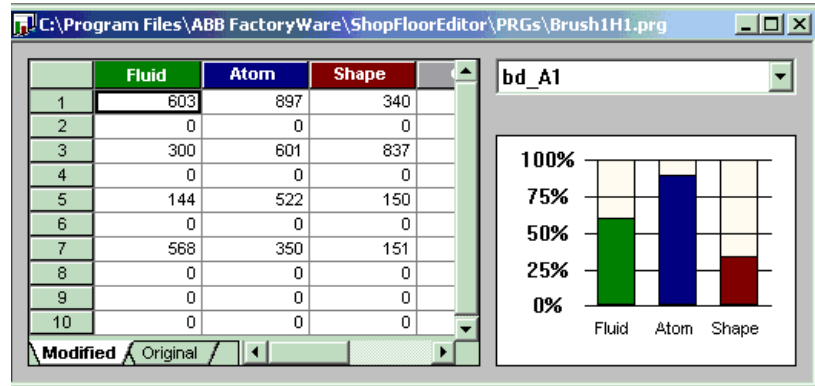

### BrushEditor

In the grid you can modify the brush values in a brush table by selecting the corresponding cell. Clicking the right mouse button will open a context menu.

In the context menu you can offset the selected values by value or by percent.

In the chart you can click the left mouse button on a bar, and then drag the bar up or down. The brush values of the selected brush number in the grid will then be modified.

The drop down list contains the alias names of all the brush tables in the brush file. If several brush tables has got the same alias name, all the brush tables with the same alias name will be modified.

NOTE: It is only possible to modify existing brush tables.

## ColorChangeEditor

### Introduction


The ColorChange Editor displays the color change sequences as graphical diagrams. This makes it easy to verify and edit the sequences, without displaying the Rapid code.

With the ColorChange Editor it is possible to create new color change programs as well as modifying existing ones.

The IO Diagram shows the currently selected IO sequence. On the left side the list of the IOs is shown. The right side represents the IO status in a signal diagram.

The IO diagram window uses colored lines for displaying different events in the color change sequence. The colors have the following meaning:

- GREEN Color change sequence is finished.
- BLUE An routine call is present at this position.
- ORANGE A wait flag is present at this position.

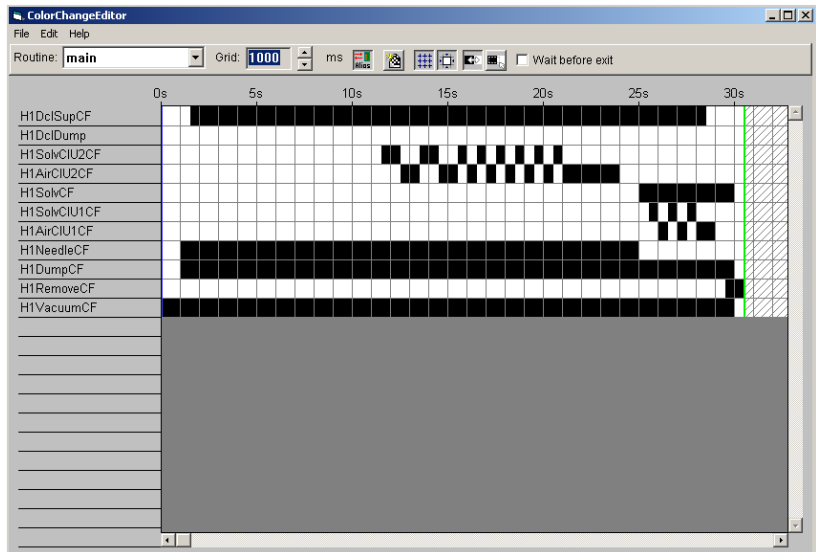

### ColorChange Editor

The colorchange sequence can be created and modified by clicking and dragging in the grid.



## Editing Bar

### **Routine Selection**

Selects the color change sequence for viewing and editing. The drop down list contains all sequences of the currently opened file.

### **Grid Size**

Sets the size of one grid step in milliseconds. Larger values will zoom out and smaller value will zoom in the view.

### **Show Alias Names**

Shows the alias names or the physical IO names of the signal.

### **New Routine**

In order to add color change routines click on the new routine button. The program will ask for the routine name.

### **Show Grid**

Shows or hides the grid in the view.

### **Snap to Grid**

Enables or disables the snap functionality. If snap to grid is disabled, color change editor will work in 10ms steps.

### **Edit Mode**

Sets the window to edit mode. Add new events and change existing is possible in edit mode.

### **Selection Mode**

Sets the window to selection mode. In selection mode, copy, paste, insert cells, delete and delete cells are possible.


### **Wait Before Exit**

If the box is checked, the routine will exit after the last color change instruction is executed. If the box is not checked, the routine may be finished before the whole color change sequence is executed.

---

## Configure IO List

You may edit the IO configuration by selecting the File, Edit IO Configuration. To create a new IO Configuration, select File Open and type a non-existing name when you are asked to select the IO Configuration.

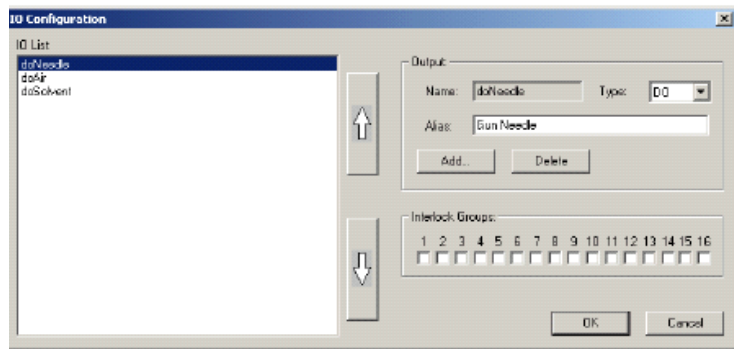

The IO Configuration Dialog box is used to edit the signals used for color change sequences. Following parameters are available:

- 1 **IO List** shows a list of all defined signals for the color change editor.
- 2 **Output, Name** shows the name of the selected IO signal.
- 3 **Type** defines the IO type. Following types are available:
  - DO - Digital output
  - GO - Group output
  - AO - Analog output
- 4 **Alias** defines the alias name for the signal.
- 5 **Add** adds a signal to the signal list
- 6 **Delete** deletes the selected signal from the signal list
- 7 **Interlock Groups** defines the interlock group. Only one signal out of a interlock group can be different from 0.

---

## Other

ColorChange Editor uses the SetTMSignal instruction for creating the color change sequences. To give more flexibility it is possible to add routine calls and wait flags into the color change program.


---

## Mirror

### Introduction

This function is used to mirror a path.

You can mirror the path in the XZ or YZ plane. You can also specify a mirror offset.

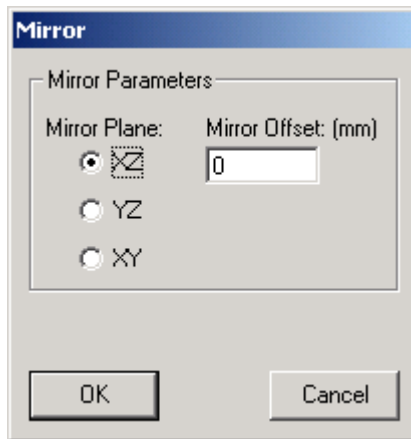

---

### Mirror

- Select the path(s) to mirror and press the Mirror button
- Select mirror plane and offset
- Press the OK button

**NOTE 1:** Mirror will replace the original path with the mirrored path. Make a copy of the original paths before executing the mirror function if you want to keep the original path.



## **Chapter 2 Display Options**

## The Display Option button bar

### Introduction

This button bar allows the user to easily select what should be visible on the path.



### The buttons

Push the desired button to toggle object visibility.

**Display/Hide Robtargets.** You use this function to turn on or off the displaying of robtargets.

**Display/Hide Robtargets Name.** You use this function to turn on or off the names of the robtargets.

**Display/Hide Path.** You use this function to turn on or off the displaying of the path.

**Display/Hide Routine Names.** You use this function to turn on or off the displaying of the routine names.

**Display/Hide Brush.** You use this function to turn on or off the displaying of the paint process data. The brush button will show/hide both the color on the path and the events

**Display/Hide Trigger Positions.** You use this function to turn on or off the displaying of the trigger positions.

**Display/Hide Workobject.** You use this function to turn on or off the displaying of the workobject associated to the selected point.

**Display/Hide Zone Data.** You use this function to turn on or off the displaying of zone size. The size of the zone is derived from the name of the zone data, not the actual data used by the controller.

NOTE 1: If the path is invisible, the brush and event will also be invisible.

## **Chapter 3 Paint related functions**

## **Motion instructions**

---

### **Introduction**

The process template functionality provides support (including synchronization) for arbitrary motion instructions. A template for PaintWare is included in the RobotStudio installation, and is added to the default template during installation of Paint PowerPac.

---

### **Usage**

The motion instruction, including all possible arguments (such as E1 etc.) can be edited in the "Edit instruction" dialog.

For arguments of a specific type (such as eventdata), all variables of that type declared in the controller are included in a combo box.



## Action instructions

---

### Introduction

Currently, process templates do not support action instructions. Instead, the instructions that RobotStudio recognizes are hard-coded. SetBrush, UseBrushTab, WaitWobj and DropWobj have been added to this set.

---

### Usage

Action instructions can be added to a path via the "Insert action instruction" menu command. This brings up a dialog with a set of action instructions with pre-defined arguments (such as ConfJ \Off). For other arguments, use the advanced tab, and set the desired arguments.

## Eventdata

---

### Introduction

Eventdata is the PaintL argument that controls where and how to change brushes during the motion.


---

### Usage

The events will be visible in the browser beneath the corresponding path instruction. It will be editable through the property browser and (for PaintL) the edit instruction dialog. Creating an eventdata can also be done in the edit instruction dialog.

---

### Graphical editing

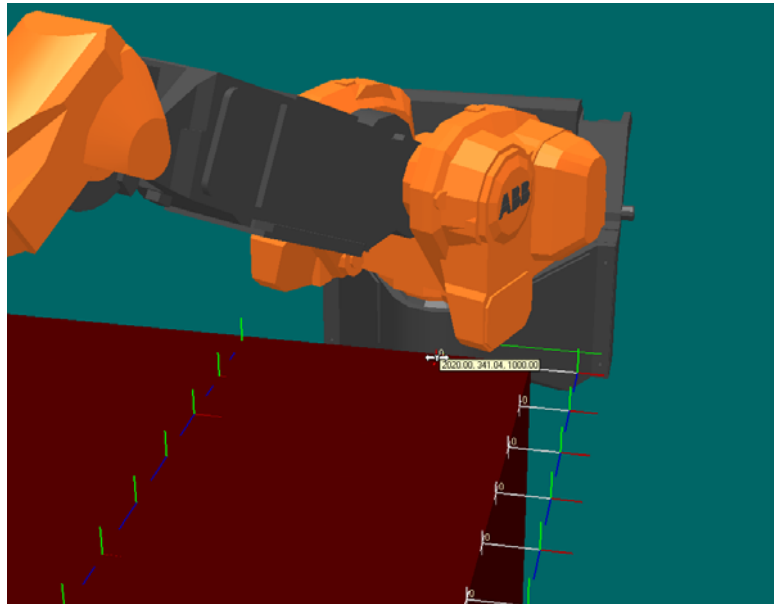

It is possible to drag an event along the path between two targets.

Set selection level Target/Frame and choose a Freehand Movement (X, Y or Z).

Click on an event and drag it along the path. It is important that you choose the correct Freehand Movement, or you could select all three.

## Conveyor Tracking

### Introduction

---

When simulating conveyor tracking in RobotStudio, the conveyor works in the same way as in a real cell. RobotStudio will simulate synchronization switches, encoders and other peripheral equipment once the conveyor is created and properly configured.

In addition to the positions and distances that controls the conveyor tracking in a real robot cell, the conveyor tracking in RobotStudio also has positions that determines where to start and stop moving parts along the conveyor.

Please refer to the Robot Studio 3.1. Users Guide for detailed information on how to configure and use the Conveyor Tracking functionality in Robot Studio.



## **Chapter 4 How to use Paint PowerPac**

---

## Build a station

### Purpose

Example how to create a simple station

---

### Goal

Create a and set up a simple station with IRB5400-02 and a gun.

---

### Create a new station

On the **File** menu, click **New Station**.

---

### Import a robot

On the **File** menu, point to **Import** and then click **Library**.

Browse to the **\Library\Robots\** folder.

Select the *IRB5400-02.rlb* file.


Click **Open**.

---


### Start the controller

In the **Object Browser** right click the robot **IRB5400\_02**.

On the context menu, click **Start Controller**.

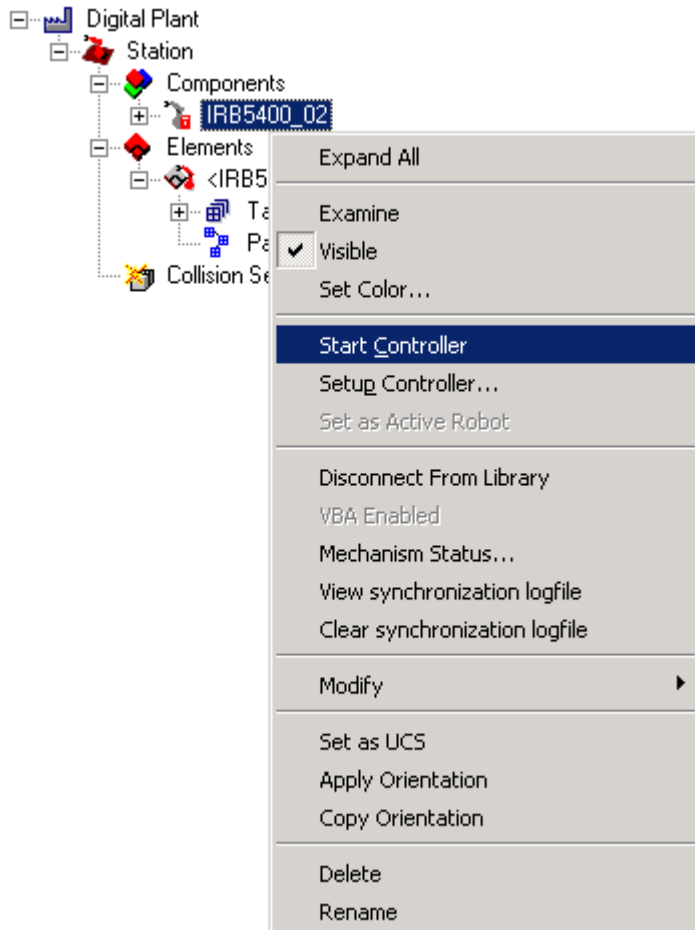

Wait until the Status bar turn green

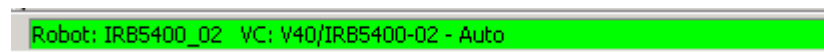

### Import a tool

On the **File** menu, point to **Import** and then click **Library**.


Browse to the **\Library\Tools\** folder.

Select the *PaintGun.rlb* file.


Click **Open**.

**Attach the tool**

Drag, with the left mouse button, the tool to the robot and drop.

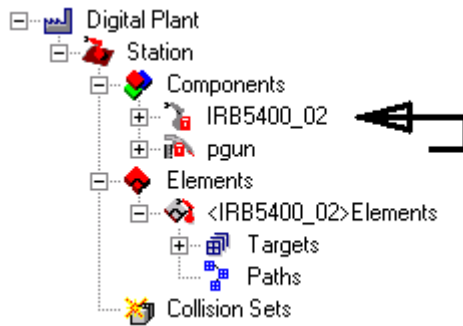

A dialog window opens up.

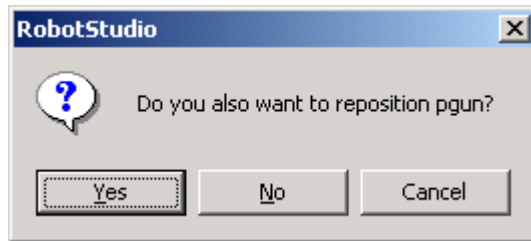

Click **Yes**.

---

**Station complete**

The station is now complete, and the robot is ready to move. Save this station as *Simple\_IRB5400-02.stn*.



## Create a simple program

---

**Purpose**

Example how to create a simple program.

---

**Goal**

Create and execute a simple paint program.

---

**Start**

Open the station *Simple\_IRB5400-02.stn* created in chapter **How to use Paint PowerPac**, paragraph **Build a station**.

Change active process template to PaintWareL

Create sphere at 1500,1000,1000, radius 500

In the **Path** tab, click **Auto Path**.

A new dialog box opens.

Click on the sphere to select it.

Click **Top**.

Click **Front to rear**.

Click **Next**.

Click **50% overlap**.

Click **Start**.


Wait until the **Paintpath generation** dialog box closes.

Click on the **Path** tab to refresh the list of paths in the station.

In the graphics view, right click on the sphere.


In the context menu, click on **Visible** to hide the sphere.

Select Path3 and Path 5 in the **Path** tab list.

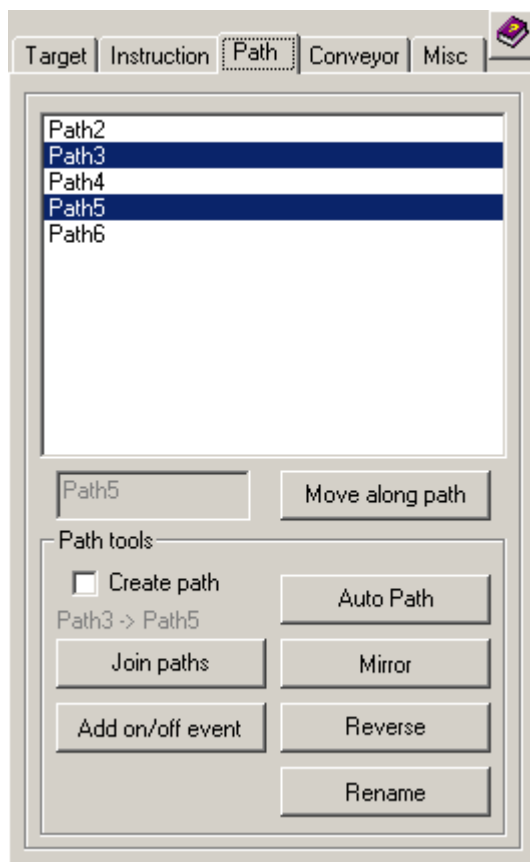


Click **Reverse** in **Path tools** in the **Path** tab.


In the **Path** tab, select all paths. (Ctrl+a)

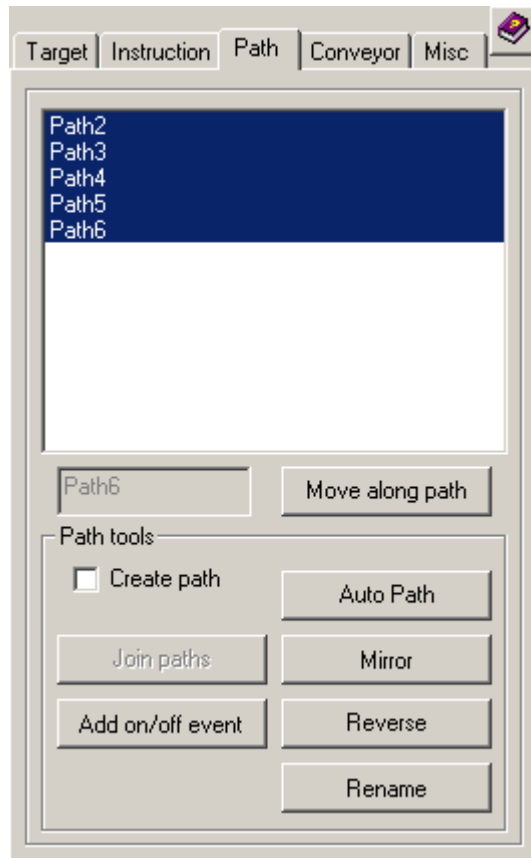


Click **Add on/off events** in **Path tools** in the **Path** tab.  
Select *Path2* in the path list.

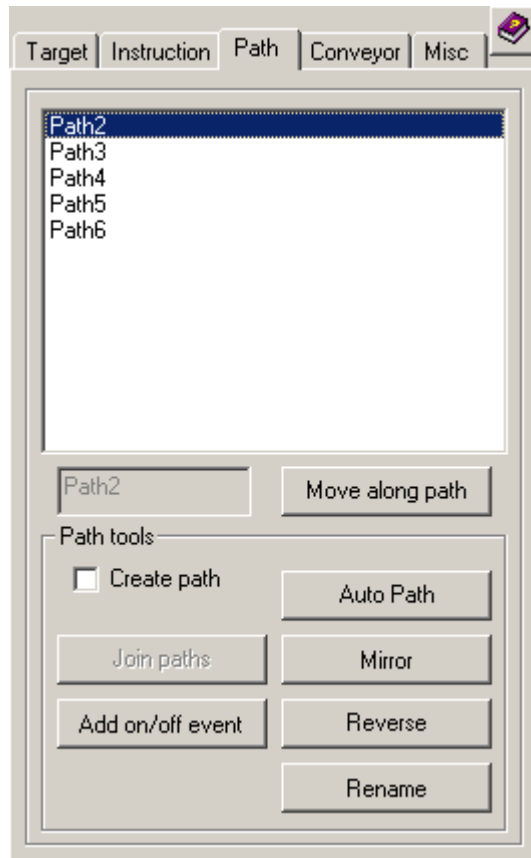

- Select *Path3* in the graphics view.
- Click **Join paths** in **Path tools** in the **Path** tab.
- Select *Path4* in the graphics view.
- Click **Join paths** in **Path tools** in the **Path** tab.
- Select *Path5* in the graphics view.
- Click **Join paths** in **Path tools** in the **Path** tab.
- Select *Path6* in the graphics view.
- Click **Join paths** in **Path tools** in the **Path** tab.
- Select *Path2* in the path list.
- Select all targets in the target list in the **Target** tab.
- Click **Rotate** in **Target tools** in the **Target** tab.

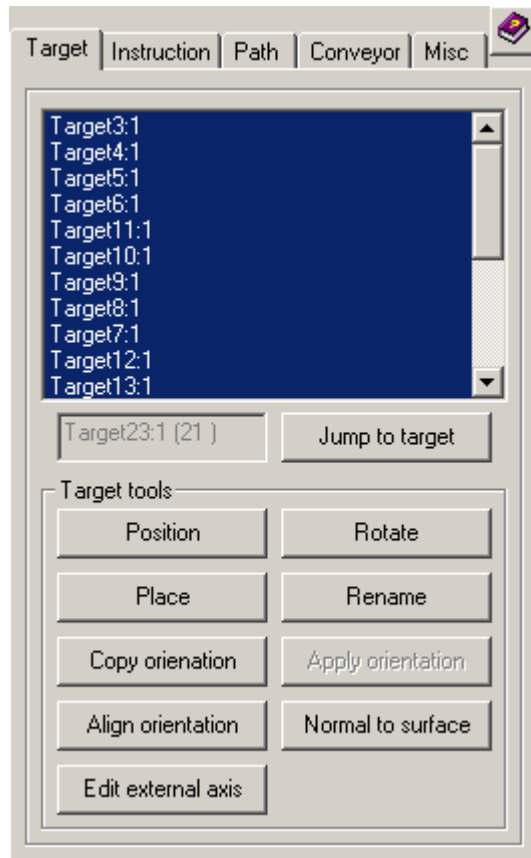

A new dialog box opens.

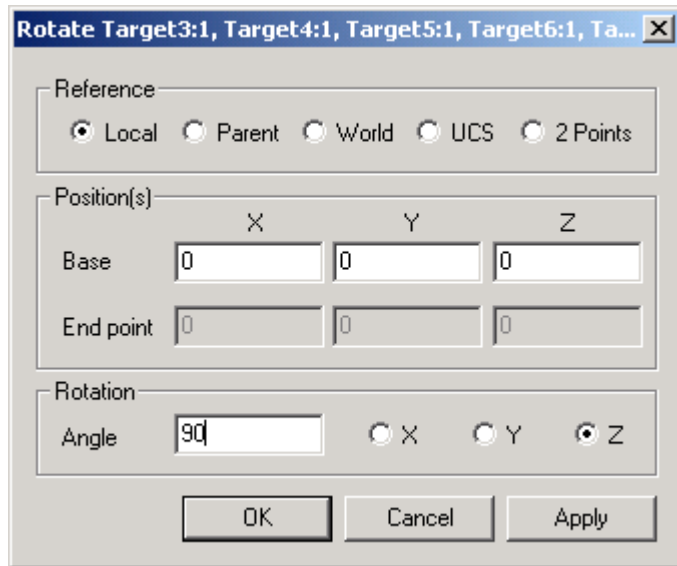

Enter 90 in the **Angle** field of **Rotation**.

Click **OK**.


The dialog box closes.

Select *Path2* in the path list in the **Path** tab.

Click **Move along path** in the **Path** tab.

The robot moves along the path.

## How are things connected

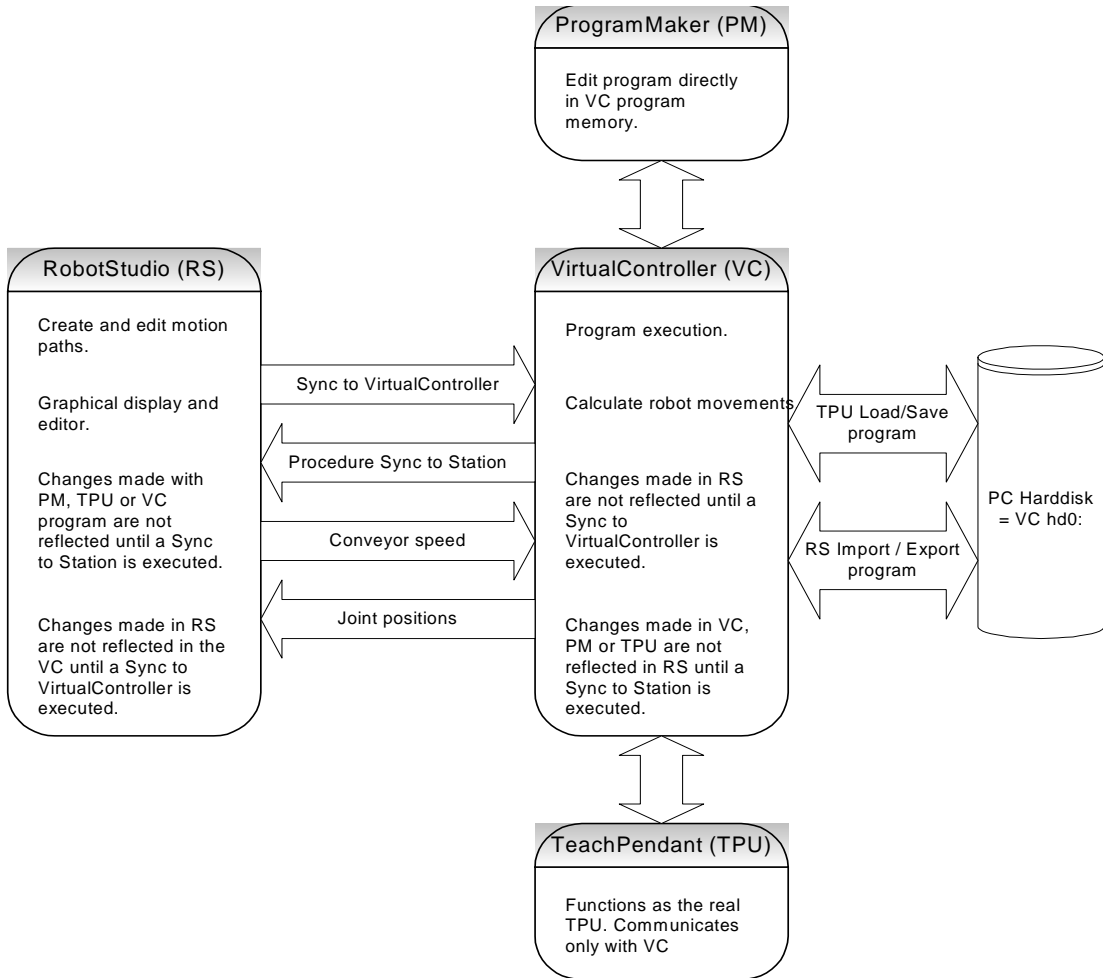

## Set up a robot with external axis

### Purpose

Example how to set up a robot with external axis

### Import a robot


On the **File** menu, point to **Import** and then click **Library**.  
Browse to the **\Library\Robots\** folder.  
Select the *IRB5400-03.rlb* file.  
Click **Open**.

### Import the external axis

On the **File** menu, point to **Import** and then click **Library**.  
Browse to the **\Library\External Axes\** folder.  
Select the *T5403\_L.rlb* file.  
Click **Open**.

### Position the robot

In the **Object Browser** select **IRB5400\_03**.  
On the **Modify** menu click **Rotate**.

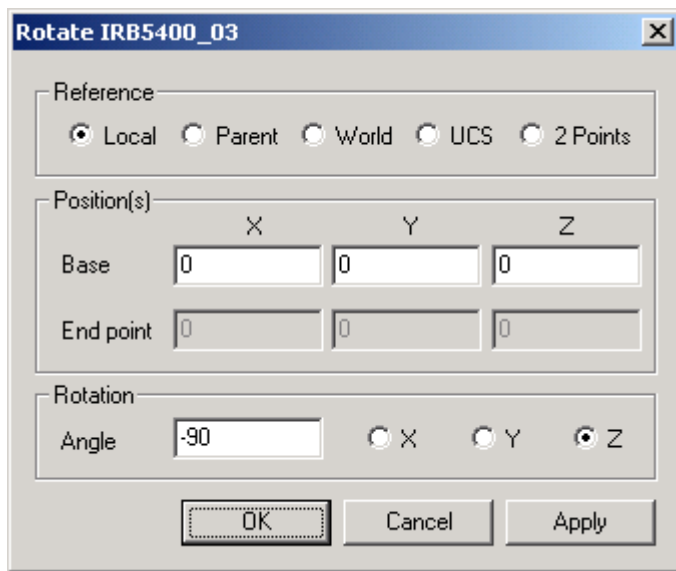


Enter -90 in the **Angle** field of **Rotation**.  
Click **OK**.




**Attach the robot to the external track**

Drag, with the left mouse button, the *IRB5400\_03* to the *T5403\_L* and drop.

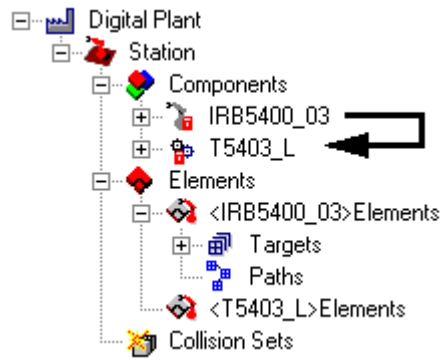

A dialog window opens up.

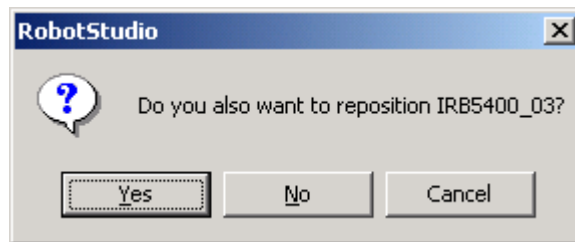


Click **Yes**.

**Start the controller**

In the **Object Browser** right click the robot **IRB5400\_03**.

On the context menu, click **Start Controller**.

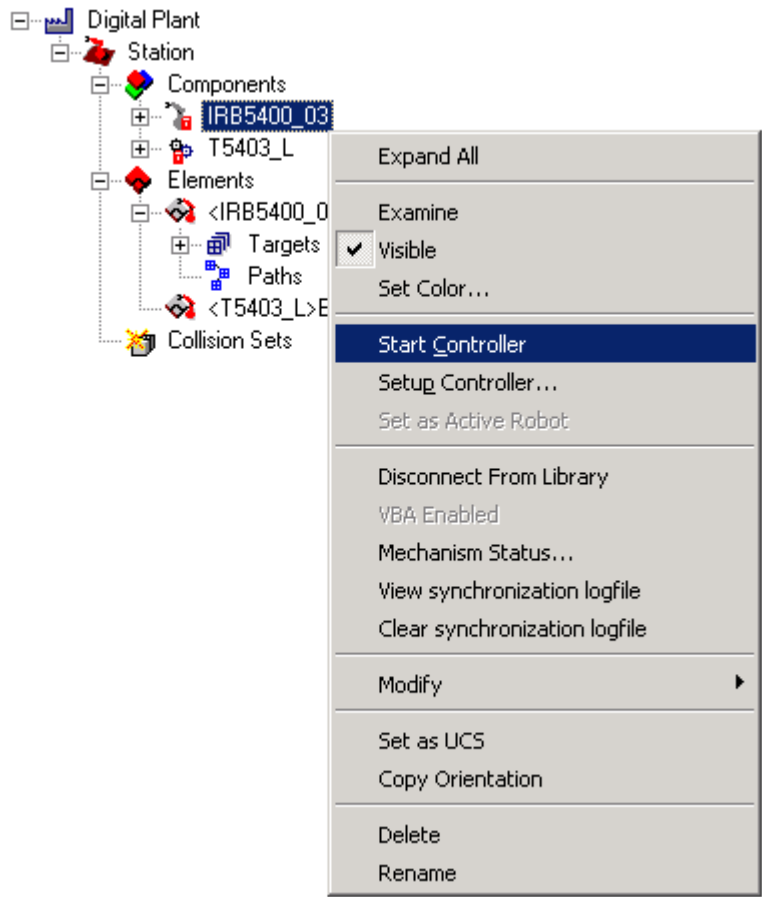




Wait until the statusbar turn green

Robot: IRB5400\_03 VC: V40/IRB5400-03 - Auto


On the **Mechanism** menu, point to **Controller** and then click **Setup**.  
A new dialog box opens.

In the **Setup for IRB5400\_03** dialog, click the **Ext. Axis** tab.

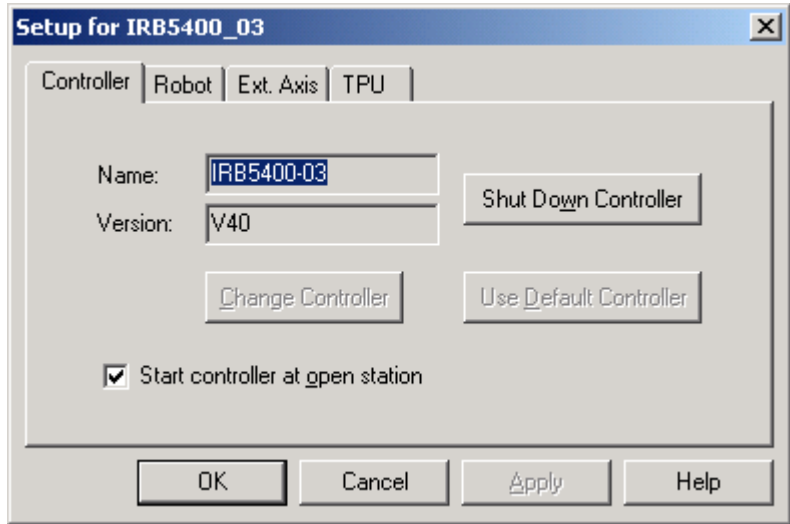


Click the **Set Up** external axis mapping button.

A new dialog box opens.

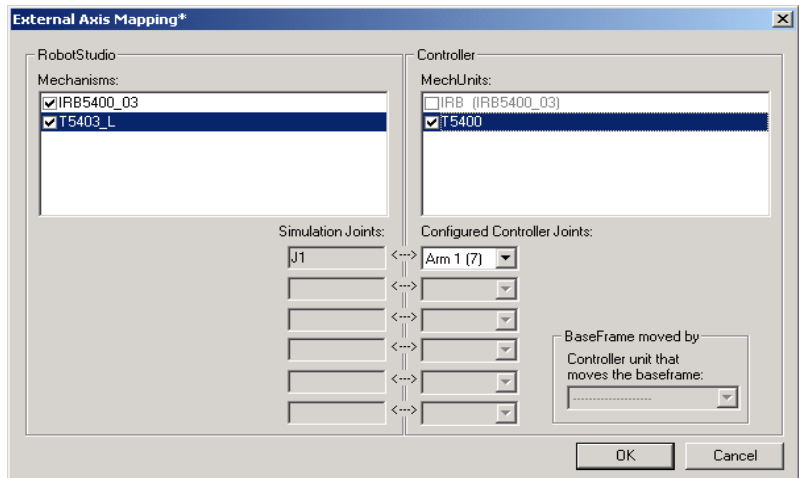

In the **Mechanisms** box select *T5403\_L* and then in the **MechUnits** first select *T5400* and check the *T5400* checkbox.


Click **OK**.

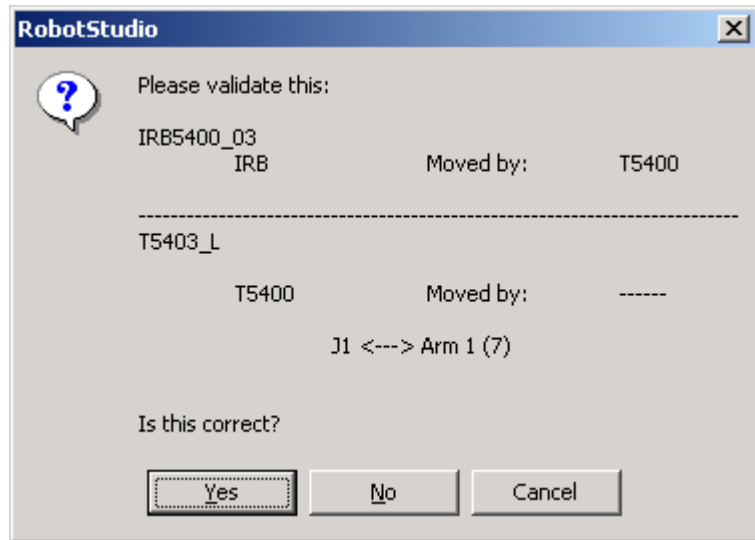

Click **Yes**.

The dialog closes.

Click the **Robot** tab.

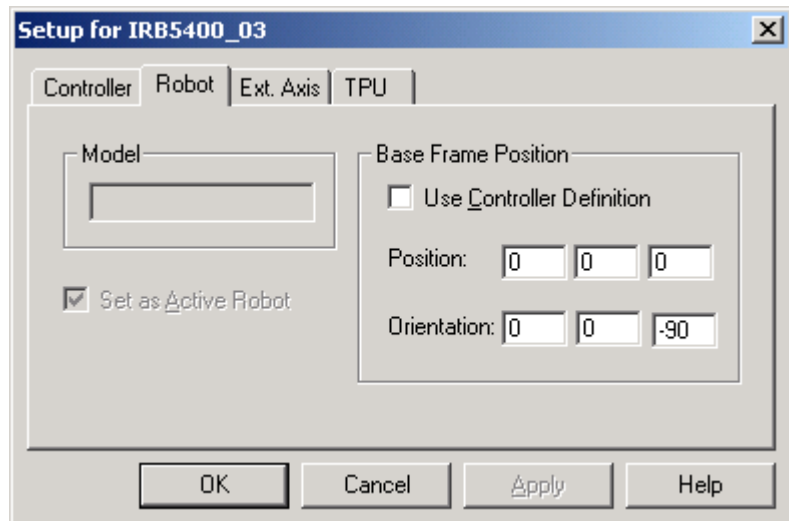

Uncheck the **Use Controller Definition** checkbox

Enter -90 in the **Orientation** Rz input box. (Because the robot is rotated -90 degrees in Rz)

Click **OK** in the **Setup for IRB5400\_03** dialog.

The **VirtualController** will now restart to activate the changes in baseframe.



The robot is now ready to use.

## Configure the VirtualController for a Paint robot

---

### Purpose

Example how to set up a virtual paint robot.

---

### Setup the controller

In the **Object Browser** right click the robot **IRB5400\_02**.

On the context menu, click **Setup Controller**.

In the Setup dialog box, click on **Change Controller**.

In the Virtual Robot Browser dialog box, click **Create**.

Enter **System Name** *IRB5400-02-Test*.

Select **Program Revision** *3HAC6811-2.00 RW 672 System Pack 4.0*, or later.

Check the **Use Paint Options** checkbox.

Click the **Insert Virtual Key** button.

Click **OK**.

Go thru Robinstall

Click in **IRB5400-02-Test** in the systems

Click **Set Current Robot**.

Click **Close**.

Click **OK**.

