


NOTES:

1. All installations in hazardous locations must comply with requirements listed by certification drawings related to this equipment. Check for the certification number on the nameplate and follow the specified requirements of this equipment.
2. To access termination board, remove the Rear End Cap of the unit (a 1/16th Hex Set Screw must be loosened to remove the Cap).

Hazardous Area

Non-Hazardous Area

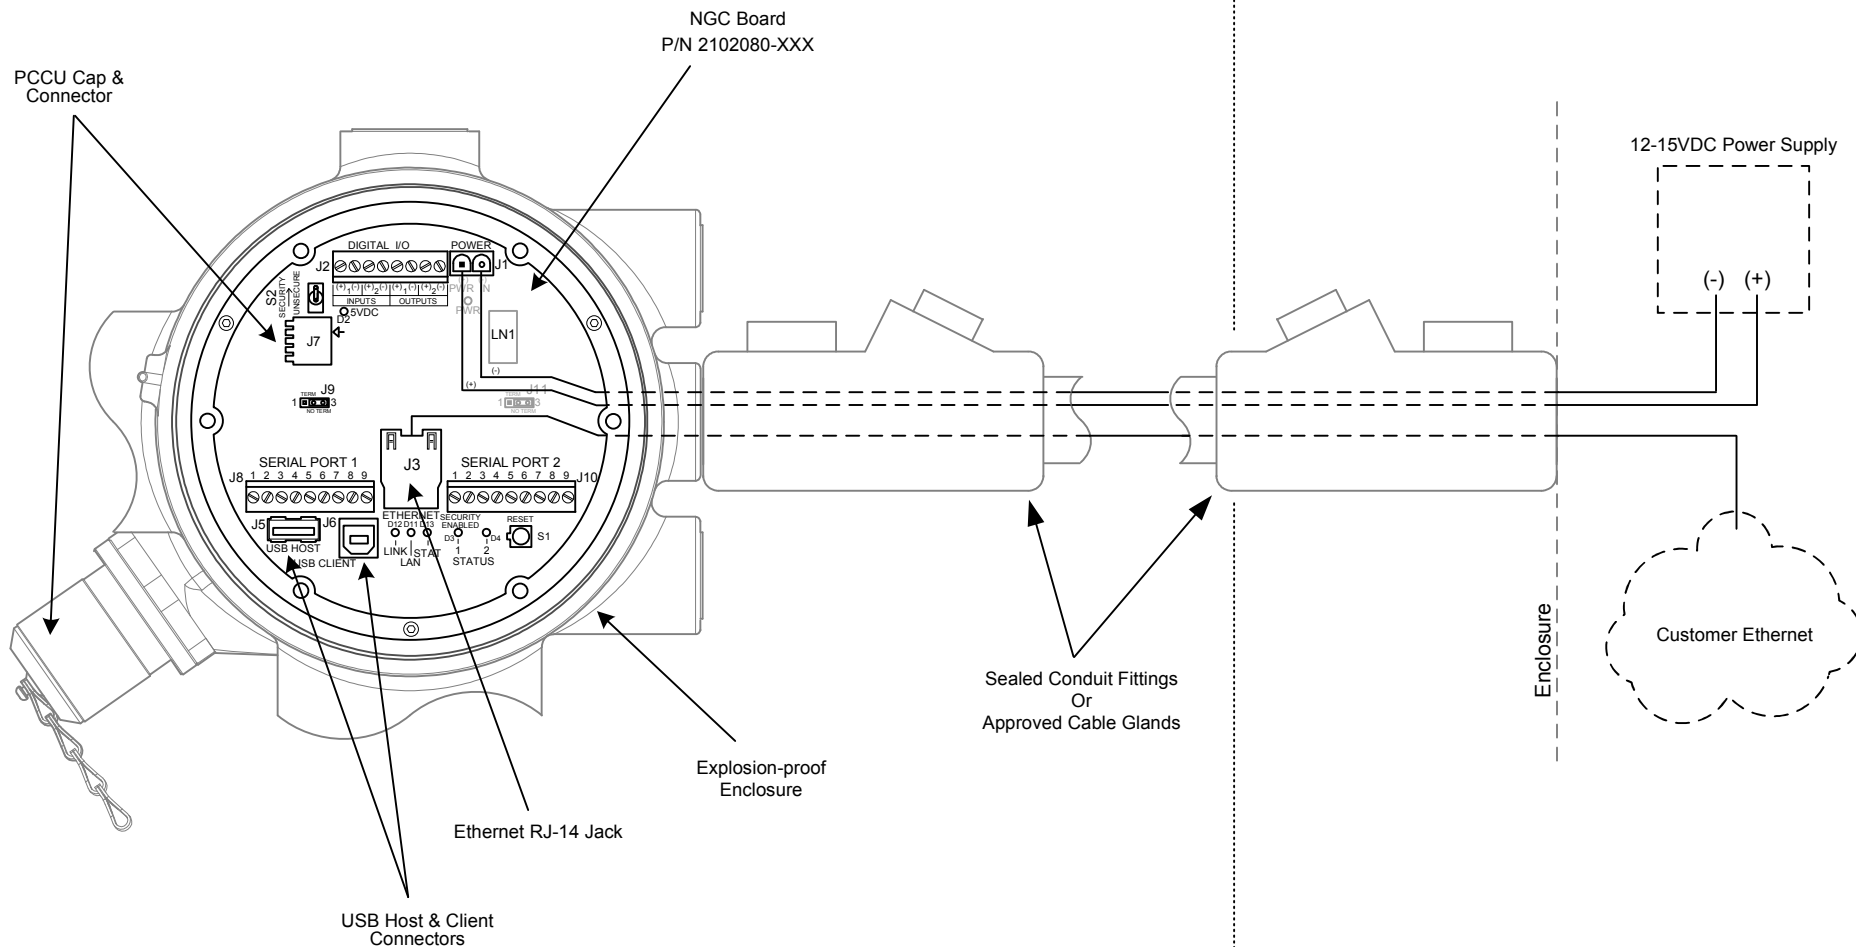

3. For 'XXX' on the Part Number (P/N):

Refer to the Hardware Revision Control Document, or Refer to the Software Revision Control Document.



TOTALFLOW
Products

ACTION
D19381

DOC TYPE
UD

TITLE
NGC GENERIC WIRING GUIDE

DWG NO.
2102393

REV
AB

SHEET
1 OF 1