



COPYSTICK User Guide

COPYSTICK

For fast and accurate repeat drive programming

Compatibility:

This Option is suitable for use on the following product range:
ACS250 Drives

Note:

Parameters can only be copied between drives of the same product range and power rating (size).

Part No. 3AUA0000135608

Model No. RCCS-01

ABB Oy
AC Drives
P.O. Box 184
FI-00381 HELSINKI
FINLAND
www.abb.com/drives

82-STICK-ABB_V1



Drive display message to show the status for certain operation

PASS-r : COPYSTICK read / stored the drive parameters successfully.

DS-Loc : COPYSTICK is locked; attempting to read parameter from the drive with COPYSTICK lock switch on.

FA iL-r : COPYSTICK failed to read parameter from the drive.

PASS-t : COPYSTICK transferred parameters to the drive (write parameters to drive) successfully.

FA iL-P : The power rating of the parameters saved in the COPYSTICK does not match the power-rating of the drive to be programmed.

FA iL-t : COPYSTICK failed to transfer parameter set to drive.

no-dAt : No parameter data saved in the COPYSTICK.

dr-Loc : Drive parameters have been locked and cannot accept new parameter settings. Unlock drive parameter set in group 16.

dr-rUn : Drive is running and cannot accept new parameter settings. Stop drive operation before programming.

tYPE-E : Parameters for Drive type saved in COPYSTICK do not match the drive type to be programmed (write operation only).

tYPE-F : COPYSTICK currently doesn't support the drive type to be programmed.



COPYSTICK User Guide

COPYSTICK

For fast and accurate repeat drive programming

Compatibility:

This Option is suitable for use on the following product range:
ACS250 Drives

Note:

Parameters can only be copied between drives of the same product range and rating (size).

Part No. 3AUA0000135608

Model No. RCCS-01

ABB Oy
AC Drives
P.O. Box 184
FI-00381 HELSINKI
FINLAND
www.abb.com/drives

82-STICK-ABB_V1



Drive display message to show the status for certain operation

PASS-r : COPYSTICK read / stored the drive parameters successfully.

DS-Loc : COPYSTICK is locked; attempting to read parameter from the drive with COPYSTICK lock switch on.

FA iL-r : COPYSTICK failed to read parameter from the drive.

PASS-t : COPYSTICK transferred parameters to the drive (write parameters to drive) successfully.

FA iL-P : The power rating of the parameters saved in the COPYSTICK does not match the power-rating of the drive to be programmed.

FA iL-t : COPYSTICK failed to transfer parameter set to drive.

no-dAt : No parameter data saved in the COPYSTICK.

dr-Loc : Drive parameters have been locked and cannot accept new parameter settings. Unlock drive parameter set in group 16.

dr-rUn : Drive is running and cannot accept new parameter settings. Stop drive operation before programming.

tYPE-E : Parameters for Drive type saved in COPYSTICK do not match the drive type to be programmed (write operation only).

tYPE-F : COPYSTICK currently doesn't support the drive type to be programmed.

