


—  
INSTALLATION INSTRUCTION

## Terminal set

### OZXL1

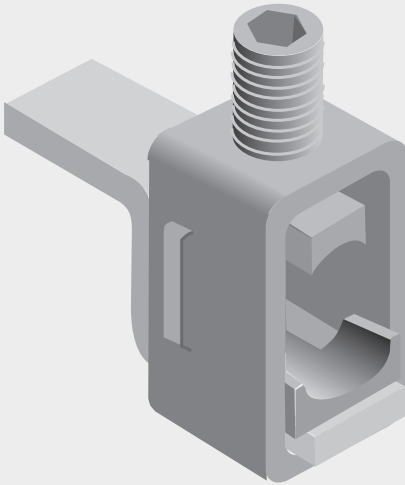




# OZXL1

OT100...125\_  
OTP\_125\_

OZXL1  
OZXL1/1

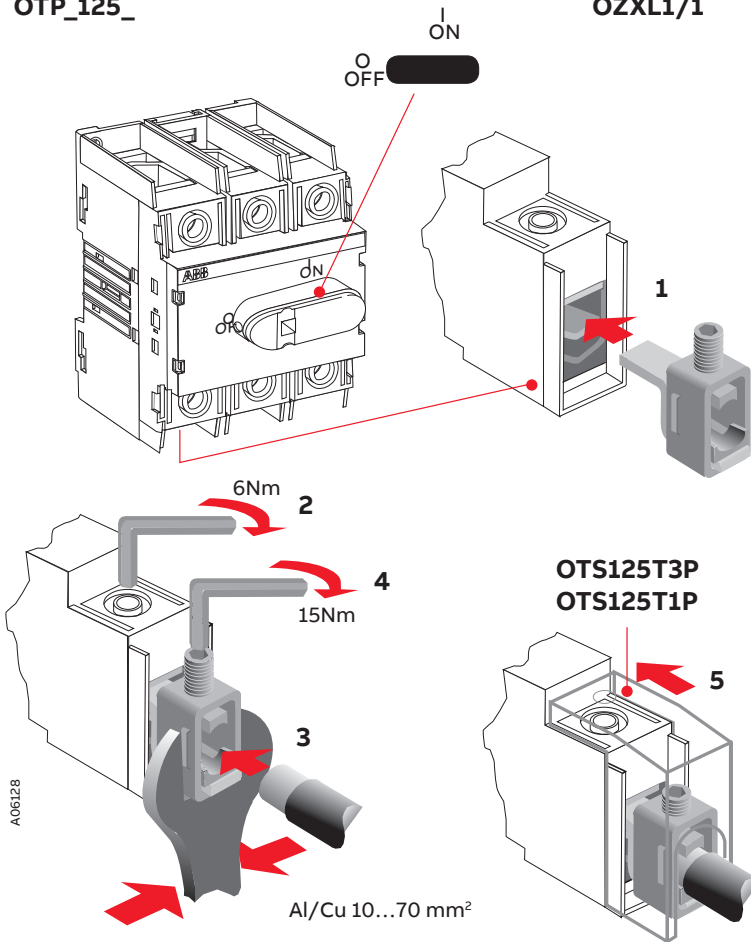



---

## Contact us

### **ABB Oy**

P.O. Box 622  
FI-65101 Vaasa  
Finland

**[abb.com/lowvoltage](http://abb.com/lowvoltage)**