



—
INSTALLATION INSTRUCTION

Auxiliary contact

OA1G01-OA1G10, OA7G10, OA8G10

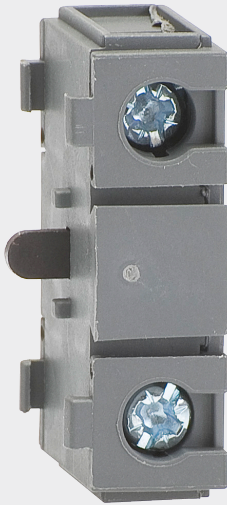


Auxiliary contacts

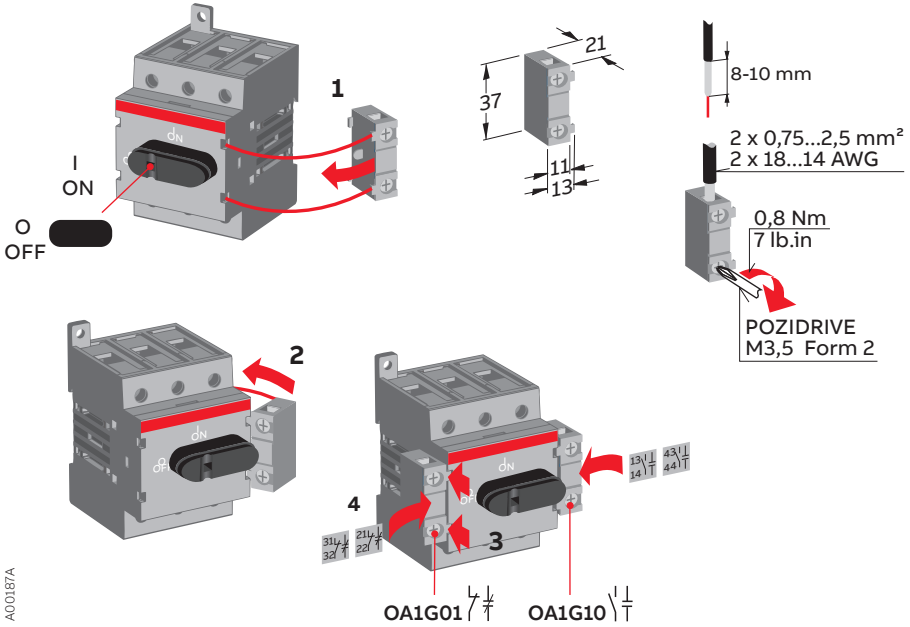










A00187A

Auxiliary contacts

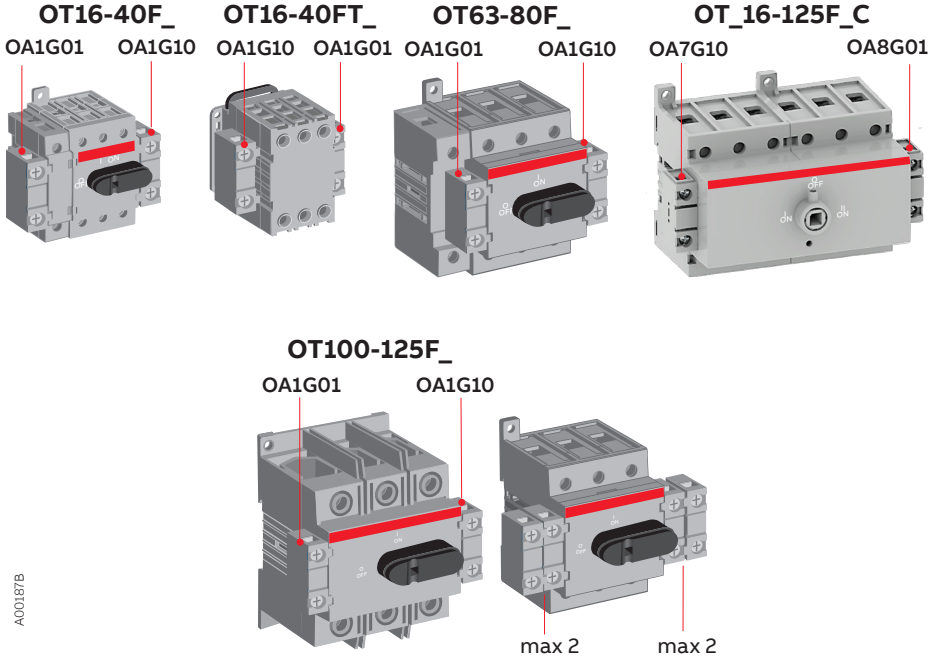


A00187B

   
OA1G10-OA3G01

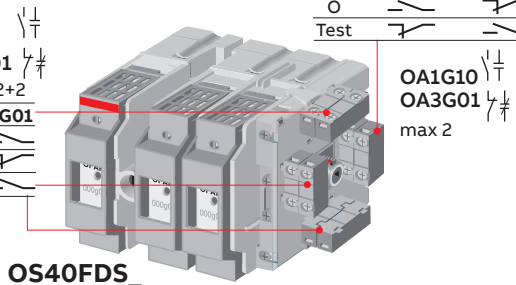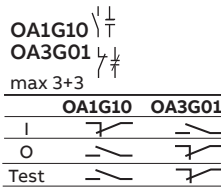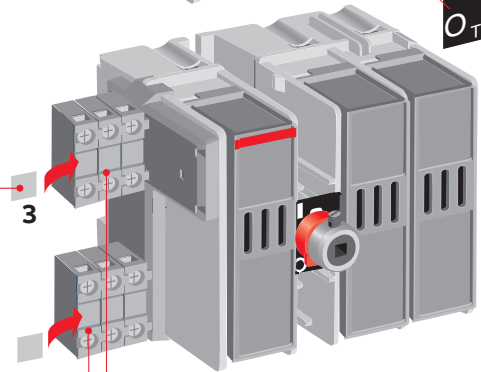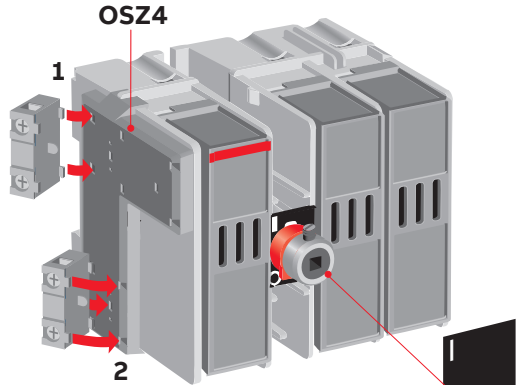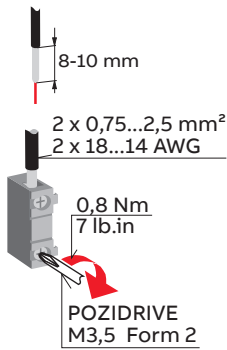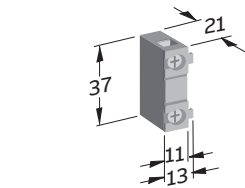

OA1G10-OA3G01, OA5G10-OA6G01

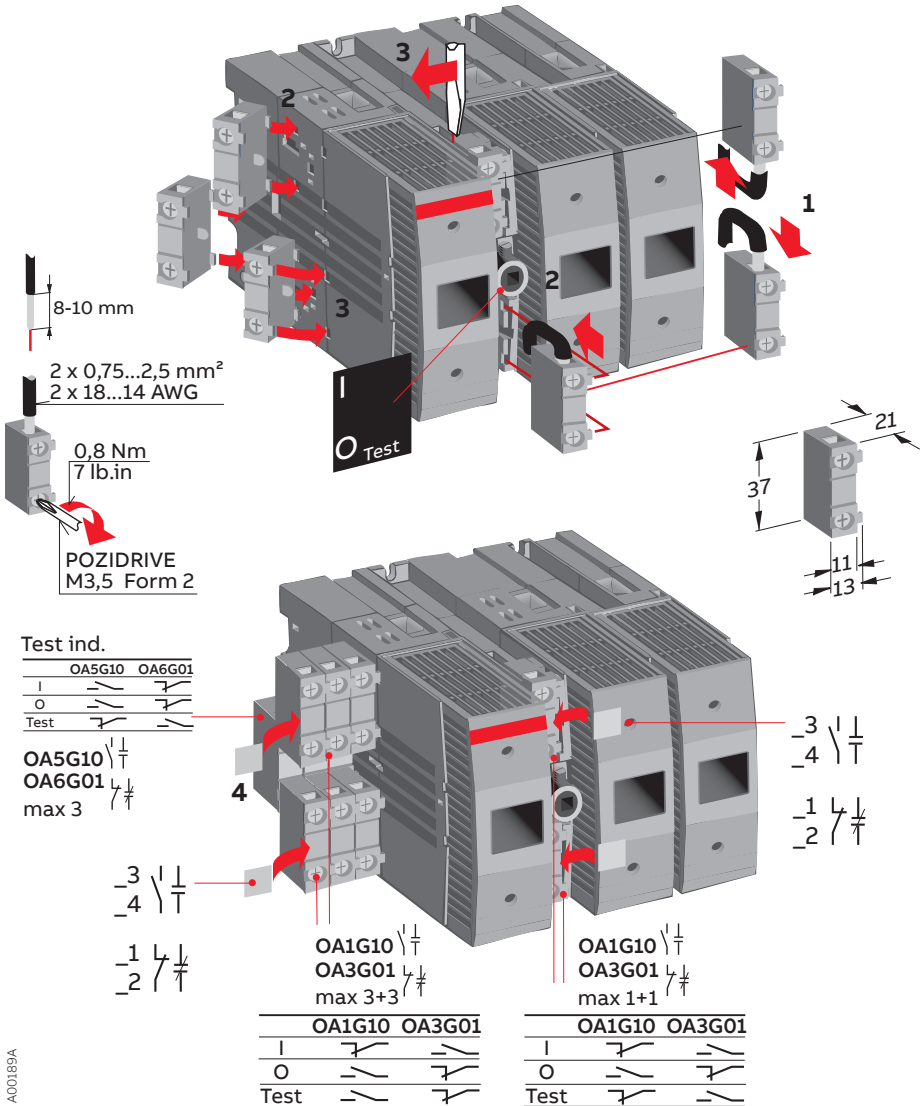

OA1G10-OA3G01

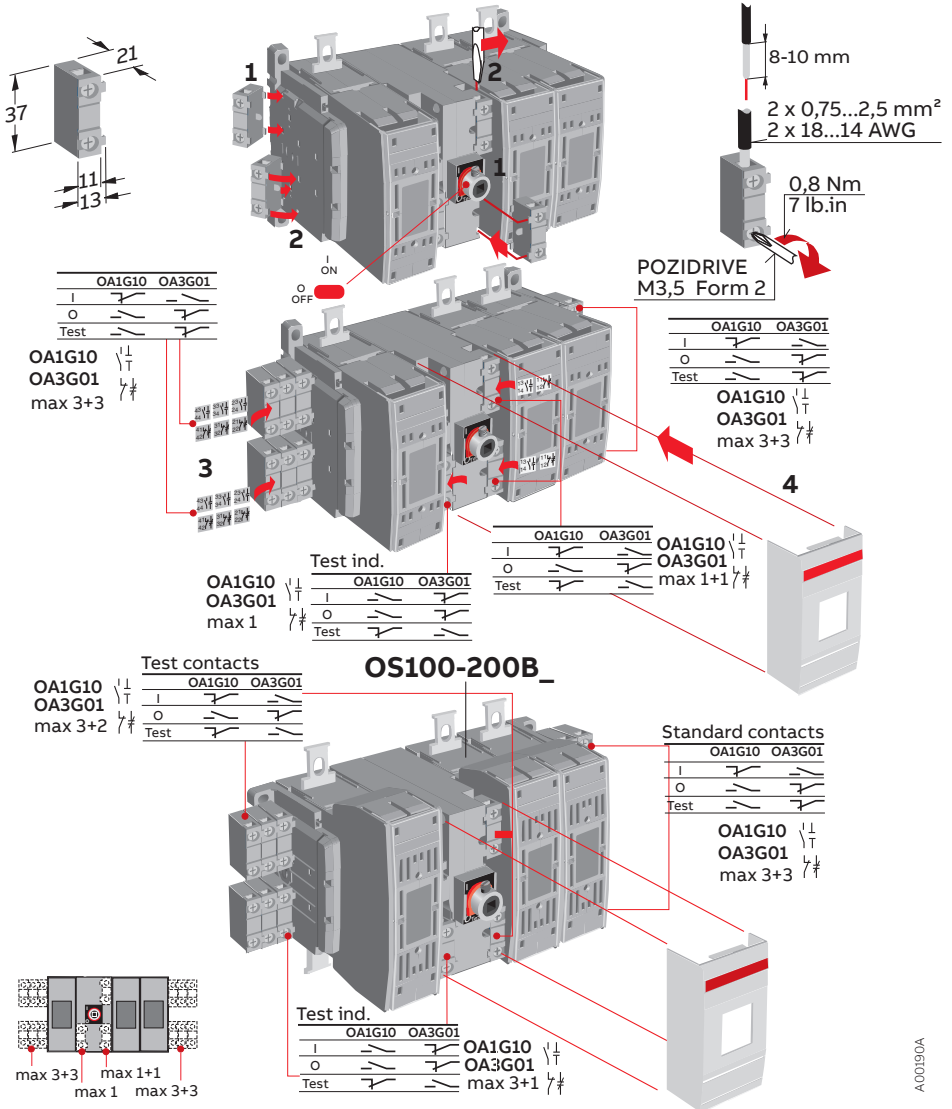



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage