

NOTES:

1. LED Indicators:

Run LED – Blinking indicates on-board PIC running.
 Activity LED – Blinking indicates buss activity.
 Mode LED – 00 = Normal 01 = Reset

2. LED Operation:

Register 0.7.7 = 0 – Power Save Mode (LEDs off when MMI disconnected)
 Register 0.7.7 = 1 – LEDs on all the time.

3. Must have a Communications application instantiated for each COMM Module

