


NOTES:

1. Prior to any installation in a classified hazardous location, verify installation methods by the Control Drawing referenced on the product's name tag.
2. To access termination board, remove Power I/O Junction Box front cover.


Hazardous Area

Non-Hazardous Area

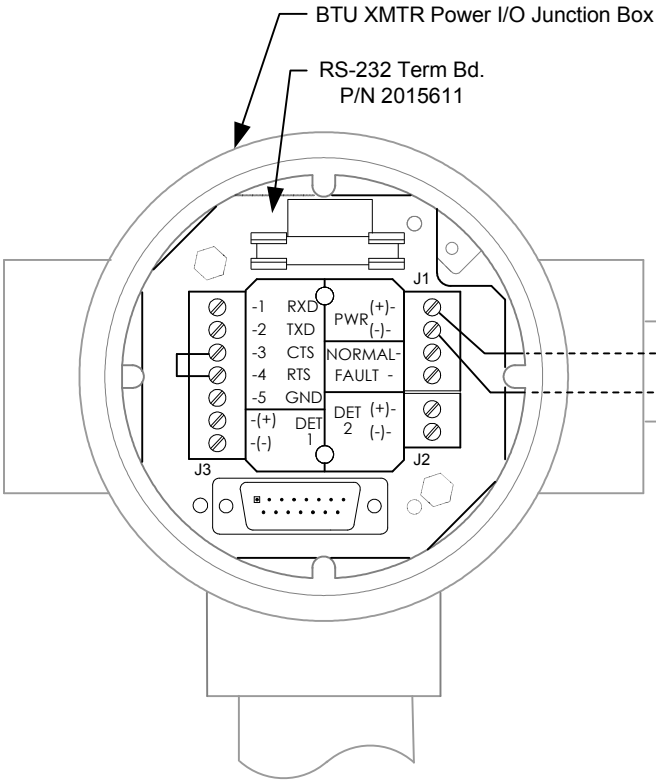

Sealed Conduit Fittings
Or
Approved Cable Fittings

SEE NOTE 3

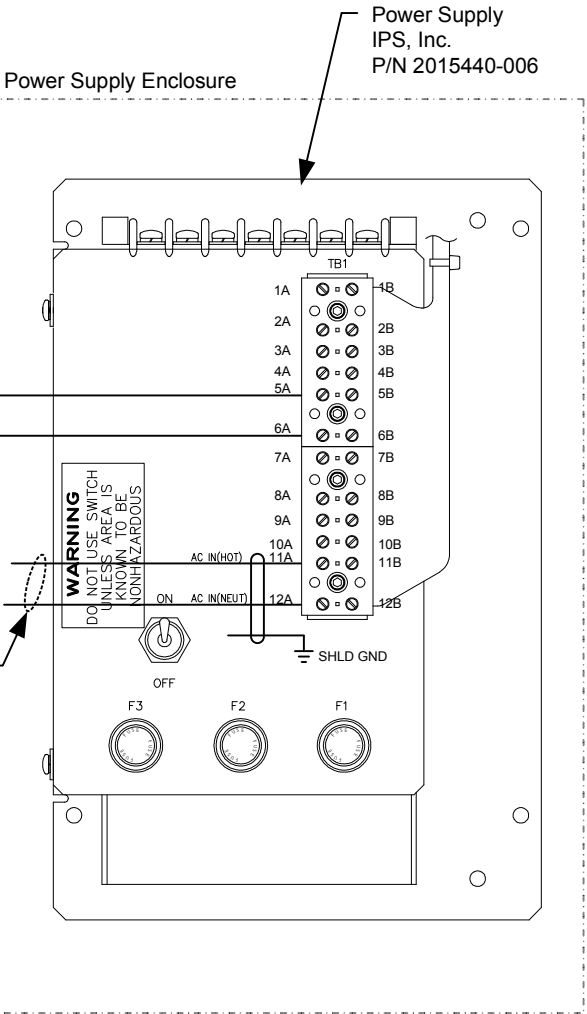

3. Wire size is a function of the distance between the BTU XMTR and the DC Power Supply. Using 2.5 Amps as the maximum current draw, calculate an adequate wire size so that the voltage measured at the BTU XMTR's Power I/O Junction Box is a minimum of 12.5 Volts.

REF: N/A

ABB	TOTALFLOW Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
		L17579	UD	BTU 8000\8100 TO IPS 120VAC POWER SUPPLY	2102275	AA	1 OF 1