 


DRAWING NUMBER  
SPWD072A



DO NOT SCALE



| ISS |  | DATE       | CHANGE         | APPROVAL | ZONE |
|-----|--|------------|----------------|----------|------|
| A   |  | 01/05/2015 | ORIGINAL ISSUE |          |      |

\* WIRE LENGTH AS MARKED ON THE BALLAST

Blue NEUTRAL  
Brown SWITCHED ACTIVE  
EARTH

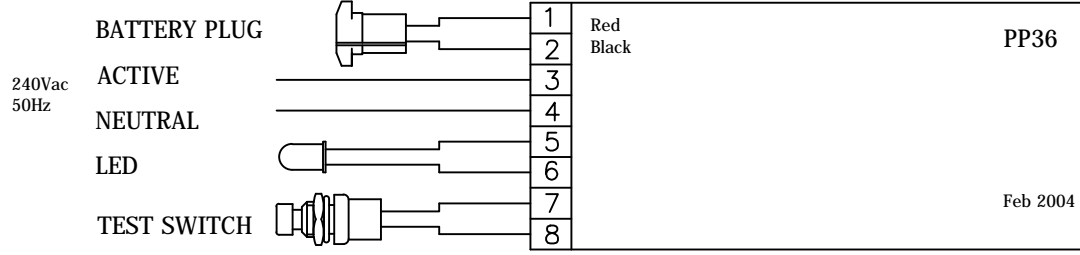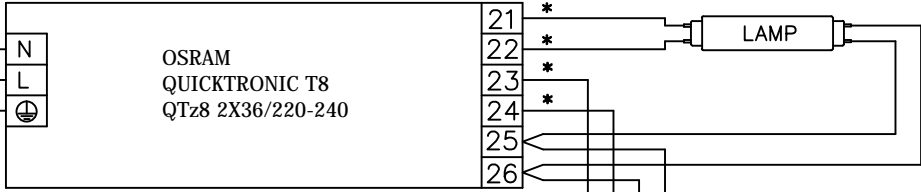

BATTERY CONNECTION NOT SHOWN

**NOTES:**

1. Wiring status: Draft - Not tested. The ballast / power pack combination has not been wired up and tested to confirm functional compatibility.
2. This wiring diagram is provided in good faith and the best of our knowledge at the time of publication. Thomas and Betts does not give any warranty or representation as to the accuracy, reliability or completeness of the information. Thomas and Betts shall not be liable for any loss or damage arising in any way from or in connection with any information provided or omitted, or from anyone acting or refraining to act in reliance on this information.
3. Changes to ballast specification by the manufacturer are beyond our control and may cause adverse effect on the performance, EMC issue and compatibility issue. Consult Thomas and Betts for further advise.

|                     |            |  |        |                |            |
|---------------------|------------|--|--------|----------------|------------|
| DRAWN               | G.K.Grover | <b>Thomas &amp; Betts</b><br><small>A Member of the ABB Group</small><br><small>ABN 62074810898 23A NYRANG ST, LIDCOMBE NSW 2141 AUSTRALIA</small> |        |                |            |
| CHECKED             | -----      | <b>TITLE</b><br>Wiring diagram using PP36 with OSRAM QUICKTRONIC QTz8 2X36/220-240 Electronic Ballast  |        |                |            |
| APPROVED            | G.K.Grover | USED ON  |        | DRAWING NUMBER | SHEET SIZE |
| DATE:               | 01/05/15   |  |        | SPWD072A       | A3         |
| DRAWING STD AS 1100 |            | SCALE  | N.T.S. | SHEET          | 1 OF 1     |