


NOTES:

1. WARNING: This drawing does not illustrate completely the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.
2. WARNING: Using a non-factory RS232 data cable between UCI2 unit may result in damage and may void system warranty.

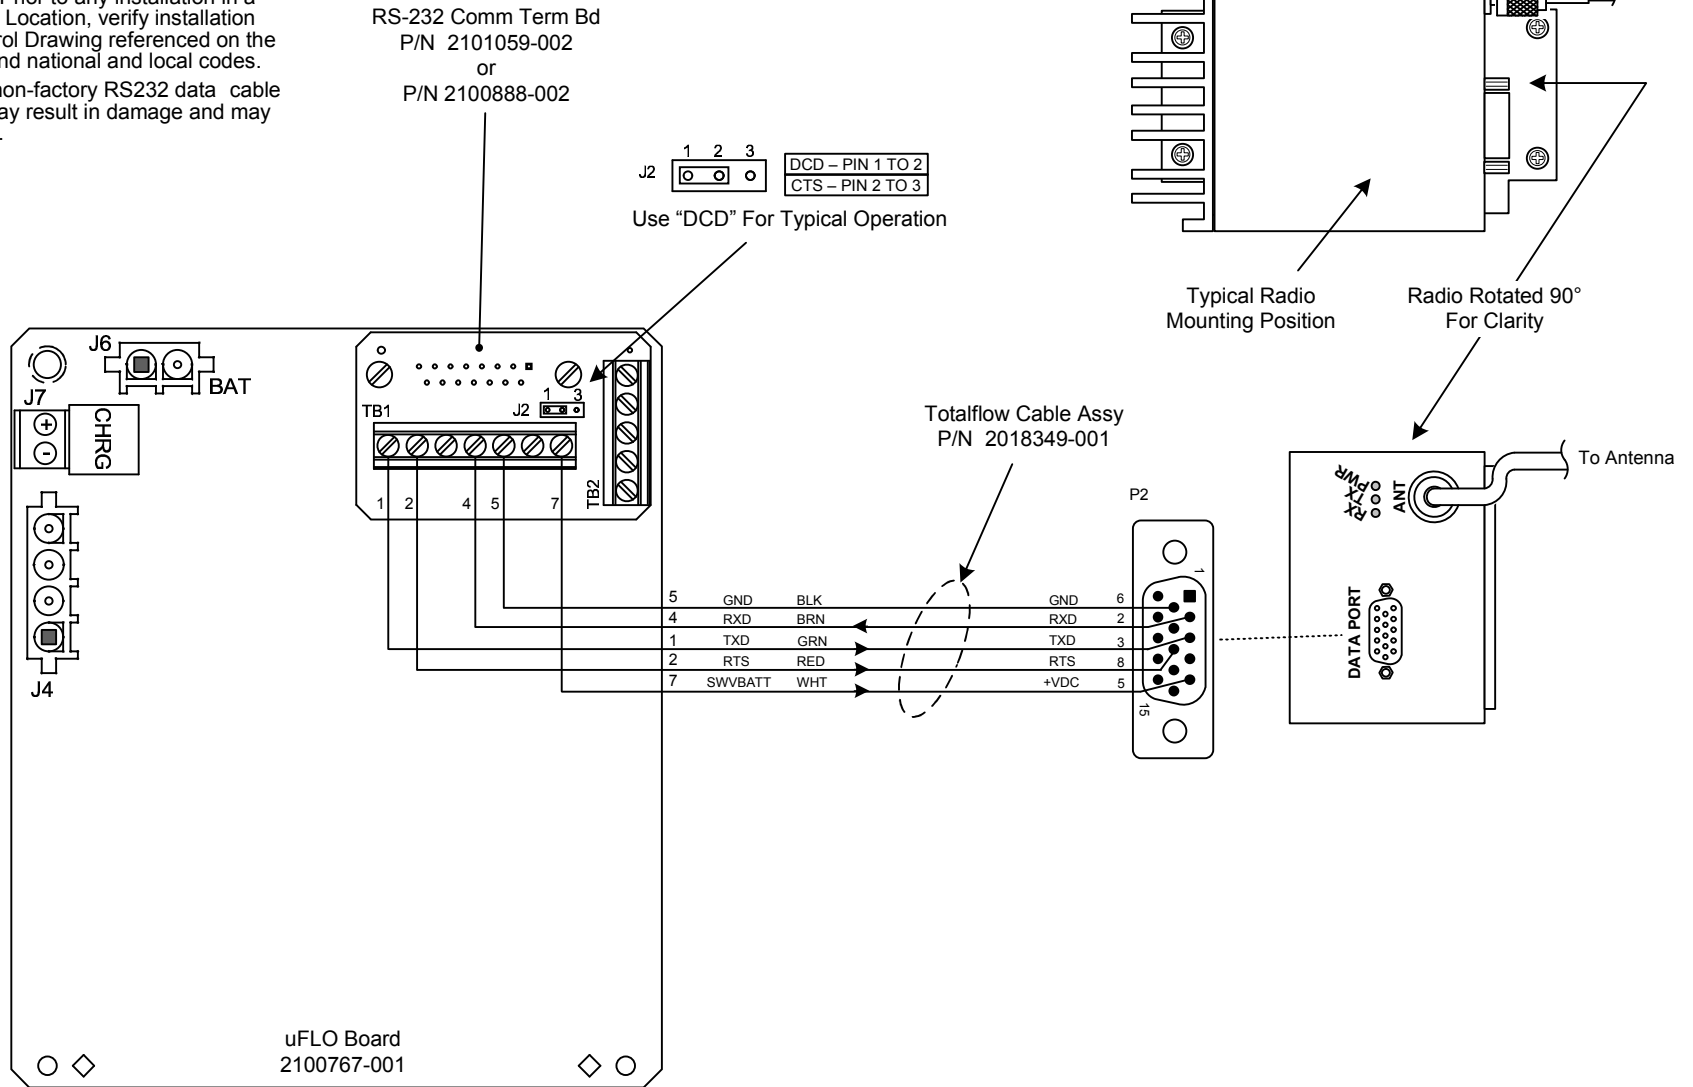

PRIMARY SETUP ITEMS FOR THE T-96SR RADIO:

1. Mode R.
2. ADDR XXXX - where (xxxx) is radio's address, which is also the same as the Master Radio's Address.
3. SLEEP ON.
4. BAUD 9600 8n1 - (other baud rates can be used but need to match flow computer's baud rate).

REF: 2100525-WI

Note: Typically, all other setup items can be left in their default state.

	<b>TOTALFLOW</b> Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
		L19082	UD	UFLO W/COMM TERM BD (2101059-002) TO DATARADIO T-96SR/JOHNSON RADIO W/MODEM 4016/4046/4096 (RS-232)	2102913	AA	1 OF 1