
NOTES:

- All installations in hazardous locations must comply with requirements listed by certification drawings related to this equipment. Check for the certification number on the nameplate and follow the specified requirements of this equipment.
- To access termination board, remove the Rear End Cap of the unit (a 1/16th Hex Set Screw must be loosened to remove the Cap).

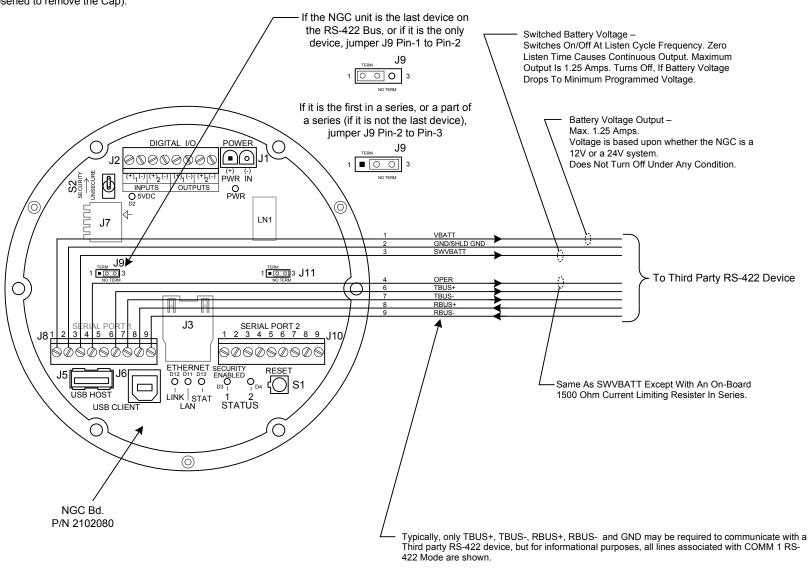

ACTION

D19374

TOTALFLOW

Products

DOC TYPE TITLE

UD

NGC 8200 PORT 1 GENERIC WIRING

GUIDE (RS-422)

DWG NO.

2102318

REV

AΒ

SHEET

1 OF 1