

Catalog No. Qty

TPBRK36A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:


Using the fuse clips on the load end fuse, remove second screw from the center leg of fuse clip. Hook rejector, in inverted position, into the hole in the center leg of the fuse clip. Rotate rejector 180° and using the one-way screw, attach the rejector securely to the fuse clip.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920021M0201_Rev C, GEJ5154 Dec 2023

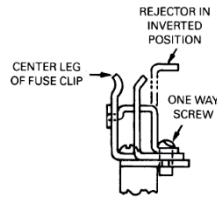

Catalog No. Qty

TPBRK36A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:


Using the fuse clips on the load end fuse, remove second screw from the center leg of fuse clip. Hook rejector, in inverted position, into the hole in the center leg of the fuse clip. Rotate rejector 180° and using the one-way screw, attach the rejector securely to the fuse clip.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920021M0201_Rev C, GEJ5154 Dec 2023

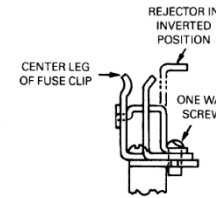

Catalog No. Qty

TPBRK36A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:


Using the fuse clips on the load end fuse, remove second screw from the center leg of fuse clip. Hook rejector, in inverted position, into the hole in the center leg of the fuse clip. Rotate rejector 180° and using the one-way screw, attach the rejector securely to the fuse clip.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920021M0201_Rev C, GEJ5154 Dec 2023

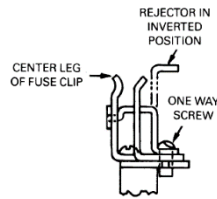

Catalog No. Qty

TPBRK36A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load end fuse, remove second screw from the center leg of fuse clip. Hook rejector, in inverted position, into the hole in the center leg of the fuse clip. Rotate rejector 180° and using the one-way screw, attach the rejector securely to the fuse clip.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920021M0201_Rev C, GEJ5154 Dec 2023

