


NOTES:

1. All installations in hazardous locations must comply with requirements listed by certification drawings related to this equipment. Check for the certification number on the nameplate and follow the specified requirements of this equipment.
2. To access termination board, remove the Rear End Cap of the unit (a 1/16th Hex Set Screw must be loosened to remove the Cap).

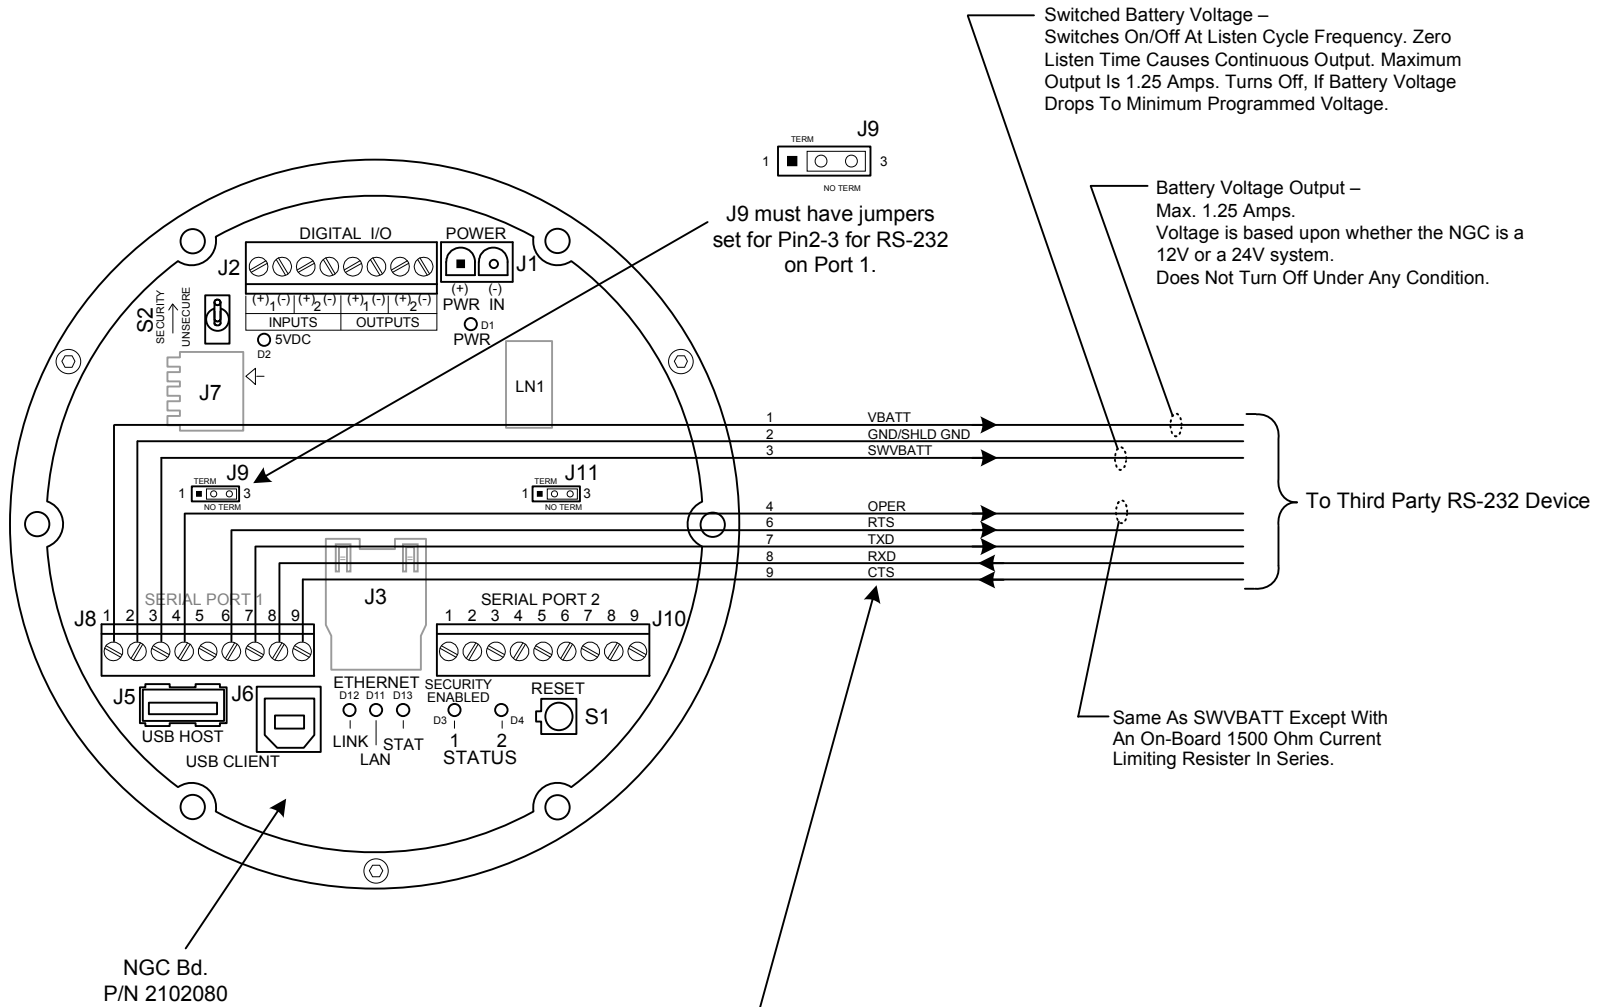

Typically, only TXD, RXD and GND may be required to communicate with a Third party RS-232 device, but for informational purposes, all lines associated with COMM 1 RS-232 Mode are shown.

ABB	TOTALFLOW	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
	Products	L17618	UD	NGC 8200 PORT 1 GENERIC WIRING GUIDE (RS-232)	2102314	AA	1 OF 1