






—  
INSTALLATION INSTRUCTION

# Parallel connection kit


## OZXA38-39

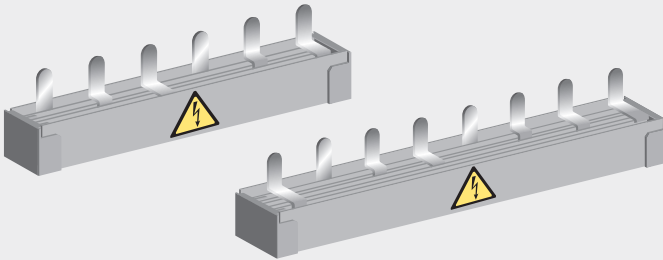

# OZXA38

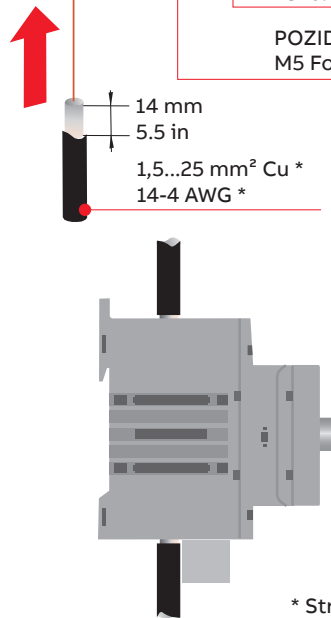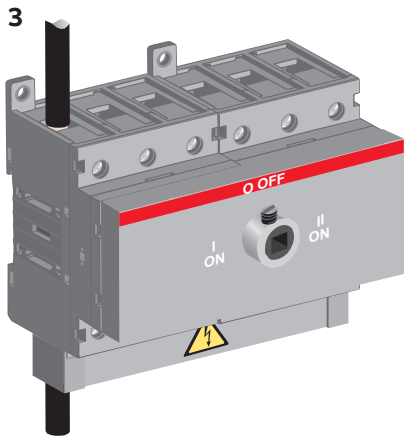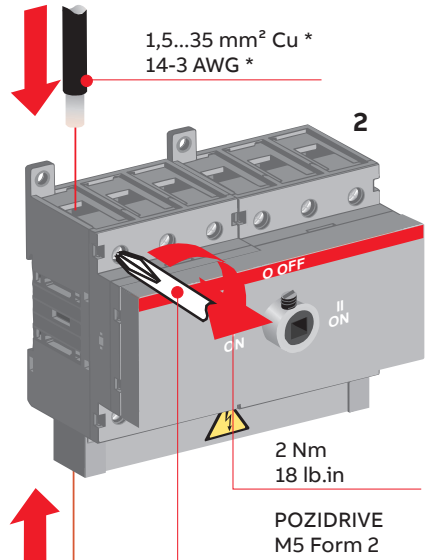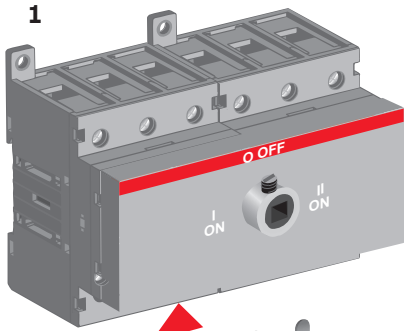

# OZXA39

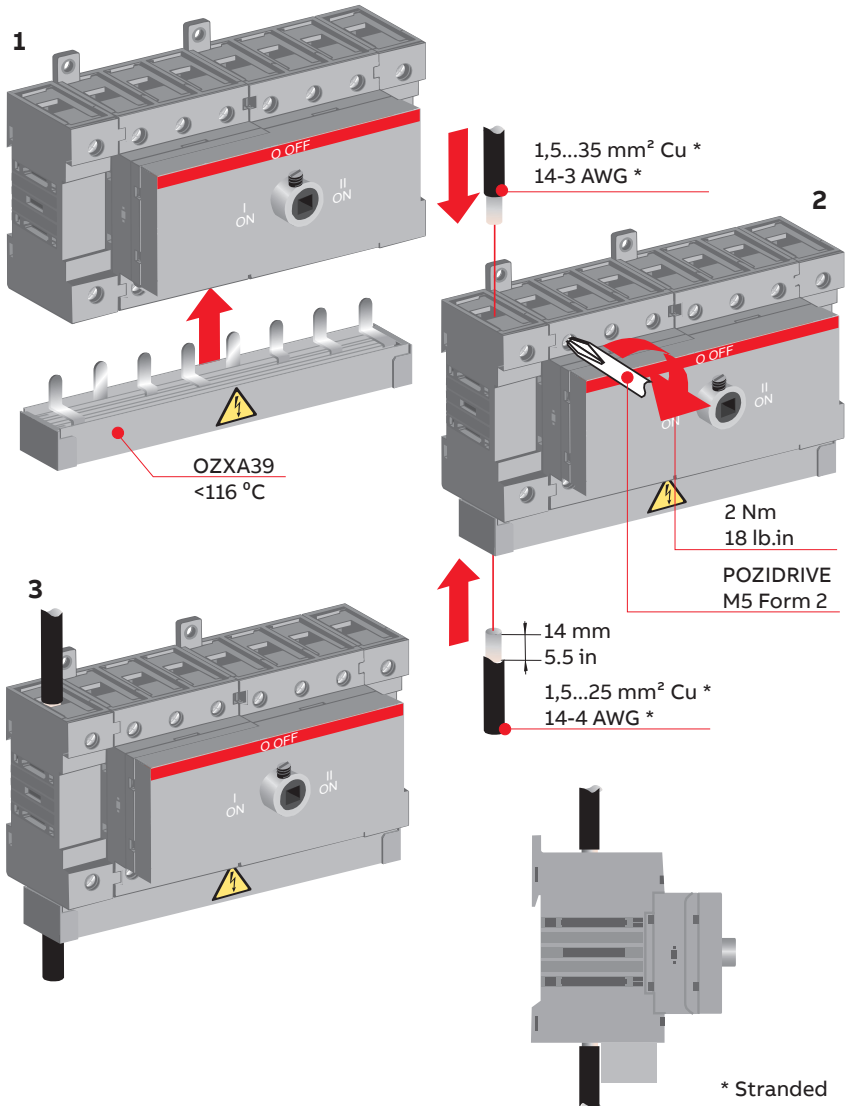



---

## Contact us

### **ABB Oy**

Muottitie 2A 65320

Vaasa, Finland

[abb.com/lowvoltage](http://abb.com/lowvoltage)