 




SACE Tmax T6D/PV

Istruzioni di installazione Tmax T6D/PV
Installation instructions Tmax T6D/PV
Installationsanleitung Tmax T6D/PV
Instructions pour l'installation Tmax T6D/PV
Instrucciones de instalación Tmax T6D/PV




1SDH000781R0002


A

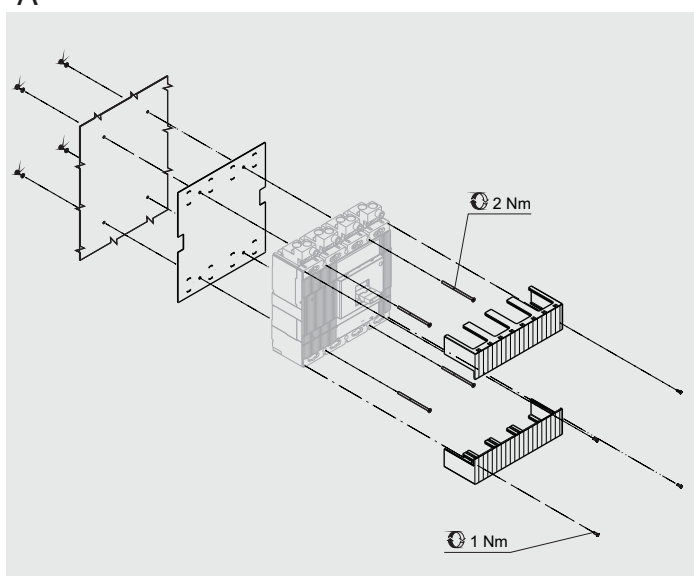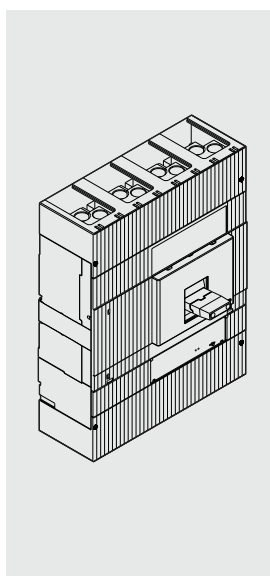


B

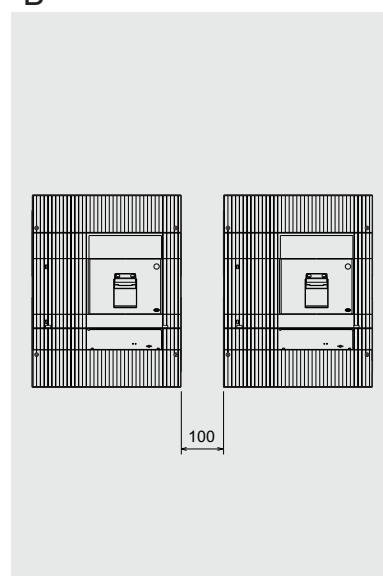

C

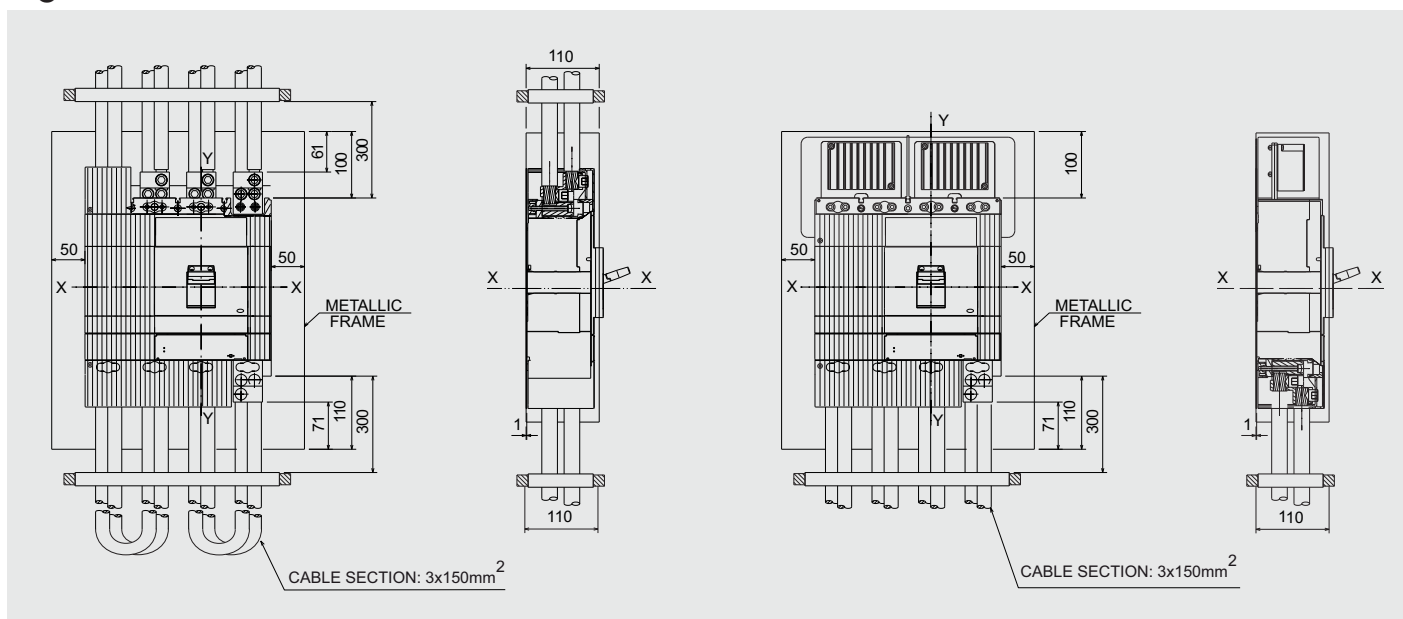


D

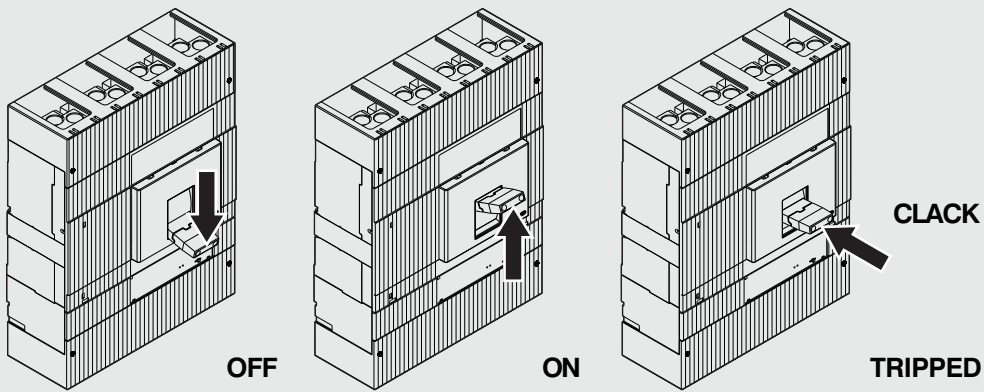

E


If the device is equipped with motor operator, MOE, openings with current shall be performed using SOR or UVR.

F

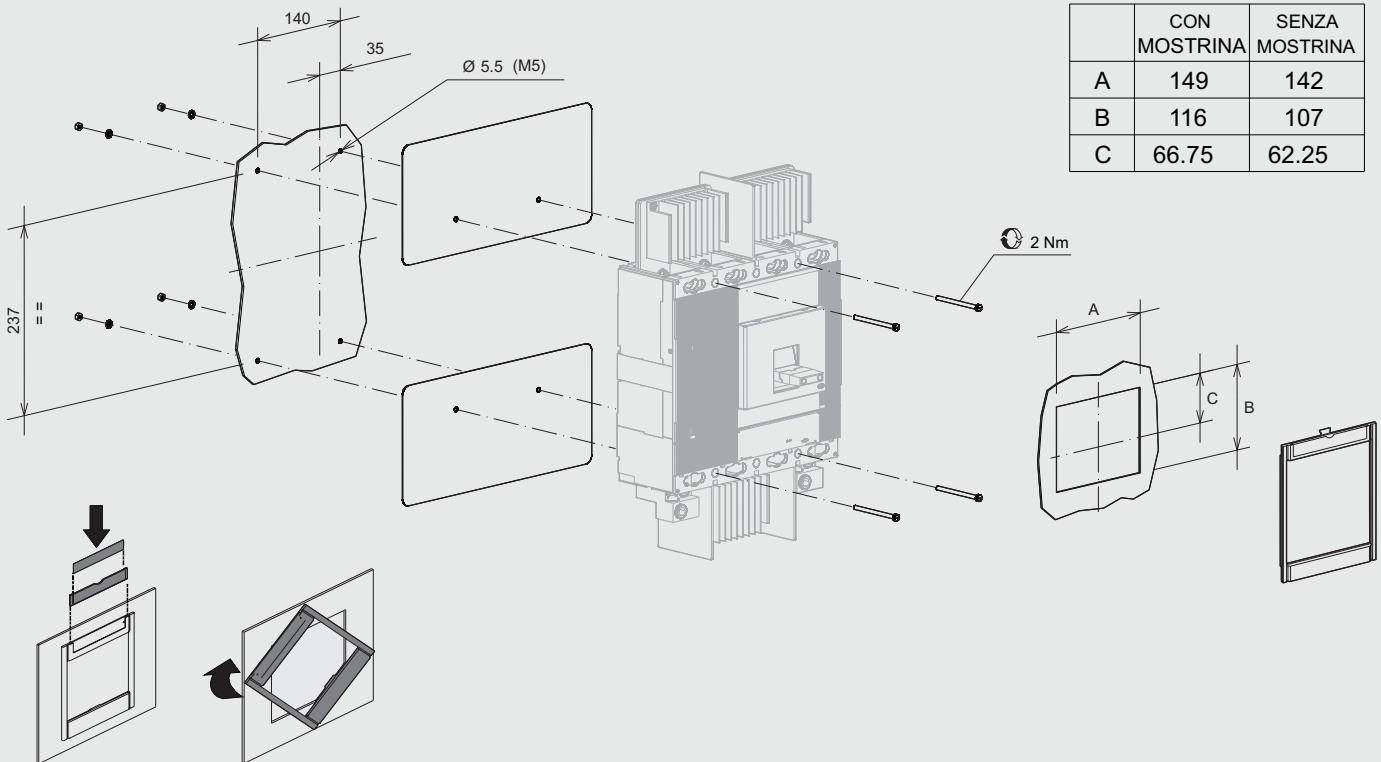

G

Without Jumpers only

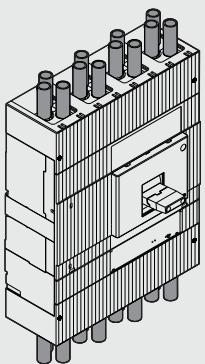

In configurazione senza Jumpers usare cavi ed eseguire prove di tipo specifiche sull'installazione.


For configuration without Jumpers use cable and perform specific type test on the installation.

H


With Jumpers only

Per configurazioni di cablaggio diverse da quelle di seguito rappresentate eseguire prove di tipo specifiche sull'installazione e usare connessioni isolate. Per ulteriori informazioni sulla scelta e il coordinamento delle protezioni sugli impianti fotovoltaici vedere il "Quaderno Applicazione Tecnica - vol. 10" 'Impianti fotovoltaici'.


For different wiring configurations than those shown afterwards perform specific type test on the installation and use insulated terminals connection. Please consult the "Technical Application Paper No. 10" 'Photovoltaic plants' for more information on the selection and protections coordination photovoltaic plants.

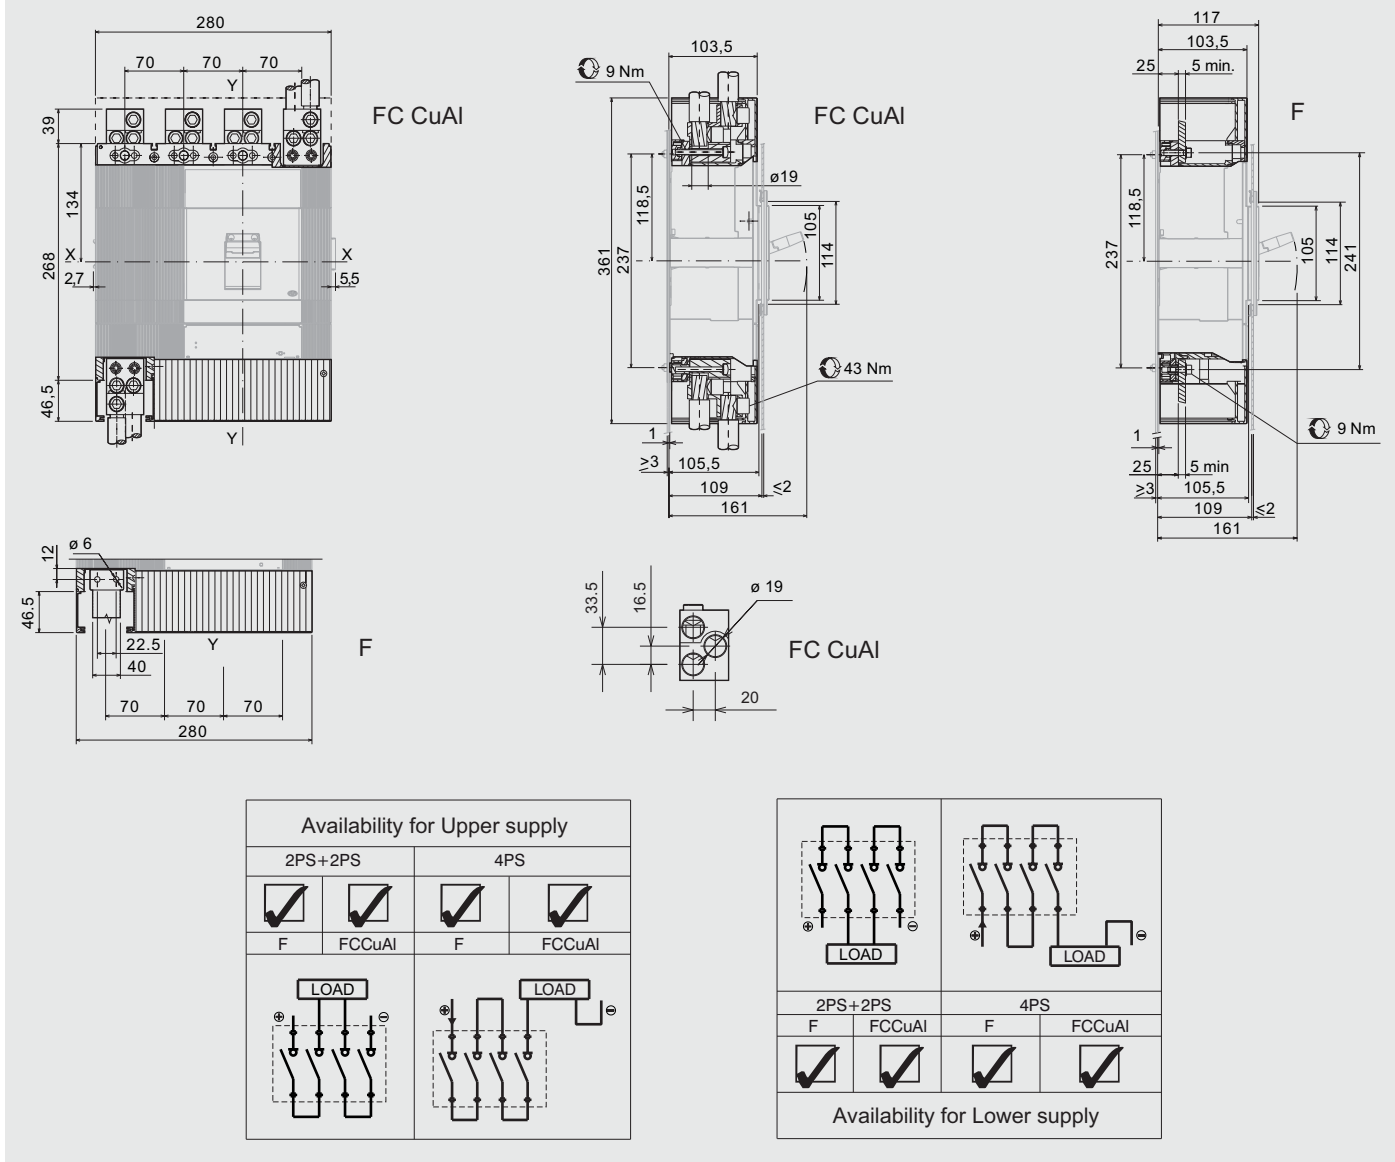

Example with jumper
(4PS Lower Supply)

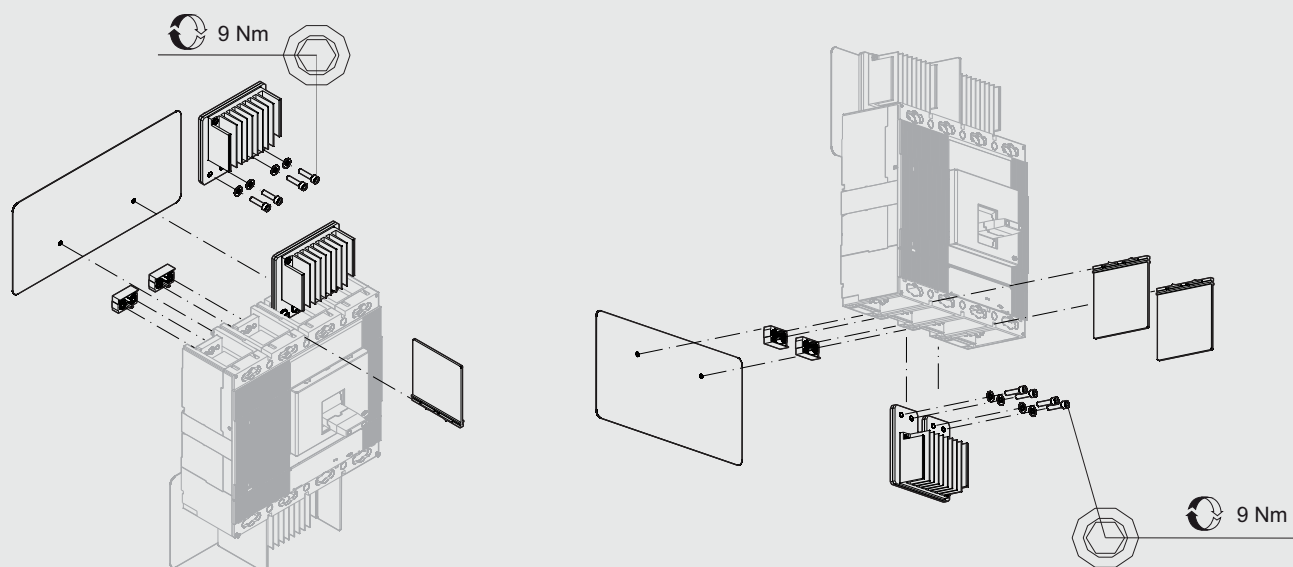


	F	FCCuAl	EF
Availability for Lower supply	☒	☒	☒

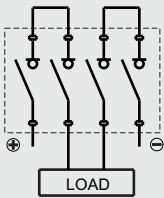


2PS+2PS
LOWER SUPPLY


F

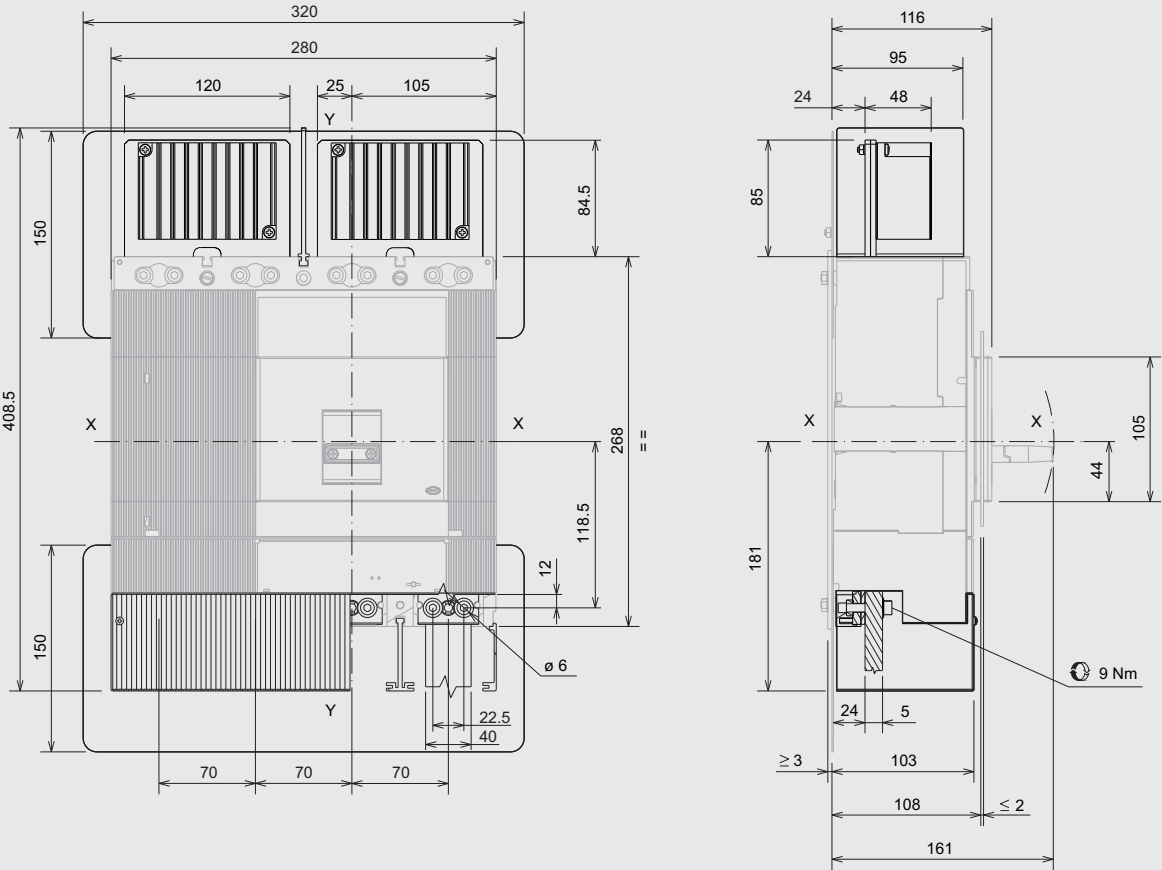


FCCuAl

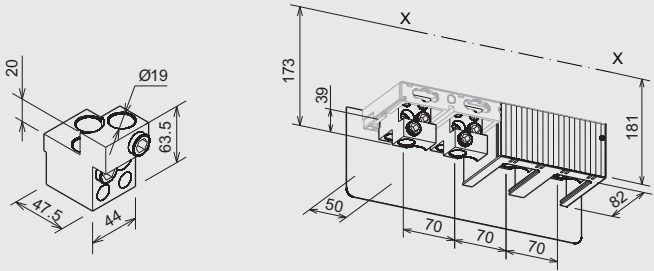

EF

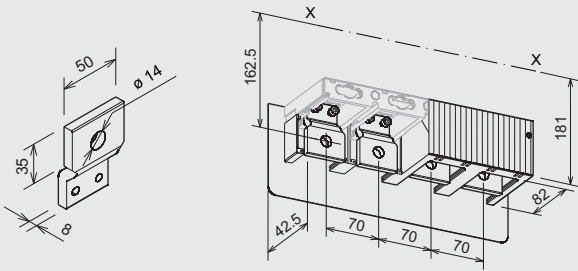


	F	FCCuAl
Availability for Upper supply	☒	☒

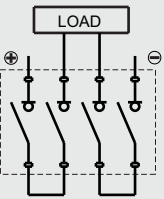


2PS+2PS
UPPER SUPPLY

	F	FCCuAl	EF
Availability for Lower supply	☒	☒	☒

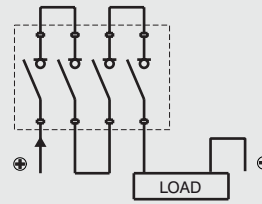


4PS
LOWER SUPPLY


F

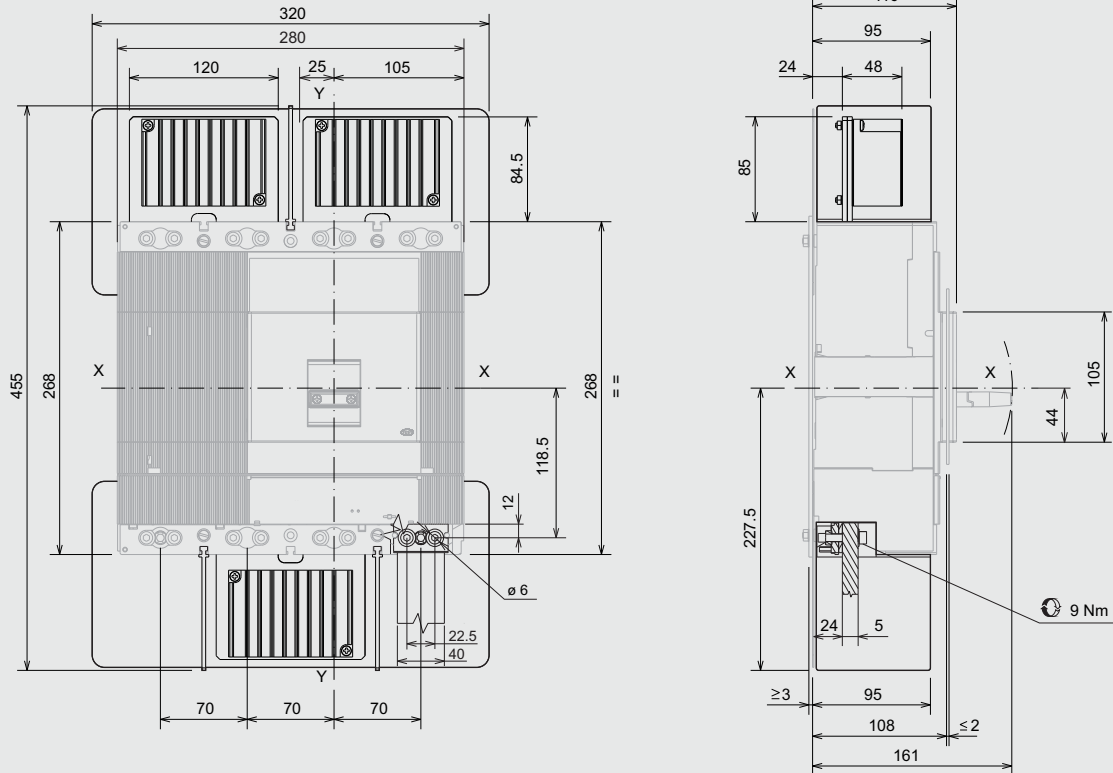

FCCuAl

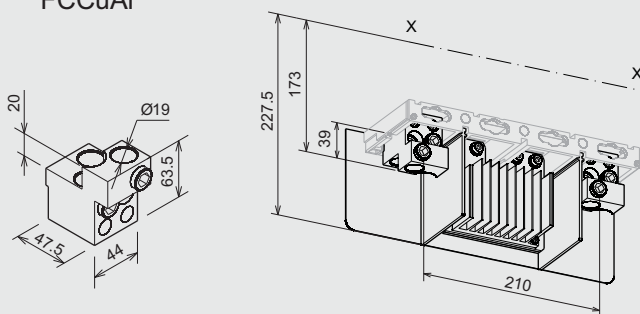


EF

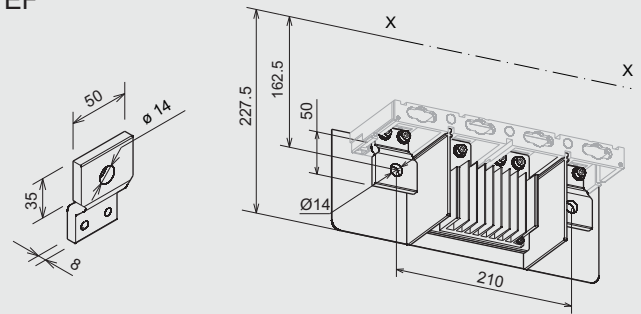

N

4PS solution, Upper Supply

	F	FCCuAl
Availability for Upper supply	☒	☒

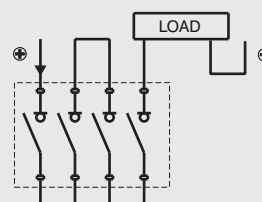

4PS
UPPER SUPPLY