

User instruction for the SMB replacement kit 3HAC046686-004

Warning!

Before handling the SMB unit please read the safety information in the manual.

The kit contains parts as shown on the table below.

3HAC044168-001	A	RMU101	
3HAC044075-001	B	Battery Pack RMU	
3HAC046710-001	C	Fastening plate, Battery pack	
3HAC046720-001	D	Fastening plate, SMB	
3HAC046250-001	E	Label battery replacement	
3HAC046287-001	F	Cable Battery/SMB	
21662055-3	G	Cable straps, outdoors	

Removing, SMB unit, the battery and cable battery/SMB

- Remove the SMB cover by unscrewing its attachment screws.
- Remove the nuts and washers from the *pins* that secure the board.
- Disconnect the connection socket of the old battery pack RMU and remove the old battery.
- Use caution and disconnect the connectors from the SMB unit when pulling the board out.
- Disconnect the battery cable from the SMB unit and remove the old battery and cable battery/SMB.

Refitting, new SMB unit, new battery pack RMU and cable battery/SMB

- Connect the new battery cable (item F) to the new SMB unit (item A).
- Connect all connectors to the new SMB board.
- Fit the new SMB unit onto the *pins*.
- Secure the SMB unit to the pins with the nuts and washers.
- Place the new battery pack RMU (item B) in the battery holder (item E) and connect the connection socket, secure the battery with cable straps (item G).
- Secure the SMB cover with its attachment screws.
- Update the revolution counters.

Prepared Masoud Fallah 20150121	Responsible department DMRO SE/PRIC	Description User instruction for the SMB replacement Användarinstruktion för SMB utbyte	Drawing
Approved Anders Dackemyr 20150128			Page 1
Status Approved	ECO no 500000069280		No. of pages 1
ABB		3HAC054316-001	00