
Naveo® Pro Web interface

User manual




What is Naveo® Pro?

Naveo® Pro is designed to enable building owners and managers to easily maintain and test emergency lighting, without the need to visually verify performance or disrupt the power supply.

All operations can be managed remotely, giving building owners and managers complete control wherever they are, whenever they need it the most.


Login

- 1 **Visit:** <https://naveopro.emergencylighting.abb.com>
Sign in using your username and password.

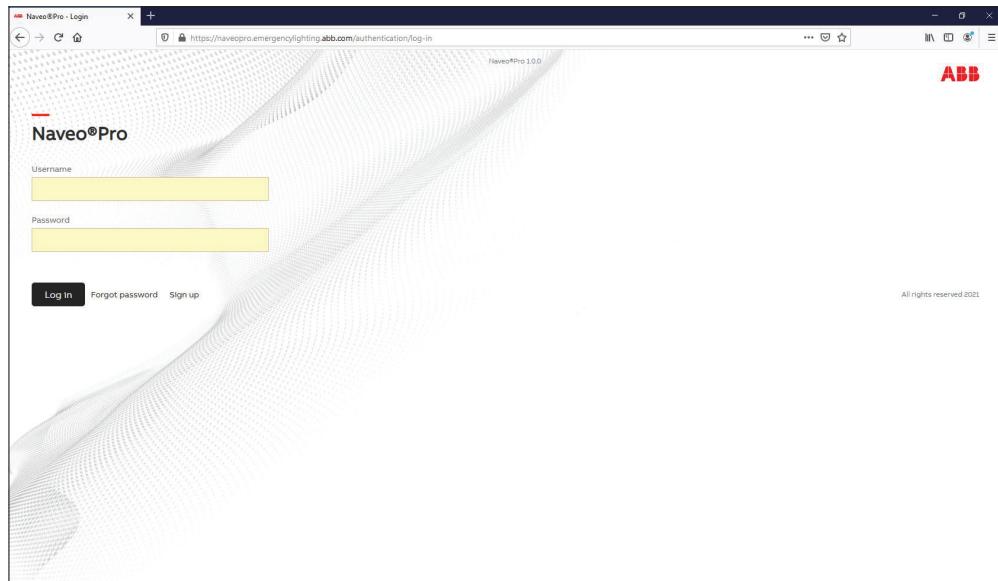


Left slider menu

2 View all devices with detected issues and any upcoming tests.

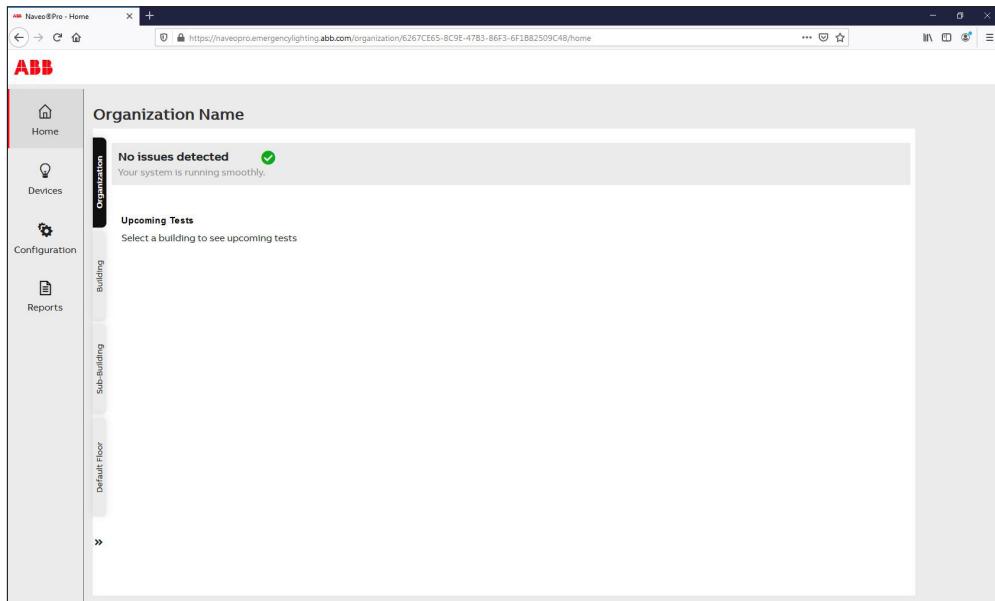


Main menu

3 Located on the left side of the Web interface: home, devices, configuration, and reports.

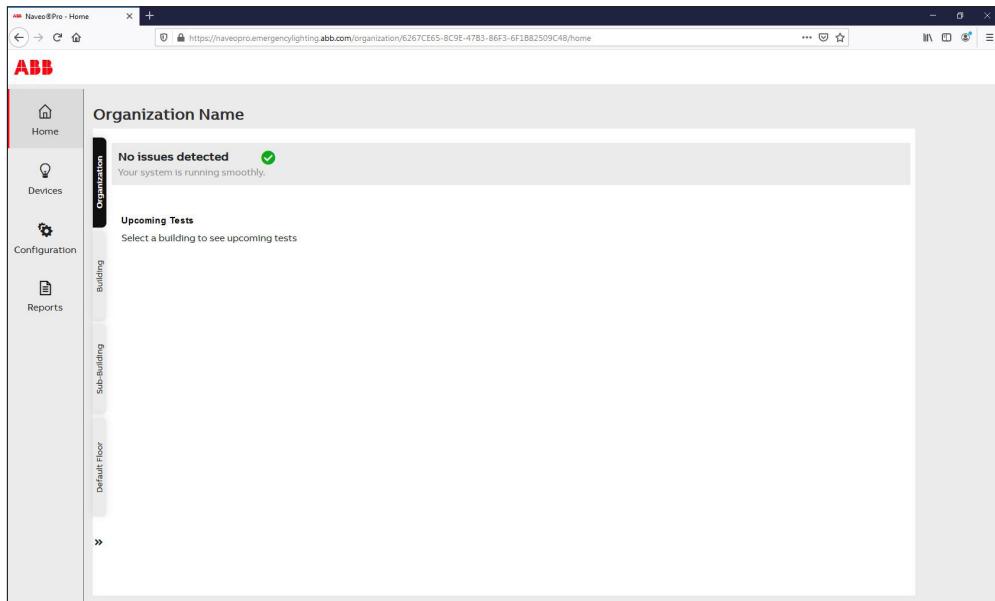

Device page


4 View defective and functional devices in a list format or on a map.

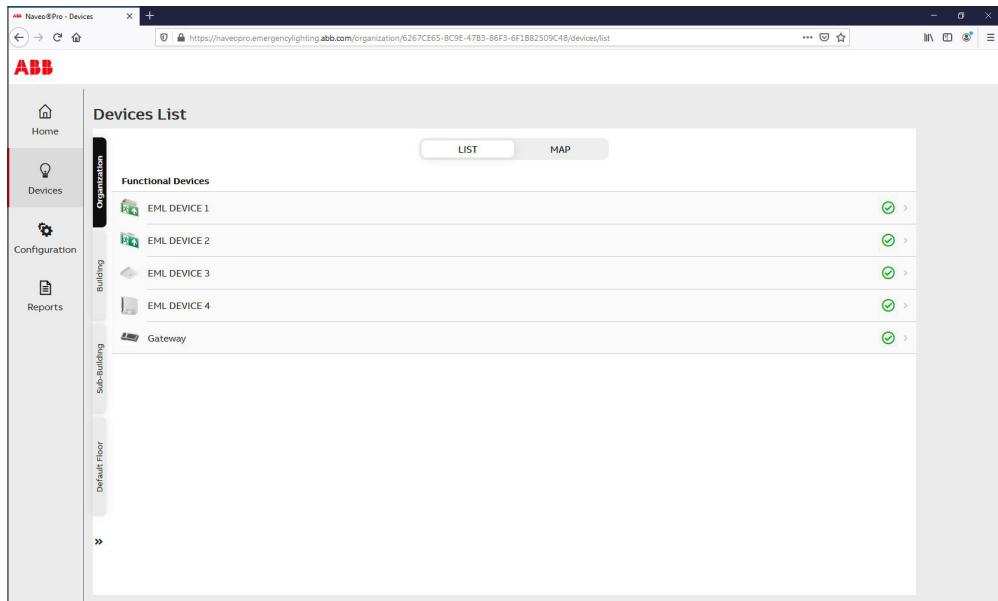

The screenshot shows the Naveo®Pro Web Interface with the following details:

- Header:** Naveo®Pro - Devices
- Address Bar:** https://naveopro.emergencylighting.abb.com/organization/6267CE65-8C9E-47B3-86F3-6F1B82509C48/devices/list
- Page Title:** Devices List
- Left Sidebar:** A vertical sidebar with icons for Home, Devices (selected), Configuration, and Reports.
- Main Content:**
 - Section:** Functional Devices
 - Buttons:** LIST (selected) and MAP
 - Device List:**
 - EML DEVICE 1
 - EML DEVICE 2
 - EML DEVICE 3
 - EML DEVICE 4
 - Gateway
- Bottom Sidebar:** A vertical sidebar with icons for Sub-Building, Default Floor, and a double arrow icon.

5 Map view

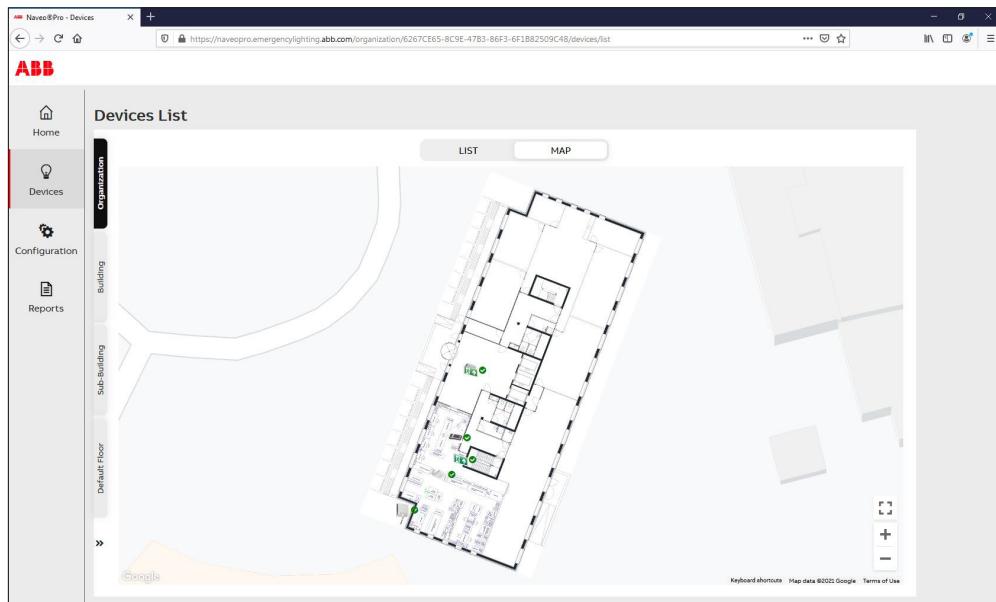


Configuration

- 6** **Tests:** Shows upcoming scheduled tests and create tests.
- Groups:** Assign devices to different groups based on category or testing schedule.
- Device:** Add a new device to your system.
- Gateway:** List of installed gateways.
- Properties management:** Overview of your organization.
- Organization management:** General information about your organization.
- User management:** Invite or delete users from your organization.
- Export DCP to NaveoPro:** Tool to export Naveo or DCP data to Naveo®Pro system.

If you require support for this tool, please contact the

ABB technical support team: global-eml-technical@abb.com

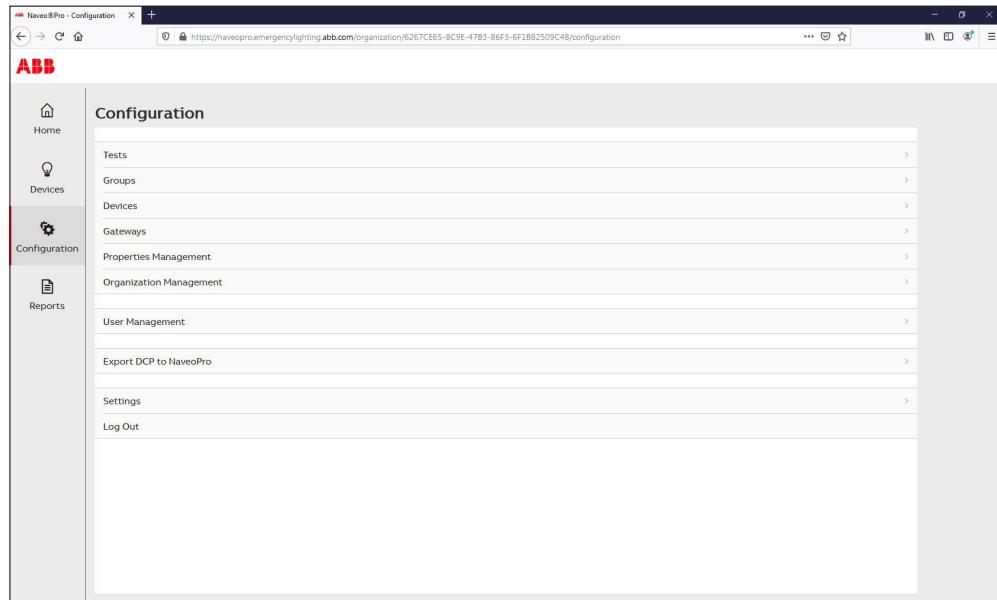

The screenshot shows a web browser window for the NaveoPro Configuration application. The URL is <https://naveopro.emergencylighting.abb.com/organization/6267CE65-8C9E-47B3-86F3-6F1B82509C48/configuration>. The browser interface includes a back/forward button, a search bar, and a tab labeled 'NaveoPro - Configuration'. The main content area is titled 'Configuration' and contains a list of management options. On the left, a vertical sidebar lists navigation links: Home, Devices, Configuration (which is selected and highlighted in red), and Reports. The main content area lists the following items:

- Tests
- Groups
- Devices
- Gateways
- Properties Management
- Organization Management
- User Management
- Export DCP to NaveoPro
- Settings
- Log Out

Reports

7

Test results: Get monthly and annual test results.

Work instructions: List and location of defective devices with part numbers.

Maintenance history: What and when devices have been fixed.

Offline devices: Devices that are currently not functioning.

Device locations: Where devices are located.

The screenshot shows the Naveo8Pro web interface with the URL <https://naveopro.emergencylighting.abb.com/organization/6267CE65-8C9E-47B3-86F3-6F1B82509C48/reports>. The interface has a dark header bar with the ABB logo and a search bar. The left sidebar contains navigation links: Home, Devices, Configuration, and Reports (which is currently selected). The main content area is titled 'Reports' and lists several report types: Test Results, Shopping List, Work Instructions, Maintenance History, Offline Devices, and Devices Location. Below these, there are sections for Building, Sub-building, and Default Floor, each with a '»' button.



new.abb.com/low-voltage