



Nexus[®]Pro Web interface

User manual




What is Nexus®Pro?

Nexus®Pro is designed to enable building owners and managers to easily maintain and test emergency lighting, without the need to visually verify performance or disrupt the power supply.

All operations can be managed remotely, giving building owners and managers complete control wherever they are, whenever they need it the most.

Login

- 1 Sign in using your username and password.

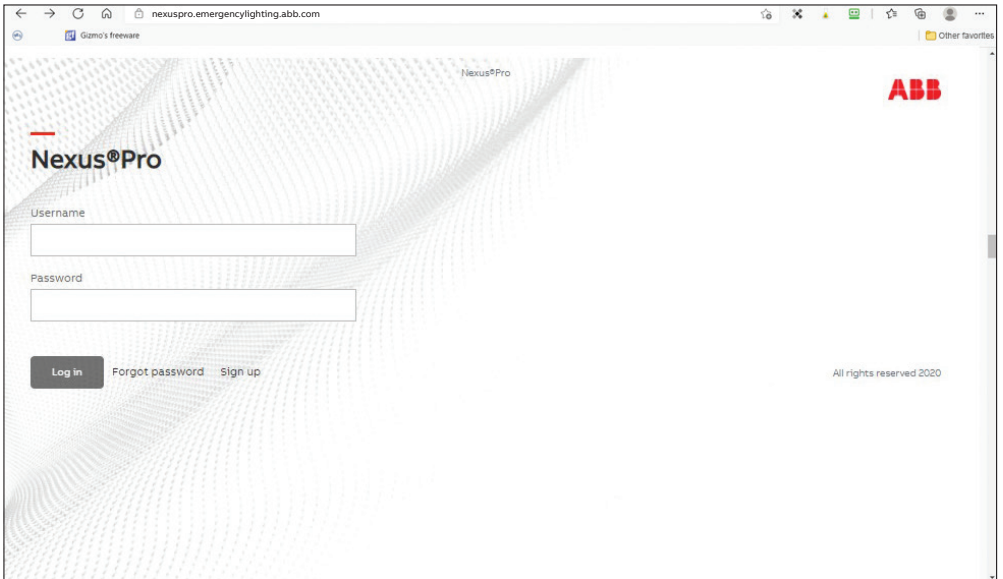


The screenshot shows a web browser window with the address bar displaying "nexuspro.emergencylighting.abb.com". The page features a decorative background of a grid of dots forming a wave pattern. The main heading is "Nexus[®]Pro" with a small red horizontal line above it. To the right, the "ABB" logo is visible. Below the heading, there are two input fields: "Username" and "Password". At the bottom left, there is a dark "Log in" button, followed by links for "Forgot password" and "Sign up". At the bottom right, the text "All rights reserved 2020" is displayed.

Left slider menu


2

View all devices with detected issues and any upcoming tests.

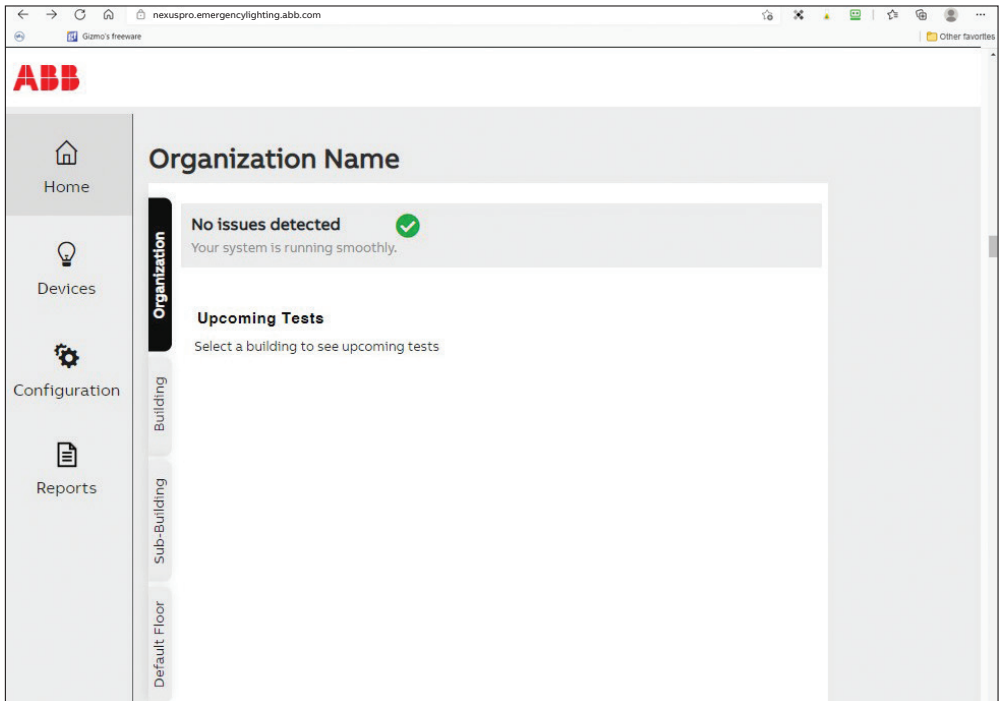

Main menu



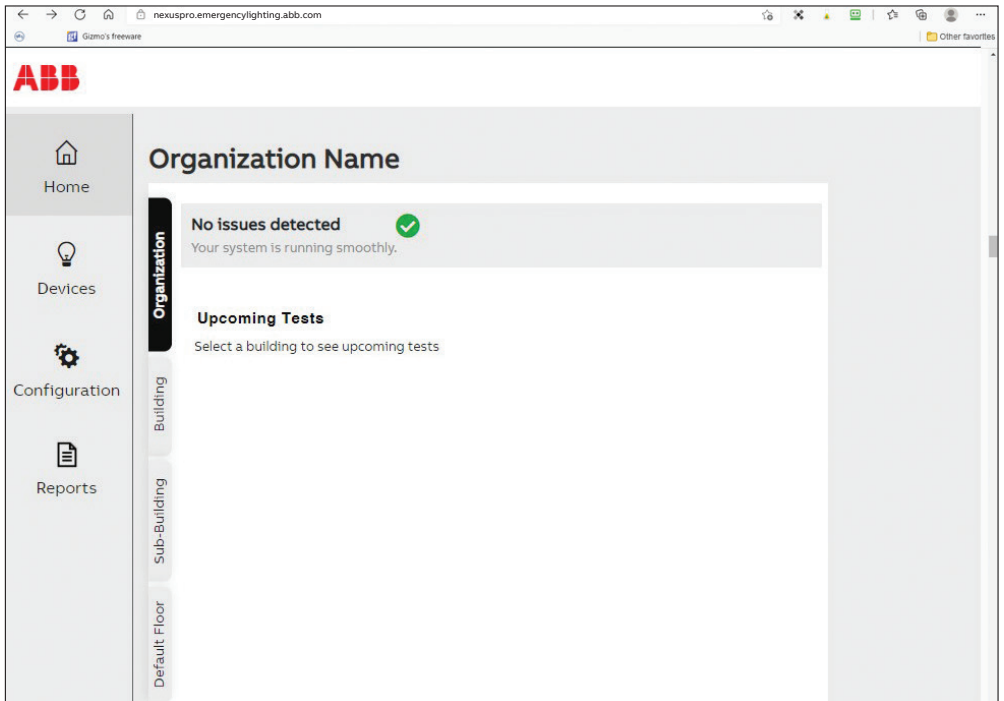





3 Located on the left side of the Web interface: home, devices, configuration, and reports.



Device page

- 4 View defective and functional devices in a list format or on a map.

The screenshot displays the ABB Nexus Pro Web Interface. The browser address bar shows the URL `nexuspro.emergencylighting.abb.com`. The page features the ABB logo at the top left. A vertical navigation menu on the left includes icons for Home, Devices, Configuration, and Reports. The main content area is titled "Devices List" and includes two tabs: "LIST" (selected) and "MAP". Under the "LIST" tab, there is a section for "Functional Devices" containing a table with four entries:

Functional Devices		
	Steel BU Patch	 >
	Steel exit	 >
	Plastic combo	 >
	Gateway	 >

The interface also shows a vertical "Organization" menu with options for Building, Sub-Building, and Default Floor.

5 Map view



Configuration

6

Tests: Shows upcoming scheduled tests and create tests.

Groups: Assign devices to different groups based on category or testing schedule.


Device: Add a new device to your system.

Gateway: List of installed gateways.

Properties management: Overview of your organization.

Organization management: General information about your organization.

User management: Invite or delete users from your organization.

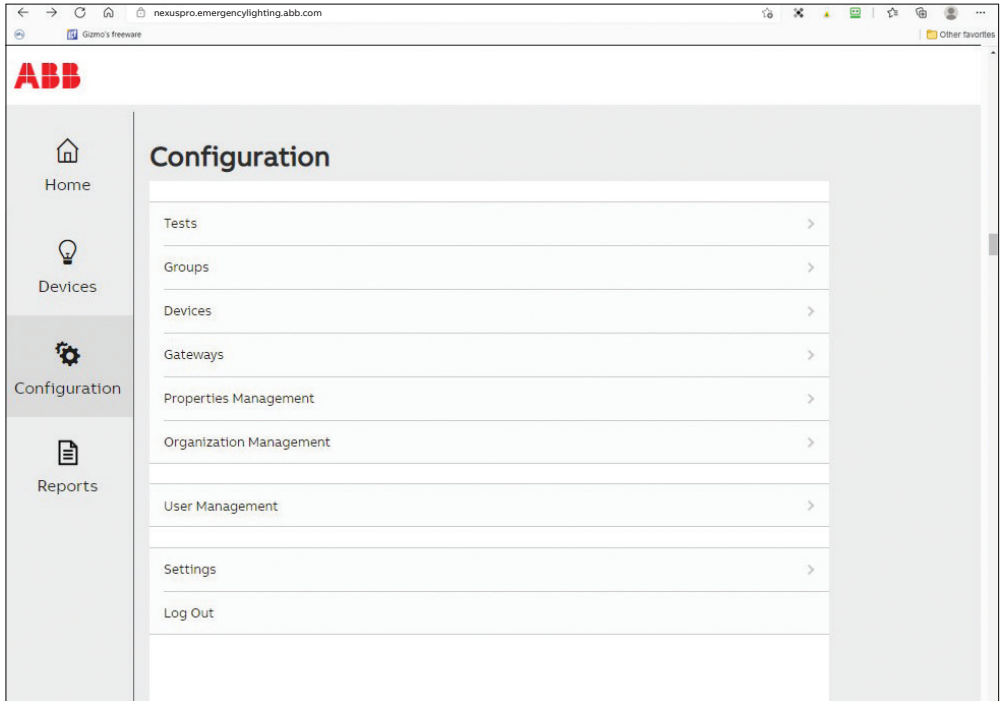

Reports

7

Test results: Get monthly and annual test results.

Work instructions: List and location of defective devices with part numbers.

Maintenance history: What and when devices have been fixed.

Offline devices: Devices that are currently not functioning.

Device locations: Where devices are located.

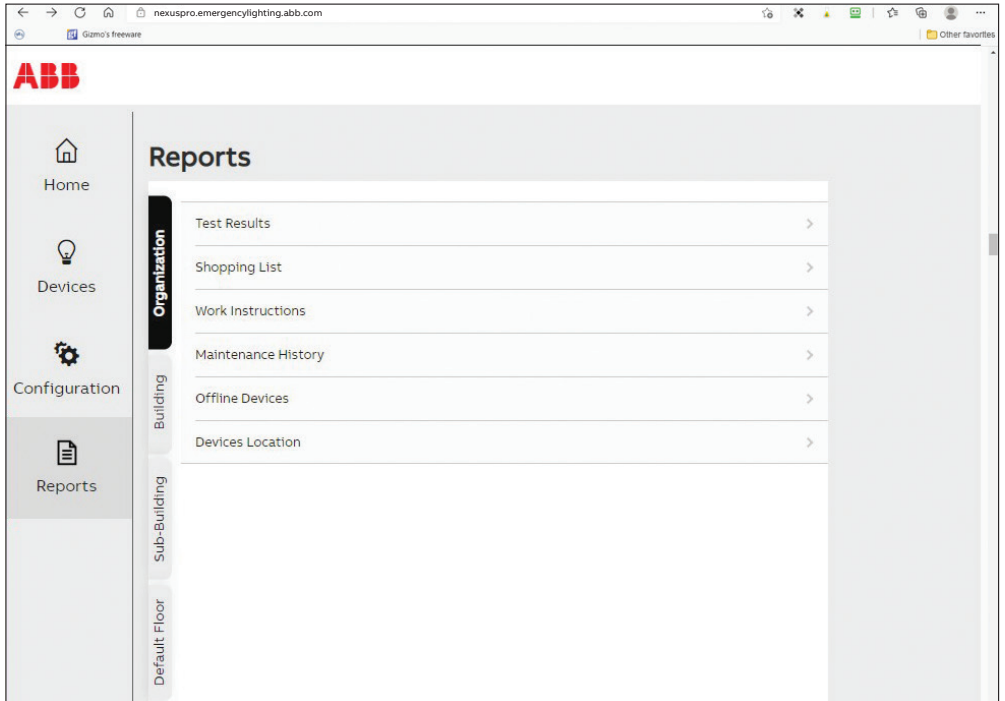




ABB Electrification Canada ULC

1811 boulevard Hymus
Dorval, Québec, Canada
H9P 1J5

Technical and customer support
1-800-435-7365

nexus-info@us.abb.com
www.nexus-system.com