

SERVICE INSTRUCTION

TruONE® ATS Automatic transfer switches OXAHMI-L2/-L3/-L4, OXBHMI-L2/-L3/-L4





OXAHMI-L2, -L3, -L4, OXBHMI-L2, -L3, -L4 Mounting



OR






Max. 3 m,
HMI (RJ45) cable

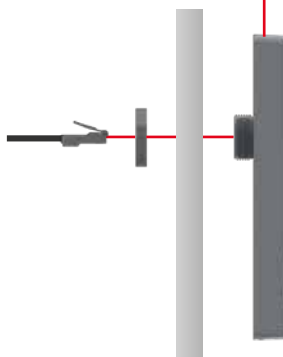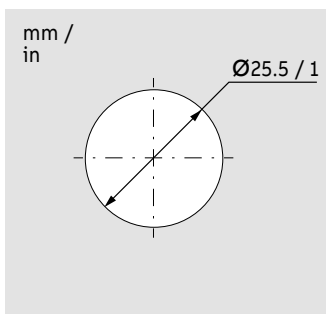

A07490

OXA HMI-L2, -L3, -L4, OXB HMI-L2, -L3, -L4 Removing

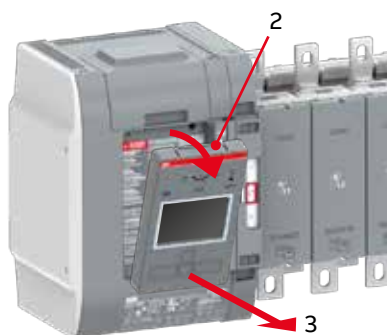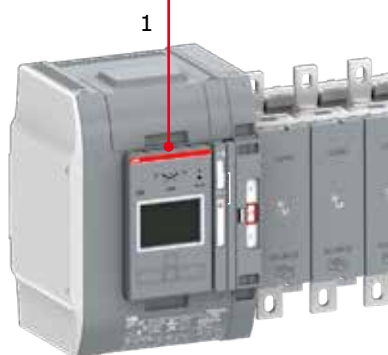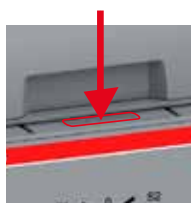



Contact us

ABB Oy

Protection and Connection

P.O. Box 622

FI-65101 Vaasa

Finland

abb.com/lowvoltage