
NOTES:

- WARNING: This drawing does not illustrate completely the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.
- To access termination board, remove the Rear End Cap of the unit (a 1/16th Hex Set Screw must be loosened to remove the Cap).

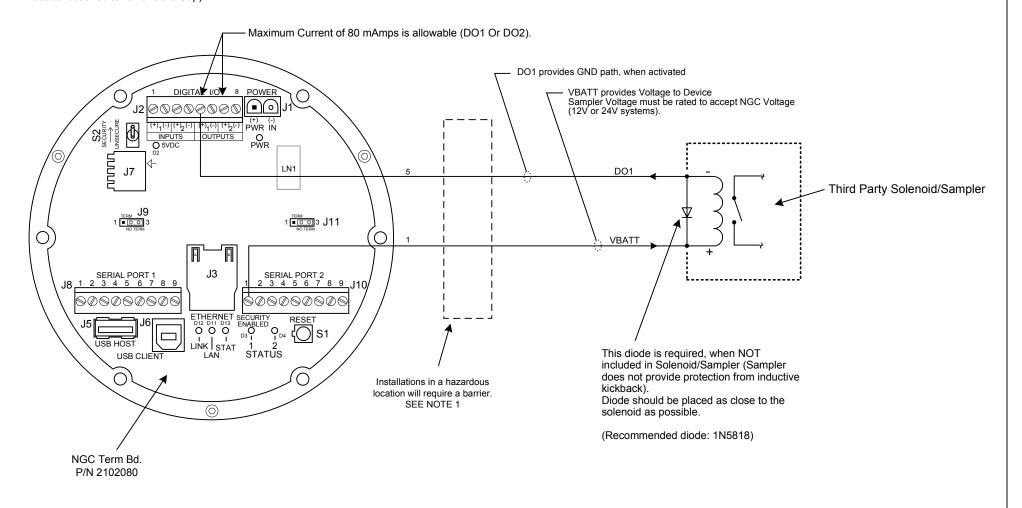

| ABB | TOTAL FLOW | ACTION | DOC TYPE | TITLE | DWG NO. | REV | SHEET |
|-----|------------|--------|----------|----------------------------|---------|-----|--------|
| | IOIALILOW | | | NGC 8200 VDC OUT 2 GENERIC | | | |
| | Products | D20086 | UD | WIRING GUIDE | 2102313 | AC | 1 OF 1 |