

Catalog No. Qty

TGRK32 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:


1. Using the fuse clips on the line end of the fuse, insert rejector between the outer legs of the fuse clip with projection facing the center leg.
2. Push rejector firmly into the fuse clip making sure barb snaps into the hole in the support.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920018M0201, GEJ7451 December 2023

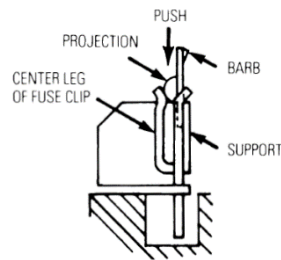

Catalog No. Qty

TGRK32 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:


1. Using the fuse clips on the line end of the fuse, insert rejector between the outer legs of the fuse clip with projection facing the center leg.
2. Push rejector firmly into the fuse clip making sure barb snaps into the hole in the support.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920018M0201, GEJ7451 December 2023

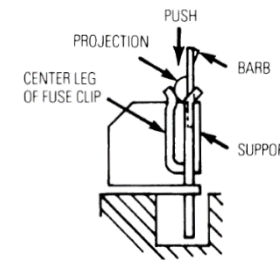

Catalog No. Qty

TGRK32 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:


1. Using the fuse clips on the line end of the fuse, insert rejector between the outer legs of the fuse clip with projection facing the center leg.
2. Push rejector firmly into the fuse clip making sure barb snaps into the hole in the support.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920018M0201, GEJ7451 December 2023

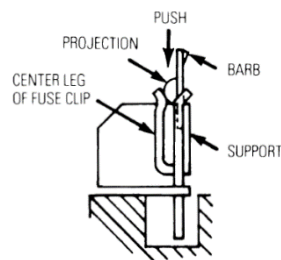

Catalog No. Qty

TGRK32 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

1. Using the fuse clips on the line end of the fuse, insert rejector between the outer legs of the fuse clip with projection facing the center leg.
2. Push rejector firmly into the fuse clip making sure barb snaps into the hole in the support.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920018M0201, GEJ7451 December 2023

