


—
Instruction manual

VD4 Vacuum Circuit-breaker

With Embedded Poles

36...40.5 kV, 1250...3150 A, 25...31.5 kA

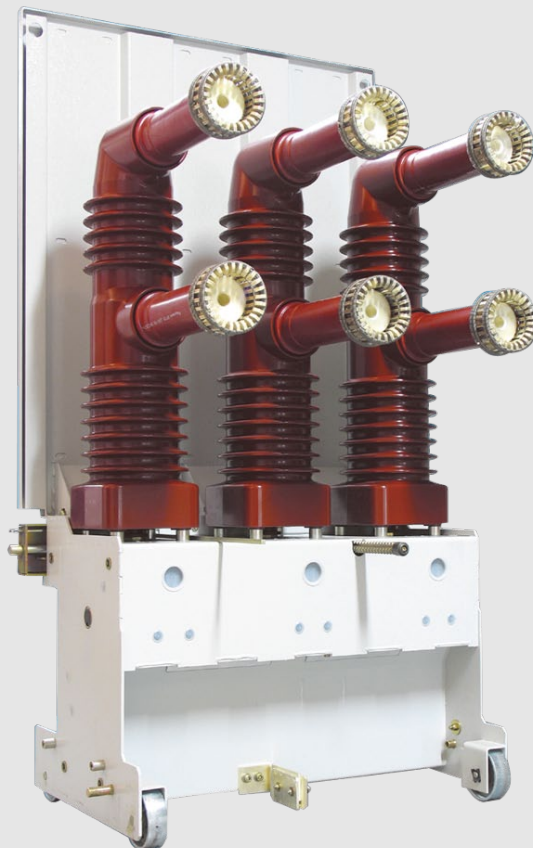

Contents

06	1	Summary
06	1.1	General
06	1.2	Standards and specifications
06	1.3	Operating conditions
07	2	Technical data
07	2.1	Technical data Circuit-breakers for fixed installation and on withdrawable part
08	2.2	Technical data Releases and blocking magnet
08	2.3	Technical data Motor-operated mechanisms
09	2.4	Permissible number of vacuum interrupter switching operations in relation to breaking current
10-15	2.5	Dimensions
16	3	Structure and function
16	3.1	Structure of the breaker poles
16	3.2	Structure of the breaker operating mechanism
17-20	3.3	Function
21	4	Dispatch and storage
21	4.1	Condition on delivery
21	4.2	Packaging
21	4.3	Transport
22	4.4	Delivery
22	4.5	Intermediate storage
23	5	Installation

Contents

24	6	Commissioning/Operation
24	6.1	Note on safety at work
24	6.2	Preparatory activities
24-27	6.3	Operation of the circuit-breaker
28	7	Maintenance
28	7.1	General
28	7.2	Inspection and functional testing
29	7.3	Servicing
30	7.4	Repair
31-33	7.5	Spare parts and auxiliary materials
34	8	Application of the X-ray regulations
35	9	Comparison of designations to VDE-DIN and IEC

For your safety!

- Make sure that the installation room (spaces, divisions and ambient) is suitable for the electrical apparatus
- Check that all the installation, putting into service and maintenance operations are carried out by qualified personnel with suitable knowledge of the apparatus
- Make sure that the standard and legal prescriptions are complied with during installation, operation and maintenance, so that installations according to the rules of good working practice and safety in the work place are constructed
- Strictly follow the information given in this instruction manual
- Check that the rated performance of the apparatus is not exceeded during service
- Check that the personnel operating the apparatus have this instruction manual to hand as well as the necessary information for correct intervention
- Pay special attention to the danger notes indicated in the manual by the following symbol



Responsible behaviour safeguards your own and others' safety!
For any requests, please contact the ABB Assistance service.

1 Summary

1.1 General

The vacuum circuit-breakers of type VD4 for 36 kV or 40.5 kV rated voltage are intended for indoor installation in air-insulated switchgear systems. Their switching capacity is sufficient to handle any conditions arising from switching of equipment and system components under normal operating and fault conditions, particularly short-circuits, within the parameters of their technical data.

Vacuum circuit-breakers have particular adswitching frequency in the working current range and/or where a certain number of short-circuit breaking operations are expected. Type VD4 vacuum circuit-breakers are suitable for auto-reclosing, and have exceptionally high operating reliability and long life.

The vacuum circuit-breakers designed in column form, are supplied as withdrawable modules and fixed modules. Their basic structure is shown in figures 3/1,3/2,3/7 and 3/8.

1.2 Standards and specifications

1.2.1 Switchgear manufacture

The switchgear complies with the following specifications in accordance with GB, IEC and the relevant DIN VDE publications respectively.

- GB/T 11022, IEC 62271-1 and DIN VDE 0670 part 1000, "Common specifications for highvoltage switchgear and controlgear standards"
- GB/T 1984 and IEC 62271-100, "High-voltage alternating-current circuit-breakers"

1.2.2 Installation and operation

The relevant specifications are to be taken into account during installation and operation, particularly:

- IEC 61936-1, Electrical devices with rated voltage above AC 1 kV
- DIN VDE 0101, Power installations exceeding AC 1 kV
- DIN VDE 0105, operation of electrical installations
- DIN VDE 0141, earthing systems for special power installations with rated voltages over 1 kV
- Accident prevention regulations issued by the appropriate professional bodies or comparable organisations

In Germany, these comprise the following safety regulations:

- Health and Safety at Work Standard

- Health and Safety at Work Standard
- Safety guidelines for auxiliary and operating materials
- Order related details provided by ABB Xiamen Switchgear Co., Ltd

1.3 Operating conditions

1.3.1 Normal operating conditions

Design to GB/T 11022, "Common specification for high-voltage switchgear and controlgear standards", IEC 62217-1, VDE0670 part 1000, with the following limit values:

- Ambient temperature:
 - Maximum +40°C
 - Highest mean value measured in 24 hours +35°C
 - Minimum (-15 indoor class) -15°C
- Humidity
 - Highest mean value of relative humidity measured over 24 hours 95%
 - Highest mean value of vapour pressure measured over 24 hours 2.2 kPa
 - Highest mean value of relative humidity measured over 1 month 90%
 - Highest mean value of vapour pressure measured over 1 month 1.8 kPa
- Maximum site altitude: 1000 m above sea level

1.3.2 Special operating conditions

Special operating conditions are to be agreed on by the manufacturer and user. The manufacturer must be consulted in advance about each special operating condition:

- Site altitude over 1000 m:
 - Allow for the reduction in the dielectric strength of the air
 - Increased ambient temperature:
 - Current carrying capacity is reduced
 - Provide additional ventilation for heat dissipation
- Climate:
 - Avoid the risk of corrosion or other damage in areas:
 - With high humidity and/or
 - With major rapid temperature fluctuations
 - Implement preventive measures (e.g. electric heaters) to preclude condensation phenomena
 - Circuit-breakers are used in power distribution to control and protect lines, transformer and distribution substations, capacitor banks, etc. For switching capacitor banks, when ordering, please particularly note "

2 Technical data

2.1 Technical data circuit-breakers for fixed installation and on withdrawable part

Rated voltage	kV	36	40.5
Rated frequency	Hz	50/60	50/60
Rated lightning impulse withstand voltage	kV	170	185
Rated power frequency withstand voltage (1 min)	kV	70	95
Rated operating sequence	O-0.3 s-CO-3 min-CO		
Rated operating sequence with autoreclosing	O-0.3 s-CO-3 min-CO		

Breaker-type	Rated voltage	Rated current	Rated short-circuit breaking current, symm ¹⁾	Rated short-circuit breaking current, asymmetr ¹⁾	Rated short-circuit mreaking current, (peak) ¹⁾	Rated short-circuit duration	Pole Centres Fixed withdrawable	Weight Fixed withdrawable
VD4...	kV	A	kA	kA	kA	s	mm	approx. kg
3612-25	36	1250	25	27.3	63	4	360 280	290 320
3616-25	36	1600						290 320
3620-25	36	2000						340 355
3625-25	36	2500						340 355
3631-25 ³⁾	36	3150					- 280	- 360
3612-31	36	1250	31.5	34.3	80	4	360 280	290 320
3616-31	36	1600						290 320
3620-31	36	2000						340 355
3625-31	36	2500						340 355
3631-31 ³⁾	36	3150					- 280	- 360
4012-25	40.5	1250	25	27.3	63	4	360 280	290 320
4016-25	40.5	1600						290 320
4020-25	40.5	2000						340 355
4025-25	40.5	2500						340 355
4031-25 ³⁾	40.5	3150					- 280	- 360
4012-31	40.5	1250	31.5	34.3	80	4	360 280	290 320
4016-31	40.5	1600						290 320
4020-31	40.5	2000						340 355
4025-31	40.5	2500						340 355
4031-31 ³⁾	40.5	3150					- 280	- 360

Guideline values for function times at the rated supply voltage:

Closing time	approx.	55~67 ms
Opening time	approx.	33~45 ms
Arcing time (at 50 Hz)	≤	15 ms
Total break time	≤	60 ms
Minimum command time on closing		20 ms (120 ms ²⁾)
Minimum command time on opening		20 ms (80 ms ²⁾)

1) When the operating voltage is lower than the rated voltage, the same values apply as for rated voltage. Higher values on request.

2) If the activating relay contact cannot itself interrupt the release coil current.

3) 3150 A, assembly poles with forced ventilation.

2 Technical data

2.2 Technical data Releases and blocking magnet

Equipment		Power consumption ¹⁾	
		AC VA	DC W
Shunt release OFF	Y2 ³⁾ , Y9 ³⁾	250	250
Shunt release ON	Y3 ³⁾	250	250
Blocking magnet	Y1 ³⁾	10	10
Undervoltage release	Y4		
undelayed		11	10
delayed		10	-
Indirect overcurrent release	Y7		
with intermediate current transformer			
two-phase		3.5 ²⁾ /15	-
three-phase		2.0 ²⁾ /15	-

1) Approximate values.

2) With short-circuited intermediate current transformer.

3) Auxiliary voltages AC: 110 and 220 V, DC: 24, 48, 60, 110 and 220 V.

2.3 Technical data Motor-operated mechanisms

Auxiliary voltage V	Consumption ¹⁾ power VA/W	Charging time (maximum) ²⁾ s
AC		
110	200	15
220	200	15
DC		
24	180	15
48	180	15
110	190	15
220	190	15


1) Approximate values.

2) At the rated auxiliary voltage.


2.4 Permissible number of vacuum interrupter switching operations in relation to breaking current

See figure 2/1.

Figure 2/1 Permissible number of vacuum interrupter operating cycles n as a function of the breaking current I_a

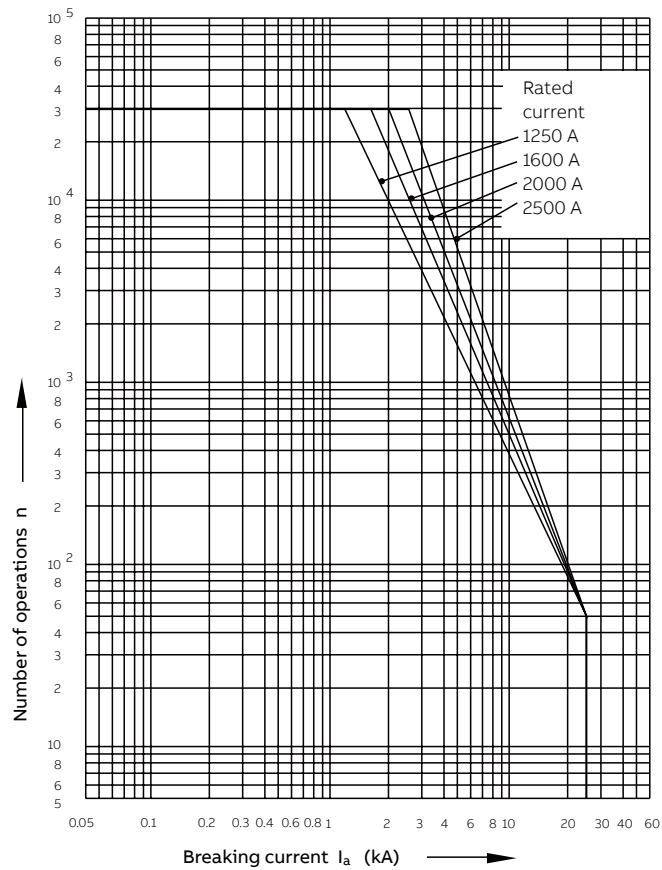

a) Circuit-breaker type VD4, 36 kV and 40.5 kV
Rated short-circuit breaking current 25 kA

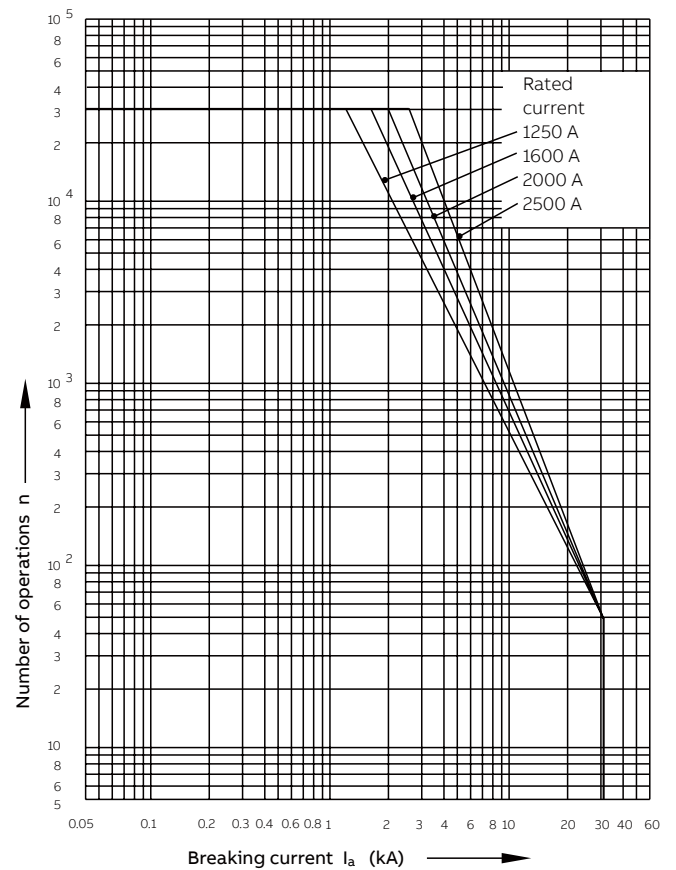


b) Circuit-breaker type VD4, 36 kV and 40.5 kV
Rated short-circuit breaking current 31.5 kA


2 Technical data

2.5 Dimensions
See figure 2/2,2/3.


Fig. 2/2 Dimension of withdrable VD4 40.5 kV | Fig.

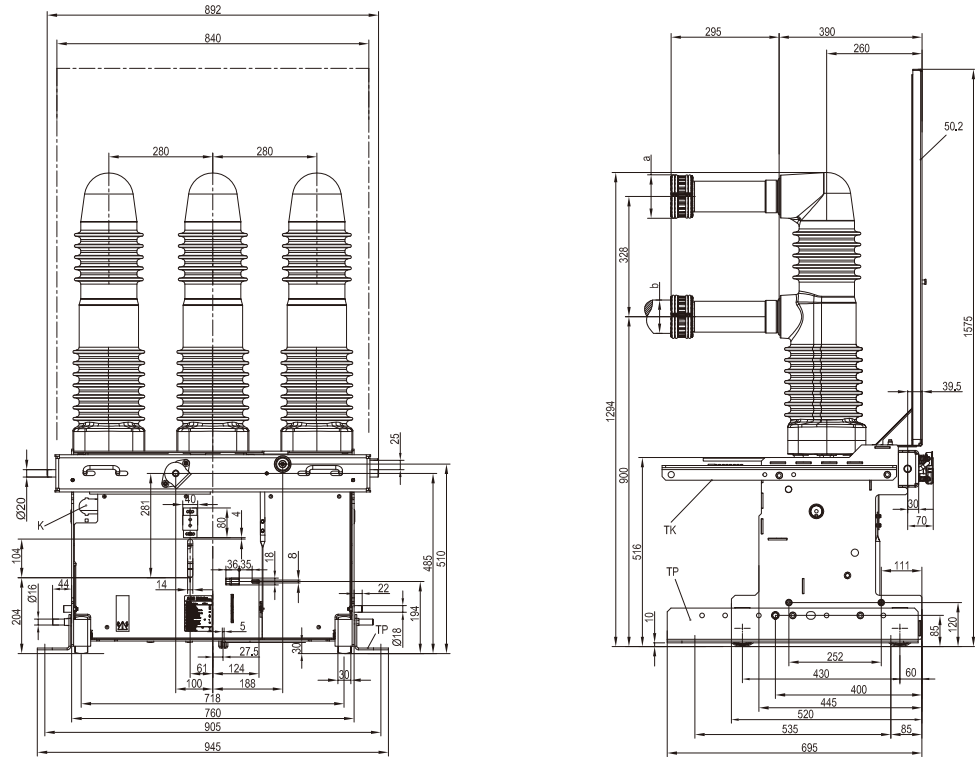

Insert dimension of contact

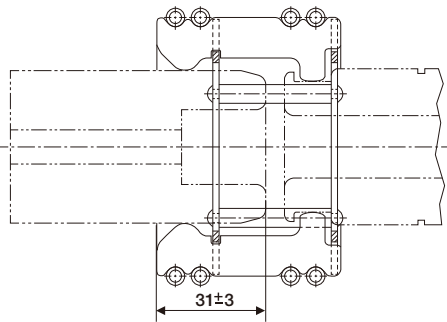

Installation position of the ventilation (only for 3150 A)

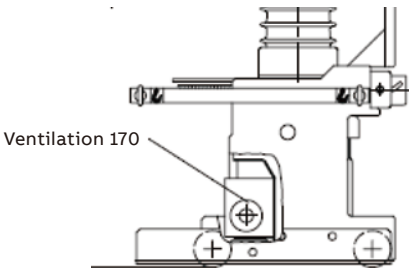


- TK = Transport bracket 147
TP = Transport profile 148
K = Entrance for control cables
50.2 = Front partition plate

Rated current	1.0 Ir (standard)		1.1 Ir	
	a	b	a	b
1250 A	Ø 76 mm	Ø 35 mm	Ø 76 mm	Ø 35 mm
1600 A	Ø 76 mm	Ø 35 mm	Ø 90 mm	Ø 49 mm
2000 A	Ø 120 mm	Ø 79 mm	Ø 120 mm	Ø 79 mm
2500 A	Ø 120 mm	Ø 79 mm	Ø 158 mm	Ø 109 mm
3150 A	Ø 120 mm	Ø 79 mm		


- Note:
1) Transport bracket TK (147) and transportprofile TP (148) only fitted for handling. Remove and store prior to commissioning.
2) Distance from service position to isolated position is 450 mm.

Fig. 2/3 Dimension of fixed VD4 40.5 kV

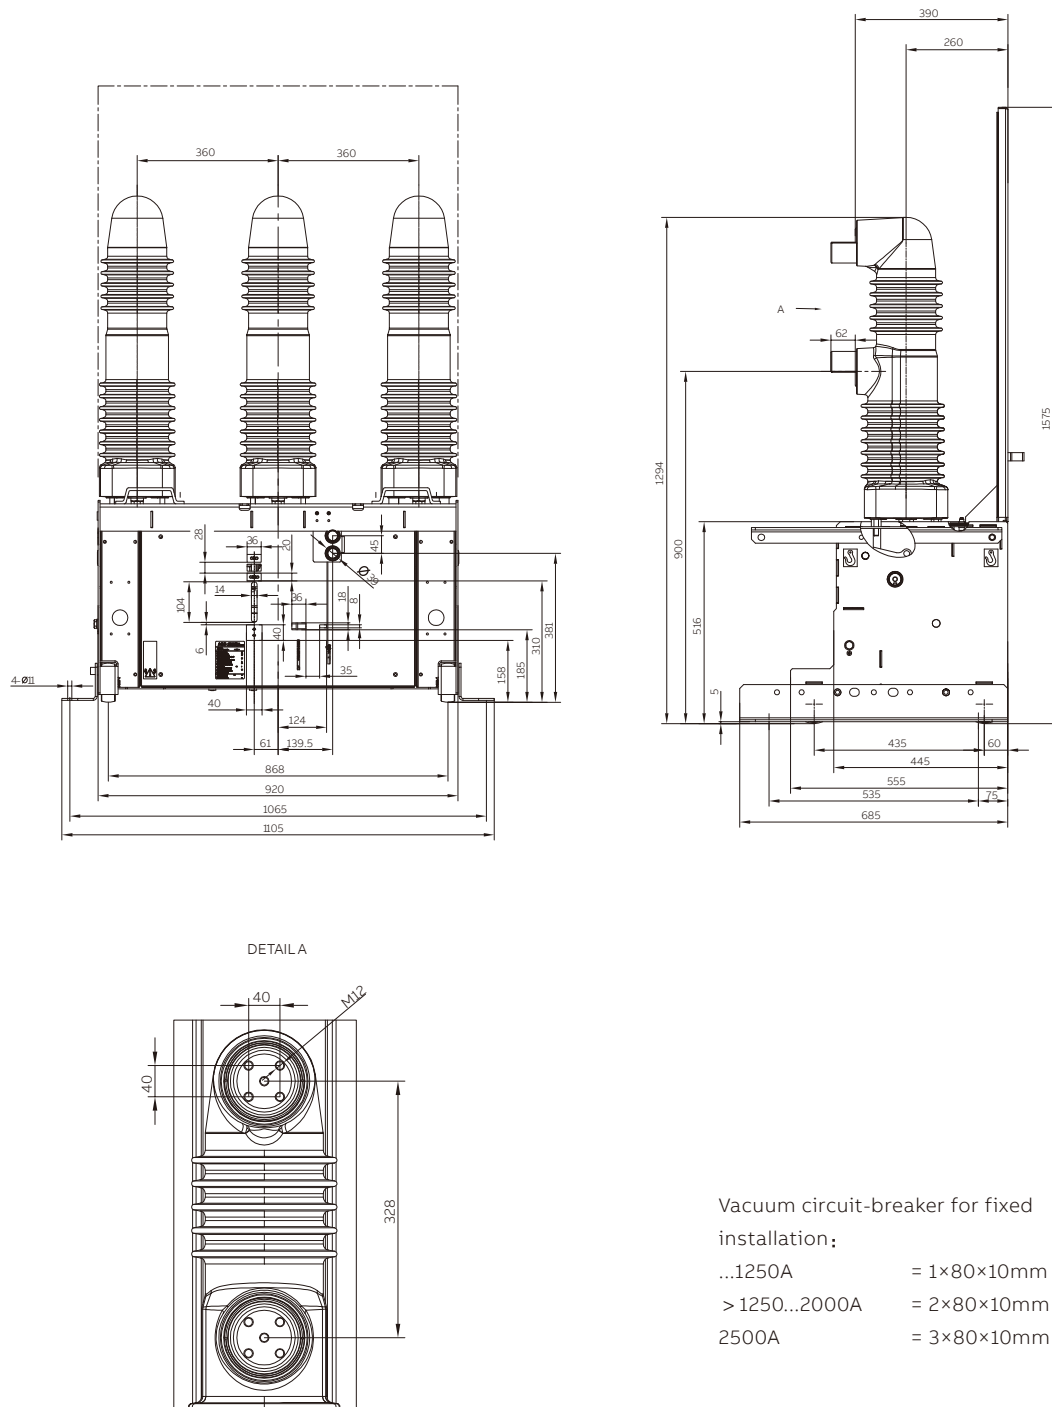


2 Technical data


Fig. 2/4 Circuit diagram for motor-charged operation mechanism

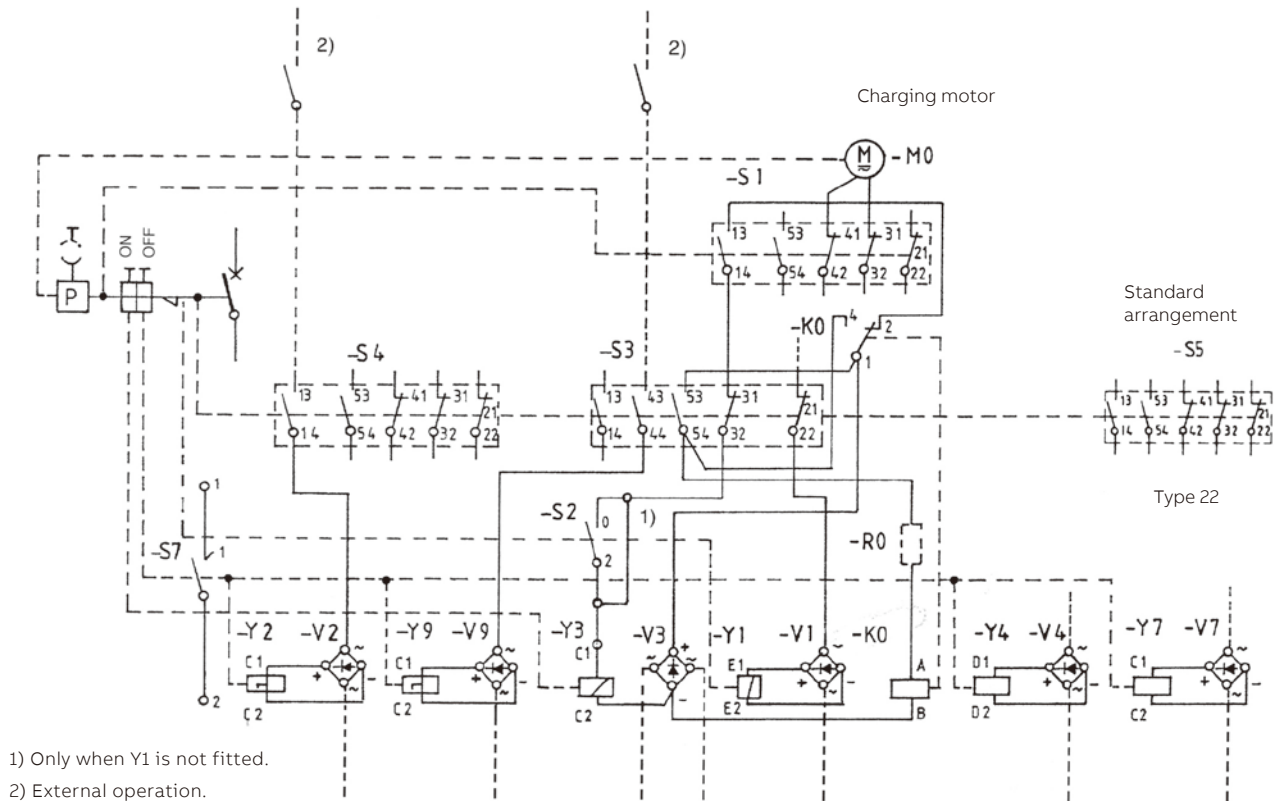


Special arrangement for -S5

 


Type 19

 


Type 20

 

Type 21

 

Type 23

 

Type 24

- S1 Auxiliary switch on operating mechanism
- S2 Auxiliary switch on blocking magnet
- S3 Auxiliary switch on the breaker shaft
- S4 Auxiliary switch on the breaker shaft
- S5 Auxiliary switch on the breaker shaft
- S7 Auxiliary switch for fault annunciation (fleeting contact time ≥ 30 ms)
- Y1 Blocking magnet
- Y2 Shunt release OFF
- Y3 Shunt release ON
- Y4 Undervoltage release
- Y7 Indirect overcurrent release
- Y9 Second shunt release OFF
- V1 Series rectifier for -Y1
- V2 Series rectifier for -Y2
- V3 Series rectifier for -Y3 and -K0
- V4 Series rectifier for -Y4
- V7 Series rectifier for -Y7
- V9 Series rectifier for -Y9
- M0 Charging motor for stored-energy spring
- K0 Anti-pumping relay
- R0 Series resistor

Note: 1) For DC 24 V, 30 V, 48 V, 60 V, 110 V, 125 V, 220 V, 240 V; AC 110 V, 220 V, 240 V.

2) Spring in the diagram is discharged. Standard configurations and options available for VD4 are contained in the diagram. Also see relative catalogues and order forms for all possible configuration.

3) Releases and blocking magnets are fundamentally wired with rectifiers (e.g. magnet holder 45 with integrated rectifiers V1, V2, V3 and V9). Rectifiers function as free-wheeling diodes with DC supply.

Tag. Available auxiliary circuit components


1) Motor charged, fixed version: Y1, Y2, Y3, K0, S1, S2, S3, S4, S5, M0

2) Motor charged, withdrawable version: Y1, Y2, Y3, K0, S1, S2, S3, S4, S5, S8, S9, M0

Any requirement exceed mentioned above, should be declared in the contract.

Circuit diagram for fixed VD4

Circuit breaker units in the switch position OFF and the stored-energy spring mechanisms is discharged.

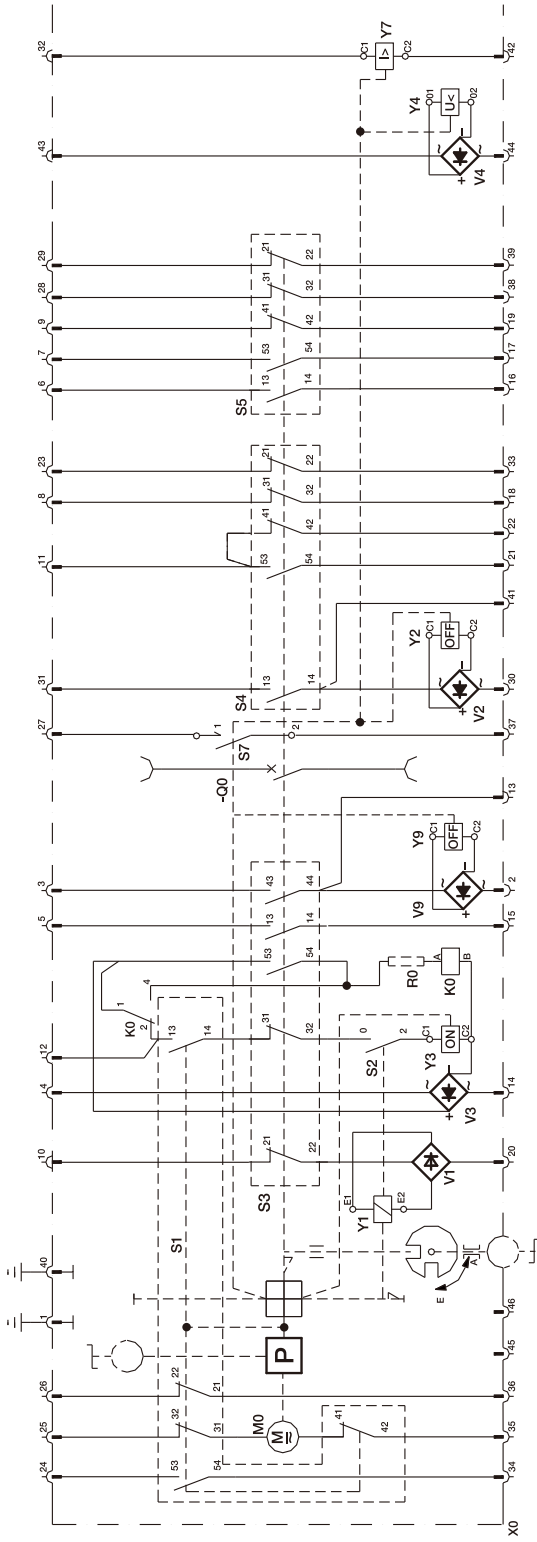


Auxiliary circuit component in circuit breaker		Note:
X0	Socket with 58 pins	• S1 shows the stored-energy spring mechanisms discharged. Available auxiliary circuit
Y1	Closing block magnet	
Y2	1 st Shunt release OFF	
Y3	Closing release ON	
Y4	Undervoltage release	• components: Y1, Y2, Y3, K0, S1, S2, S3, S4, S5 Any requirement exceed mentioned above, should be declared in the contract
Y7	Indirect overcurrent release	
Y9	2 nd Shunt release OFF	
S1	Auxiliary switch on mechanism	
S2	Auxiliary switch on block magnet -Y1	tripped indication
S3,S4,S5	Auxiliary switch on block magnet -Y1	
S7	Fleeting contact ≥ 30 ms for c.b.	
K0	Antipumping relay	Series rectifier
V0-V9	Series rectifier	
M0	Charging motor	

2 Technical data

Fig. 2/6 Circuit diagram for withdrawable VD4

Circuit diagram for withdrawable VD4 (standard)

Circuit breaker units in the switch position OFF in service position and with the stored-energy spring mechanisms discharged.

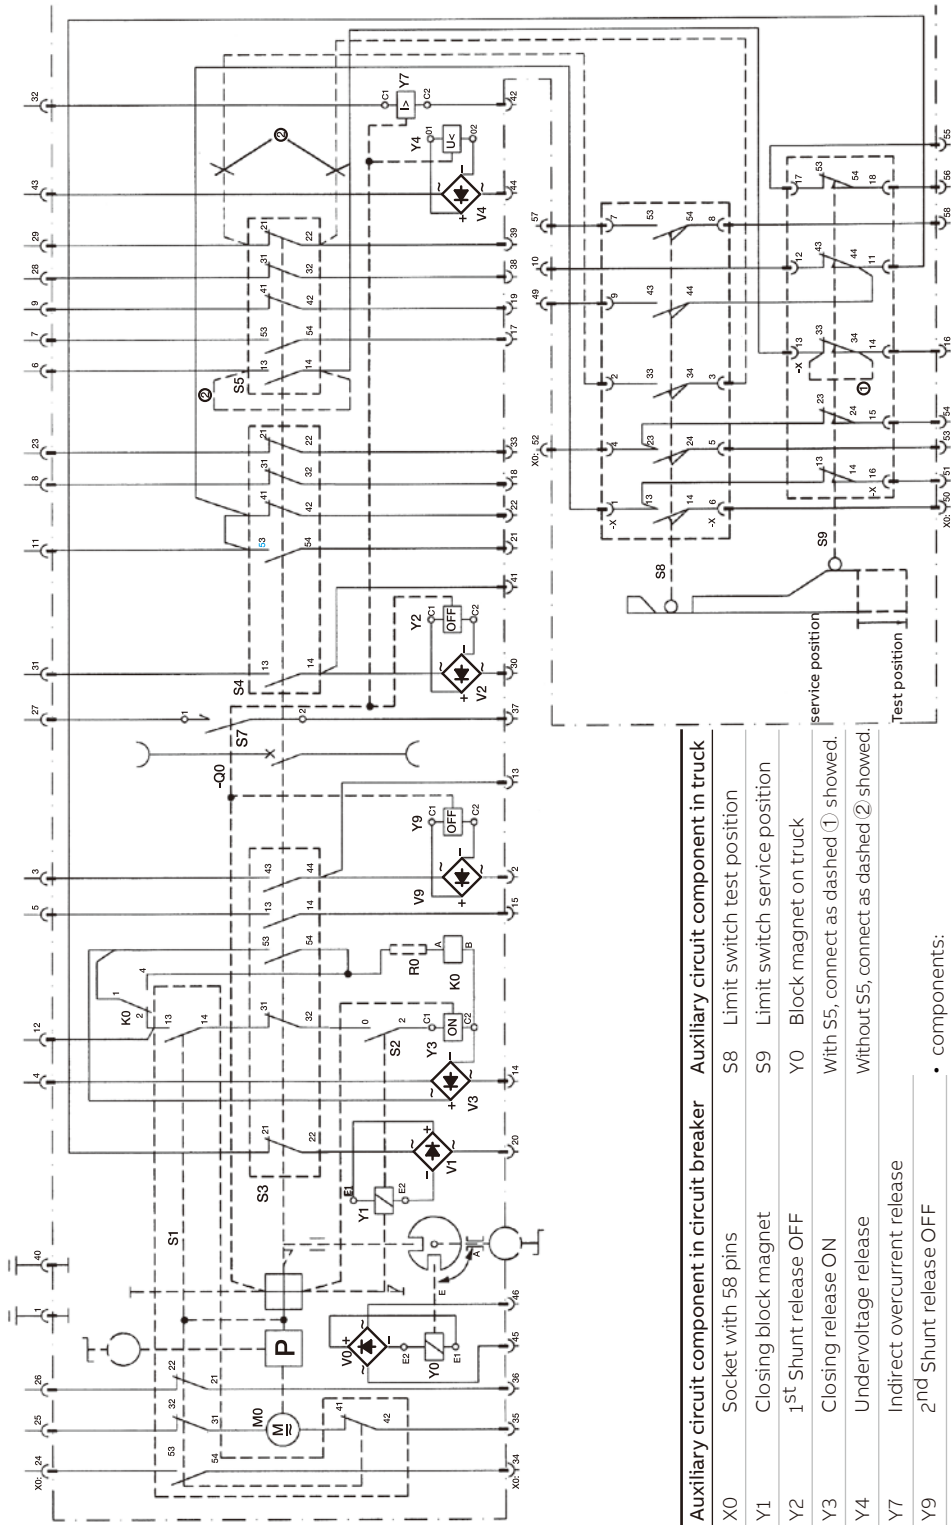

Auxiliary circuit component in circuit breaker	Auxiliary circuit component in truck
X0	Socket with 58 pins
Y1	Closing block magnet
Y2	1st Shunt release OFF
Y3	Closing release ON
Y4	Undervoltage release
Y7	Indirect overcurrent release
Y9	2nd Shunt release OFF
S1	Auxiliary switch on mechanism
S2	Auxiliary switch on block magnet -Y1
S3,S4,S5	Auxiliary switch on switch shaft
S7	Fleeting contact ≥ 30 ms for c.b. tripped indication
K0	Antipumping relay
V0-V9	Series rectifier
M0	Charging motor

- components:
 - Y1, Y2, Y3, K0, S1, S2, S3, S4, S5, S8, S9
- Any requirement exceed mentioned above, should be declared in the contract

Circuit diagram for withdrawable VD4 (10NO+10No)

Auxiliary circuit component in circuit breaker	Auxiliary circuit component in truck
X0	Socket with 64 pins
Y1	Closing block magnet
Y2	1st Shunt release OFF
Y3	Closing release ON
S1	Auxiliary switch on mechanism
S2	Auxiliary switch on block magnet -Y1
S3,S4,S5, S10,S11	Auxiliary switch on switch shaft
K0	Antipumping relay
Y1, Y2, Y3, K0, S1, S2, S3, S4, S5, S10, S11	components:

Auxiliary circuit component in circuit breaker		Auxiliary circuit component in truck	
X0	Socket with 64 pins	S8	Limit switch test position
Y1	Closing block magnet	S9	Limit switch service position
Y2	1 st Shunt release OFF	Y0	Block magnet on truck
Y3	Closing release ON		
S1	Auxiliary switch on mechanism		
S2	Auxiliary switch on block magnet -Y1		
S3,S4,S5, S10,S11	Auxiliary switch on switch shaft	Note:	• components:
K0	Antipumping relay		Y1, Y2, Y3, K0, S1, S2, S3, S4, S5, S10,
V0-V9	Series rectifier		S11, S8, S9, Any requirement exceed
M0	Charging motor		mentioned above, should be declared
			in the contract

3 Structure and function

3.1 Structure of the breaker poles (Figures 3/1, 3/2 , 3/6, 3/7 and 3/8)

The 36 kV and 40.5 kV circuit-breakers of type VD4 are designed as withdrawable units and fixed units.

The poles, which are constructed in column form, are mounted on a torsionally rigid enclosure substructure with rollers. The live parts of the breaker poles are located in the insulating material pole tubes and protected from impacts and other external influences.

With the breaker closed, the current path leads from the upper contact arm 57.1 and a chamber holder fixed in the pole tube to the fixed contact 58.2 in the vacuum interrupter 58, then via the moving contact 58.3 and roller contact to the lower contact arm 57.2. The switching motion is effected by means of the insulated coupling rod with internal contact force springs.

3.2 Structure of the breaker operating mechanism (Figures 3/3, 3/4, 3/7, 6/1 to 6/5, 7/5 to 7/8)

The operating mechanism located in the housing substructure is of the spring type and acts on the three breaker poles. The necessary operating energy is ready for activation by charging the spring energy storage mechanism.

The stored-energy spring mechanism essentially consists of drum 55.33 (fig. 7/5) containing the spiral spring, the charging system, the latching and operating mechanism and the linkages which transmit the force to the breaker poles. In addition, there are supplementary components such as the charging motor, releases, auxiliary switches and the controls and instruments.

The operating mechanism is fundamentally suitable for autoreclosing and, due to the short charging times, also for multi-shot autoreclosing.

The operating mechanism is normally fitted with a charging motor. There is also a facility for charging the stored energy spring manually.

There is one rating plate 55.7 (fig. 6/1) with the main data of the switch equipment on front cover plate left hand side 50.7.

The basic version of the stored-energy spring mechanism is fitted with the following auxiliary equipment:

- Shunt release OFF Y2
- Shunt release ON Y3
- Blocking magnet Y1 with auxiliary switch S2
- Five-pole auxiliary switches S3 and S4

- ON-OFF operating shaft 54 (fig. 6/3)
- Mechanical switch position indicator 55.4 (fig.6/1)
- Charging condition indicator 55.8 (fig 6/2) for the stored energy spring
- Mechanical operating cycle counter 55.5 (fig 6/1)
- Motor charging mechanism
- Five-pole auxiliary switch S1 to switch the charging motor
- Anti-pumping relay K0

The following additional equipment can be installed:

- Blocking magnet Y0 on the withdrawable part
- Second shunt release OFF Y9
- Indirect overcurrent release Y7
- Auxiliary switch S7 for electrical opening signalling
- Undervoltage release Y4
- Five-pole auxiliary switch S5

3.2.1 Releases, blocking magnet and auxiliary switches (Figures 2/4 to 2/6, 3/3, 6/2, 7/7 and 7/8)

The releases and the blocking magnet are mounted at the bottom of the stored-energy spring mechanism.

The allocation of the auxiliary switches can be seen in the wiring diagram of figure 2/4.

The five-pole auxiliary switch S1 is operated by the charging condition indicator 55.8 (fig. 3/3). It controls the charging motor M1, serves as an electrical interlock for shunt release ON Y3 when the spring energy storage mechanism is not sufficiently charged, and also provides an electrical switching readiness signal.

Operation of the five-pole auxiliary switches S3, S4 and S5 is dependent on the switching position of the circuit-breaker.

Auxiliary switch S3 interrupts the circuit of the optional additional shunt release OFF Y9 with the circuit-breaker in the open position, and the circuits of shunt release ON Y3 and the optional blocking magnet Y1 with the circuit-breaker in the closed position. There is one further NOC for other purposes.

Auxiliary switch S4 interrupts the circuit of shunt release OFF Y2 with the circuit-breaker in the open position. One further NOC and three NCCs are available for annunciation, control and interlock purposes.

Auxiliary switch S5 can be optionally designed with any possible combination of contacts from five NOCs to five NCCs. Its contacts are available for any required control, annunciation or interlock

functions. The auxiliary switch is normally configured as shown in figure 7/3.

The single pole auxiliary switch S7 (fleeting contact time 30 ms) serves to provide a fault signal ("breaker released"). With remote control, the auxiliary switch is necessarily operated via:

- Shunt release OFF Y2 or
- Shunt release OFF Y9 or
- Undervoltage release Y4 or
- Indirect overcurrent release Y7

Note:

1. Shunt releases OFF (Y2) and ON (Y3) are exclusively provided for opening and closing in normal operation. For safety breaking operations, the second shunt release OFF (Y9) can be used as back up of Y2, in most cases with a separate control voltage supply.

These three releases are of the solenoid type and suitable for a large number of operating cycles.

2. The under voltage release (Y4) and/or indirect over current release (Y7) are pure safety and protection releases and must not be used for switching in normal operation.

3.3 Function

3.3.1 Charging of the spring energy store (Figures 3/3, 3/10, 6/2, 6/6, 7/7 and 7/8)

To provide the necessary motive energy, the spring energy storage mechanism is charged via chain 55.34 (fig. 7/5) fitted with ratchet wheel 55.35 (fig. 7/5), either automatically by a charging motor or by hand in a vertical pumping action with charging lever 128 (fig. 6/2). The current charging condition is shown at charging condition indicator 55.8 (fig. 7/4).

As a precondition for an autoreclosing sequence, the operating mechanism is either (re-) charged after a closing operation automatically by the charging motor, or it requires (re-) charging by hand if the operating mechanism is of the manual type.

3.3.2 Closing procedure

(Figures 3/4, 3/6, 6/1, 6/3 and 7/7)

The closing process is initiated manually by the triple bit key 145 (fig. 6/6) and the ON-OFF operating shaft 54 (fig. 6/3), or electrically by activation of shunt release Y3. The release mechanism then permits drive shaft 55.30 (fig. 7/5)

to be rotated by the (previously) charged spiral spring. The moving contact 58.3 (fig. 3/6) in vacuum interrupter 58 is moved until the contacts touch by cam disk and further kinematic links. In the further sequence of motion, spring arrangement is tensioned and the appropriate amount of contact force thus applied. The available overtravel is higher than the maximum value of contact erosion during lifetime of the interrupter. During the closing process, opening springs are simultaneously tensioned.

3.3.3 Opening procedure

(Figures 3/3, 3/6, 6/3 and 7/7)

The opening procedure is initiated manually by the triple bit key 145 (fig. 6/6) and the ON-OFF operating shaft 54 (fig. 6/3), or electrically by activation of one of the releases Y2, Y4, Y7 or Y9. Release mechanism then permits drive shaft 55.30 (fig. 7/5) to be turned further by the spring energy storage mechanism, which is still sufficiently charged. The opening spring, which is thus released, moves the contact 58.3 (fig. 3/6) into the open position at a defined speed.

3.3.4 Autoreclosing sequence

An OFF-ON or OFF-ON-OFF autoreclosing sequence is activated and checked by the protection system. It is necessary for the spiral spring in the operating mechanism to be in the (re-) charged condition, with the circuit-breaker in the closed position. The (re-) charging process is carried out automatically after closing of the breaker on breakers with motor charging mechanisms, but must be carried out manually on breakers without charging motors (or when the charging motor has broken down). Opening of the breaker is also possible during the (re-) charging process, but sub-sequent closing of the breaker is however blocked until the charging process has been completed.

3.3.5 Quenching principle of the vacuum interrupter

Due to the extremely low static interrupter chamber pressure of 10^{-2} to 10^{-6} pa, only a relatively small contact gap is required to achieve a high dielectric strength. The arc is extinguished on one of the first natural current zeros.

Due to the small contact gap and the high conductivity of the metal vapour plasma, the arc drop voltage, and additionally, due to the short arcing time, the associated arc energy, are extremely low, which has advantageous effects on the life of the contacts and thus on that of the vacuum interrupters.

3 Structure and function

Figure 3/1 Withdrawable part with circuit-breaker, type VD4, operator's side



Figure 3/2 Withdrawable part with circuit-breaker, type VD4, pole side


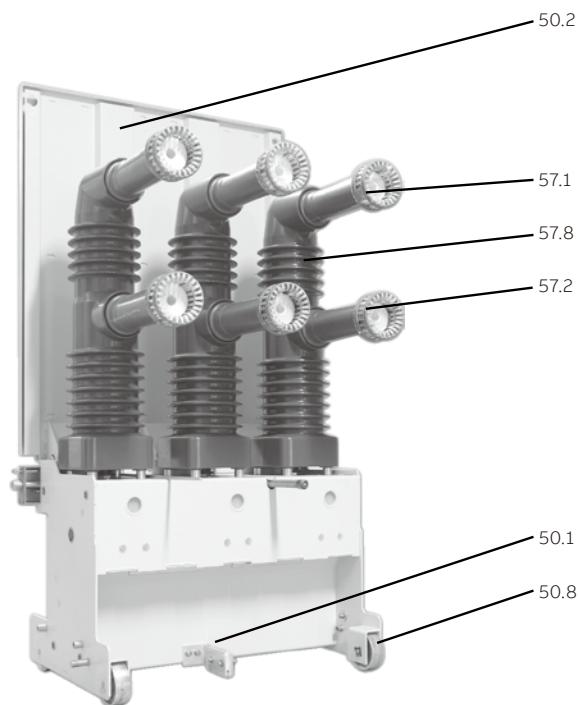



Figure 3/3 Withdrawable part with circuit-breaker, type VD4, controls for the circuit-breaker

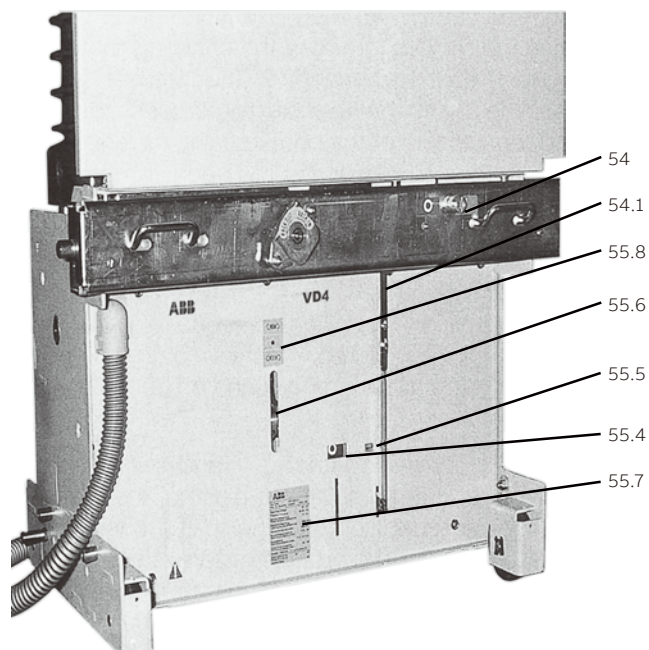

- | | | | |
|------|-----------------------|------|-------------------|
| 50.1 | Earthing contact | 57.1 | Upper contact arm |
| 50.2 | Front partition plate | 57.2 | Lower contact arm |
| 50.8 | Wheel | 57.8 | Embedded pole |


- | | |
|------|---------------------------|
| 54 | ON-OFF operating shaft |
| 54.1 | Link rod |
| 55.4 | Switch position indicator |
| 55.5 | Operating cycle counter |
| 55.6 | Socket for charging lever |
| 55.7 | Rating name plate |
| 55.8 | Charging status indicator |

Figure 3/4 Withdrawable part with circuit-breaker, type VD4, left and operator's side view

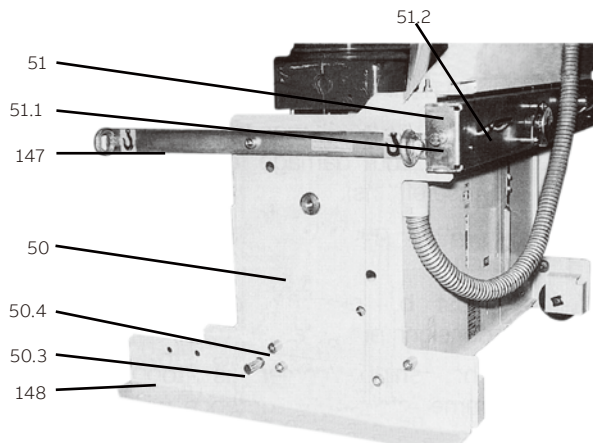


- | | | | |
|------|--------------------------------|------|-------------------|
| 50 | Frame of the withdrawable part | 51.1 | Catch pin |
| 50.3 | Actuating pin | 51.2 | Sliding handle |
| 50. | Guide cam | 147 | Transport bracket |
| 51 | Interlock yoke | 148 | Transport profile |

Figure 3/5 Withdrawable part with circuit-breaker, type VD4, (pole side, below)

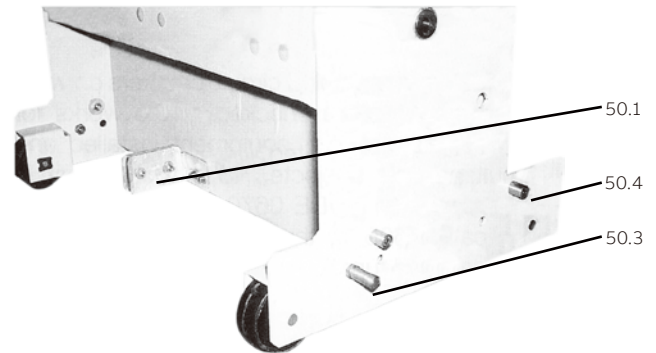

- | | |
|------|------------------|
| 50.1 | Earthing contact |
| 50.3 | Actuating pin |
| 50.4 | Guide cam |

Figure 3/6 Partial section of a vacuum interrupter

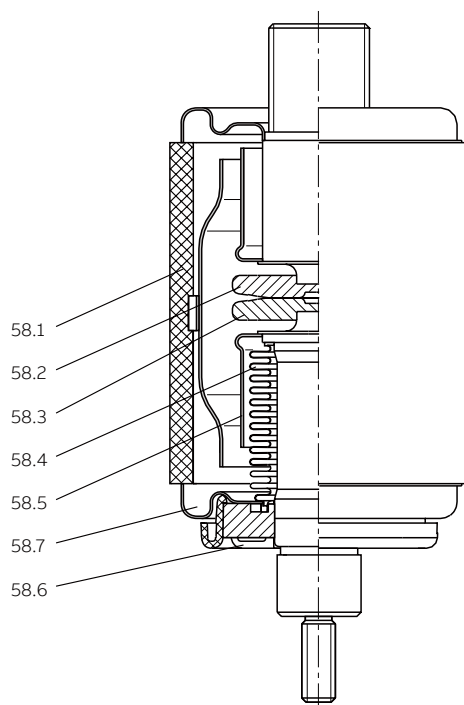


- | | |
|------|----------------|
| 58.1 | Insulator |
| 58.2 | Fixed contact |
| 58.3 | Moving contact |
| 58.4 | Metal bellows |
| 58.5 | Screen |
| 58.6 | Guide cylinder |
| 58.7 | Lid |

3 Structure and function

Figure 3/7 Vacuum circuit-breaker, type VD4, for fixed installation, operating side



Figure 3/8 Vacuum circuit-breaker, type VD4, for fixed installation, terminal side

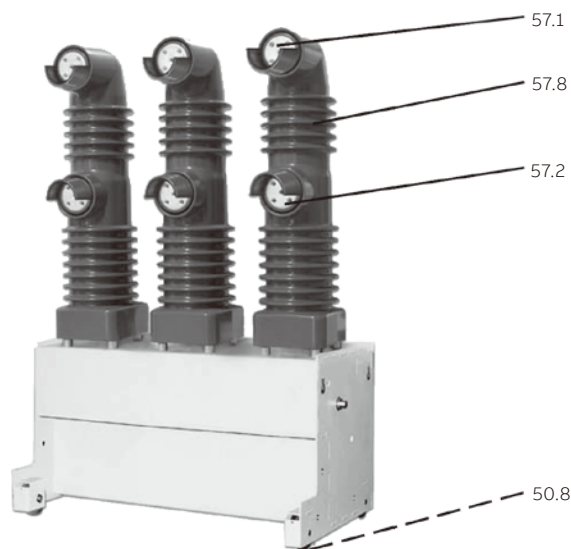

- 50.8 Wheels
- 57.1 Upper breaker terminal
- 57.2 Lower breaker terminal
- 57.8 Embedded pole

Figure 3/9 Vacuum circuit-breaker, type VD4, for fixed installation, version with partition, terminal side


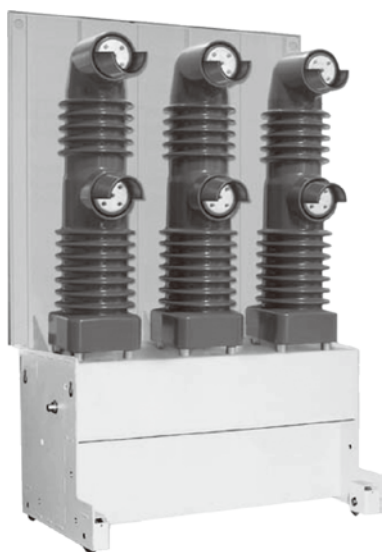


Figure 3/10 Indicators and controls on a circuit-breaker for fixed installation

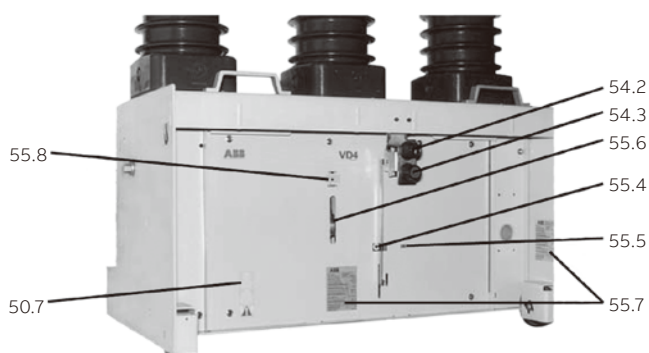

- 50.7 Front plate
- 54.2 Mechanical ON pushbutton
- 54.3 Mechanical OFF pushbutton
- 55.4 Mechanical switch position indicator
- 55.5 Mechanical operating cycle counter
- 55.6 Socket (for charging lever)
- 55.7 Rating name plate
- 55.8 Charging status indicator

4 Dispatch and storage

4.1 Condition on delivery

- The factory-assembled circuit-breakers parts are checked at the works for completeness of the equipment installed and simultaneously subjected to a routine test in accordance with GB/T 11022, GB/T 1984, IEC 60694, DIN VDE 0607 IEC publication 62271-100, thus verifying their correct structure and function

4.2 Packaging

The circuit-breaker is open and discharged when they are mounted individually on wooden pallets and sealed in film and/or packed in cardboard for delivery.

Packaging for overseas shipment:

- Drying agent bags inserted in the filmsealed packaging

4.3 Transport

Loading of the package units must only be carried out with a

- crane
- fork-lift truck and/or
- trolley jack

Notes:



- Avoid impact during handling
- Do not subject to other damaging mechanical stresses
- Lifting gear must not be attached to the breaker poles or parts of the operating mechanism
- When moving the withdrawable part only use the sliding handles 51.2 (fig. 3/4) (e.g. for racking in/out the circuit-breaker unit into/out of the switchgear panel or for the transport of the unit in the switchgear room). Do not bring any force on the front partition plate 50.2 (fig. 4/1) of the withdrawable part
- Only handle the modules by crane with bolted on transport brackets 147 (fig. 4/1), suitable lifting ropes and crane harness
- Ensure that the circuit-breaker unit on the withdrawable part, with its relative high situated centre of gravity, cannot tip over when moving it by crane or fork-lift truck, or when handling it outside the switchgear room

Figure 4/1 VD4 breaker on withdrawable part

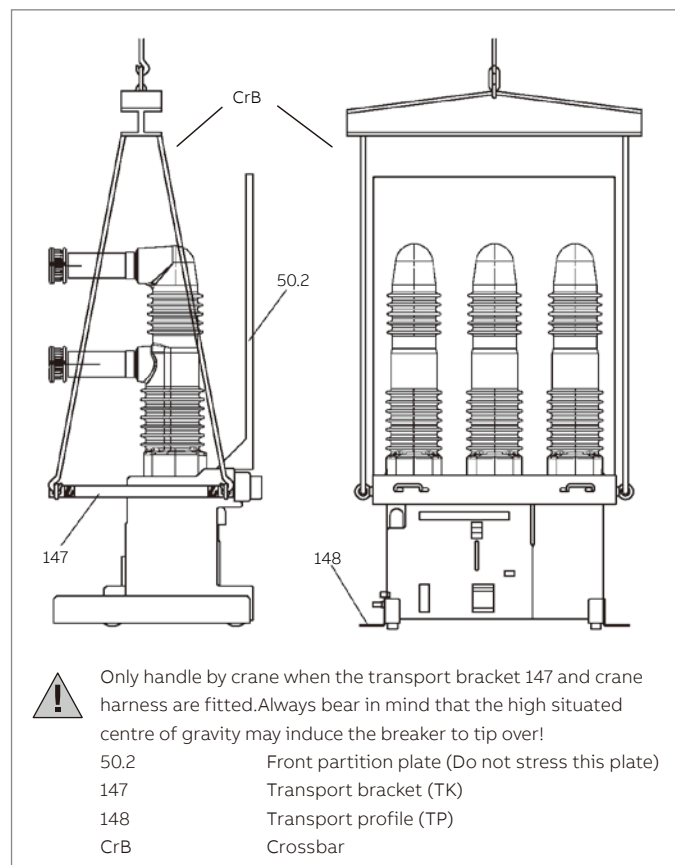


Figure 4/2 VD4 breaker for fixed installation



4 Dispatch and storage

4.4 Delivery

The duties of the consignee on receipt of the switching devices at site include the following:

- Checking the delivery for completeness and freedom from damage (e.g. moisture and its adverse effects)
- Any short quantities, defects or damage in transit:
 - Must be precisely documented on the consignment note
 - The shipper/carrier is to be notified immediately in accordance with the liability provisions

Note:

Always take photographs to document any major damage.

4.5 Intermediate storage

Intermediate storage of the circuit-breaker unit in the switch position OFF and the stored energy spring mechanisms discharged (Indicator DISCHARGED: ).

Conditions for optimum intermediate storage:

1. Devices with basic packaging or unpacked:
 - A dry and well ventilated storeroom with climate in accordance with GB/T 11022, IEC 60694, DIN VDE 0670
 - Room temperature which does not fall below -15°C
 - Do not remove or damage the packaging
 - Unpackaged devices:
 - Are to be loosely covered with protective sheeting
 - Sufficient air circulation must be maintained
 - Check regularly for any condensation
2. Devices with seaworthy or similar packaging with internal protective sheeting:
 - Store the transport units:
 - protected from the weather
 - dry
 - safe from damage
 - Check the packaging for damage
 - Check the drying agent:
 - on arrival of the consignment
 - subsequently at appropriate intervals

5 Installation

(Figures 3/4, 4/1 and 4/2)

Perfect operation of the circuit-breaker depends on careful and professional handling of the circuit- breaker.

- Allocate each unit to the appropriate switchgear panel in accordance with the switchgear plan and the rated electrical data
- Remove the transport profile 148 and transport brackets 147
- Insert the withdrawable part in the switchgear panel checking for unimpeded motion and function sequences, including the closing of primary contacts when the service position is reached
- Remove any dirt

When the switchgears are operated in areas with high humidity and/or major rapid temperature fluctuations, there is a risk of dew deposits which must remain an exception in normal operating conditions. Provisions should be taken according to section 1.3.2 (special operating conditions).

6 Commissioning/Operation

(Figures: 3/2, 3/3, 3/10, 6/1 to 6/7)

6.1 Note on safety at work

- The switchgear may only be operated by specially trained personnel who are familiar with the characteristics of the particular device
- Operating circuit-breaker in normal condition in accordance with relevant regulations in GB/T 11022, IEC 60694, is a precondition of faultfree operation

6.2 Preparatory activities

(Prior to application of primary voltage)

- Check the circuit-breaker for damage and restore to the proper conditions where necessary
- Remove any contamination (particularly on the insulating materials) which has occurred during transit, storage or installation
- Check the primary connections and the earthing contact 50.1 (fig. 3/5)
- Check the charging motor on circuit-breakers with motor-operated mechanisms by applying auxiliary voltage
- On breakers with manual charging mechanisms, charge the stored energy spring by hand (see Section 6.3.1)
- Perform a trial opening or closing operation of the circuit-breaker using the triple bit key 145 (fig. 6/6) at the ON-OFF operating shaft 54 (fig. 3/3) (taking into account any required auxiliary voltage and any relevant interlocks). Observe switch position indicator 55.4 (fig.3/3) and charging condition indicator 55.8 (fig.3/3)
- The further procedure results from the interaction of the truck with the switchgear cubicle. See the Instruction Manual of the switchgear
- Ensure that the Instruction Manual is available to the operators at all times

6.3 Operation of the circuit-breaker

(Figures 6/1 to 6/3 and 6/6, 6/7)

6.3.1 Charging the spring energy storage mechanism Circuit-breakers with charging motors:

- Charging takes place automatically
- If the charging motor breaks down, the charging process can be carried out or completed manually

Circuit-breakers with manual charging mechanisms:

- Insert charging lever 128 into the socket 55.6 (fig.6/2) and pump up and down for approx. 25 strokes until the charged condition is displayed

- When the charged condition is reached, the charging mechanism automatically disengages, and further strokes of the charging lever have no effect

Note:

Charging of the spring energy storage mechanism by hand should only take place when the truck is in the test/disconnected or removed position.

Key to the charging condition indications:



Discharged



Charged

As a precondition for an autoreclosing sequence, the operating mechanism is either (re-)charged after a closing operation automatically by the charging motor, or it requires (re-)charging by hand if the operating mechanism is of the manual type.

6.3.2 Closing and opening

- Operate the local or remote electrical control unit
- Observe switch position indicator 55.4 (fig.3/3)

The mechanical control system facilitates manual operation of the circuit-breaker in the switchgear cubicle even with the door closed:

- Fit triple bit key 145 on ON-OFF operating shaft 54
- Turn the triple bit key approx. 15 clockwise until the stop is reached to close the circuit-breaker, or anti-clockwise to open it

The operating cycle counter 55.5 (fig.6/1) is automatically incremented by one complete figure with each switching cycle. On completion of a switching operation the switch position indicator 55.4 in the window of front cover plate 50.7 (fig.6/1). shows the appropriate position of the circuit-breaker.

The anti-pumping relay K0 (wiring diagram in figure 2/3) prevents repeated ON-OFF switching operations if, for example, the breaker is tripped by a protection relay in response to a primary side fault while a permanent electrical closing command is simultaneously applied. The circuit-breaker can then only be closed after the closing command has been interrupted.


6.3.3 Operating sequence

Circuit-breaker with motorized charging of the stored-energy spring mechanism

Operating sequence	Result of operation		Possible subsequent switching operation
	Breaker Position	Charging Condition	
Switch on charging motor	O		-
Automatic charging	O		On-Off
Close breaker... and	I		Off
automatically (re-) charge	I		Off-On-Off or auto-reclosing sequence
Open breaker	O		On-Off
Close breaker... and	I		Off
automatically (re-) charge	I		Off-On-Off or auto-reclosing sequence
Autoreclosing sequence	O		
(Activation via protection system)	I		(automatic charging starts)
Off	O		
Automatic charging completed	O		On-Off
Close breaker... and	I		Off
automatically (re-) charge	I		Off-On-Off or auto-reclosing sequence


6 Commissioning/Operation

Figure 6/1 Withdrawable part with circuit-breaker, type VD4, operator's side

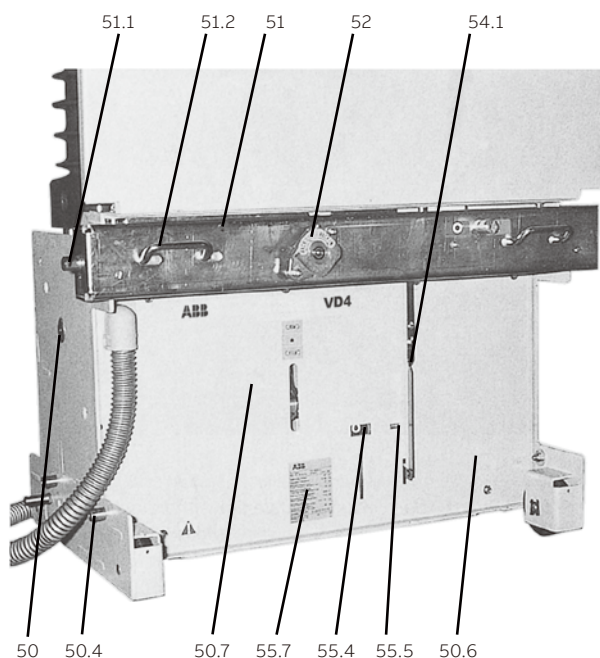


- | | | | |
|------|--------------------------------|------|---------------------------|
| 50 | Frame of the withdrawable part | 51.2 | Sliding handle |
| 50.4 | Guide cam | 52 | Spindle |
| 50.6 | Cover plate, right hand side | 54.1 | Link rod |
| 50.7 | Cover plate, left hand side | 55.4 | Switch position indicator |
| 51 | Interlock yoke | 55.5 | Operating cycle counter |
| 51.1 | Catch pin, (spring loaded) | 55.7 | Rating plate |

Figure 6/3 Manual operation of the circuit-breaker, by turning the triple bit key approx. 15 clockwise (ON), or approx. 15 anti-clockwise (OFF)

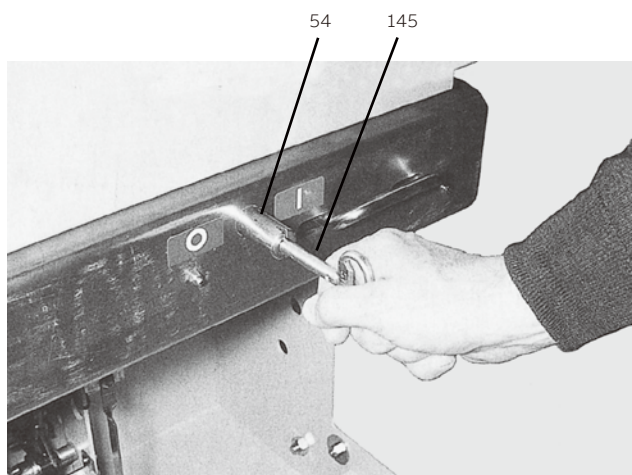


- | | |
|-----|-----------------------------------|
| 54 | ON-OFF operating shaft |
| 145 | Triple bit key (ON-OFF operation) |

Figure 6/2 Charging the store-energy spring mechanism manually by moving the inserted charging lever up and down

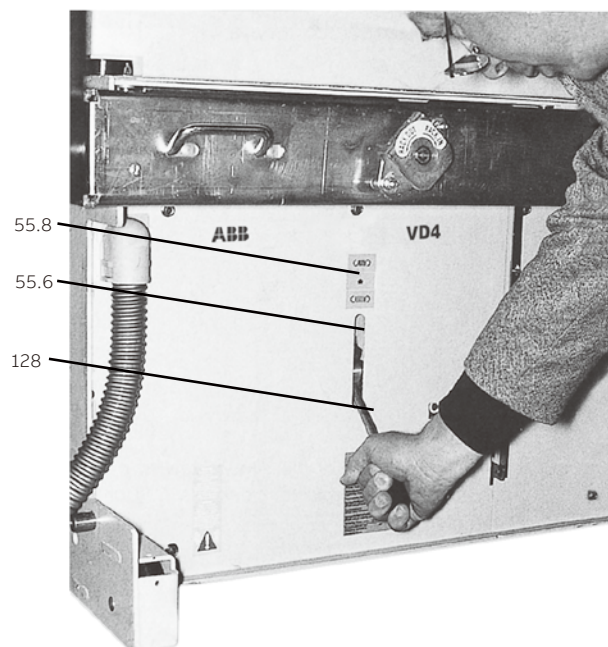


- | | |
|------|------------------------------|
| 55.6 | Socket for charging lever |
| 55.8 | Charging condition indicator |
| 128 | Charging lever |

Figure 6/4 Fitting the hand crank (against spring-loaded intermediate plate) to move the withdrawable part inside the panel clockwise towards the service position, and anti-clockwise from the service position towards the test/disconnected position

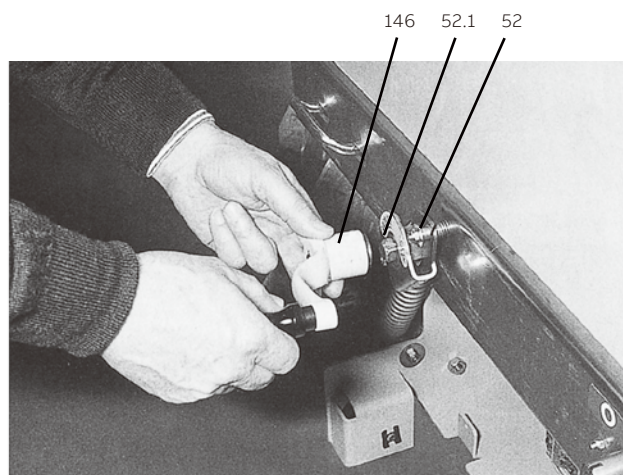


- | | |
|------|---------------|
| 52 | Spindle |
| 52.1 | Square spigot |
| 146 | Hand crank |

Figure 6/5 Interlock yoke with sliding handles which will be moved inwards to release the withdrawable part for withdrawing from the panel

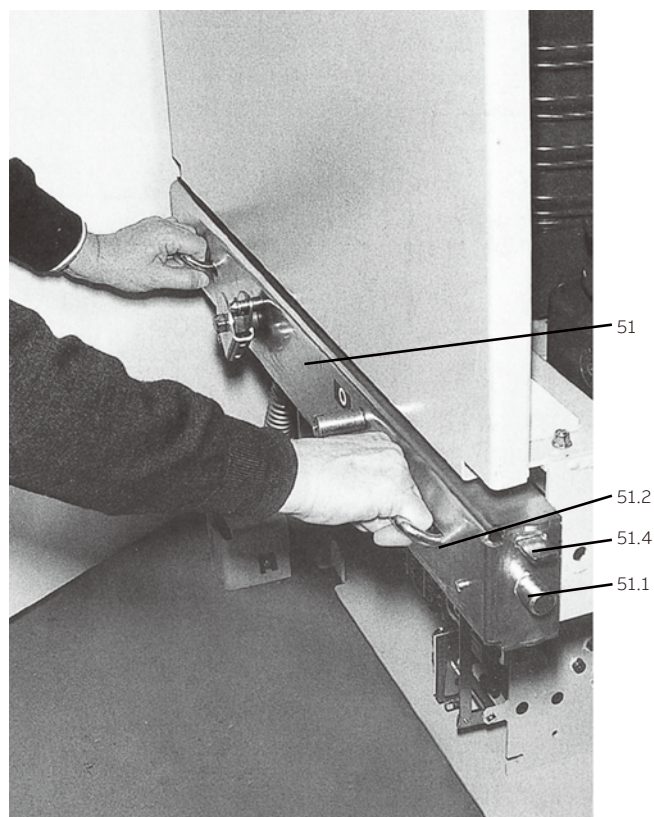


- 51 Interlock yoke
- 51.1 Catch pin, spring loaded
- 51.2 Sliding handle
- 51.4 Blocking shaft (interlocking circuit-breaker and withdrawable part)

Figure 6/6 Operating accessories

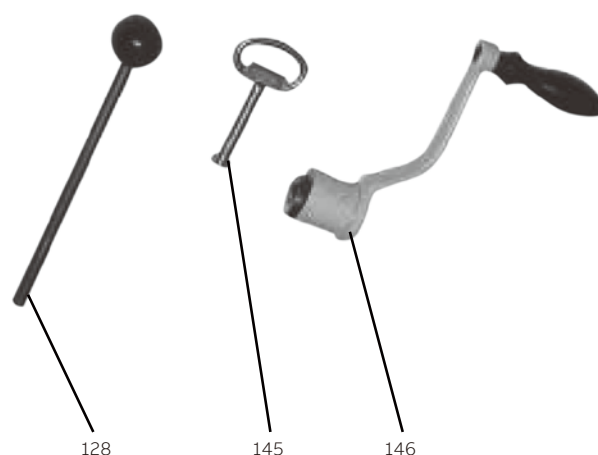

- 128 Charging lever
- 145 Triple bit key (ON-OFF operation)
- 146 Hand crank (for moving of the truck)

Figure 6/7 Vacuum circuit-breaker, type VD4, for fixed installation. Manual charging of the stored-energy spring

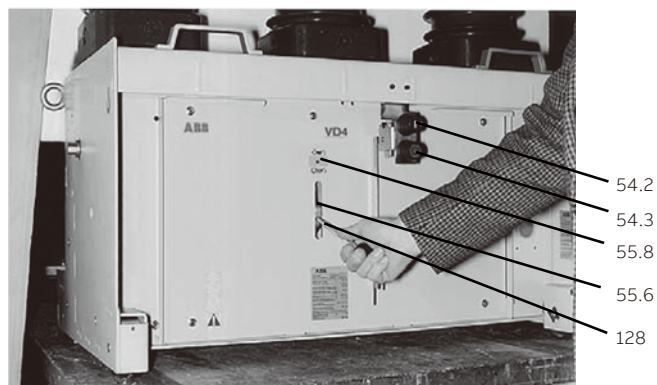

- 54.2 Mechanical ON push-button
- 54.3 Mechanical OFF push-button
- 55.6 Socket for charging lever
- 55.8 Charging condition indicator
- 128 Charging lever

7 Maintenance

Maintenance serves to ensure trouble-free operation and achieve the longest possible working life of the circuit-breaker. It comprises the following closely related activities:

Inspection: Determination of the actual condition

Servicing: Measures to maintain the specified condition

Repair: Measures to restore the specified condition

7.1 General (Figure 7/1)

Vacuum circuit-breakers are characterized by their simple and robust construction. They have a long life expectancy. Their operating mechanisms have a low maintenance requirement, and the interrupters are maintenance-free during their working life. There is no adverse effect on the vacuum, even from frequent switching of operating and short-circuit currents.

The servicing intervals and scope are determined by environmental influences, the switching sequences and number of short-circuit breaking operations.

With carefully performed inspections and servicing work, and under normal operating conditions, the circuit-breakers, depending on the type, have a service life of up to 30,000 operating cycles and more.

Note: The following must be observed for all maintenance work:

- The relevant specifications in section 1.2.2
- Notes on safety at work in section 6.1
- Standards and specifications in the country of installation

Maintenance work may only be performed by fully trained personnel, observing all the relevant safety regulations. It is recommended that ABB Xiamen Switchgear Limited Co. after-sales service personnel should be called in, at least during the performance of servicing and repair work.

While the work is in progress, all auxiliary voltage sources must also be disconnected and secured to prevent reconnection.

Note:



In order to prevent accidents (particularly injury to hands!) extreme care should be taken during all repair work on the operating mechanism, especially with front cover plates 50.6 and 50.7 removed.

The spiral spring in the spring energy storage mechanism, for instance, retains a basic tension which is independent of

the charging and discharging processes during switching, so as to ensure correct function. This spring energy can be inadvertently released if work is performed incorrectly on the spring mechanism!

7.2 Inspection and functional testing

7.2.1 Switching devices in general

The proper condition of the switching device is to be verified by regular inspection.

Under normal operating conditions, testing by a qualified personnel is to be performed at least every 4 years.

In unusual operating conditions (including adverse climatic conditions) and/or special environmental pollutions (e.g. heavy contamination and aggressive atmosphere), inspection may also be necessary at shorter intervals.

Inspection at fixed intervals may be waived if the switchgear is permanently monitored by a qualified personnel.

The checks first and foremost comprise visual examination for contamination, corrosion, moisture and discharge phenomena.

If an incorrect condition is found, appropriate servicing measures are to be initiated.

7.2.2 Stored-energy spring mechanism (Figures 7/2 to 7/5)

Functional testing of the operating mechanism is to be performed:

- after 5000 operating cycles or during servicing work as set out in 7.2.1
- Prior to functional testing, switch the breaker off and isolate the outgoing feeder

Scope of functional testing:

- Perform several switching operations under no load, above all with circuit-breakers seldom operated in normal service
- Switch off the charging motor (if fitted) and discharge the spring mechanism by ON/OFF switching operations
- Examine visual the condition of the lubrication on rotary bearings, sliding surfaces, etc
- Check the proper mechanical/electrical sequence of the individual functions
- Check circuit-breaker's appearance

7.2.3 Checking auxiliary switch settings on withdrawable part (Figures 6/4, 6/6, 2/5 and 7/2)

Compliance with the interlock conditions in the

areas of the test/disconnected position and the service position is ensured by auxiliary switches S8 and S9, located in the breaker housing.

In test operations, the withdrawable part must be moved by hand with the crank 146 fitted.

1. Settings in the area of the test/disconnected position.
 - Move the withdrawable part out of the test/disconnected position towards the service position with a few turns by the crank 146
 - Slowly move the withdrawable part back to the stop
 - Auxiliary switch S8 must then operate when the hand crank has a remaining angle of + 60° of turn to reach the stop
 - Slowly insert the withdrawable part from the test/disconnected position towards the service position until auxiliary switch S8 just operates

In this position, it must still just be possible to move closing push rod 55.2 (fig.7/3). For this test, the function of the blocking magnet Y0 (if fitted) must be deactivated manually.

This condition ensures that the electrical interlock takes effect before the mechanical interlock in the motion sequence involved.

2. Settings in the area of the service position.
 - Move the withdrawable part out of the limit position towards the test/disconnected position with a few turns by the crank 146
 - Slowly move the withdrawable part forwards again to the stop
 - Auxiliary switch S9 must then operate when the hand crank has a remaining angle of + 60° of turn to reach the stop

7.2.4 Testing of interlock conditions (Figures 6/4, 6/6, 2/4, 2/5 and 7/2)

The testing procedures for the withdrawable part.

1. The withdrawable part must only be movable from the test/disconnected position into the service position when the circuit-breaker is open.

Check the following conditions individually:

- With the circuit-breaker closed, insertion of the withdrawable part towards the service position must be blocked after only half a turn of the crank in the clockwise direction
- With the earthing switch closed, insertion of the withdrawable part towards the service position must be blocked after only two clockwise turns of the crank



Do not use force !

2. The withdrawable part must only be movable from the service position into the test/disconnected position with the circuit-breaker open.

Check this condition as follows:

- With the circuit-breaker closed, withdrawal movement of the withdrawable part must be blocked after only half a turn of the crank in anti-clockwise direction
3. Closing of the circuit-breaker must only be possible when the withdrawable part is in the defined test/disconnected position or service position.

The control wiring plug 10.2 must have been inserted previously.

Check this condition as follows:

- It must not be possible to close the circuit-breaker with the withdrawable part in any position between the test/disconnected position and the service position
 - Enabling of switching when the withdrawable part moves into the service position is effected electrically by operation of auxiliary switch S9 in the breaker housing
 - For motion into the test/disconnected position, the same enabling conditions apply analogously, in this case by means of auxiliary switch S8 in the breaker housing
4. It must only be possible to open the circuit-breaker (manually) when the withdrawable part is in the service position or test/disconnected position and the control voltage has failed.

7.2.5 Poles

No inspection of the breaker pole above and beyond the stipulations of section 7.2.1 is necessary.

7.3 Servicing

7.3.1 General requirements

If cleaning is found to be necessary during inspections as set out in 7.2.1, the following procedure is to be adopted:

- Prior to cleaning, the working area is to be isolated and secured against reclosing where necessary in accordance with the safety regulations
- Cleaning of surfaces in general:
 - Dry, lightly adhering dust deposits with a soft, dry cloth
 - More strongly adhering contamination with slightly alkaline household cleanser or Rivotla BWR 210

7 Maintenance

- Cleaning of the insulating material surfaces and conductive components:
 - Light contamination: with Rivolta BWR 210
 - Strongly adhering contamination: with cold cleanser 716

Wipe down after cleaning, using clean water, and dry properly.

- Observe the manufacturer's instructions and the special ABB instruction manuals Ba 1002/E or BA 1006/E on safety at work.

Note:

Use only halogen free cleansers, and in no case 1.1.1-trichlorethane, trichlorethylene or carbon tetrachloride!

7.3.2 Stored-energy spring mechanism

Servicing for 10 years or the spring mechanism is to be performed after 10,000 operating cycles.

Prior to servicing, switch the breaker off, and isolate the outgoing feeder.

Observe the safety regulations!

Details of the servicing:

- Switch off the charging motor (if fitted), and discharge the spring energy storage mechanism by closing and opening the breaker once
- Replace parts subject to high climatic and mechanical stresses after 10,000 operating cycles as a precaution (for details see ABB Xiamen Switchgear Limited Co. after-sales service)
- For replacing highly stressed parts neutralize basic tension of the spiral spring, state the rate. Be careful when carrying out
- Relubricate pawls, support shafts, sliding and rotating bearing surfaces. Lubricant: Isoflex Topas NB 52. (Code GCE 0007249P0100)
- Check the fit of fasteners (e.g. locking pins) in cranks, pins, bolts etc. Check the tightness of fastening bolts
- Always replace any spring lock washers, split pins and other fasteners removed during the work with new parts when reassembling the equipment
- Perform comprehensive mechanical and electrical functional tests

Note:

This work may only be performed by the site-service personnel of ABB Xiamen Switchgear Limited Co. or adequately qualified personnel.

7.3.3 Poles

The breaker pole with the vacuum interrupter is maintenance-free up to reaching the permissible number of vacuum interrupter operating cycles in accordance with section 2.4.

Checking of the vacuum is only necessary when there is good cause to suspect that force applied externally to a pole tube has caused damage to the vacuum interrupter inside.

If the pole tube is damaged or destroyed, it may be necessary to replace the complete breaker pole.

The working life of the vacuum interrupter is defined by the sum current limit corresponding to the equipment data in individual cases in accordance with section 2.4:

- When the sum current limit is reached, the complete breaker poles are to be replaced
- When the permissible number of mechanical operating cycles (i.e. the number corresponding to $I_a=0$ on the characteristic curve) of the vacuum interrupters has been reached, the breaker poles must be replaced

However, it should be investigated before hand as to whether the installation of a new breaker would be more advantageous.

Note:

Dismantling and Replacement of the complete breaker poles should only be carried out by ABB Xiamen Switchgear Limited Co. site-service personnel or by specially trained personnel, particularly as proper adjustment is necessary.

7.4 Repair

Replacement of circuit-breaker parts and accessories.


Only remove and reassemble circuit-breaker parts and accessories when the breaker has been switched off and the working area is to be isolated and secured against reclosing. The spring energy storage mechanism must be discharged.

All auxiliary voltage sources must be disconnected and secured against reclosing during the removal and installation work.

7.5 Spare parts and auxiliary materials

Designation	Item no.
Auxiliary switch	S1
	S3
	S4
	S5
Auxiliary switch on blocking magnet	S2
Auxiliary switch for fault annunciation	S7
1 st shunt release OFF	Y2
2 nd shunt release OFF	Y9
Shunt release ON	Y3
Blocking magnet	Y1
Undervoltage release with spring mechanism	Y4
Delayed undervoltage release with spring mechanism	Y4
Indirect overcurrent release with intermediate current transformer and spring mechanism	Y7
Intermediate current transformer for indirect overcurrent release	
Magnet holder, complete (with integrated rectifiers V1, V2, V3, V9)	
Series rectifier	V4/V7
Charging motor (with gearing)	M0
Auxiliary materials	Ident no. (order code)
Lubricant: Isoflex Topas NB 52	GCE0007249P0100


Figure 7/1 Before moving the front plate, first disconnect the link rod 54.1 at the lower point and swing it to one side. Turn the hand crank anti-clockwise first to move the interlock yoke 51 an appropriate distance away

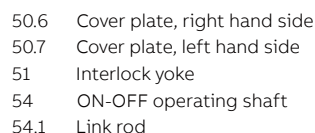

- 10 Control wiring plug connector, closed
- 10.1 Control wiring socket
- 10.2 Control wiring plug
- 10.4 S8, limit switch for test position indicator
- 10.5 S9, limit switch for service position indicator
- 51 Interlock yoke
- 51.3 Guiding rail (panel)
- 54 ON-OFF operating shaft


- | | |
|-------|------------------------------|
| 45 | Magnet holder, complete |
| 54.1 | Link rod |
| 55.2 | ON push rod |
| 55.3 | OFF push rod |
| 55.4 | Switch position indicator |
| 55.5 | Operating cycle counter |
| 55.6 | Socket for charging lever |
| 55.8 | Charging condition indicator |
| 55.30 | Drive shaft |
| 55.33 | Drum with spiral spring |
| 55.34 | Chain |
| 55.35 | Ratchet wheel |
| 55.36 | Charging motor |

Figure 7/4 Vacuum circuit-breaker, type VD4, for fixed installation, stored-energy spring mechanism, front panel removed

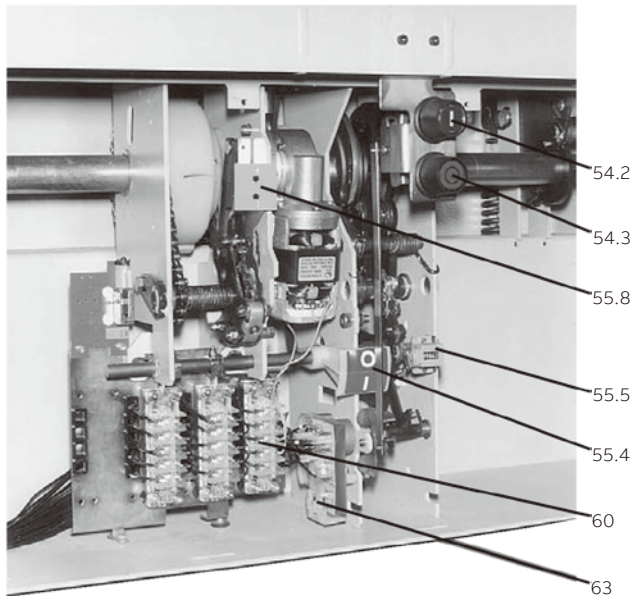

- 54.2 Mechanical ON push-button
- 54.3 Mechanical OFF push-button
- 55.4 Mechanical switch position indicator
- 55.5 Mechanical operating cycle counter
- 55.8 Charging condition indicator
- 60 Auxiliary switch block
- 63 Magnet holder, complete

Figure 7/5 Vacuum circuit-breaker, type VD4, for fixed installation, stored-energy spring mechanism, front panel removed

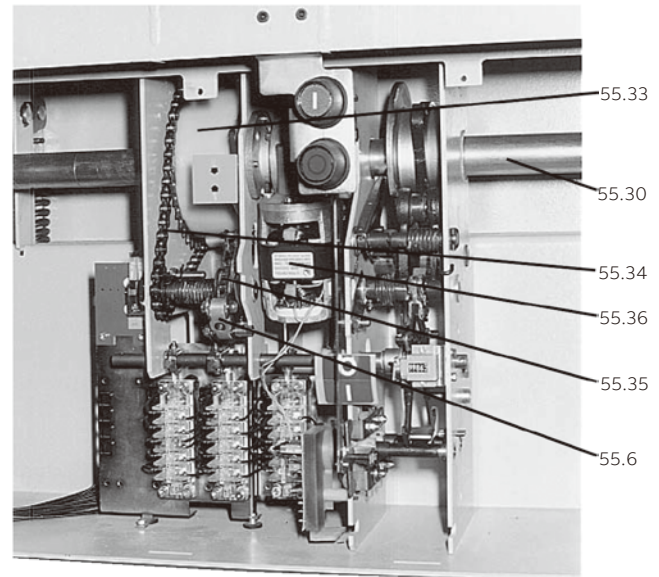

- 55.6 Socket (for charging lever)
- 55.30 Drive Shaft
- 55.33 Drum with spiral spring
- 55.34 Chain
- 55.35 Ratchet wheel
- 55.36 Charging motor

8 Application of the X-ray regulations

One of the physical properties of vacuum insulations is the possibility of X-ray emissions when the contact gap is open. The specified type test performed by the Physikalisch-Technische Bundesanstalt (PTB) in Brunswick demonstrates that the local dosage output of 1 Sv/h at a distance of 10 cm from the touchable surface is not exceeded.

The results are as follows:

- The use of the vacuum interrupters at rated voltage is completely safe
- The application of the rated power frequency withstand voltage specified for the switching devices by VDE 0670 and IEC 62271-100: 2001 is also safe
- Higher voltages than the rated power frequency withstand voltage or DC test voltage specified in DIN VDE or IEC standards must not be applied
- Fulfilment of the above requirement with the vacuum interrupter in the open position is dependent on maintenance of the specified distance between the contacts (which is automatically ensured with correct mechanism function and force transmission)

9 Comparison of designations to VDE-DIN and IEC

Comparison of designations to VDE-DIN 40719 Part 2 and IEC 61346-1/IEC 61346-2

VDE	Description	IEC
DIN 40719 Part 2		61346-1/61346-2
-S1	Auxiliary switch on mechanism	-BS1
-S2	Auxiliary switch on block magnet -Y1	-BL1
-S3	Auxiliary switch on switch shaft	-BB1
-S4	Auxiliary switch on switch shaft	-BB2
-S5	Auxiliary switch on switch shaft	-BB3
-S7	Fleeting contact ≥ 30 ms for c.b. tripped indication	-BB4
-S8	Limit switch test position	-BT2
-S9	Limit switch service position	-BT1
-Y0	Block magnet on track with rectifier -V0	-RL2
-Y1	Closing block magnet	-RL1
-Y2	1. Shunt release OFF	-MO1
-Y3	Closing release	-MC
-Y4	Undervoltage release	-MU
-Y7	Indirect overcurrent release	-MO3
-Y9	2. Shunt release OFF	-MO2
-V1	Series rectifier for -Y1	-TR4
-V2	Series rectifier for -Y2	-TR1
-V3	Series rectifier for -Y3	-TR3
-V4	Series rectifier for -Y4	-TR6
-V9	Series rectifier for -Y9	-TR2
-M0	Charging motor	-MS
-K0	Antipumping relay	-KN
-R0	Series resistor	-RR
-M1	Motor drive for draw out	-MT

ABB Xiamen Switchgear Co., Ltd.

ABB Industrial Park, Torch High-Tech Zone, No. 319,
Xiamen, Fujian, P.R.China

Tel: +86 592 602 6033

Fax: +86 592 603 0505

Zip code: 361006

Service hotline: 800-820-9696 400-820-9696

<http://www.abb.com.cn/mv>