

WELCOME TO THE SR100A

Alarms

- Acknowledging 13, 15, 16, 20, 38, 69
- Configuring 36
- Examining alarm buffers 26
- Print 40

Chart

- Length 13, 19
- Loading (this sheet), 7, 9
- Printout 4
- Review/Cue enable 24, 26, 70
- Scales 42
- Speed 39

Configuration

- Advanced 49
- Basic 29

D.C. Supply 89

Date and Time Setting 13, 19, 76

Easy View 41

Electrical Connections 84

Equations 68

Fault Finding 90

Filter Time 32

Linearizer

- Custom Configuration 70
- Type 31

Mounting 81

Passwords 2, 25, 48

Pen

- Capsule – Fitting 11
- Options 43

Power Supply Connections 89

Printing

- Channel and Data Values 54
- Total Values 56
- Totalizer 56

Resetting

- Alarms 71
- Scale Adjustment 34
- Totalizer 80

Security Access 17, 25


Siting 81

Software Version 25

User Guide




LOADING A NEW ROLL CHART

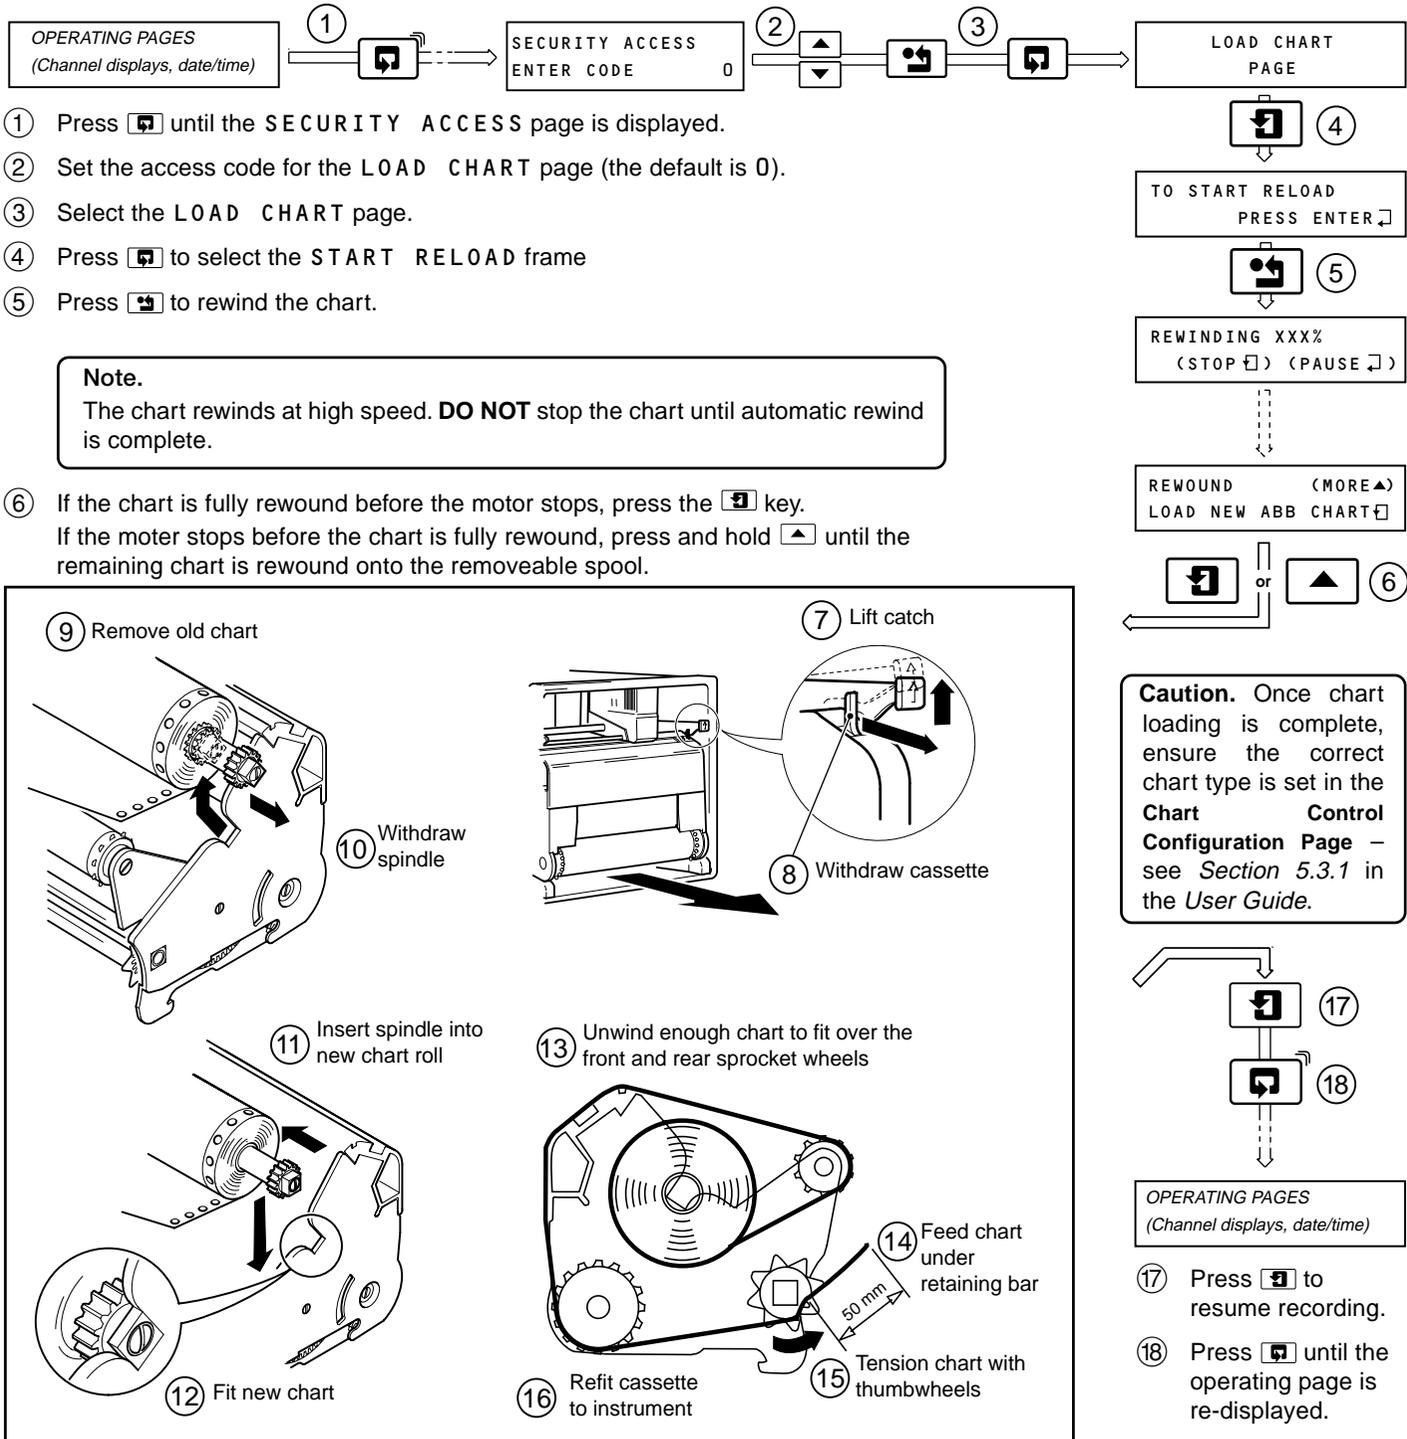


Caution. Once chart loading is complete, ensure the correct chart type is set in the **Chart Control Configuration Page** – see Section 5.3.1 in the User Guide.

DISPLAYS AND CONTROLS

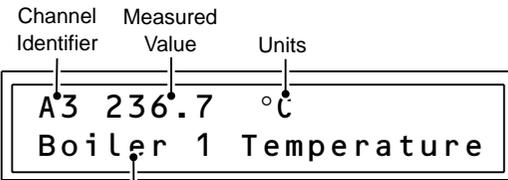


Bargraph/Channel Tag

 Raise and Lower



Used for adjusting parameters or text messages.

Sideways Scroll

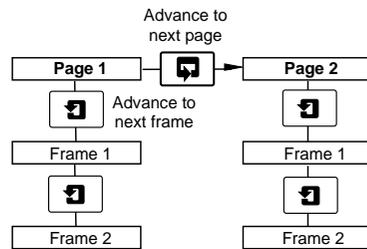

Down Scroll



Enter



Used to confirm selections/adjustments.

Pen Lift



Lifts and lowers the pen on successive operations.

The Company's policy is one of continuous product improvement and the right is reserved to modify the information contained herein without notice.

© ABB 2004



Printed in UK (03.04)

ABB


ABB Limited
Howard Road, St. Neots
Cambridgeshire, PE19 8EU
UK
Tel: +44 (0)1480 475 321
Fax: +44 (0)1480 217 948

IM/SR100A-Q Issue 2

LOADING A NEW FAN-FOLD CHART

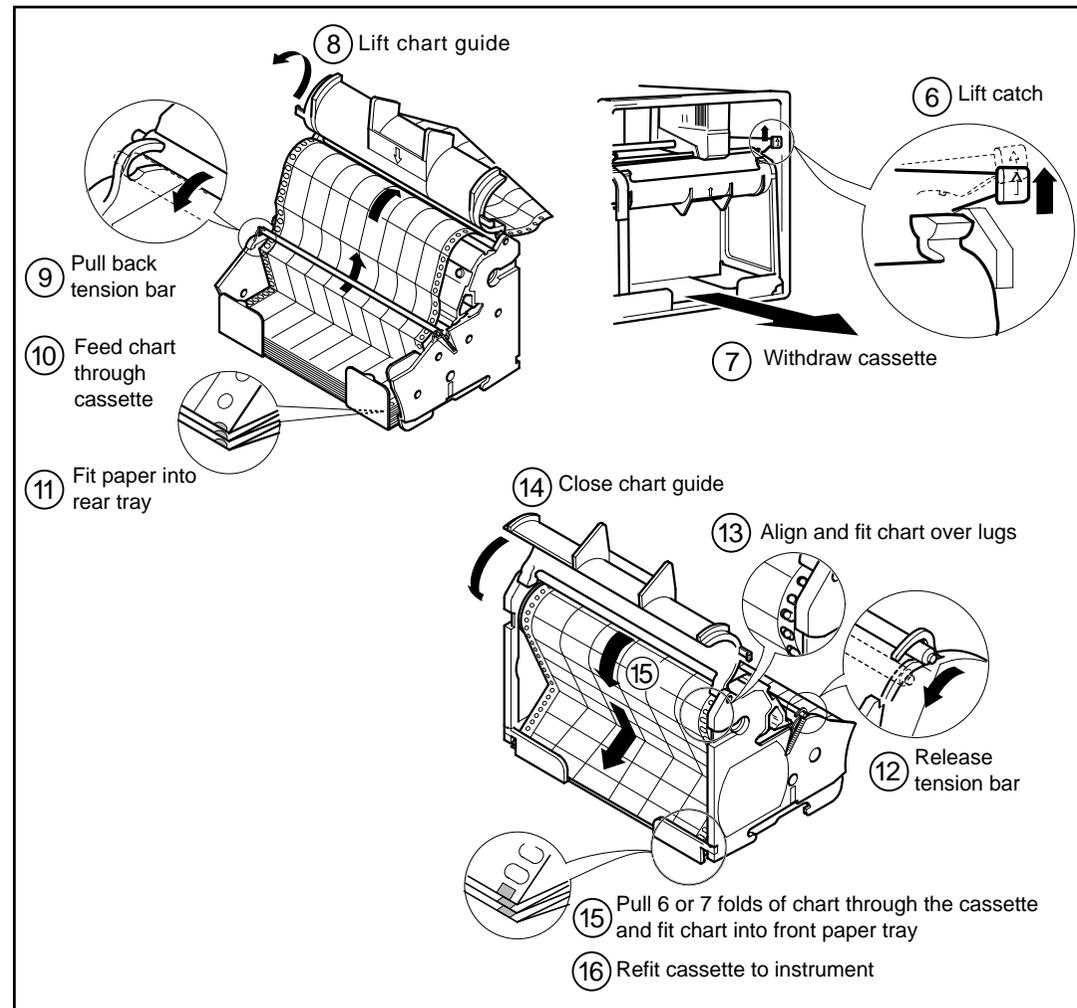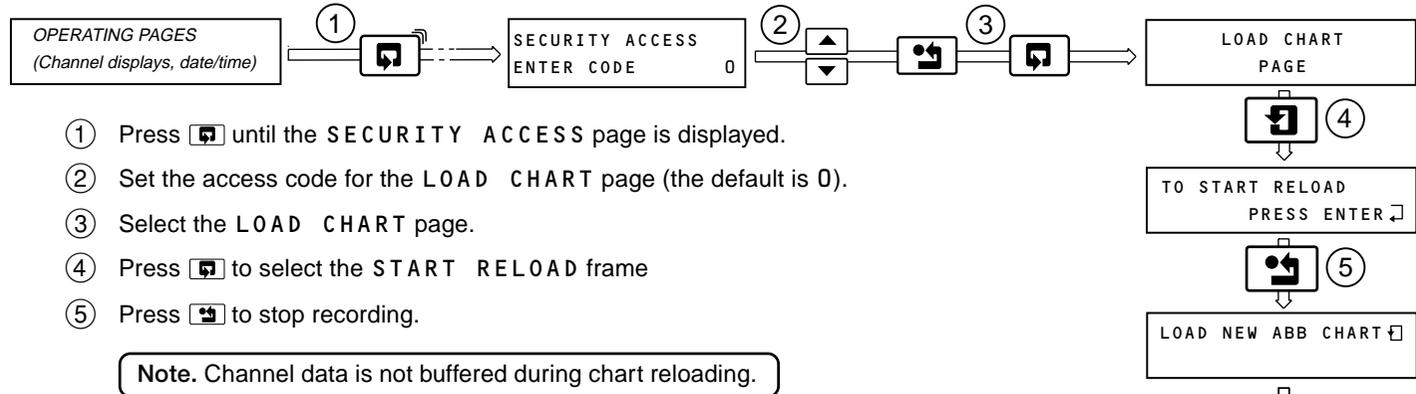

Caution. Once chart loading is complete, ensure the correct chart type is set in the **Chart Control Configuration Page** – see Section 5.3.1 in the User Guide.

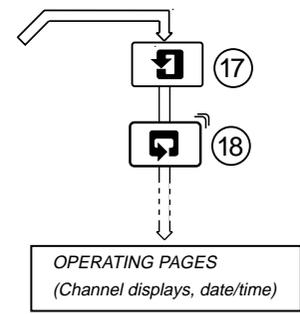

- 17 Press [Enter] to resume recording.
- 18 Press [Enter] until the operating page is re-displayed.