



—
INSTALLATION INSTRUCTION

Fourth pole


OTP_125FP, OTP_125MP and OTP_125FD

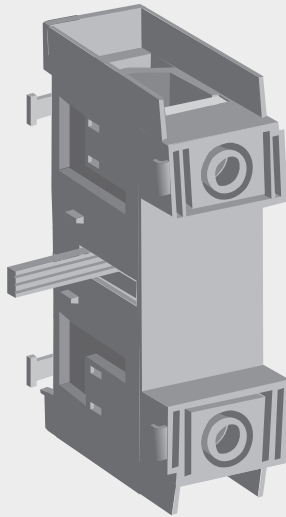


OTP_125FP

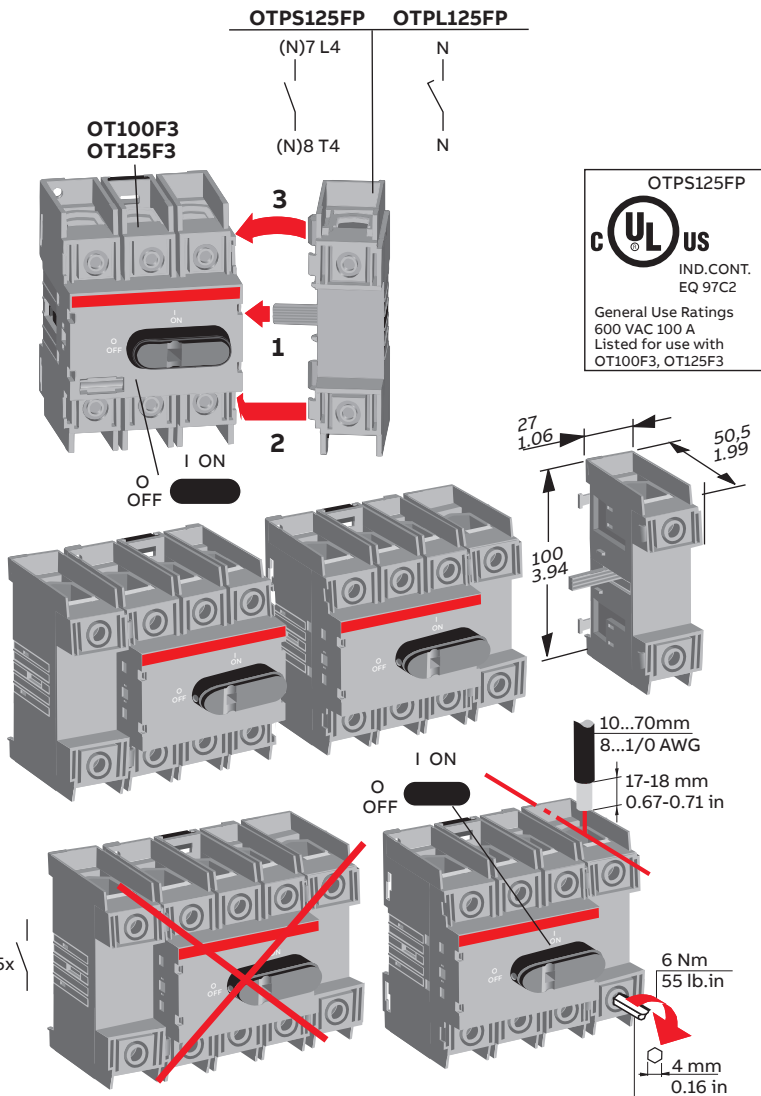

OTP_125MP

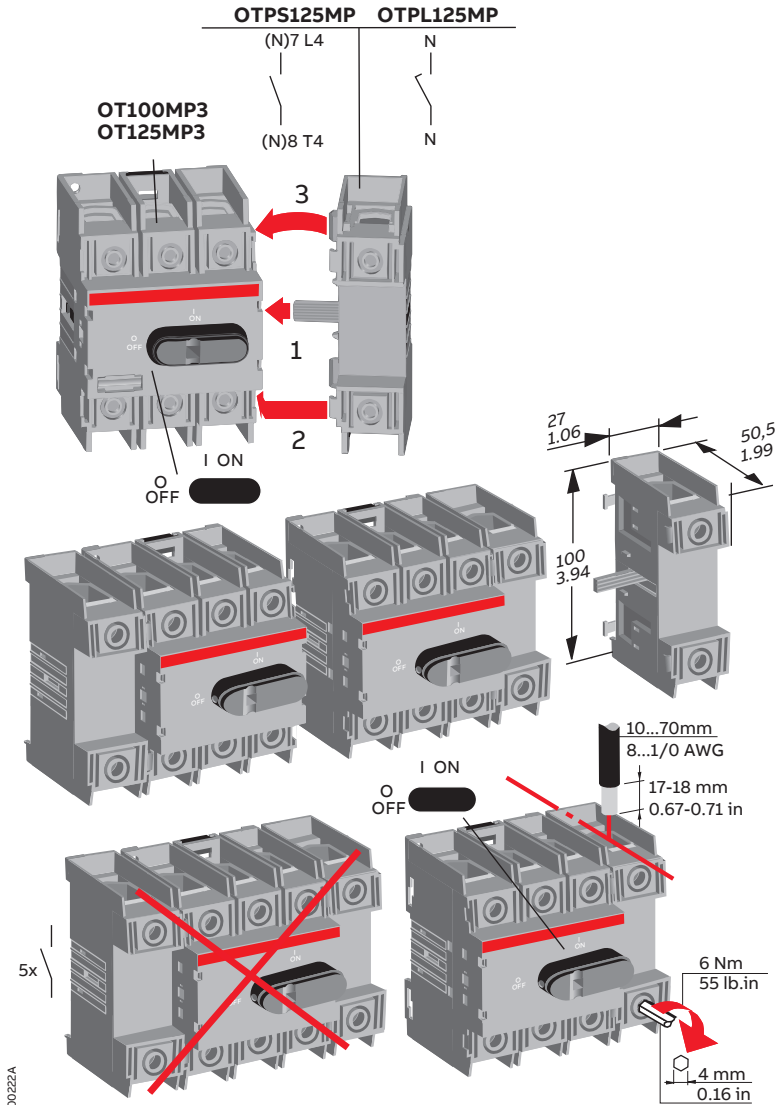

OTP_125FD

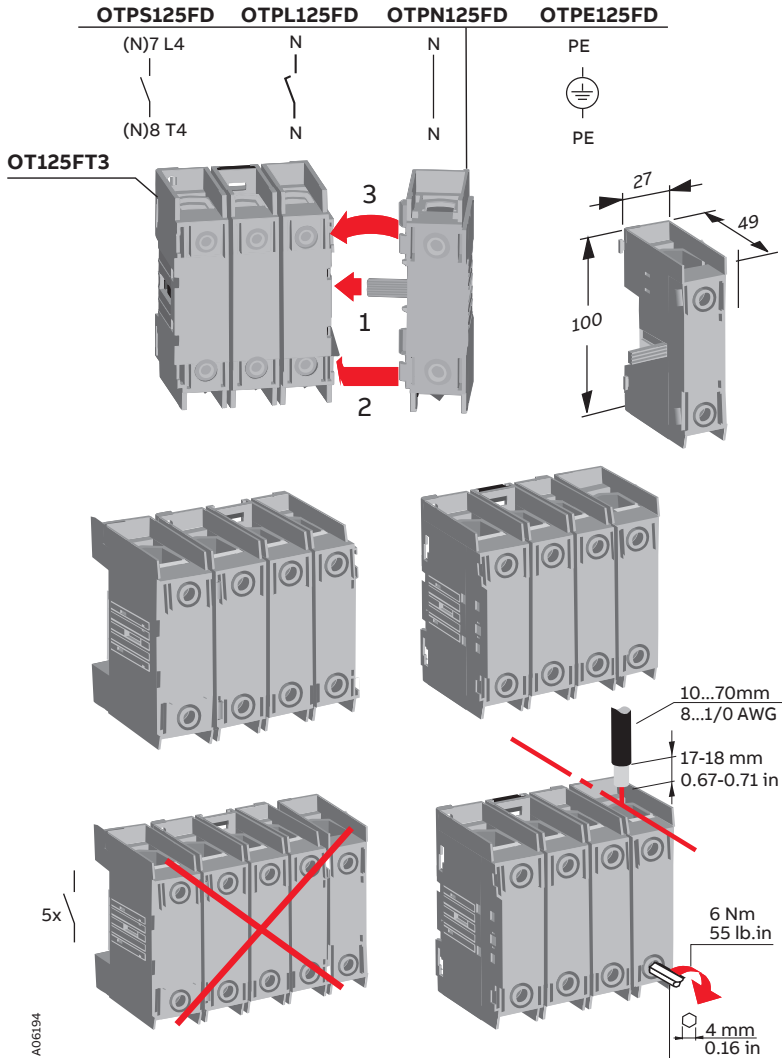



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage