



Instructions for printing PCD user LED Labels

On the new, enhanced front panel of the PCD, USER LEDs are located in the upper right hand corner of the Human Machine Interface (HMI). In order to identify what you program each USER LED for, ABB has a set of labels with commonly used USER LED functions that can be mounted on the cabinet swing panel. The labels allow you to identify the USER 1 and USER 2 LEDs, and PROG 1 and PROG 2 buttons.

The labels are formatted for NCR Premium Return Address Labels # 906803.

Download this [Microsoft Word document](#) (doc # 9AKK104295D3206) with the formatted labels by right clicking with your mouse and choosing "save target as".

Load the NCR Return Address Labels #906803 into your printer. Open the Word document from the location you saved it to and print to the printer where you loaded the labels.

Call 1-800-929-7947 x 5 or +1-407-732-2000 x 2510 for any other questions you may have.

ABB Inc. has made every reasonable attempt to guarantee the accuracy of this document, however, the information contained herein is subject to change at any time without notice and does not represent a commitment on the part of ABB Inc. These instructions do not purport to cover all details or variations in equipment, nor provide for every possible contingency to be met in conjunction with installation, operation or maintenance. Should particular problems arise which are not covered sufficiently, please contact ABB Inc.

ABB Inc.

655 Century Point
Lake Mary, FL 32746

Telephone
1-800-929-7947
+1-407-732-2000

Fax
407-732-2161

www.abb.com/mediumvoltage

Instructions
1VAL264218-HT
Rev. A
November 5, 2008