


—
INSTALLATION INSTRUCTION

Terminal set OZXT6



OZXT6

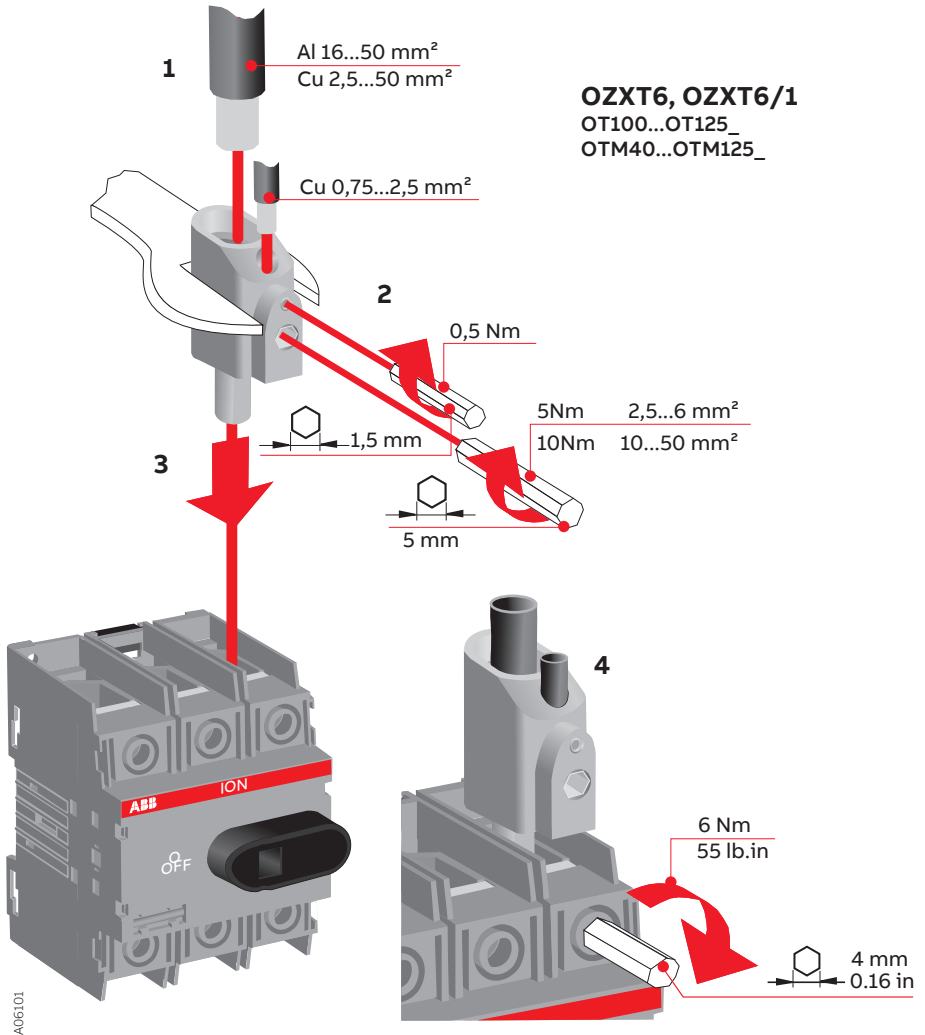

OZXT6, OZXT6/1
OT100...OT125_
OTM40...OTM125_



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage