

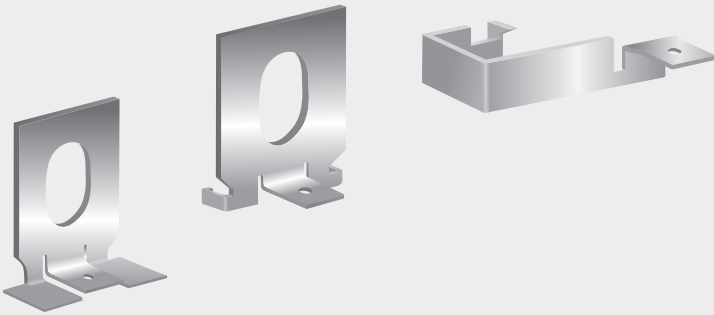
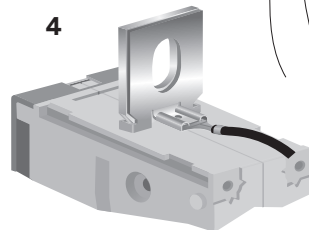
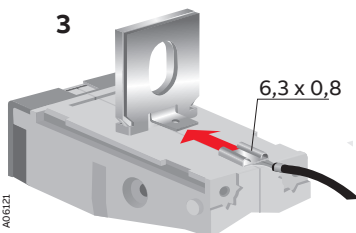
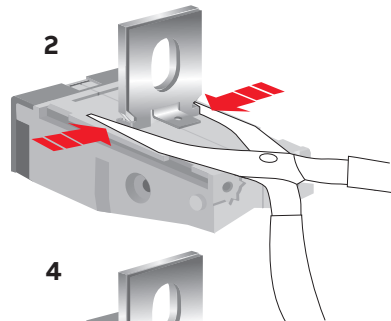
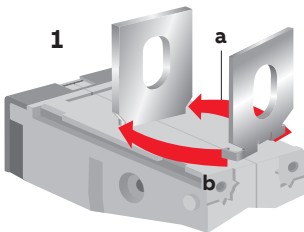
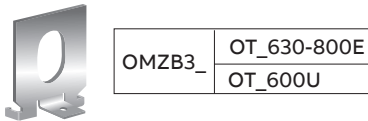
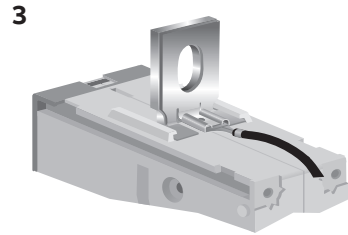
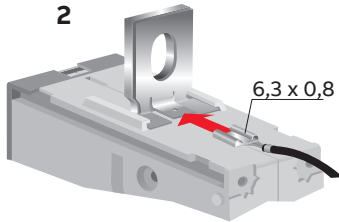


—
INSTALLATION INSTRUCTION

Voltage sensing connector OMZB_

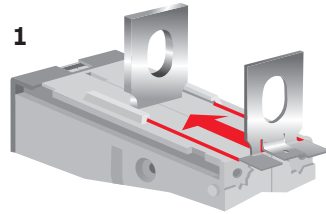






OMZB1_, OMZB2_, OMZB3_

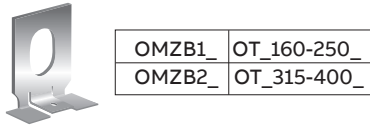

OMZB4_



OMZB4_	OT_1000-2500E
	OT_800-1600U

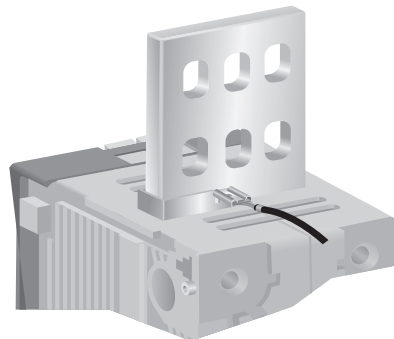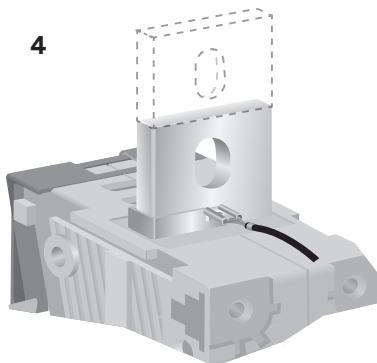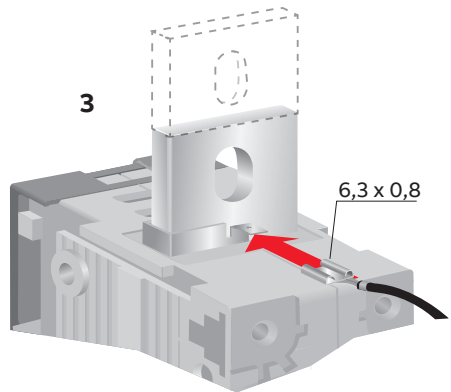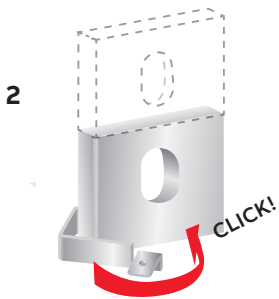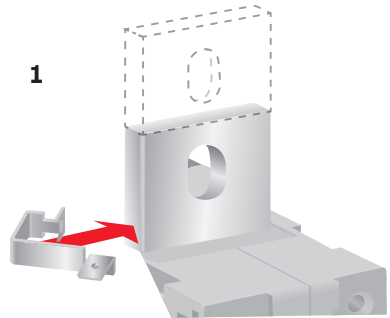



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage