


NOTES:

1. **WARNING:** This drawing does not illustrate the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.
 2. Onboard AI's are software selectable for a voltage or amperage signal.
 3. It is recommended to use 24V supply voltage with the 2600 model line transmitters.

RMC (2105350) Board

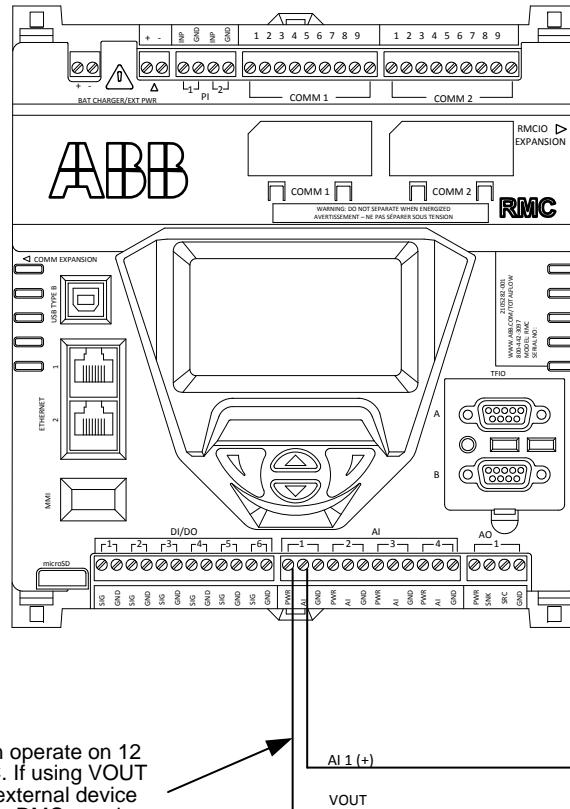

The RMC can operate on 12 or 24 volts DC. If using V_{OUT} to power an external device verify that the RMC supply voltage is compatible with the external device.

ABB Model 2600T Transmitter

