
NOTES:

 WARNING: This drawing does not illustrate completely the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.

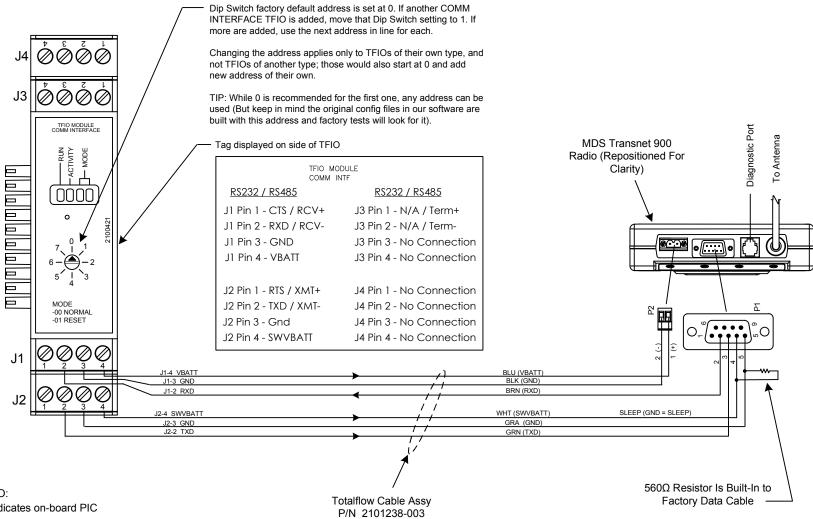

2. LED Indicators on TFIO:

Run LED - Blinking indicates on-board PIC

running.
Activity LED – Blinking indicates buss activity. Mode LED -00 = Normal 01 = Reset

3. LED Operation:

Register 0.7.7 = 0 - Power Save Mode (LEDs)off when MMI disconnected) Register 0.7.7 = 1 - LEDs on all the time.

4. Must have a Communications application instantiated for each COMM Module

ACTION DOC TYPE DWG NO. SHEET REV **TOTALFLOW** TFIO COMM INTERFACE MODULE (2100421) **Products** TO MDS TRANSNET 900 RADIO (RS-232) L19635 UD 2103076 AA 1 OF 1

REF: NA