

MagMaster Sensor Terminal Box Connections (Remote Versions Only)

1 Connections Color-coding

The connection details for the sensor terminal box (remote versions only) have changed. Fig. 1.1 (below) replaces Fig. 3.10 on page 9 of the User Guide, IM/MM/SF.

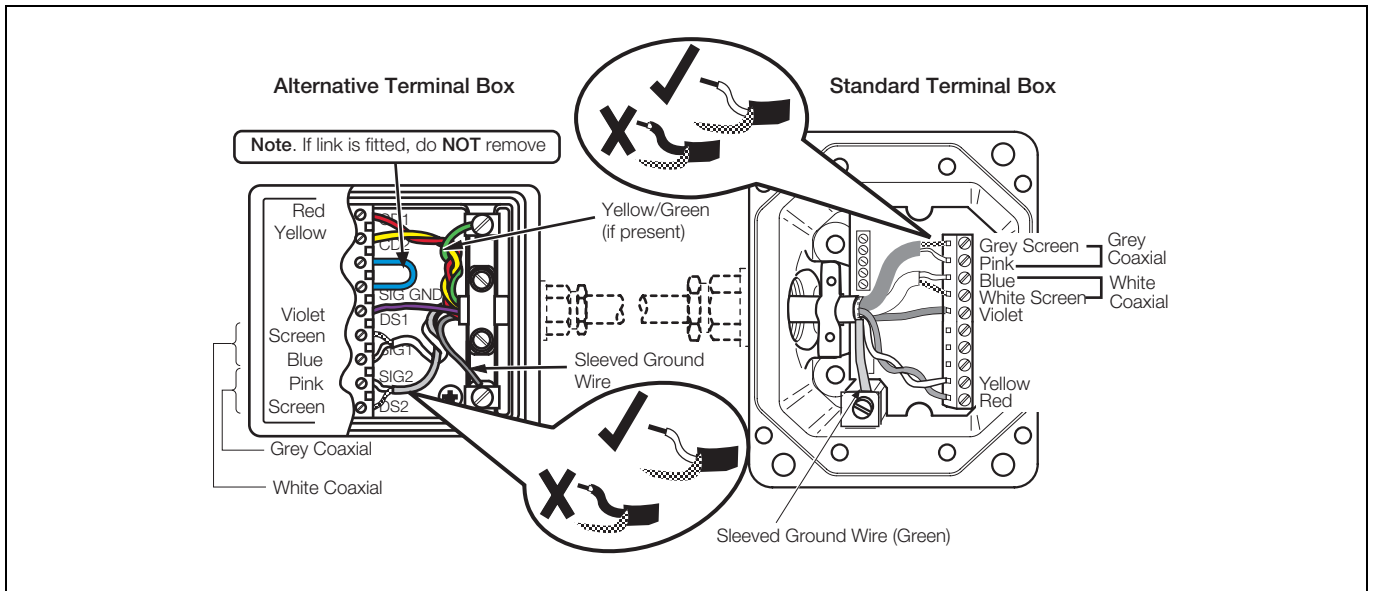


Fig. 1.1 Sensor Terminal Box Connections (Remote Version)

ABB has Sales & Customer Support expertise
in over 100 countries worldwide

www.abb.com

The Company's policy is one of continuous product
improvement and the right is reserved to modify the
information contained herein without notice.

Printed in UK (08.07)

© ABB 2007



ABB Limited
Oldends Lane, Stonehouse
Gloucestershire
GL10 3TA
UK
Tel: +44 (0)1453 826661
Fax: +44 (0)1453 829671

ABB Inc.
125 E. County Line Road
Warminster
PA 18974
USA
Tel:+1 215 674 6000
Fax:+1 215 674 7183