 



1. **WARNING:** This drawing does not illustrate completely the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.
2. To access termination board, remove the Rear End Cap of the Main Unit (a 1/16th Hex Set Screw must be loosened to remove the Cap).



- Additional power drawn by other equipment connected to the NGC must also be factored into this calculation. Refer to their technical specifications for the requirements of each.

 TOTALFLOW Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
	D21579	UD	NGC DUAL8200 TO PHOENIX POWER SUPPLY	2103088	AB	1 OF 1