

NOTES:

- Prior to any installation in a classified hazardous location, verify installation methods by the Control Drawing referenced on the product's name tag.
- To access termination board, remove Power I/O Junction Box front cover.

RS-232 Communications Module
Totalflow P/N 2015192

