


# Instruction manual

## PR222DS/PD Modbus™ System Interface

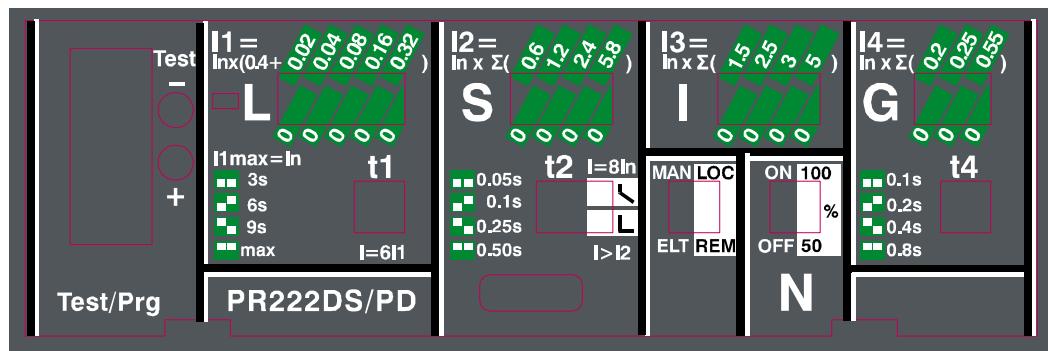

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 1/60

# Index

Pag.

<b>1. GENERAL.....</b>	<b>5</b>
1.1 APPLICABILITY .....	5
1.2 APPLICABLE DOCUMENTS .....	5
1.3 ACRONYMS AND DEFINITIONS.....	6
1.3.1 <i>Acronyms</i> .....	6
1.3.2 <i>Definitions</i> .....	7
<b>2. INTRODUCTION.....</b>	<b>9</b>
2.1 MODBUS PROTOCOL AND MAP ORGANISATION .....	9
2.1.1 <i>Communication parameters</i> .....	9
2.1.2 <i>Device RTU Framing</i> .....	9
2.1.3 <i>Response Timeout</i> .....	11
2.1.4 <i>Reception Checks</i> .....	11
2.1.5 <i>Function Codes</i> .....	11
2.1.6 <i>Data Addressing (Map organisation)</i> .....	13
2.1.7 <i>Data Field</i> .....	15
2.1.8 <i>Exception Responses</i> .....	16
2.1.9 <i>Broadcast messaging</i> .....	17
2.2 INSTALLATION AND CONFIGURATION.....	18
<b>3. START-UP BEHAVIOUR.....</b>	<b>19</b>
<b>4. OPERATING MODE.....</b>	<b>20</b>
4.1 LOCAL OPERATING MODE.....	20
4.2 REMOTE OPERATING MODE .....	20
<b>5. CONFIGURATION PARAMETERS PROGRAMMING MODEL.....</b>	<b>21</b>
5.1 MANUAL PARAMETERS.....	21
5.2 LOCAL PROGRAMMING STATE .....	22
5.3 REMOTE PROGRAMMING MODEL .....	22
5.3.1 <i>Programming Model</i> .....	23
<b>6. COMMANDS.....</b>	<b>25</b>
6.1 COMMAND CATEGORIES .....	25
6.1.1 <i>Wink Command</i> .....	25
6.1.2 <i>Trip Reset</i> .....	26
6.1.3 <i>CB Reset</i> .....	26
6.1.4 <i>Remote 'CB Close' command after Trip Command Fail</i> .....	26
6.1.5 <i>CB commands inhibition</i> .....	26
6.2 COMMANDS MANAGEMENT .....	26
6.2.1 <i>Commands completion</i> .....	26
6.2.2 <i>CB commands execution</i> .....	28
6.2.3 <i>Commands inhibition</i> .....	29
6.3 LOCAL COMMANDS MANAGEMENT .....	30
6.3.1 <i>CB Open</i> .....	30
6.3.2 <i>CB Close</i> .....	30
6.3.3 <i>CB Reset</i> .....	30
<b>7. HUMAN MACHINE INTERFACE / LOCAL USER INTERFACE.....</b>	<b>31</b>
7.1 LED .....	31
<b>8. MODBUS LOGICAL MAP .....</b>	<b>32</b>
8.1 BIT FIELD ORGANIZATION.....	32

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 2/60

8.2	PRODUCT EXECUTION.....	32
8.3	ANALOG INPUT.....	33
8.3.1	<i>Buffer “Communication Statistics” .....</i>	33
8.3.2	<i>Buffer “Process Statistics” .....</i>	34
8.3.3	<i>Buffer “Reports” .....</i>	35
8.3.4	<i>Information .....</i>	37
8.3.5	<i>Buffer “Programming Fail Code” .....</i>	38
8.3.6	<i>Buffer “Run-time currents” .....</i>	40
8.3.7	<i>Buffer “Trip currents” .....</i>	41
8.3.8	<i>Buffer “Trip Reports” .....</i>	42
8.3.9	<i>Buffer “Manual Parameters” .....</i>	44
8.3.10	<i>Buffer “Present Electronic Parameters” .....</i>	46
8.3.11	<i>Buffer “Product Execution” .....</i>	48
8.3.12	<i>Buffer “Device Serial Number” .....</i>	48
8.3.13	<i>Buffer “Communication Parameters” .....</i>	49
8.3.14	<i>Buffer “System Disconnection Timeout” .....</i>	50
8.3.15	<i>Buffer “Protection Unit Nominal Current” .....</i>	51
8.3.16	<i>Buffer “CB type” .....</i>	52
8.3.17	<i>Buffer “SW version” .....</i>	53
8.3.18	<i>Buffer “Device version” .....</i>	53
8.4	ANALOG OUTPUT .....	54
8.4.1	<i>Buffer “CB Open” command .....</i>	54
8.4.2	<i>Buffer “CB Close” command .....</i>	54
8.4.3	<i>Buffer “CB Reset” command .....</i>	55
8.4.4	<i>Buffer “Start programming session” command .....</i>	55
8.4.5	<i>Buffer “Abort programming session” command .....</i>	56
8.4.6	<i>Buffer “Stop programming session” command .....</i>	56
8.4.7	<i>Buffer “Trip Reset” command .....</i>	57
8.4.8	<i>Buffer “Wink” command .....</i>	57
8.4.9	<i>Buffer “New Parameters” .....</i>	58
8.4.10	<i>Buffer “User Information” .....</i>	59
9.	REVISION HISTORY .....	60
9.1	REVISION A – 15/04/2005.....	60

## Index of figures

Pag.

FIGURE 1. REMOTE PROGRAMMING MODEL STATE CHART.....	23
FIGURE 2. WINK COMMAND .....	25

					ENG
Author Autore	LB-DTA		L2572		
		Title Titolo	<b>PR222DS/PD</b> <b>Modbus™ System Interface</b>		
<b>ABB</b>			Doc. No N. Doc.	<b>1SDH000600R0001</b>	
					Tot. Pag. 3/60

# Index of tables

Pag.

TABLE 1. SERIAL PARAMETERS .....	9
TABLE 2. MODBUS MESSAGE .....	9
TABLE 3. RESPONSE TIMEOUT .....	11
TABLE 4. PR222DS/PD FUNCTION CODES .....	11
TABLE 5. 'DIAGNOSTIC' QUERY DATA FIELD STRUCTURE .....	12
TABLE 6. 'REPORT SLAVE ID' RESPONSE DATA FIELD STRUCTURE .....	12
TABLE 7. SLAVE ID .....	12
TABLE 8. MODBUS LOGICAL MEMORY MAP .....	14
TABLE 9. QUERY DATA FIELD STRUCTURE .....	15
TABLE 10. READ FUNCTION RESPONSE DATA FIELD STRUCTURE .....	15
TABLE 11. MULTIPLE ITEMS WRITE FUNCTION RESPONSE DATA FIELD STRUCTURE .....	16
TABLE 12. EXCEPTION RESPONSE ERROR CODES .....	16
TABLE 13. PR222DS EXCEPTION RESPONSES USE .....	17
TABLE 14. START-UP TIME .....	19
TABLE 15. COMMAND RESULTS .....	27
TABLE 16. 'COMMAND EXECUTED' EVENT (EXECUTED BEFORE COMPLETION) .....	28
TABLE 17. 'COMMAND EXECUTED' EVENT (COMPLETED BEFORE EXECUTION) .....	28
TABLE 18. CONDITIONS FOR COMMANDS' INHIBITION .....	29
TABLE 19. LED BEHAVIOUR .....	31
TABLE 20. BUFFERS .....	32
TABLE 21. BIT FIELD ORGANIZATION .....	32
TABLE 22. AI - BUFFER 'COMMUNICATION STATISTICS' .....	33
TABLE 23. AI - BUFFER 'PROCESS STATISTICS' .....	34
TABLE 24. AI - BUFFER 'REPORTS' .....	36
TABLE 25. AI - BUFFER 'INFORMATION' .....	37
TABLE 26. AI - BUFFER 'PROGRAMMING FAIL CODE' .....	38
TABLE 27. 'ELECTRONIC PROGRAMMING FAIL CODE' RANGE .....	39
TABLE 28. 'MANUAL PROGRAMMING INCONSISTENCY CODE' RANGE .....	39
TABLE 29. AI - BUFFER 'RUN-TIME CURRENTS' .....	40
TABLE 30. AI - BUFFER 'TRIP CURRENTS' .....	41
TABLE 31. AI - BUFFER 'TRIP REPORTS' .....	43
TABLE 32. AI - BUFFER 'MANUAL PARAMETERS' .....	44
TABLE 33. MANUAL PARAMETERS LIMITATION ACCORDING TO CB TYPE .....	45
TABLE 34. AI - BUFFER 'PRESENT ELECTRONIC PARAMETERS' .....	47
TABLE 35. ELECTRONIC PARAMETERS LIMITATION ACCORDING TO CB TYPE .....	47
TABLE 36. AI - BUFFER 'PRODUCT EXECUTION' .....	48
TABLE 37. AI - BUFFER 'DEVICE SERIAL NUMBER' .....	48
TABLE 38. AI - BUFFER 'COMMUNICATION PARAMETERS' .....	49
TABLE 39. AI - BUFFER 'SYSTEM DISCONNECTION TIMEOUT' .....	50
TABLE 40. AI - BUFFER 'PROTECTION UNIT NOMINAL CURRENT' .....	51
TABLE 41. NOMINAL CURRENT ALLOWED VALUES .....	51
TABLE 42. AI - BUFFER 'CB TYPE' .....	52
TABLE 43. CB TYPE ALLOWED VALUES .....	52
TABLE 44. AI - BUFFER 'SW VERSION' .....	53
TABLE 45. AI - BUFFER 'DEVICE VERSION' .....	53
TABLE 46. AO - BUFFER 'CB OPEN' COMMAND .....	54
TABLE 47. AO - BUFFER 'CB CLOSE' COMMAND .....	54
TABLE 48. AO - BUFFER 'CB RESET' COMMAND .....	55
TABLE 49. AO - BUFFER 'START PROGRAMMING SESSION' COMMAND .....	55
TABLE 50. AO - BUFFER 'ABORT PROGRAMMING SESSION' COMMAND .....	56
TABLE 51. AO - BUFFER 'STOP PROGRAMMING SESSION' COMMAND .....	56
TABLE 52. AO - BUFFER 'TRIP RESET' COMMAND .....	57
TABLE 53. AO - BUFFER 'WINK' COMMAND .....	57
TABLE 54. AO - BUFFER 'NEW ELECTRONIC PARAMETERS' .....	58
TABLE 55. AO - BUFFER 'USER INFORMATION' .....	59

Author Autore	LB-DTA                    L2572				Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 4/60

# 1. General

This document describes the Modbus interface regarding:

- Network Management of the device (installation, configuration, ...)
- Application Objects and Slave Variables

## 1.1 Applicability

This document applies to the device PR222DS/PD.

This version of the document has been updated with SW version 3.0.

## 1.2 Applicable Documents

- [1] Schneider Automation Inc. ‘*Modicon MODBUS Protocol Reference Guide*’, June 1996, rev. J, PI-MBUS-300
- [3] AA.VV. “S2000 Nuova serie di interruttori scatolati – Specifica di Prodotto”, ABB SACE, Doc N°. 605058.013
- [4] E. Rizzi “Specifica Tecnica PR222DS”, ABB SACE, Doc N°. RH0212
- [5] F. Bestagini, L. Raciti “PR222DS – Requisiti SW”, ABB SACE, Doc N°. RH0213

Author Autore	LB-DTA                    L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	Tot. Pag. 5/60

## 1.3 Acronyms and Definitions

### 1.3.1 Acronyms

AI	Analog Input
AO	Analog Output
AUX-E	I <sup>2</sup> C bus module for acquisition of CB status
AppObj	Application Object
CB	Circuit Breaker (MCCB TMAX family)
CP	Configuration Parameter
CT	Current Transformer
DI	Digital Input
DCP	Dialogue (CU) Configuration Parameter
DO	Digital Output
ER	Exception Response
ETT	Electronic Trip Test
In	Nominal current
LSb	Least Significant bit
LSB	Least Significant Byte
MOE-E	I <sup>2</sup> C bus module for CB commands sending and for acquisition of MC temperature
MSb	Most Significant bit
MSB	Most Significant Byte
MTT	Mechanical Trip Test
PCP	Protection Configuration Parameter
PU	Protection Unit (PR222DS/PD)
OR	(Main) Opening Release
SOR	Shunt Opening Release
TC	Trip Coil
UVR	Under Voltage Release
Vaux	Auxiliary Supply

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 6/60

### 1.3.2 Definitions

**ALARM:** there are two types of alarm:

Alarm Type	Definition
Alarm	It's similar to a status. It will be frozen after a protection trip in the "Trip Reports" structure. A Trip Reset is NOT necessary to reset it. Ex. L Pre-Alarm, S Alarm, ...
Trip	Only a command can reset it, i.e. a new alarm won't be signalled until the reset. Ex. L Tripped, S Tripped, ...

Trips are reset after a Trip Reset command or CB Reset command.

**BUFFER:** meaningful part of a Modbus Map section.

It's defined by the Modbus Map of the device.

**CB RESET:** event (Any Trip) /alarm reset of any information related to the (last) trip.

It changes also the ‘real’ CB status (i.e. the CB goes to OPEN).

**DEVICE:** Protection Unit (i.e. the PR222DS/PD)

**EVENT:** information that signals a normal (foreseen) device behaviour.

Typically, the producer of an event is the device, while the consumer (who resets it) is the system.

Reset of an event is automatically done after a read operation from the system

#### **ITEM:** analog (register) Modbus data type

**OPERATION:** every CB status transition towards OPEN state. It doesn't matter which is the starting state (TRIPPED or CLOSED).

**OTHER TRIPS:** sum of CB status transitions towards the TRIPPED state, either from the OPEN or CLOSED starting state, but not caused by the protection

So they are all the transitions caused by an electronic / mechanical trip test, under voltage release and secondary shunt opening release.

**PARAMETER:** information that allows configuration of device functionality (e.g. a protection algorithm)

**PERSISTENCE:** ‘volatile/non-volatile’ attribute concerning information, i.e. the information is/is not still available after a power fail/HW reset.

PERSISTENCE	Description
Temporary (default)	Information is NOT still available after a power fail/HW reset/...
Permanent	Information is still available after a power fail/HW reset/

For example, parameters and trip data have this attribute set to PERMANENT, while states/events/alarms settings are TEMPORARY.

						ENG
Author Autore	LB-DTA		L2572		Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	Tot. Pag. 7/60

**PROTECTION TRIPS:** sum of real protection trips ( $\Sigma$  LSIG trips).

'Real' means 'not caused by the Test Unit PR010/T.'

**PROTECTION UNIT:** PR222DS/PD electronic board that implements protection algorithms

**PROTECTION X TRIPS:** sum of trip of protection X (e.g. L, S, I, G).

**REGISTER:** the least analogue information container (one word = 2 bytes)

**REMOTE SYSTEM:** a device (SCADA) who behaves as Modbus Master on the external bus. It polls the information provided by the device and sends to it commands and parameters.

**STATUS:** information that represents the dynamics of a functionality (e.g. the CB or a protection algorithm). It can be managed (i.e. set/reset) only by the device itself.

**TRIP COMMAND FAIL:** after a protection trip, with relevant opening command to the release, CB stays in CLOSED state. In this case, the device tries to open the CB by starting a back-up procedure. Meanwhile, the device tries also to open the CB using the YO (through the I/O).

**TRIP RESET:** command equal to CB Reset, but it doesn't change the 'real' CB status (i.e. the CB remains TRIPPED).

**(PROCESS) VARIABLE:** information strictly connected to device functionality. Examples are:

- commands
- states/events
- alarms
- measurements
- historical/statistical data
- ...

Author Autore	LB-DTA                    L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	Tot. Pag. 8/60

## 2. Introduction

It has been decided to describe the device according to the Modbus protocol [1].

When the Test Unit is connected, the device stops communicating with the Remote System after it has read the “Events” structure or a time-out has expired.

### 2.1 Modbus Protocol and Map Organisation

#### 2.1.1 Communication parameters

1. Transmission mode: RTU (2 four bits hexadecimal chars for each byte).
- 2.
3. Serial parameters:

Start Bit	Data Bits	Parity Bit	Stop Bit
1	8 (LSb first)	1 (even   odd   none)	1

Table 1. Serial parameters

Please note that transmission mode and serial parameters MUST be the same for all devices on a Modbus network.  
Only the parity parameter is modifiable.

Baud Rate: [ 9600 | 19200 ]

**DEFAULT VALUES:** Parity = Even, Baud Rate = 19200

#### 2.1.2 Device RTU Framing

START	SLAVE ADDRESS	FUNCTION	DATA	CRC CHECK	END
T1 – T2 – T3 – T4	8 bits	8 bits	n * 8 bits	16 bits	T1 – T2 – T3 – T4

Table 2. Modbus message

Up to 32 bytes can be sent.


The allowed inter-character silent interval is been relaxed from ‘at least 2 characters’ to ‘at least 4 characters’ (the same silent interval to recognise the end of a message). This means:

##### 2.1.2.1 Silent interval < 4 char between two characters inside the message


In this case the receiver filters the silent interval and the following characters will be appended to those already received.  
The difference from the protocol specification is:

###### 1. Silent interval < 2 char between two characters inside the message

###### Transmitter

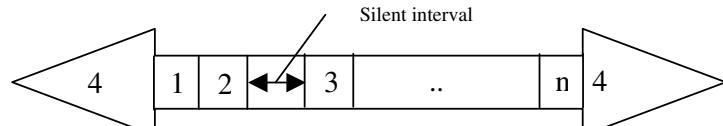

###### Receiver

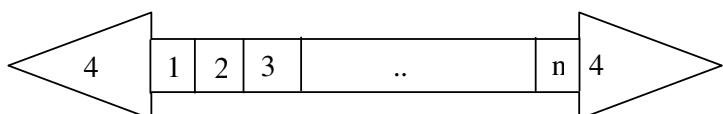


The behaviour is exactly as specified by the protocol.

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD	ENG
ABB			Doc. No N. Doc.	Modbus™ System Interface <b>1SDH000600R0001</b>	Tot. Pag. 9/60


## 2. Silent interval $\geq$ 2 char and < 4 char between two characters inside the message

The received characters are NOT flushed and the following ones will be appended.

### Transmitter

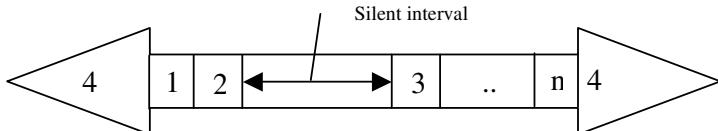

### Receiver

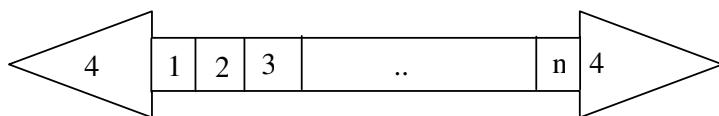

Note that after flushing, the standard protocol specification allows:

- reception of the remaining characters of a partially received message
- reception of a completely new message

The device behaviour **doesn't cover the second case** because it always appends new incoming characters to the previous ones, leading to a CRC error.

So the behaviour is exactly the same if and only if the incoming characters are NOT a new message. In this case the received packet will lead to a CRC error and the CRC error counter will be incremented.

### 2.1.2.2 Silent interval $\geq$ 4 char between two characters inside the message


If the message transmission is NOT ended, all the previously received characters are managed as a message because this is exactly the protocol specification regarding the end of a message.

### 2.1.2.3 New frame before 4 character silent interval at the end of a frame


In this case the receiver filters the silent interval and the following characters (of the new frame) will be appended to those already received (see case 2 of par. 2.1.2.1).

This will lead to a CRC error.

### Transmitter

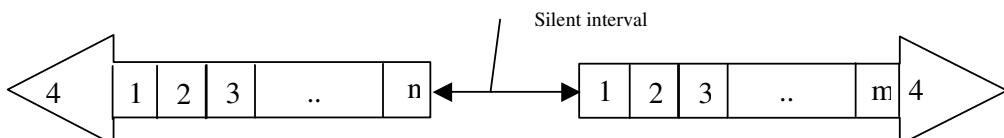

### Receiver

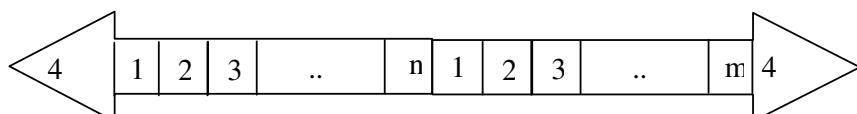

So the CRC error counter will count both the 'real' CRC errors and the inter-character errors.

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD	ENG
ABB			Doc. No N. Doc.	Modbus™ System Interface <b>1SDH000600R0001</b>	Tot. Pag. 10/60

### 2.1.3 Response Timeout

The reported timeouts have been measured between the end of the query and the beginning of the transmission of the relevant response, with baudrate 19200 bit/s. The measurement has been executed in the following conditions:

- device in ‘normal’ status, i.e. only measurements are periodically updated and NO alarm conditions are satisfied

Query	Min (ms)	Max (ms)	Average (ms)
Read 1 RAM register	2,300	3,230	2,754
Read 11 RAM registers	2,810	4,180	3,500
Read 5 RAM registers (currents different from zero) (*)	42,800	43,200	43,142
Read 5 RAM registers (currents equal to zero) (*)	17,200	18,300	17,750
Read 1 EEPROM register	10,360	11,640	10,833
Read 9 EEPROM registers	44,230	45,520	44,923

**Table 3. Response Timeout**

Please note that the multiple items read has been performed on maximum number of items allowed by the device map:

- for data contained into EEPROM, 9 items
- for data contained into RAM, 11 items

(\*) Calculation influences current reading

### 2.1.4 Reception Checks

After reception, the device performs the following checks:

CRC

Max Message Length allowed (32 bytes)

Slave Address

If any of this information is not correct, the received message is discarded and no response message is sent back to the Master.

### 2.1.5 Function Codes

The following standard functions have to be supported:

Code	HEX Code	Name	Applies to
03	0x03	Read Holding Register	AO
04	0x04	Read Input Register	AI
06	0x06	Preset Single Register	AO
08	0x08	Diagnostic Sub-function: 0 (0x00)	
16	0x10	Preset Multiple Registers	AO
17	0x11	Report Slave ID	

**Table 4. PR222DS/PD function codes**

All other NOT supported function codes lead to an Exception response ‘ILLEGAL\_FUNCTION’. These functions can be grouped into two different categories:

#### 1. Data Management functions.

Functions applied to device data into the Modbus Map (codes 03, 04, 06, 16).

#### 2. Network / Device Management functions.

Functions applied to device that can:

- request / setting general information
- change the device behaviour / status

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB					Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 11/60

- ...

Function codes 08 and 17 belong to this category.

#### 2.1.5.1 08 (0x08) Diagnostic

The function uses a two-byte sub-function code field in the query to define the type of test to be performed. Most of the diagnostic queries use a two-byte data field to send diagnostic data or control information to the slave.

Sub-function Hi	Sub-function Lo	Data Hi	Data Lo

**Table 5. ‘Diagnostic’ query data field structure**

where the only supported sub-function code is:

Sub-function code	HEX code	Name	Description
00	0x00	Return Query Data	The data passed in the information field will be returned to the Master via the addressed Modbus Slave. The entire message returned should be identical to the message transmitted by the Master, field-per-field.

---

**NOTE:** the protocol specification on data field (‘Any’, pages 74 – 75, 77) is NOT clear. The device allows both a generic field length (i.e. more than two bytes) and a generic value range.

---

#### 2.1.5.2 17 (0x11) Report Slave ID

A normal response has some fields defined and others device dependent:

Byte Count	Slave ID	Run Indicator Status	Additional Data ...

**Table 6. ‘Report Slave ID’ response data field structure**

where:

- ‘Byte Count’ depends on ‘Additional Data’. Its minimum value is 2. In this application its value is 22.
- ‘Slave ID’ is the identifier of the device of a specific manufacturer (i.e. devices from different manufacturers could have the same ‘Slave ID’):

Slave ID	Device
67 = 0x43	PR222DS/PD

**Table 7. Slave ID**

- ‘Run Indicator Status’ reports the current Slave Run status, fixed to ON (0xFF).
  - ‘Additional Data’ contains device dependent information. In this application it is so organized:
- SW version (2 bytes): see “Table 44”
  - Event section address (2 bytes): see “Table 24”
  - Device serial number (16 bytes): see “Table 37”

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD	ENG
					Modbus™ System Interface		
ABB					Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 12/60

## 2.1.6 Data Addressing (Map organisation)

Two different data addressing types are implemented:

1. Standard Modbus addressing
2. ABB SACE addressing (old ABB SACE Modbus Communication Units)

Standard		Data Type	ABB	
Starting Address	Item Address		Starting Address	Item Address
0 ... 9999	1 ... 10000	DO	1 ... 10000	1 ... 10000
0 ... 9999	10001 ... 20000	DI	10001 ... 20000	10001 ... 20000
0 ... 9999	30001 ... 40000	AI	30001 ... 40000	30001 ... 40000
0 ... 9999	40001 ... 50000	AO	40001 ... 50000	40001 ... 50000

The organisation of every section of the map (i.e. AI, AO) can be partitioned into different areas, called ‘buffers’, containing a contiguous number of item. For example the white cells in the following figure

Item Address	Item Value
30001	
...	
30027	
30028	
30029	
30030	
30031	
...	
...	
39999	

defines a AI buffer starting at 30027 and with length 5 (grey cells are map items not defined for the device).

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 13/60

Please note that:

Item Address	Item Value
30001	
...	
30027	
30028	
30029	
30030	
30031	
...	
...	
39999	

defines two different AI buffers. The first one starts at 30027 with length 2, while the second one starts at 30030 with length 3.

It's possible to query a buffer as a whole or a portion of it, but **it's NOT possible to query two buffers within the same message: an exception response will rise up.**

Please note that PR222DS/PD doesn't implement Digital Items.

#### 2.1.6.1 Standard Modbus Addressing

In Modbus messages Start Address is always referred to zero.

Every single item in these sections is identified by a LOGICAL ABSOLUTE ADDRESS in the following ranges:

Data	Logical Absolute Address Range	Offset / Reference (decimal)	Offset / Reference (hex)
AI	(MIN_AI_ADDR) 30001 – 40000 (MAX_AI_ADDR)	30000 (AI_OFFSET)	0x7530
AO	40001 – 50000 (MAX_AO_ADDR)	40000 (AO_OFFSET)	0x9C40

**Table 8. Modbus logical memory map**

Please note that when the Master specifies the 'Starting Address' into the Modbus message, it uses a LOGICAL RELATIVE ADDRESS, calculated from the LOGICAL ABSOLUTE ADDRESS:

$$\begin{aligned}
 \text{Starting Address} &= \text{LOGICAL RELATIVE ADDRESS} \\
 &= \text{LOGICAL ABSOLUTE ADDRESS} - \text{XX_OFFSET} - 1 \\
 &= \text{Item Address} - \text{XX_OFFSET} - 1
 \end{aligned}$$

**Equation 1.**

So the Logical Relative Address Range is 00000 – 09999 (= 0x270F, MAX\_RELATIVE\_ADDR) for all data types.

Moreover, items like 10005, 40001, ... are addressed like 0004, 0000, ... because the function code uniquely identifies the portion of Modbus map they belong to.

#### Example

Register with LOGICAL ABSOLUTE ADDRESS = 32475 will be addressed by the Master with the LOGICAL RELATIVE ADDRESS = 32475 – 30000 – 1 = 2474.

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 14/60

So the device performs the following check on the Starting Address field:

- Starting Address range between 0 and 9999
- Starting Address belongs to a valid part of the section pointed by the Function Code

### 2.1.6.2 ABB SACE Addressing

The item address is:

$$\text{Starting Address} = \text{LOGICAL ABSOLUTE ADDRESS} = \text{Item Address}$$

The device performs the following check on the Starting Address field:

- Starting Address congruency with the section pointed by the Function Code (see Table 8).
- Starting Address belongs to a valid part of the pointed section

### 2.1.7 Data Field

The data field is formed by a ‘header’ part and a data value part: following points consider only the header part of this field.

In some function, there could be a 0 length data field (i.e. the message contains only the function code like in the ‘Report Slave ID’ function).

There is no restriction to max data length except the maximum message length (32 bytes).

#### 2.1.7.1 Query

Number of items [2 bytes] (except writing function 6)	Byte Count (only for writing function 16) [1 byte]
How many items to read/write	How many data bytes follow

**Table 9. Query data field structure**

Function Code	Data Type	Max number of items	Max byte count	Min message length	Max message length
3	AO	13	N/A	8	8
4	AI	13	N/A	8	8
6	AO	N/A (1 fixed)	N/A	8	8
16	AO	11	22	11	31

The device performs the following checks on the above-mentioned fields:

- Max number of items, conforming to the Function Code
- Byte Count congruency with the Number of Items
- Data value field length congruency with the Byte Count

Moreover, also the following checks are performed:

- (Starting Address + Number Of Items) belongs to the section pointed by the Function Code
- (Starting Address + Number Of Items) belongs to a valid part of the pointed section

#### 2.1.7.2 Response

1. Read function codes

Byte Count (only for writing function 16) [1 byte]
How many data bytes follow

**Table 10. Read function response data field structure**

Author Autore	LB-DTA L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	

Tot. Pag.  
15/60

Function Code	Data Type	Max number of items	Max byte count	Min message length
3	AO	13	26	7
4	AI	13	26	7

2. Single item Write function codes (6)  
It's simply an echo of the query message.

Function Code	Data Type	Max number of items	Max byte count	Min message length
6	AO	8	N/A	8

3. Multiple items Write function codes (16)

Starting Address [2 bytes]	Number of items [2 bytes]
Starting item	How many items to read/write

**Table 11. Multiple items Write function response data field structure**

So the message length is fixed and equal to 8.

Function Code	Data Type	Max number of items	Max byte count	Min message length
16	AO	8	N/A	8

### 2.1.8 Exception Responses

In this case, the MSb of the function code in the response message is set to one and an error code is added.

Error Code	Error Name	Meaning
01	ILLEGAL FUNCTION	The function code received in the query is not an allowable action for the slave. If a 'Poll Program Complete' command is issued, this code indicates that no program function preceded it.
02	ILLEGAL DATA ADDRESS	The data address received in the query is not an allowable address for the slave.
03	ILLEGAL DATA VALUE	A value contained in the query data field is not an allowable value for the slave.
04	SLAVE DEVICE FAILURE	An unrecoverable error occurred while the slave was attempting to perform the requested action.
06	SLAVE DEVICE BUSY	The slave is processing a long-duration program command. The master should retransmit the message later when the slave is free.

**Table 12. Exception response error codes**

The slave device sends no response if there is a communication error (i.e. a parity or a CRC error).

Error Code	Error Name	When
01	ILLEGAL FUNCTION	1. Device does NOT support the received Function Code.
02	ILLEGAL DATA ADDRESS	1. Starting Address is > 9999 (Standard Addressing Type). 2. Starting Address is outside a map section (ABB SACE Addressing Type). 3. Starting Address not defined. 4. Starting Address not supported by function.
03	ILLEGAL DATA VALUE	1. The message is too long. 2. Diagnostic function: sub-function is not supported ( $\neq 0$ ) 3. The Number of Items is NOT in range (= 0 or > Max number of items, see 2.1.7). 4. Byte Count is different from the number of bytes calculated using the number of items and the relevant data type. 5. The whole query requested buffer (Starting Address + Number of Items) doesn't belong to a device map buffer. 6. Command value different from '1'.
04	SLAVE DEVICE FAILURE	1. Data with congruency byte not valid.

Author Autore	LB-DTA L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	

Tot. Pag.  
16/60

		2. Wrong parameters (after “Stop Programming” command).
06	SLAVE DEVICE BUSY	1. EEPROM busy 2. Commands inhibition (see par. 6.2.3)

**Table 13. PR222DS exception responses use**

### 2.1.9 Broadcast messaging

According to Modbus protocol (see [1]), the device handles ‘broadcast messages’.

The device handles to slave address ‘0x00’ (for functions supporting broadcast, see table below), but it hasn’t to reply.

Function	Broadcast supported
0x03	No
0x04	No
0x06	Yes
0x08	No
0x10	Yes
0x11	No

Author Autore	LB-DTA L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	Tot. Pag. 17/60

## 2.2 Installation and Configuration

At the first start-up, the device is configured for communication to the Remote System, i.e. Operating Mode = REMOTE: if the communication parameters are not defined (i.e. the reading of the relevant register returns an ER = 03), the device uses the following default communication parameters:

Communication Parameters	Allowed Values	Start Up Values
Slave Address	{1 ... 247}	247
Baud Rate	9600   19200 bit/s	19200 bit/s
Parity	Even   Odd   None	Even
Addressing Type	Standard   ABB SACE	Standard

**These parameters can't be changed locally.**

Author Autore	LB-DTA L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	Tot. Pag. 18/60

### 3. Start-up behaviour

At start-up, data are available in a time that depends on the master polling frequency (scan rate).

The following table contains some measurements of the time passing between the reset of the device and the first valid response sent towards the Remote System. They have been obtained with different values of scan rate and for different query lengths.

The slave timeout set is 100 ms, while the baud rate is 19200 bit/s.

Query	Scan Rate (ms)	Min (ms)	Max (ms)	Average (ms)
Read 1 RAM register	1000	231	902	558
Read 1 RAM register	500	128	520	350
Read 1 RAM register	100	114	220	153,6
Read 1 RAM register	5	40	99	60
Read 11 RAM registers	1000	81	892	372
Read 11 RAM registers	500	44	468	256,5
Read 11 RAM registers	100	32	217	136,5
Read 11 RAM registers	5	28	126	71,2
Read 1 EEPROM register	1000	69	935	500
Read 1 EEPROM register	500	39	486	219,5
Read 1 EEPROM register	100	37	215	90
Read 1 EEPROM register	5	49	134	99
Read 9 EEPROM registers	1000	36	970	550
Read 9 EEPROM registers	500	50	506	283,4
Read 9 EEPROM registers	100	31	200	131
Read 9 EEPROM registers	5	89	274	143,4

Table 14. Start-up time

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 19/60

## 4. Operating Mode

The device can operate in two different modes, Local and Remote. The mode can be selected through a dipswitch (LOCAL/REMOTE).

### 4.1 Local Operating Mode

From the remote point of view, the device has the following behaviour:

Actions forbidden	Actions allowed
No remote parameterisation allowed	Consultation of measurements
No remote command allowed	Consultation of configuration parameters of the device
	Consultation of protection unit information

### 4.2 Remote Operating Mode

From the remote point of view, the device has the following behaviour:

Actions forbidden	Actions allowed
None	Remote parameterisation allowed
	Remote command allowed
	Consultation of measurements
	Consultation of configuration parameters of the device
	Circuit Breaker commands (open / close)
	Trip Reset / CB Reset

Author Autore	LB-DTA L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	Tot. Pag. 20/60

## 5. Configuration parameters programming model

The Protection Unit connected to the Communication Unit can use two different parameter sets:

1. Manual parameter set
2. Electronic parameter set

The frontal PU dipswitch ‘MAN / ELT’ selects the used set and is reported to the Remote System via the ‘Electronic/Manual Parameters Settings’ event.

**The programming model described further applies to the electronic parameter set only.**

### 5.1 Manual parameters

Manual parameter values can be changed **locally only** using frontal PU dipswitches, so these values are READ ONLY from the Remote System.

This set is used by the PU when either the ‘MAN / ELT’ dipswitch is set to ‘MAN’ or the Electronic parameters are corrupted.

The manual parameters are updated towards the Remote System every 500 ms, regardless of the setting of ‘MAN / ELT’ dipswitch.

Every time the manual parameter set is read, if it’s changed, the ‘Manual parameter changed’ event rises up.

Moreover, if some parameters are not consistent with each other (e.g. Protection L and Protection S thresholds), also the ‘Manual parameter inconsistency’ event rises up and the register ‘Manual Parameter Inconsistency Code’ contains the code associated to the description of the error (see Table 28). Besides, the LED starts blinking (see par. 7.1)

Please note that when a protection algorithm (i.e. S, I or G) is disabled (i.e. its trip level is OFF = 0), the device propagates the value set through the dipswitches for the other protection relevant parameters (i.e. time delay, curve type). In this way, the remote system can read the real status of the dipswitches.

#### **NOTE**

The manual ‘Neutral Selection’ dipswitch and ‘Neutral Enabling’ dipswitch are always periodically read because these parameters are necessary to calculate the right neutral current value.

Author Autore	LB-DTA                    L2572				Title Titolo	<b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 21/60

## 5.2 Local programming state

PR222DS/PD is considered to be in “Local Programming” state when the dip switch “LOCAL / REMOTE” is set to LOCAL. All configuration parameters are readable, but none of them is remotely modifiable.

## 5.3 Remote programming model

All configuration parameters are readable, while only some of them are remotely modifiable.

All configuration parameters are items. They can be:

- READ ONLY (the system can't modify them)  
The configuration parameter is associated only to an Input Item (AI)
- READ/WRITE (the system can modify them)  
The configuration parameter is associated both to an Input (AI) **and** to an Output (AO) Item

Obviously, “READ/WRITE” configuration parameters are a subset of those “READ ONLY”.

						ENG
Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD	Modbus™ System Interface	
ABB				Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 22/60

### 5.3.1 Programming Model

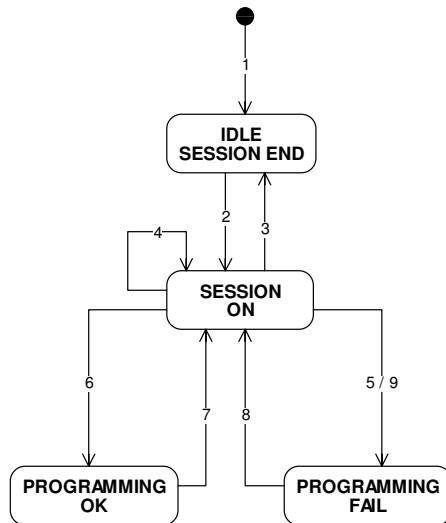


Figure 1. Remote programming model state chart

STATE NAME	STATE DESCRIPTION	PROGRAMMING OK Item	PROGRAMMING FAIL Item
INIT	Initial state	0	0
IDLE / SESSION END	Session is ended	0	0
SESSION ON	Session is active	1	1
PROGRAMMING OK	Session ended without errors	1	0
PROGRAMMING FAIL	Session ended with errors	0	1

TRANSITION	INITIAL STATE	FINAL STATE	TRANSITION CONDITION
1	INIT	IDLE / SESSION END	Start-up
2	IDLE / SESSION END	SESSION ON	'Start programming' command received from system.
3	SESSION ON	IDLE / SESSION END	'Abort programming' command received from system. 'Stop programming' command received from system with no parameter modified
4	SESSION ON	SESSION ON	'Start programming' command received from system.
5	SESSION ON	PROGRAMMING FAIL	'Stop programming' command received from system <b>and</b> errors detected (see also 'Electronic Programming Fail Code').
6	SESSION ON	PROGRAMMING OK	'Stop programming' command received from system <b>and</b> NO errors detected.
7	PROGRAMMING OK	SESSION ON	'Start programming' command received from system.
8	PROGRAMMING FAIL	SESSION ON	'Start programming' command received from system.
9	SESSION ON	PROGRAMMING FAIL	A 'local' aborting event has occurred: 1. Operating Mode from REMOTE to LOCAL 2. Test Unit connection

Author Autore	LB-DTA L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>				Doc. No N. Doc.	<b>1SDH000600R0001</b>	
					Tot. Pag. 23/60	

The actions associated to each transition are:

TRANSITION	ACTION
1	N/A
2	1. Set the programming items 2. Reset 'Electronic Programming Fail Code' item 3. Copy the 'Present parameters' buffer into 'New Parameters'
3	1. Reset the programming items
4	1. Copy the 'Present parameters' buffer into 'New Parameters'
5	1. PU programming 2. Reset the 'Programming OK' item <b>and</b> write the 'Electronic Programming Fail Code' item 3. Return response with ER = 04
6	1. PU programming 2. Reset the 'Programming Fail' item <b>and</b> set the 'Electronic Parameter Changed' item
7	1. Set the 'Programming Fail' item 2. Copy the 'Present parameters' buffer into 'New Parameters'
8	1. Set the 'Programming OK' item 2. Reset 'Electronic Programming Fail Code' item 3. Copy the 'Present parameters' buffer into 'New Parameters'
9	1. Reset 'Programming OK' item 2. Write the 'Programming Fail Code' item

Author Autore	LB-DTA L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	Tot. Pag. 24/60

## 6. Commands

The device manages two different command ‘sources’:

1. Remote Operator, i.e. a remote command from the system (remote command)
2. Local Operator, i.e. an action performed locally on the circuit breaker (local command)

From now on, the word ‘command’ means ‘remote command’.

### 6.1 Command Categories

Remote commands handled by device can be organised in two different categories:

a) Protection Unit Commands

- Start Programming
- Stop Programming
- Abort Programming
- Trip Reset
- Wink

b) Circuit Breaker Commands

- CB Open
- CB Close
- CB Reset

Only the value ‘1’ is allowed for a command.

The value ‘0’ is accepted, but no command is executed (**NB: available only from SW version 3.00**).

If a different value is sent, an exception response ‘ILLEGAL\_DATA\_VALUE’ will be returned.

The commands concerning only the PU (e.g. Trip Reset) and not the Circuit Breaker are independent from CB states. ‘CB Reset’ command implies the ‘Trip Reset’ command too, so this command concerns both the PU and the CB.

#### 6.1.1 Wink Command

The “wink” command is used for recognising a device by making its LED flash.

The command is sent from the remote system and has a toggle behaviour, i.e., to stop the LED flashing another “wink” command has to be sent.

Wink is signalled by 4 Hz blinking frequency.

If any among L-PreAlarm, L-Alarm or Manual Parameter Inconsistency condition occurs, the LED starts signalling the new condition and the “Wink” finite state machine goes to “LED not flashing” state.

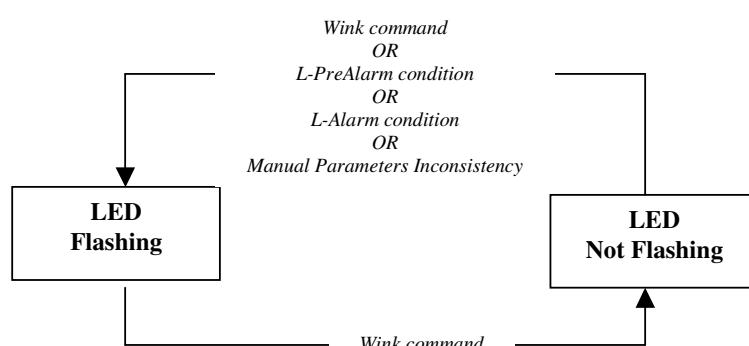


Figure 2. Wink command

The ‘Wink’ condition is also signalled to the Remote System through a relevant Modbus register.

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 25/60

### **6.1.2 Trip Reset**

This command resets the trip signalling towards the Remote System.

### **6.1.3 CB Reset**

This command resets the trip signalling towards the Remote System and changes the mechanical status from TRIPPED to OPEN. This is also the behaviour when a LOCAL CB Reset command is issued by opening the CB (i.e. changing its mechanical status from TRIPPED to OPEN).

CB Reset is refused if:

- CB Close
- CB Open without Trip Command Fail conditions

### **6.1.4 Remote ‘CB Close’ command after Trip Command Fail**

When a ‘Trip Command Fail’ condition occurs (see its definition in par. 1.3.2), the CB reaches the Open position: in this situation, the ‘Close’ command is accepted and causes a Trip Reset.

NB: this behaviour is different from the other ABB SACE Modbus devices (PR212/D-M, PR112/PD-M, PR113/PD-M). In this condition, it is better to send a ‘Trip Reset’ command before the ‘Close’ command to give an acknowledgement to trip.

### **6.1.5 CB commands inhibition**

When the device sends the command, the event “CB command executed” is set. However no remote CB commands can be fulfilled if:

- a) the frontal AUTO / MANUAL selector on the Motor Operator is set to MANUAL
- b) the Motor Command is broken
- c) the I2C bus connection is broken

## **6.2 Commands management**

### **6.2.1 Commands completion**

After receiving a command, the device verifies the inhibition conditions and sends the response.

If there is an error, an exception response is sent and the requested command is NOT processed.

Even if there is an error or not, during this time, the relevant command item is NOT reset, signalling that the command is pending, and command completion will be signalled by the relevant item reset.

If there is NO error, the command result is signalled in the following way:

		Command result
<b>Start Programming</b>		Programming OK = Programming Fail = 1 (i.e. Remote programming session ON)
<b>Abort Programming</b>		Programming OK = Programming Fail = 0 (i.e. Remote programming session OFF)
<b>Stop Programming</b>		<ol style="list-style-type: none"> <li>1. Programming result = OK           <ul style="list-style-type: none"> <li>• Programming OK = 1, Programming Fail = 0</li> <li>• Electronic Parameter changed = 1</li> <li>• Present parameters are updated</li> </ul> </li> <li>2. Programming result = FAIL           <ul style="list-style-type: none"> <li>• Programming OK = 0, Programming Fail = 1</li> <li>• Set Electronic Programming Fail Code</li> <li>• ER = 04 returned</li> </ul> </li> <li>3. Nothing changed           <ul style="list-style-type: none"> <li>• Programming OK = Programming Fail = 0</li> </ul> </li> </ol>
<b>Trip Reset</b>		<ol style="list-style-type: none"> <li>1. Trip Command Fail reset, if previously set (mutually exclusive with CB Tripped Item)</li> <li>2. Other Trip reset, if previously set (mutually exclusive with Protection Trip Item)</li> <li>3. Relevant Trip Item reset ➔ Any Trip reset</li> </ol>
<b>Wink</b>		<ol style="list-style-type: none"> <li>1. If Wink status = 0           <ul style="list-style-type: none"> <li>• LED blinking (4 Hz)</li> <li>• Wink status = 1</li> </ul> </li> <li>2. If Wink status = 1           <ul style="list-style-type: none"> <li>• LED stops blinking</li> <li>• Wink status = 0</li> </ul> </li> <li>3. If another condition for LED blinking occurs (L Pre Alarm, L Alarm, Manual Parameter Inconsistency)           <ul style="list-style-type: none"> <li>• LED stops blinking</li> </ul> </li> </ol>

Author Autore	LB-DTA                    L2572				Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 26/60

	<ul style="list-style-type: none"> <li>• Wink status = 0</li> </ul>
<b><i>CB Open</i></b>	CB Open / Closed = 0
<b><i>CB Close</i></b>	CB Open / Closed = 1
<b><i>CB Reset</i></b>	<ol style="list-style-type: none"> <li>1. Open command to the CB</li> <li>2. CB Tripped = 0, if previously set (mutually exclusive with Trip Command Fail Item)</li> <li>3. Trip Command Fail reset, if previously set (mutually exclusive with CB Tripped Item)</li> <li>4. Other Trip reset, if previously set (mutually exclusive with Protection Trip Item)</li> <li>5. Relevant Trip Item reset → Any Trip reset</li> </ol>

**Table 15. Command results**


Author Autore	LB-DTA L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	<b>ENG</b>
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	
						Tot. Pag. <b>27/60</b>

### 6.2.2 CB commands execution

In case of CB command (i.e. ‘CB Open’, ‘CB Close’ and ‘CB Reset’), the command implies an external actor (i.e. a power actuator) for its completion.


Because of this, a particular event is defined, ‘CB Command Executed’, that signals the end of the CU command processing.

This event is reset before the CU starts driving the external actor and it’s set after the CU has completed driving the external actor:

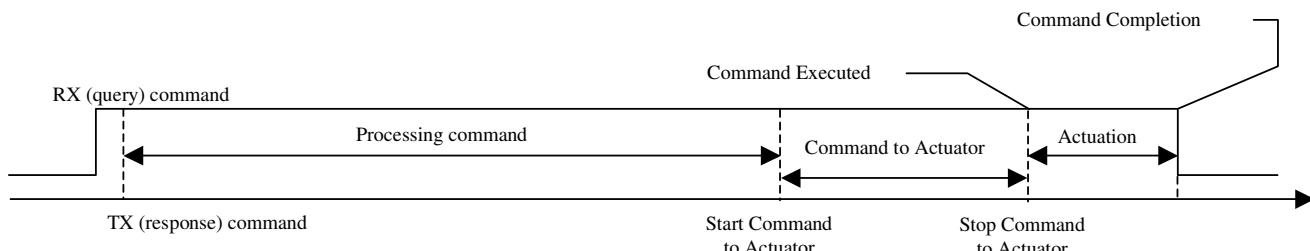

**Table 16. ‘Command Executed’ event (Executed before completion)**

By the way, the following situation is the common behaviour:

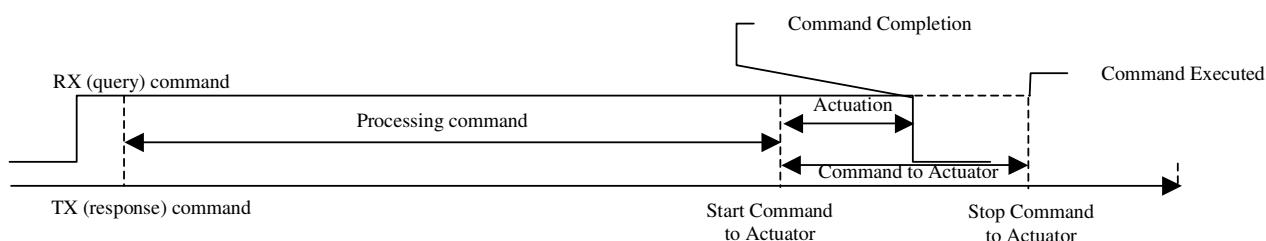

**Table 17. ‘Command Executed’ event (Completed before execution)**

This situation represents an electromechanical dynamics faster than the electronic command or an electronic command longer than what the actuator needs.

In this case, both ‘CB Command Executed’ and CB status (related to the command) events are set for a little period of time.

In both situations, this event tells the system that:

1. the command is correctly received (normal response);
2. the SW has correctly processed it (‘Command Executed’ reset);
3. the SW has correctly driven the actuator (‘Command Executed’ set).

So this event could be helpful to analyse CB command failures.

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD	ENG
ABB			Doc. No N. Doc.	Modbus™ System Interface <b>1SDH000600R0001</b>	Tot. Pag. 28/60

### 6.2.3 Commands inhibition

There are three different levels of command inhibition conditions:

1. functional conditions (highest)  
Ex.: Abort / Stop Programming command outside a remote programming session.
2. feasibility conditions
3. security conditions (lowest)  
Ex.: any remote command in Operating Mode = LOCAL

Moreover, only one command at a time can be processed, i.e. if there is another pending command, the latter will be refused.

	<b>Operating Mode LOCAL</b>	<b>CB Tripped</b>	<b>Trip Command Fail</b>	<b>Pending Command</b>	<b>Functional conditions for command execution</b>
<i>Start Programming</i>	X			X	
<i>Abort Programming</i>	X			X	Programming Session ON
<i>Stop Programming</i>	X			X	Programming Session ON
<i>Trip Reset</i>	X			X	
<i>Wink</i>	X				
<i>CB Open</i>	X			X	
<i>CB Close</i>	X	X		X	CB OPEN & Trip Command Fail OFF
<i>CB Reset</i>	X			X	CB TRIPPED   ( CB OPEN & Trip Command Fail ON )

**Table 18. Conditions for commands' inhibition**

The refused command is signalled via an exception response ‘SLAVE\_DEVICE\_BUSY’, that means ‘the device is not ready to perform the requested command’.

Author Autore	LB-DTA L2572				Title Titolo	<b>PR222DS/PD</b>	<b>ENG</b>
<b>ABB</b>					Doc. No N. Doc.	<b>Modbus™ System Interface</b>	
						<b>1SDH000600R0001</b>	Tot. Pag. <b>29/60</b>

## 6.3 Local Commands management

The device manages three local commands:

1. CB Open
2. CB Close
3. CB Reset

### 6.3.1 CB Open

A local user performs this command when she/he switches manually the circuit breaker from CLOSED to OPEN.

The device manages this command in the following way:

- CB status change
- Number of CB operation update
- Number of CB manual operation update

### 6.3.2 CB Close

A local user performs this command when he switches manually the circuit breaker from OPEN to CLOSED.

The device manages this command in the following way:

- CB status change

### 6.3.3 CB Reset

A local user performs this command when he switches manually the circuit breaker either from TRIPPED to OPEN (after a protection trip or another kind of trip) or from OPEN to CLOSED (after a Trip Command Fail).

The device manages this command in the following way:

- CB status change
- If the CB was in TRIPPED state, reset the relevant event and perform a Trip Reset
- If the CB was in OPEN state for TCF, reset the relevant event and perform a Trip Reset
- Reset of relevant event (any trip or another kind of trip)

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 30/60

## 7. Human Machine Interface / Local User Interface

HMI is made of:

- dipswitches
- LED

### 7.1 LED

There is only one LED and it is used for the following signalling:

- Protection L Pre Alarm
- Protection L Alarm
- Manual Parameters Inconsistency
- Wink

As they can be simultaneous, the following priority levels have been defined:

1. Protection L Pre Alarm / Protection L Alarm
2. Manual Parameters Inconsistency
3. Wink

Signalling	LED behaviour
Protection L Pre Alarm	Fixed ON
Protection L Alarm	Frequency: 1 Hz Duty cycle: 50 %
Manual Parameters Inconsistency	Frequency: 0.33 Hz Duty cycle: 33.3 % ON
Wink	Frequency: 4 Hz Duty cycle: 50 %

Table 19. LED behaviour

Author Autore	LB-DTA                    L2572				Title Titolo  <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.  <b>1SDH000600R0001</b>	Tot. Pag. 31/60

## 8. Modbus Logical Map

In this section are contained all the Modbus variables, both in Input and in Output, handled by device and accessible from the Remote System. They are divided according to their Modbus data type: Analog Input, Analog Output.  
 ‘Persistence = PERMANENT’ means that value is saved into non-volatile memory.

These are the buffers defined for this device:

Buffer Name	Buffer Type	Registers Number	Description
Commands	AO	1	One register for each command (8 commands)
New Electronic Parameters	AO	11	Writing Parameters
Communication Statistics	AI	5	Communication Statistics
Process Statistics	AI	9	Process Statistics
Reports	AI	4	Events, States, Alarms and Trips reports
Information	AI	1	General info (Wink status, MOE-E presence)
Electronic Programming Fail Code	AI	1	Code of the wrong configuration electronic parameters
Manual Parameters Inconsistency Code	AI	1	Code of the wrong configuration manual parameters
Run-time Currents	AI	5	Run time currents
Trip Currents	AI	5	Trip currents
Trip Reports	AI	4	States, Events, Alarms and Trips reports after trip
Manual Parameters	AI	8	Settings of dipswitches
Present Electronic Parameters	AI	11	Parameters in use
Product Execution	AI	1	Product Execution (LSI/LSIG)
Device Serial Number	AI	5	Device Serial Number
Communication Parameters	AI	1	Slave Address, Baud Rate, Parity, Addressing Type
System Disconnection Timeout	AI	1	System Disconnection Timeout
Protection Unit Nominal Current	AI	1	Protection Unit Nominal Current
CB Type	AI	6	CB Type (T4, T5, S6)
SW version	AI	1	SW version
Device Version	AI	1	Device Version (P or PD)
Max value limitation	AI	1	Max parameter value according to CB type (L time delay, I threshold)
Tag name & User Data	AO	10	Registers for users' information
Protection I Selection	AI	1	Protection I configuration (Instantaneous/Selective)

Table 20. Buffers

### 8.1 Bit field organization

There are some registers that are organized as bit fields. The bit field structure is:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
MSB								LSB							

Table 21. Bit field organization

Each bit can be identified in two ways:

- a) MSB bit 6
- b) bit 14

In the following sections, the bit are identified in the b) way.

### 8.2 Product execution

In the following tables, it is specified to which product execution any parameter is related to. If not specified, the parameter is valid for all the versions (LSIG, LSI, SI).

Author Autore	LB-DTA L2572				Title Titolo	PR222DS/PD Modbus™ System Interface				ENG
ABB					Doc. No N. Doc.	1SDH000600R0001				Tot. Pag. 32/60

## 8.3 Analog Input

### 8.3.1 Buffer “Communication Statistics”

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Communication Statistics	30001	0001	0000	0000	5

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Range	Unit of Meas.	Persistence	Comments
Communication Statistics	30001	0001	0000	0000	5							
	30001	0001	0000	0000	1			Number of received messages	0 - 65535		Bus Message Count (see 1)	
	30002	0002	0001	0001	1			Number of received messages with char/frame error	0 - 65535		Bus Communication Error Count (see 2)	
	30003	0003	0002	0002	1			Number of responses	0 - 65535		Slave Message Count	
	30004	0004	0003	0003	1			Number of Slave Busy responses	0 - 65535		Slave Busy Count	
	30005	0005	0004	0004	1			Number of exception responses	0 - 65535		Bus Exception Error Count (see 3)	

1. This number counts only the messages received from the device that has right Slave Address.
2. This number counts both the low level transmission errors (i.e. overrun, parity), also called ‘char errors’, and the CRC errors, also called ‘frame errors’. They are counted only if the slave address is the right one.
3. ‘Number of exception responses’ contains number of ‘Slave Busy responses’.

Table 22. AI – Buffer ‘Communication Statistics’

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 33/60

### 8.3.2 Buffer “Process Statistics”

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Statistics	30007	0007	0006	0006	9

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Range	Unit of Meas.	Persistence	Comments
Process Statistics	30007	0007	0006	0006	9							
	30007	0007	0006	0006	1			CB number of operations	0 - 65535		Permanent	See 4
	30008	0008	0007	0007	1			CB number of manual opens	0 - 65535		Permanent	See 5
	30009	0009	0008	0008	1			CB number of protection trips	0 - 65535		Permanent	See 6
	30010	0010	0009	0009	1			CB number of protection trips fail	0 - 65535		Permanent	See 7
	30011	0011	0010	000A	1			CB number of other trips (trip test)	0 - 65535		Permanent	See 8
	30012	0012	0009	000B	1			Protection L number of trips	0 - 65535		Permanent	See 9
	30013	0013	0012	000C	1			Protection S number of trips	0 - 65535		Permanent	See 10
	30014	0014	0013	000D	1			Protection I number of trips	0 - 65535		Permanent	See 11
	30015	0015	0014	000E	1			Protection G number of trips	0 - 65535		Permanent	See 12

**Table 23. AI – Buffer ‘Process Statistics’**

- 4. CB number of operations: transitions towards ‘Open’, regardless from the cause
- 5. CB number of manual opens: transitions from ‘Closed’ to ‘Open’ due to opening command (local or remote)
- 6. CB number of protection trips: transitions from ‘Closed’ to ‘Tripped’ due to device intervention after a trip
- 7. CB number of protection trips fail: transitions from ‘Closed’ to ‘Tripped’ due to backup procedure (through TC)
- 8. CB number of other trips (trip test): transitions from ‘Closed’ to ‘Tripped’ due to trip test through TT1
- 9. Protection L number of trips: transitions from ‘Closed’ to ‘Tripped’ due to trip test through Test Unit
- 10. Protection S number of trips: transitions from ‘Open’ to ‘Tripped’ due to local test through CB test button
- 11. Protection I number of trips: interventions of the protection L, regardless from the result (valid for LSIG, LSI)
- 12. Protection G number of trips: interventions of the protection S, regardless from the result
- 13. Protection G number of trips: interventions of the protection I, regardless from the result
- 14. Protection G number of trips: interventions of the protection G, regardless from the result (valid for LSIG)

NB: if these data are not valid, an ER = 04 is returned

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
ABB			Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 34/60

### 8.3.3 Buffer “Reports”

Section	Absolute Address	Relative Address - 1	Relative Address - Number of items	HIGH byte	LOW byte	Description	Comments
				(HEX)			
Reports	30033	0033	0032	0020	4	Events	

Section	Absolute Address	Relative Address - 1	Relative Address - Number of items	HIGH byte	LOW byte	Description	Bit field Structure	Range	Comments
				(HEX)					
Reports	30033	0033	0032	0020	1	Events	bit 0 Manual parameters changed bit 1 Electronic parameters changed bit 2 CB Command executed bit 3 Electronic trip test bit 4 Power up after self supply bit 5 Test Unit connected	1 = Manual parameters changed 1 = Electronic parameters changed 1 = CB Command executed 1 = Electronic trip test 1 = Power up after self supply 1 = Test Unit connected	See 13
	30033	0033	0032	0020	4		bit 0 Any alarm bit 1 Any trip bit 2 CB tripped bit 3 CB open/closed bit 4 Trip command fail bit 5 Other trips	1 = Any alarm 1 = Any trip 1 = CB tripped 1 = CB Open (0)   CB Closed (1) ] 1 = Trip command fail 1 = Other trips	See 14 See 15 See 16
	30034	0034	0033	0021	1	Status	bit 6 Local/Remote operating mode bit 7 Programming OK bit 8 Programming Fail	[ Remote (0)   Local (1) ] Bit 7 = 0 Bit 8 = 0 Programming OFF Bit 7 = 1 Bit 8 = 1 Programming ON Bit 7 = 1 Bit 8 = 0 Programming OK Bit 7 = 0 Bit 8 = 1 Programming FAIL	See 19
	30034	0034	0033	0022	1	Alarms	bit 9 Electronic/Manual parameters selected bit 10 Manual parameters inconsistency bit 11 EEPROM parameters error bit 12 AUX-E unknown bit 13 Nominal current unknown bit 14 Serial parameters unknown bit 15 Trip data available bit 0 L.Pre-alarm bit 1 L.alarm (timing/tripping) bit 2 S.alarm (timing/tripping) bit 3 G.alarm (timing/tripping) bit 4 Motor Command overheated bit 5 General purpose I/O bit 6 General purpose I/O	[ Electronic parameters (0) Manual parameters (1) ] 1 = Manual parameters inconsistency 1 = EEPROM parameters error 1 = AUX-E unknown 1 = Nominal current unknown 1 = Serial parameters unknown 1 = Trip data available 1 = L Pre-alarm 1 = L alarm (timing/tripping) 1 = S alarm (timing/tripping) 1 = G alarm (timing/tripping) 1 = MC over 100 °C NOT USED (= 0) NOT USED (= 0)	See 20 Valid for LSIG, LSI Valid for LSIG, LSI
	30035	0035	0034	0022	1	Alarms			See 22 See 22 See 22

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>Modbus™ System Interface</b> <b>1SDH000600R0001</b>	Tot. Pag. 35/60

30036	0036	0035	0023	1	Trips	bit 7 General purpose I/O bit 8 General purpose I/O bit 9 General purpose I/O bit 0 L tripped bit 1 S tripped bit 2 I tripped bit 3 G tripped	NOT USED (= 0) NOT USED (= 0) NOT USED (= 0) 1 = L tripped 1 = S tripped 1 = I tripped 1 = G tripped	See 22 See 22 See 22 See 21 <b>Valid for LSIG, LSI</b> See 21 See 21 See 21 See 21 <b>Valid for LSIG</b>
-------	------	------	------	---	-------	---	--	---

**Table 24. AI - Buffer ‘Reports’**

All these items are organized as bit field (See § 8.1).

13. It signals any changes on dipswitches concerning protection parameters (thresholds and time delays). It doesn't signal changes of the following dipswitches:
  - Neutral selection
  - Neutral enabling
  - Operating mode
  - Parameters selected
14. ‘Any alarm’ is set if any of alarm item is set. It is reset when all the alarm items are equal to 0.
15. ‘Any trip’ is set if any of trip item is set. It is reset after either a remote ‘Trip Reset’ or a local / remote ‘CB Reset’.
16. If the CB is in TRIPPED mechanical state, also ‘CB open’ is set.
17. ‘Trip command fail’ is set when the device haven't succeeded in opening the CB at first attempt. After that two different back-up procedures are started:
  - the device sends periodically (100 ms) a command to SA. If successful, the CB goes into ‘Tripped’ state.
  - if auxiliary supply and the CB I/O are present, the device sends once a command to the YO after 100 ms. If successful, the CB goes into ‘Open’ state.
18. ‘Other trip’ is set if and only if the CB tripped state is due to a electronic / mechanical trip test, a UVR trip or a SOR trip.
19. Remote programming status:

Programming OK	Programming Fail	Description
0	0	Idle / Remote programming session OFF
0	1	Programming Fail
1	0	Programming OK
1	1	Remote programming session ON

20. ‘Trip data available’ is always ON, but when the PU is storing trip currents after a trip or data are not valid
21. If ‘X tripped’ is set, the relevant ‘X Alarm (timing / tripping)’ is reset.
22. These alarms concern the motor command: only the first one is used, the other ones are available for future features.

Author Autore	LB-DTA                    L2572				Title Titolo  <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.  <b>1SDH000600R0001</b>	
						Tot. Pag. 36/60

### 8.3.4 Information

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1	Number of items
			(HEX)	(HEX)	
Information	30038	0038	0037	0025	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1	Number of items	HIGH byte	LOW byte	Description	Bit field Structure	Range	Comments
				(HEX)							
Information	30038	0038	0037	0025	1			Information	bit 0 Wink Status bit 1 MOE-E unknown	1 = Wink ON 1 = MOE-E unknown	
	30038	0038	0037	0025	1						

Table 25. AI – Buffer ‘Information’

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 37/60

### 8.3.5 Buffer “Programming Fail Code”

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Programming Fail Code	30051	0051	0050	0032	2

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Range	Unit of Meas.	Persistence	Comments
Programming Fail Code	30051	0051	0050	0032	2							
	30051	0051	0050	0032	1			Electronic Programming Fail Error Code	see Table 27			
	30052	0052	0051	0033	1			Manual Parameters Inconsistency Code	see Table 28			

**Table 26. AI – Buffer ‘Programming Fail Code’**

During a programming session, the device makes some checks on the configuration parameters to find possible errors. The relevant codes are subdivided into three categories:

System Error Codes	Error Type
0	NO ERROR
1 – 1000	Error concerning device conditions
1001 – 2000	Errors concerning parameters
2001 – 3000	Other errors

Inside every block, the error codes are not consecutive to let spaces for further upgrades. Homogeneous blocks are indicated with the colour of the cells.

The not used error codes are intentionally NOT described because they are used into the other devices (e.g. PR112/PD-M, PR113/PD-M, PR212/D-M), so that two different devices have the same code for the same error.

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 38/60

System Error Code	Description	Notes
0	NO ERROR	
1	EEPROM Busy	
11	S Alarm	
12	G Alarm	<b>Valid for LSIG</b>
13	L Alarm	<b>Valid for LSIG, LSI</b>
31	S Threshold ≤ L Threshold (°)	
32	I Threshold ≤ S Threshold (°)	
1031	L Threshold Out Of Range	<b>Valid for LSIG, LSI</b>
1033	L Time Delay Out Of Range	<b>Valid for LSIG, LSI</b>
1042	S Threshold Out Of Range	
1043	S Time Delay Out Of Range	
1051	I Threshold Out Of Range	
1060	G Disable Out Of Range (*)	<b>Valid for LSIG</b>
1062	G Threshold Out Of Range	<b>Valid for LSIG</b>
1063	G Time Delay Out Of Range	<b>Valid for LSIG</b>
2002	Abort Program – Local	
2005	Abort Program – TU connected	

**Table 27. ‘Electronic Programming Fail Code’ range**

(°) These error codes are not generated if any of the relevant protections are disabled or not present (SI execution).

(\*) It signals when it tries to enable G protection in a LSI device.

System Error Code	Description
0	NO ERROR
31	S Threshold ≤ L Threshold
32	I Threshold ≤ S Threshold

**Table 28. ‘Manual Programming Inconsistency Code’ range**

Author Autore	LB-DTA                    L2572				Title Titolo  <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc.  <b>1SDH000600R0001</b>	

### 8.3.6 Buffer “Run-time currents”

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items
Run-time RMS Measurements	30101	0101	0100	0064	5

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Range	Unit of Meas.	Persistence	Comments
Run-time currents	30101	0101	0100	0064	5			RMS current phase L1	0 - 65535	A or In		
	30101	0101	0100	0064	1			RMS current phase L2	0 - 65535	A or In		
	30102	0102	0101	0065	1			RMS current phase L3	0 - 65535	A or In		
	30103	0103	0102	0066	1			RMS current neutral	0 - 65535	A or In		
	30104	0104	0103	0067	1			RMS current ground	0 - 65535	A or In		
	30105	0105	0104	0068	1						See 23	

**Table 29. AI – Buffer ‘Run-time currents’**

Their values are expressed as percentage of IN if the Nominal current is not set (i.e. the event ‘Nominal current unknown’ = 1), otherwise (i.e. the event ‘Nominal current unknown’ = 0) in Ampere.

Example: value read 150

- Nominal current unknown → 1.5 IN
- Nominal current known → 150 A

If the value is less than 0.1 IN, the value provided to the Remote System is 0.

23. This value is filtered for visualization. Its rise / fall time can vary from 2.5 to 5 seconds (**NB: available only from SW version 3.00**).

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 40/60

### 8.3.7 Buffer “Trip currents”

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Trip currents	30201	0201	0200	00C8	5

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Range	Unit of Meas.	Persistence	Comments
Trip currents	30201	0201	0200	00C8	5			Trip current phase L1	0 - 65535	A or In	Permanent	
	30201	0201	0200	00C8	1			Trip current phase L2	0 - 65535	A or In	Permanent	
	30202	0202	0201	00C9	1			Trip current phase L3	0 - 65535	A or In	Permanent	
	30203	0203	0202	00CA	1			Trip current neutral	0 - 65535	A or In	Permanent	
	30204	0204	0203	00CB	1			Trip current ground	0 - 65535	A or In	Permanent	
	30205	0205	0204	00CC	1							

Table 30. AI – Buffer ‘Trip currents’

NB: if these data are not valid, an ER = 04 is returned.

Author Autore	LB-DTA                    L2572				Title Titolo <b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>					Doc. No N. Doc. <b>1SDH000600R0001</b>	
						Tot. Pag. 41/60

### 8.3.8 Buffer “Trip Reports”

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1	Number of items
	(HEX)	(HEX)	(HEX)	(HEX)	
Trip Reports	30273	0273	0272	0272	4

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1	Number of items	HIGH byte	LOW byte	Description	Comments	Bit field Structure	Range	Comments
Trip Reports	30273	0273	0272	0110	4							
	30273	0273	0272	0110	1			Trip events		Bit field		
									bit 0 Manual parameters changed bit 1 Electronic parameters changed bit 2 CB Command executed bit 3 Electronic trip test bit 4 Power up after self supply bit 5 Test Unit connected		1 = Manual parameters changed 1 = Electronic parameters changed 1 = CB Command executed 1 = Electronic trip test 1 = Power up after self supply 1 = Test Unit connected	Permanent
	30274	0274	0273	0111	1			Trip status		Bit field		
									bit 0 Any alarm bit 1 Any trip bit 2 CB tripped bit 3 CB open/closed bit 4 Trip command fail bit 5 Other trips bit 6 Local/Remote operating mode bit 7 Programming OK bit 8 Programming Fail bit 9 Electronic/Manual parameters selected bit 10 Manual parameters inconsistency bit 11 EEPROM parameters error bit 12 AUX-E unknown bit 13 Nominal current unknown bit 14 Serial parameters unknown bit 15 Trip data available		1 = Any alarm 1 = Any trip 1 = CB tripped [ CB Open (0)   CB Closed (1) ] 1 = Trip command fail 1 = Other trips [ Remote (0)   Local (1) ] Bit 7 = 0   Bit 8 = 0 Programming OFF Bit 7 = 1   Bit 8 = 1 Programming ON Bit 7 = 1   Bit 8 = 0 Programming OK Bit 7 = 0   Bit 8 = 1 Programming FAIL [ Electronic parameters (0) Manual parameters (1) ] 1 = Manual parameters inconsistency 1 = EEPROM parameters error 1 = AUX-E unknown 1 = Nominal current unknown 1 = Serial parameters unknown 1 = Trip data available	Permanent
	30275	0275	0274	0112	1			Trip alarms		Bit field		
									bit 0 L Pre-alarm  bit 1 L alarm (timing/tripping)  bit 2 S alarm (timing/tripping) bit 3 G alarm (timing/tripping)		1 = L Pre-alarm  1 = L alarm (timing/tripping)  1 = S alarm (timing/tripping) 1 = G alarm (timing/tripping)	Permanent Valid for LSIG, LSI Valid for LSIG, LSI Valid for

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 42/60

30276	0276	0275	0113	1	Trip trips	Bit field	bit 4 Motor Command overheated bit 5 General purpose I/O bit 6 General purpose I/O bit 7 General purpose I/O bit 8 General purpose I/O bit 9 General purpose I/O bit 0 L tripped	1 = MC over 100 °C NOT USED (= 0) NOT USED (= 0) NOT USED (= 0) NOT USED (= 0) NOT USED (= 0) 1 = L tripped	LSIG
							bit 1 S tripped bit 2 I tripped bit 3 G tripped	1 = S tripped 1 = I tripped 1 = G tripped	Permanent Valid for LSIG, LSI  Valid for LSIG

**Table 31. AI - Buffer 'Trip Reports'**

NB: if these data are not valid, an ER = 04 is returned. If 'Trip data available' status bit is not set, these data are not available.

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 43/60

### 8.3.9 Buffer "Manual Parameters"

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items
Manual parameters	30324	0324	0323	0143	8

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Bit field Structure	Range	Comments
Manual parameters	30324	0324	0323	0143	8							
	30324	0324	0323	0143	1	N/A		Protection L manual trip level	scaled *100	N/A	{ 0.4 ... 1 }	In, step 0.02
	30325	0325	0324	0144	1	N/A		Protection L manual trip delay	scaled *10	N/A	See Table 33	Valid for LSIG, LSI
	30326	0326	0325	0145	1	N/A		Protection S manual trip level	scaled *10	N/A	[ 0 (Disabled)   0.6   1.2   1.8   3   3.6   4.2   5.8   6.4   7   7.6   8.2   8.8   9.4   10 ]	In
	30327	0327	0326	0146	1	N/A		Protection S manual trip delay	scaled *100	N/A	[ 50   100   250   500 ]	ms
	30328	0328	0327	0147	1	N/A		Protection I manual trip level	scaled *10	N/A	See Table 33	
	30329	0329	0326	0148	1	N/A		Protection G manual trip level	scaled *100	N/A	[ 0 (Disabled)   0.2   0.25   0.45   0.55   0.75   0.8   1 ]	In
	30330	0330	0329	0149	1	N/A		Protection G manual trip delay	scaled *100	N/A	[ 100   200   400   800 ]	ms
	30331	0331	0330	014A	1					Bit field	bit 0 Neutral selection	[ 50% (0)   100 % (1) ]
										bit 1 Neutral enabling	[ Off (Disabled) (0)   On (Enabled) (1) ]	
										bit 2 Protection S manual disable	[ Enabled (0)   Disabled (1) ]	
										bit 3 Protection S manual curve type	[ Definite Time (0)   Inverse Time (1) ]	
										bit 4 Protection I manual disable	[ Enabled (0)   Disabled (1) ]	
										bit 5 Protection G manual disable	[ Enabled (0)   Disabled (1) ]	
												Valid for LSIG

Table 32. AI -Buffer 'Manual Parameters'

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 44/60

<b>CB Type</b>	<b>Protection L manual time delay</b>	<b>Protection I manual threshold</b>
T4-320   T5-630   T5-600 UL	3   6   9   12 s	[ 0 (Disabled)   1.5   2.5   3   4   4.5   5   5.5   6.5   7   7.5   8   9   9.5   10   10 ] In
T4 - T5	3   6   9   18 s	[ 0 (Disabled)   1.5   2.5   3   4   4.5   5   5.5   6.5   7   7.5   8   9   9.5   10.5   12 ] In
S6	3   6   12   18 s	[ 0 (Disabled)   1.5   2.5   3   4   4.5   5   5.5   6.5   7   7.5   8   9   9.5   10.5   12 ] In

**Table 33. Manual parameters limitation according to CB type**

Author Autore	LB-DTA	L2572	Title Titolo	<b>PR222DS/PD</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>Modbus™ System Interface</b> <b>1SDH000600R0001</b>	
					Tot. Pag. 45/60

### 8.3.10 Buffer “Present Electronic Parameters”

Section	Absolute Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items
Present Electronic Parameters	30338	0338	0337	11

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Description	Format	Bit field Structure	Range	Default	Comments
Present Electronic Parameters	30338	0338	0337	0151	11				
				Date of test	DD MM YYYY	N/A	1 – 31 1 – 12		
	30341	0341	0340	0154	1	N/A	Protection L electronic trip level scaled * 100	N/A	0 – 65535
	30342	0342	0341	0155	1	N/A	Protection L electronic trip delay scaled * 10	N/A	{ 0.4 ... 1 } In, step 0.01 In
	30343	0343	0342	0156	1	N/A	Protection S electronic trip level scaled * 10	N/A	See Table 33 { 0.6 ... 10 } In, step 0.1 In
	30344	0344	0343	0157	1	N/A	Protection S electronic trip delay scaled * 100	N/A	{ 0.05 ... 0.5 } s, step 0.01 s
	30345	0345	0342	0158	1	N/A	Protection I electronic trip level scaled * 10	N/A	See Table 33 { 0.2 ... 1 } In, step 0.01 In
	30346	0346	0345	0159	1	N/A	Protection G electronic trip level scaled * 100	N/A	{ 0.1 ... 0.8 } s, step 0.01 s
	30347	0347	0346	015A	1	N/A	Protection G electronic trip delay scaled * 100	N/A	0.8 s
	30348	0348	0347	015B	1	N/A	Bit field bit 0 Protection L electronic pre-alarm disable [Enabled (0)  Disabled (1)]	0	Valid for LSIG, LSI
				bit 1 Protection S electronic disable [Enabled (0)  Disabled (1)]				1	
				bit 2 Protection S electronic curve type [Definite Time (0)  Inverse Time (1)]				1	
				bit 3 Protection I electronic disable [Enabled (0)  Disabled (1)]				0	
				bit 4 Protection G electronic disable [Enabled (0)  Disabled (1)]				1	Valid for LSIG

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>Modbus™ System Interface</b> <b>1SDH000600R0001</b>	Tot. Pag. 46/60

**Table 34. AI – Buffer ‘Present Electronic Parameters’**

<b>CB Type</b>	<b>Protection L electronic time delay</b>	<b>Protection I electronic threshold</b>
T4-320   T5-630   T5-600 UL	3 ... 12 s step 0.5 s	1.5 ... 10 IN step 0.1 IN
T4 - T5	3 ... 18 s step 0.5 s	1.5 ... 12 IN step 0.1 IN
S6	3 ... 18 s step 0.5 s	1.5 ... 12 IN step 0.1 IN

**Table 35. Electronic parameters limitation according to CB type**

NB: if these data are not valid, an ER = 04 is returned and the relevant bit is set into ‘Status’ structure.

Author Autore	LB-DTA	L2572	Title Titolo	<b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 47/60

### 8.3.11 Buffer "Product Execution"

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Product Execution	30350	0350	0349	015D	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Range	Default
Product Execution	30350	0350	0349	015D	1			Product Execution	[ LSI (0)   LSIG (1)   SI (2)]		
	30350	0350	0349	015D	1						

**Table 36. AI - Buffer 'Product Execution'**

NB: if these data are not valid, an ER = 04 is returned

**NB: Product execution SI is available only from SW version 3.00**

### 8.3.12 Buffer "Device Serial Number"

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Device Serial Number	30352	0352	0351	015F	8

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Range	Default
Device Serial Number	30352	0352	0351	015F	8			Device Serial Number	1 byte for character (ASCII)		
	30352	0352	0351	015F	8						

NB: characters are right aligned. If there are not used characters, they're zero-filled.

**Table 37. AI - Buffer 'Device Serial Number'**

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 48/60

### 8.3.13 Buffer "Communication Parameters"

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1	Number of items
	(HEX)	(HEX)	(HEX)	(HEX)	
Communication Parameters	30361	0361	0360	0168	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1	Number of items	HIGH byte	LOW byte	Description	Format	Bit field Structure	Range	Default
Communication Parameters	30361	0361	0360	0168	1							
	30361	0361	0360	0168	1							

Table 38. AI - Buffer 'Communication Parameters'

NB: if these data are not valid, an ER = 04 is returned and the default set is used.

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 49/60

### 8.3.14 Buffer "System Disconnection Timeout"

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items
System Disconnection Timeout	30363	0363	0362	016A	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Range	Default
System Disconnection Timeout	30363	0363	0362	016A	1					{0 ... 6000} tenths of ms, step 1 tenth of ms	0 seconds for PR222DS/P 1 seconds for PR222DS/PD
	30363	0363	0362	016A	1						

**Table 39. AI - Buffer 'System Disconnection Timeout'**

The value is expressed in tenth of milliseconds. For example, if the value read is 10, it means 100 ms.

NB: if these data are not valid, an ER = 04 is returned

Author Autore	LB-DTA	L2572	Title Titolo	<b>PR222DS/PD</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>Modbus™ System Interface</b>	
				<b>1SDH000600R0001</b>	Tot. Pag. 50/60

### 8.3.15 Buffer "Protection Unit Nominal Current"

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items
Protection Unit Nominal Current	30365	0365	0364	016C	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Range	Default
Protection Unit Nominal Current	30365	0365	0364	016C	1						
	30365	0365	0364	016C	1						See Table 41

**Table 40. AI -Buffer 'Protection Unit Nominal Current'**

The nominal current can assume the following values (no control is made on data validity):

100 A
150 A
160 A
200 A
250 A
300 A
320 A
400 A
600 A
630 A
800 A

**Table 41. Nominal Current allowed values**

NB: if these data are not valid, an ER = 04 is returned

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 51/60

### 8.3.16 Buffer "CB type"

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1	Number of items
				(HEX)	
CB type	30367	0367	0366	016E	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1	Number of items	HIGH byte	LOW byte	Description	Format	Range	Default
				(HEX)							
CB type	30367	0367	0366	016E	1			CB Type			See Table 43
	30367	0367	0366	016E	1						

Table 42. AI – Buffer 'CB Type'

The CB type can assume the following values, expressed by an index (no control is made on data validity):

Index	CB Type
0	T4
1	T5
2	S6

Table 43. CB type allowed values

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 52/60

### 8.3.17 Buffer “SW version”

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
SW version	30371	0371	0370	0172	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Bit field Structure	Range	Default
SW version	30371 30371	0371 0371	0370 0370	0172 0172	1 1			SW version	MM.mm			

Table 44. AI - Buffer 'SW version'

### 8.3.18 Buffer “Device version”

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Device version	30373	0373	0372	0174	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Bit field Structure	Range	Default
Device version	30373 30373	0373 0373	0372 0372	0174 0174	1 1			Device version			[ PR222DS-P (0)   PR222DS/PD (1) ]	

Table 45. AI – Buffer ‘Device version’

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 53/60

## 8.4 Analog Output

### 8.4.1 Buffer “CB Open” command

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1	Number of items
			(HEX)	(HEX)	
CB Open	40001	0001	0000	0000	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1	Number of items	HIGH byte	LOW byte	Description	Comments
			(HEX)	(HEX)					
CB Open	40001	0001	0000	0000	1			CB Open	Mutually exclusive to other CB commands
	40001	0001	0000	0000	1	N/A			

Table 46. AO – Buffer ‘CB Open’ Command

### 8.4.2 Buffer “CB Close” command

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1	Number of items
			(HEX)	(HEX)	
CB Close	40003	0003	0002	0002	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1	Number of items	HIGH byte	LOW byte	Description	Comments
			(HEX)	(HEX)					
CB Open	40003	0003	0002	0002	1			CB Close	Mutually exclusive to other CB commands
	40003	0003	0002	0002	1	N/A			

Table 47. AO – Buffer ‘CB Close’ Command

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD	ENG
ABB			Doc. No N. Doc.	Modbus™ System Interface <b>1SDH000600R0001</b>	Tot. Pag. 54/60

#### 8.4.3 Buffer “CB Reset” command

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
CB Reset	40005	0005	0004	0004	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Comments
CB Reset	40005	0005	0004	0004	1			CB Reset	Mutually exclusive to other CB commands
	40005	0005	0004	0004	1	N/A			

Table 48. AO – Buffer ‘CB Reset’ Command

#### 8.4.4 Buffer “Start programming session” command

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Start Programming session	40007	0007	0006	0006	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Comments
Start Programming session	40007	0007	0006	0006	1			Start Programming session	
	40007	0007	0006	0006	1	N/A			

Table 49. AO – Buffer ‘Start programming session’ Command

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 55/60

#### 8.4.5 Buffer “Abort programming session” command

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Abort Programming session	40009	0009	0008	0008	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Comments
Abort Programming session	40009	0009	0008	0008	1				
	40009	0009	0008	0008	1	N/A		Abort Programming session	

Table 50. AO – Buffer ‘Abort programming session’ Command

#### 8.4.6 Buffer “Stop programming session” command

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Stop Programming session	40011	0011	0010	000A	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Comments
Stop Programming session	40011	0011	0010	000A	1				
	40011	0011	0010	000A	1	N/A		Stop Programming session	

Table 51. AO – Buffer ‘Stop programming session’ Command

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 56/60

#### 8.4.7 Buffer “Trip Reset” command

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Trip Reset	40013	0013	0012	000C	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Comments
Trip Reset	40013	0013	0012	000C	1				
	40013	0013	0012	000C	1	N/A		Trip Reset	

Table 52. AO – Buffer ‘Trip Reset’ Command

#### 8.4.8 Buffer “Wink” command

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
Wink	40023	0023	0022	0016	1

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Comments
Wink	40023	0023	0022	0016	1				
	40023	0023	0022	0016	1	N/A		Wink	

Table 53. AO – Buffer ‘Wink’ Command

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 57/60

### 8.4.9 Buffer “New Parameters”

Section	Absolute Address	Relative Address	Relative Address – 1	Relative Address – 1 (HEX)	Number of items
New Electronic Parameters	40338	0338	0337	0151	11

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Bit field Structure	Range	Comments
New Electronic Parameters	40338	0338	0337	0151	11							
	40338	0338	0337	0151	3			Date of test	DD MM YYYY	N/A	1 – 31 1 – 12 0 – 65535	
	40341	0341	0340	0154	1	N/A		Protection L electronic trip level	scaled *100	N/A	{ 0.4 ... 1 } In step 0.01 In	Valid for LSIG, LSI
	40342	0342	0341	0155	1	N/A		Protection L electronic trip delay	scaled *10	N/A	See Table 35	Valid for LSIG, LSI
	40343	0343	0342	0156	1	N/A		Protection S electronic trip level	scaled *10	N/A	{ 0.6 ... 10 } In step 0.1 In	
	40344	0344	0343	0157	1	N/A		Protection S electronic trip delay	scaled *100	N/A	{ 0.05 ... 0.5 } s step 0.01 s	
	40345	0345	0344	0158	1	N/A		Protection I electronic trip level	scaled *10	N/A	See Table 35	
	40346	0346	0345	0159	1	N/A		Protection G electronic trip level	scaled *100	N/A	{ 0.2 ... 1 } In step 0.01 In	Valid for LSIG
	40347	0347	0346	015A	1	N/A		Protection G electronic trip delay	scaled *100	N/A	{ 0.1 ... 0.8 } s step 0.01 s	Valid for LSIG
	40348	0348	0347	015B	1	N/A			Bit field	bit 0 Protection L electronic pre-alarm disable bit 1 Protection S electronic disable bit 2 Protection S electronic curve type bit 3 Protection I electronic disable bit 4 Protection G electronic disable	[Enabled (0)   Disabled (1)] [Enabled (0)   Disabled (1)] [ Definite Time (0)   Inverse Time (1)] [Enabled (0)   Disabled (1)] [Enabled (0)   Disabled (1)]	Valid for LSIG, LSI

Table 54. AO – Buffer ‘New Electronic Parameters’

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD Modbus™ System Interface	ENG
ABB			Doc. No N. Doc.	1SDH000600R0001	Tot. Pag. 58/60

#### 8.4.10 Buffer “User Information”

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items
User Information	40377	0377	0376	0178	10

and these are the relevant items:

Section	Absolute Address	Relative Address	Relative Address - 1	Relative Address - 1 (HEX)	Number of items	HIGH byte	LOW byte	Description	Format	Range	Default
User Information	40377	0377	0376	0178	10						
	40377	0377	0376	0178	5			Tag Name	1 byte for character (ASCII)		
	40382	0382	0381	017D	5			User Data	1 byte for character (ASCII)		

Table 55. AO – Buffer ‘User Information’

Author Autore	LB-DTA	L2572	Title Titolo	PR222DS/PD <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 59/60

## 9. Revision History

### 9.1 Revision a – 15/04/2005

First release.

Author Autore	LB-DTA	L2572	Title Titolo	<b>PR222DS/PD</b> <b>Modbus™ System Interface</b>	ENG
<b>ABB</b>			Doc. No N. Doc.	<b>1SDH000600R0001</b>	Tot. Pag. 60/60