

NOTES:

1. All installations in hazardous locations must comply with requirements listed by certification drawings related to this equipment. Check for the certification number on the nameplate and follow the specified requirements of this equipment.
2. To access termination board, remove the Rear End Cap of the unit (a 1/16th Hex Set Screw must be loosened to remove the Cap).
3. The RS-485 buss must be wired in a daisy-chain configuration. Star configurations are not allowed.
4. Maximum accumulated length for the RS-485 buss is 4000 feet.

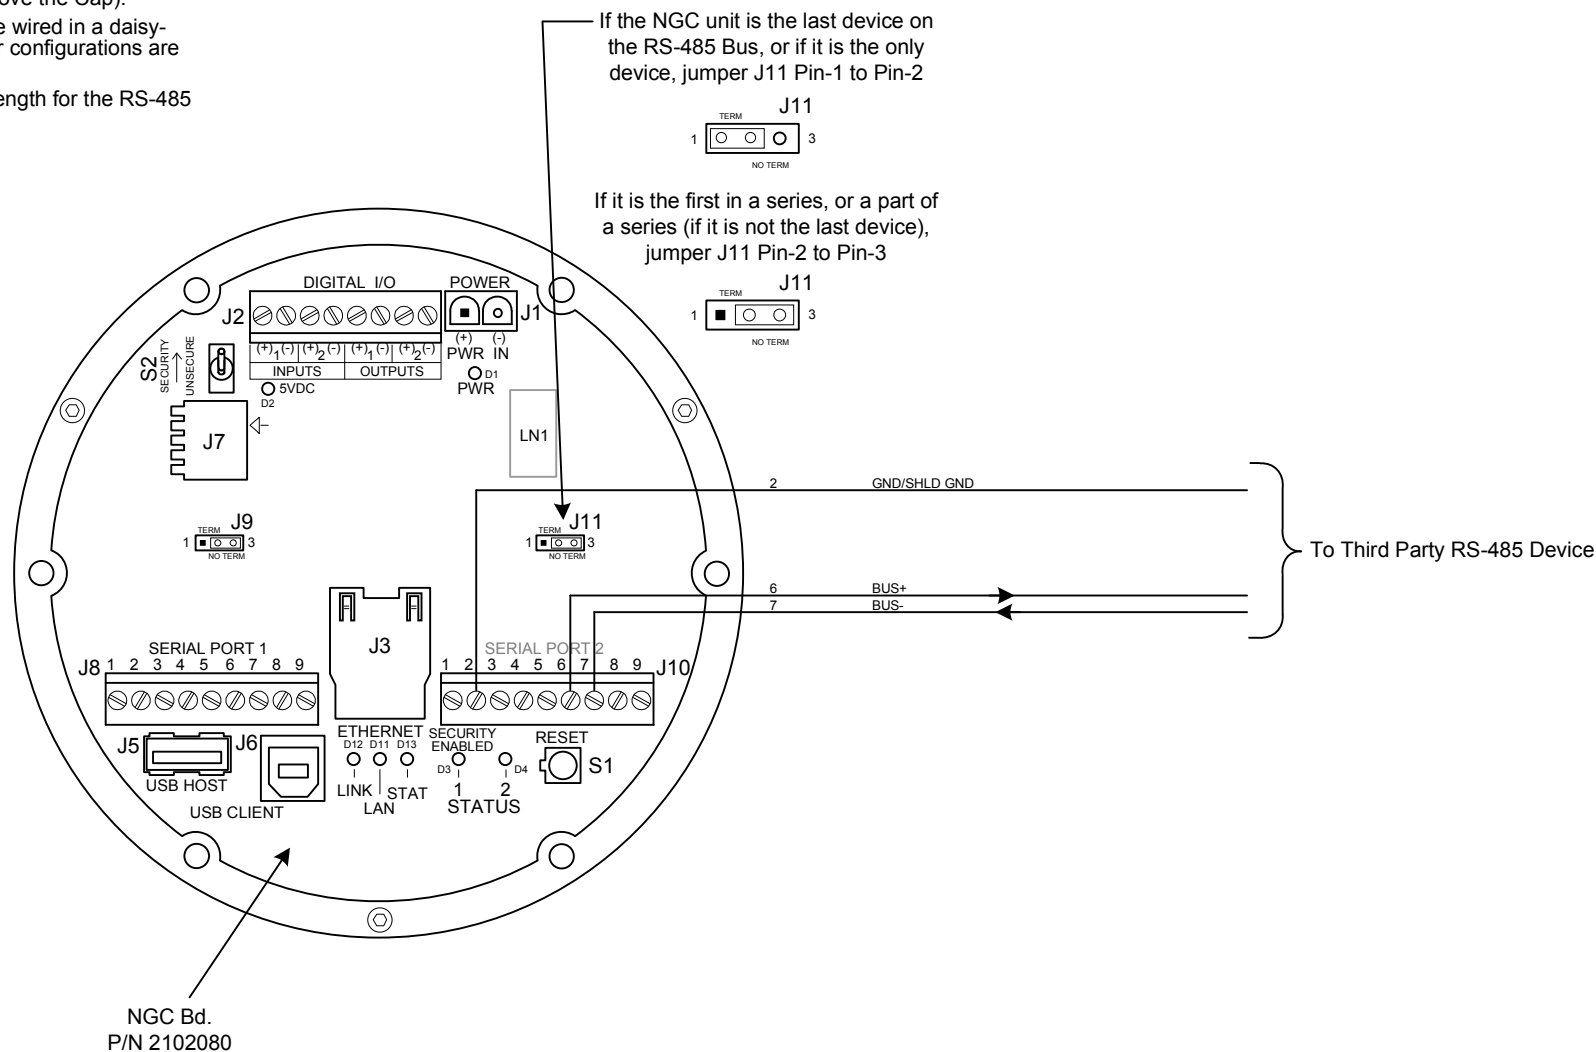


ABB	TOTALFLOW Products	ACTION L18357	DOC TYPE UD	TITLE NGC8200 PORT 2 2-WIRE W/GND GENERIC WIRING GUIDE (RS-485)	DWG NO. 2102426	REV AA	SHEET 1 OF 1
-----	-----------------------	------------------	----------------	---	--------------------	-----------	-----------------