

Catalog No. Qty

TRK36A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the line end of fuse, insert rejector between the outer legs of the fuse clip with the projection facing the center leg. Push rejector firmly into the fuse clip making sure the barb snaps into the hole in the support.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920022M0201_Rev C, GEJ5150 Dec 2023

Catalog No. Qty

TRK36A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the line end of fuse, insert rejector between the outer legs of the fuse clip with the projection facing the center leg. Push rejector firmly into the fuse clip making sure the barb snaps into the hole in the support.


⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.


ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920022M0201_Rev C, GEJ5150 Dec 2023

ABB

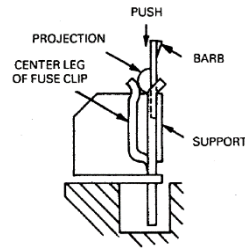

ABB

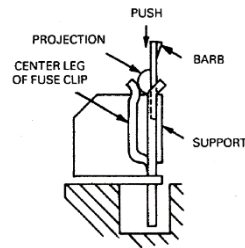

Catalog No. Qty

TRK36A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the line end of fuse, insert rejector between the outer legs of the fuse clip with the projection facing the center leg. Push rejector firmly into the fuse clip making sure the barb snaps into the hole in the support.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920022M0201_Rev C, GEJ5150 Dec 2023

Catalog No. Qty

TRK36A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the line end of fuse, insert rejector between the outer legs of the fuse clip with the projection facing the center leg. Push rejector firmly into the fuse clip making sure the barb snaps into the hole in the support.


⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

15QC920022M0201_Rev C, GEJ5150 Dec 2023

ABB

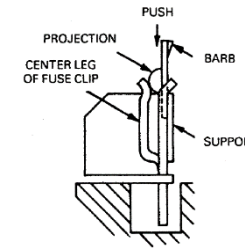

ABB

