 

 
 
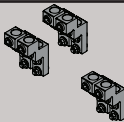
 
 

 
 
 
 
 
 

 


Low Voltage Power Panel - Bulk Pack/Unassembled Version

Danger of electrical shock or injury. Turn OFF power ahead of the panel board or switchboard before working inside the equipment or removing any component. Equipment is to be installed and maintained by properly trained and qualified personnel only.




		
A		1X
B		1X
C		1X
D		3X
E		1X
F		1X
G		1X

H		1X
I		1X
J		1X
K		1X
L		1X
M		1X
N		1X
O		1X

Note: Either "D" or "G" are to be used for main but not both.


1



Frame



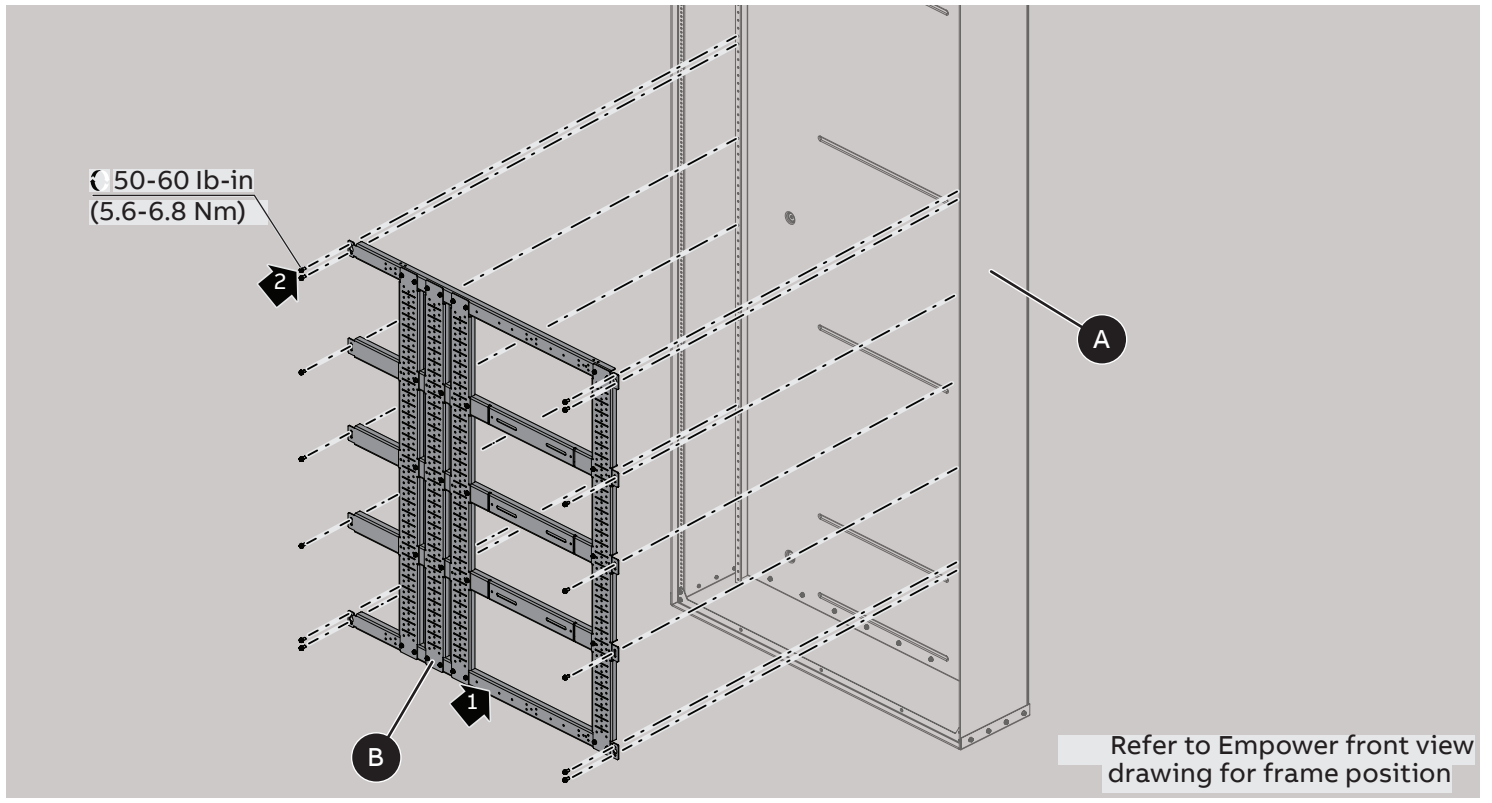


2

Bus stack

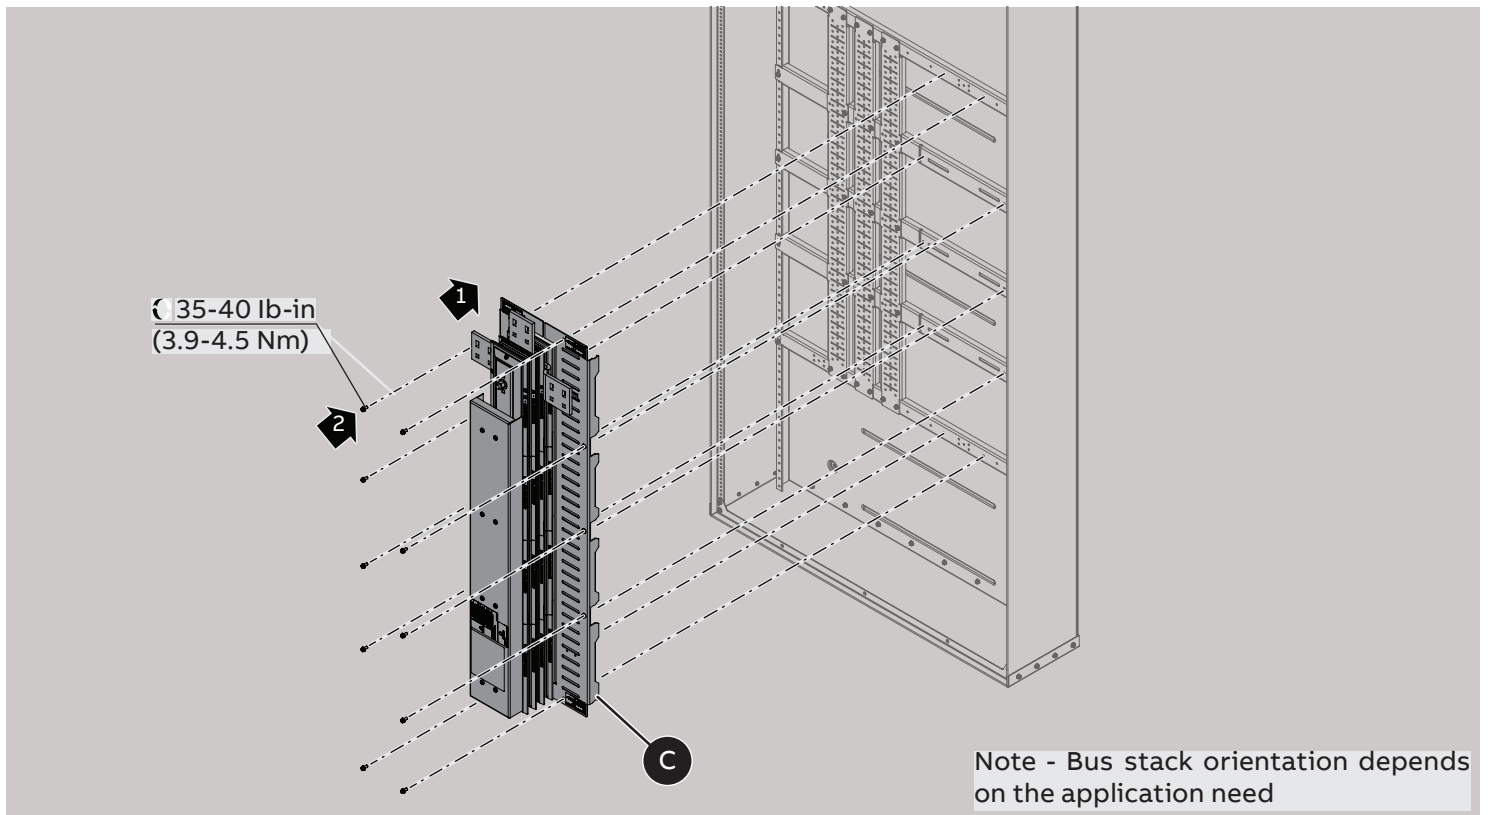


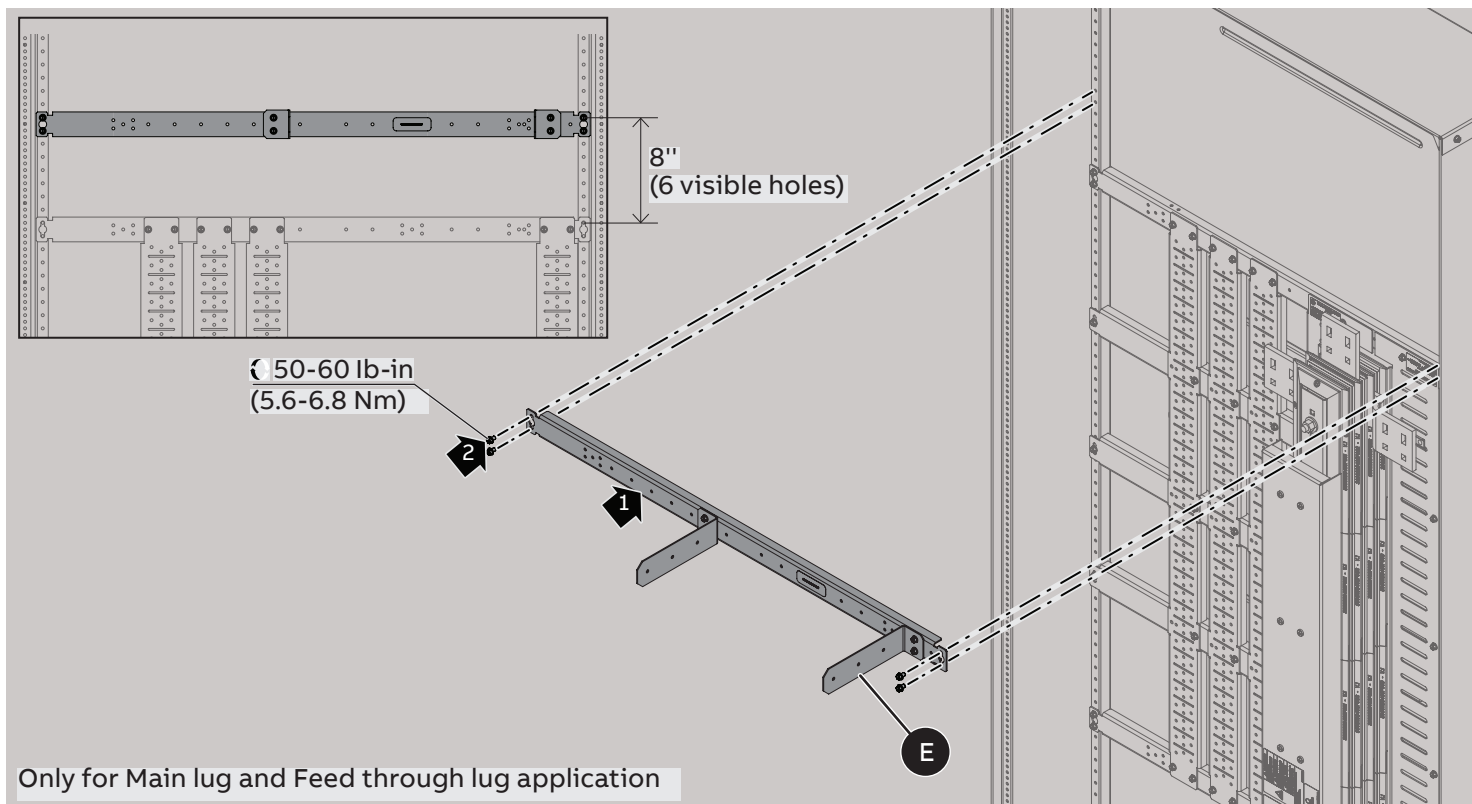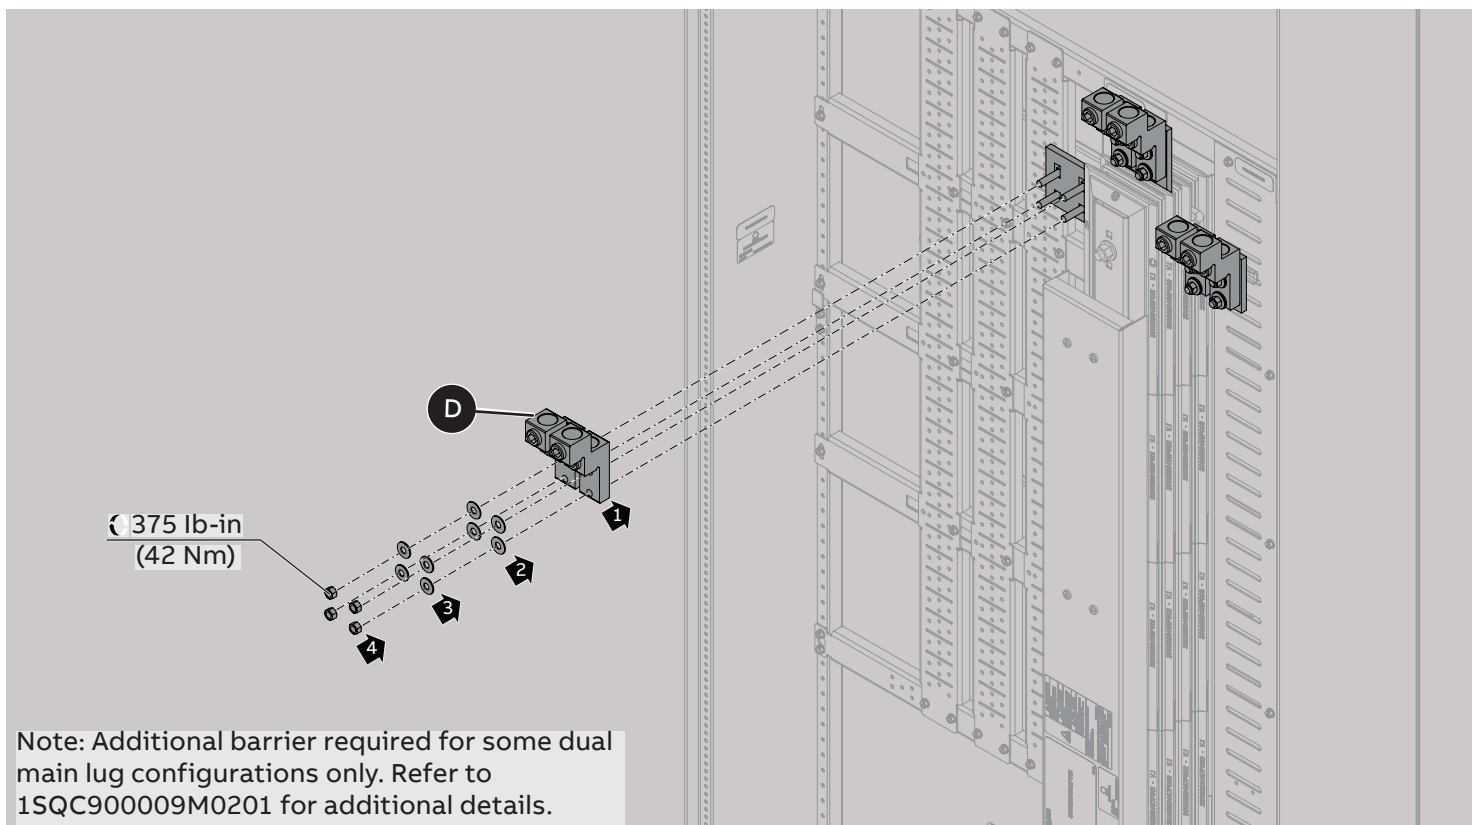

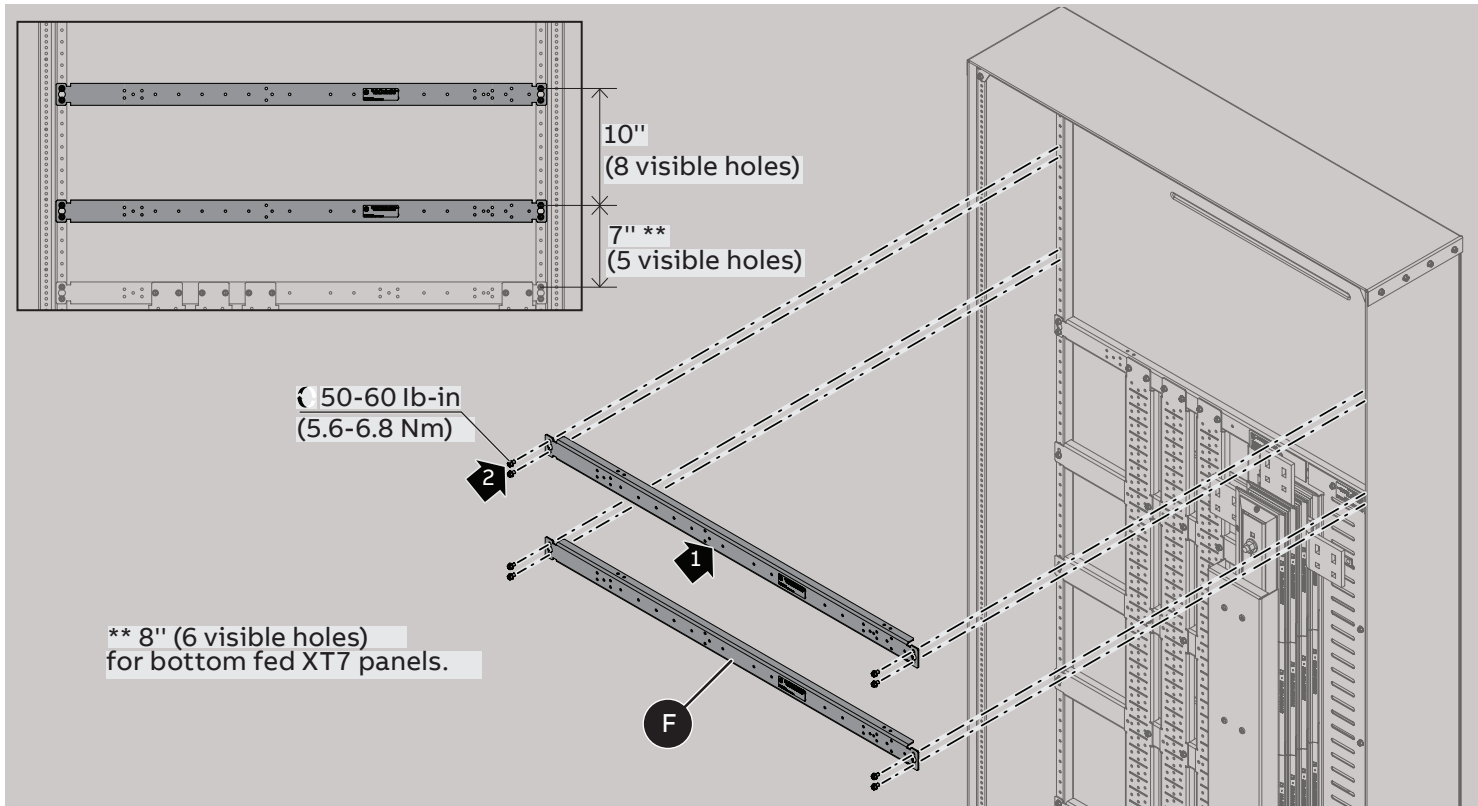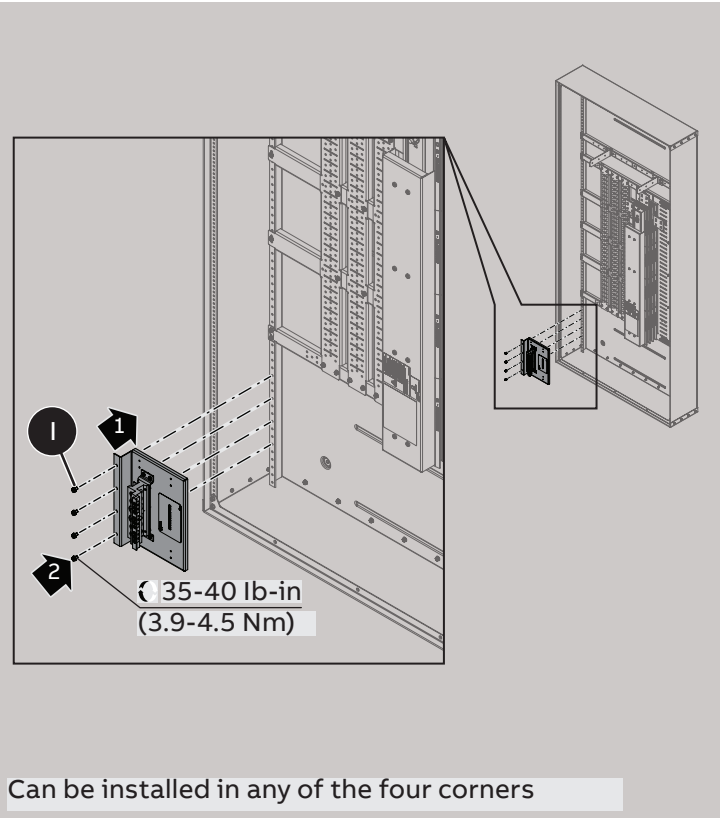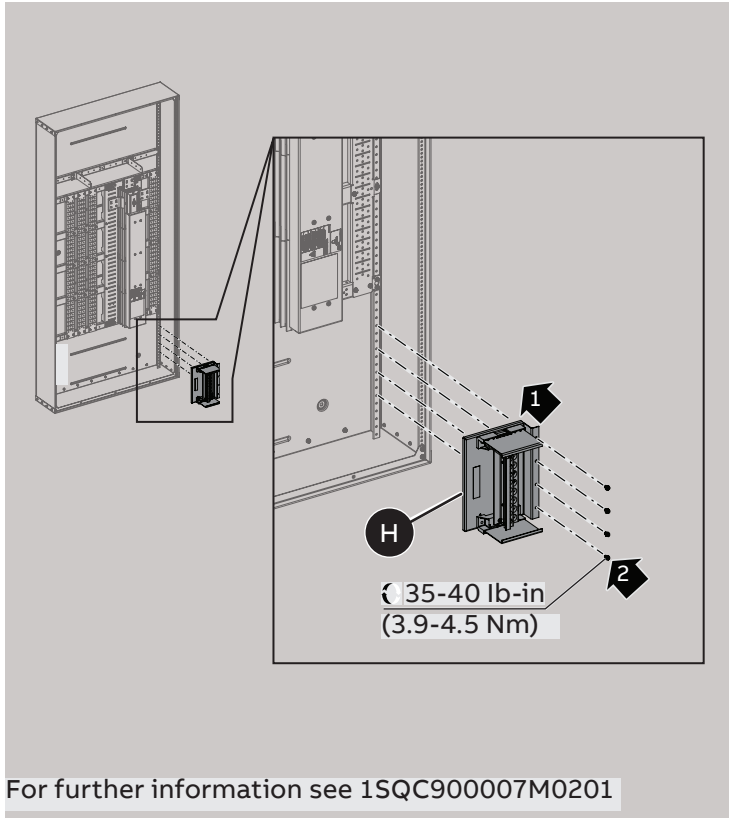


8a

Vertical main - XT7
B-phase components only included for 3-phase assemblies

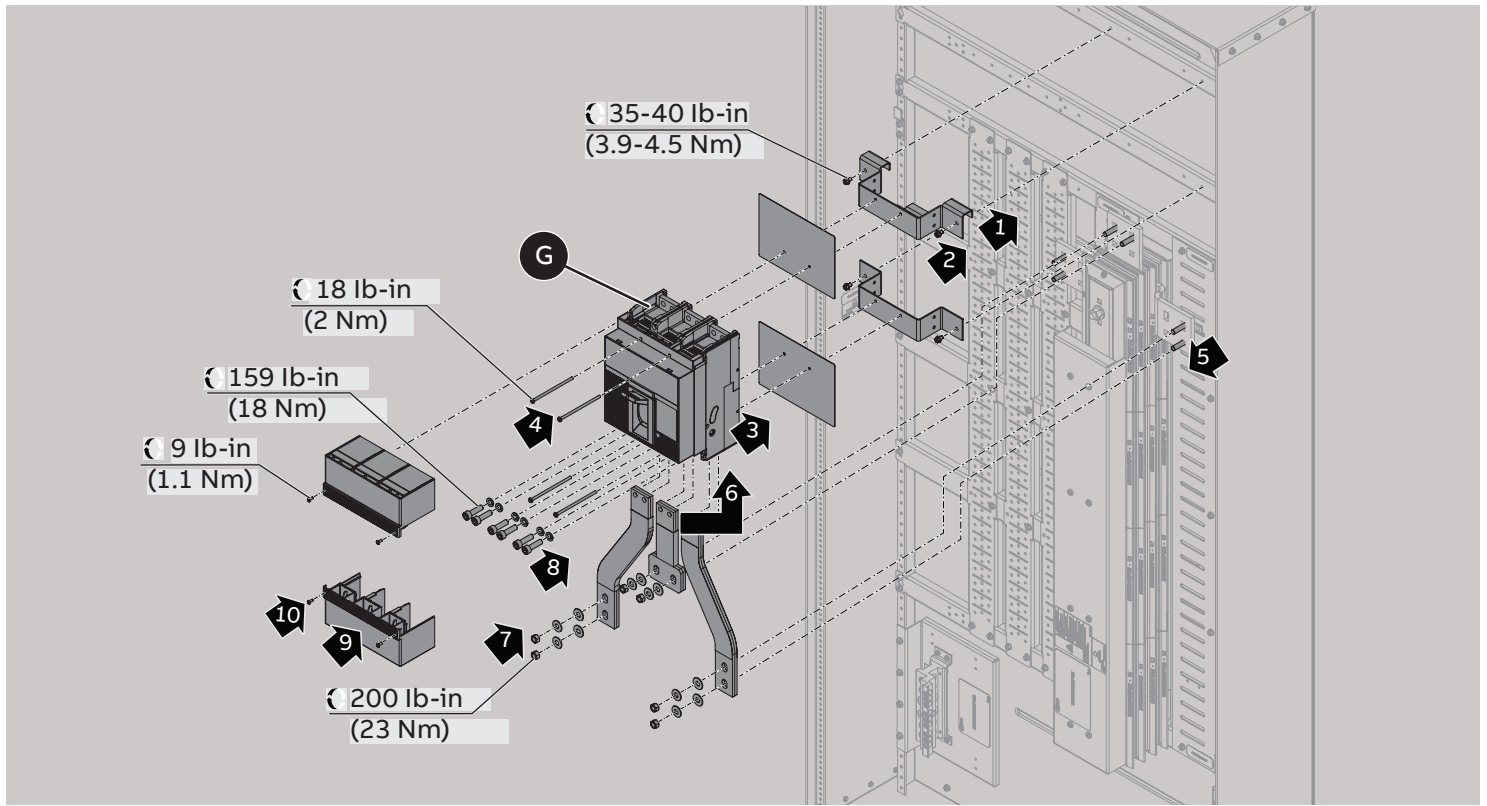


8b


Vertical main - XT5
B-phase components only included for 3-phase assemblies

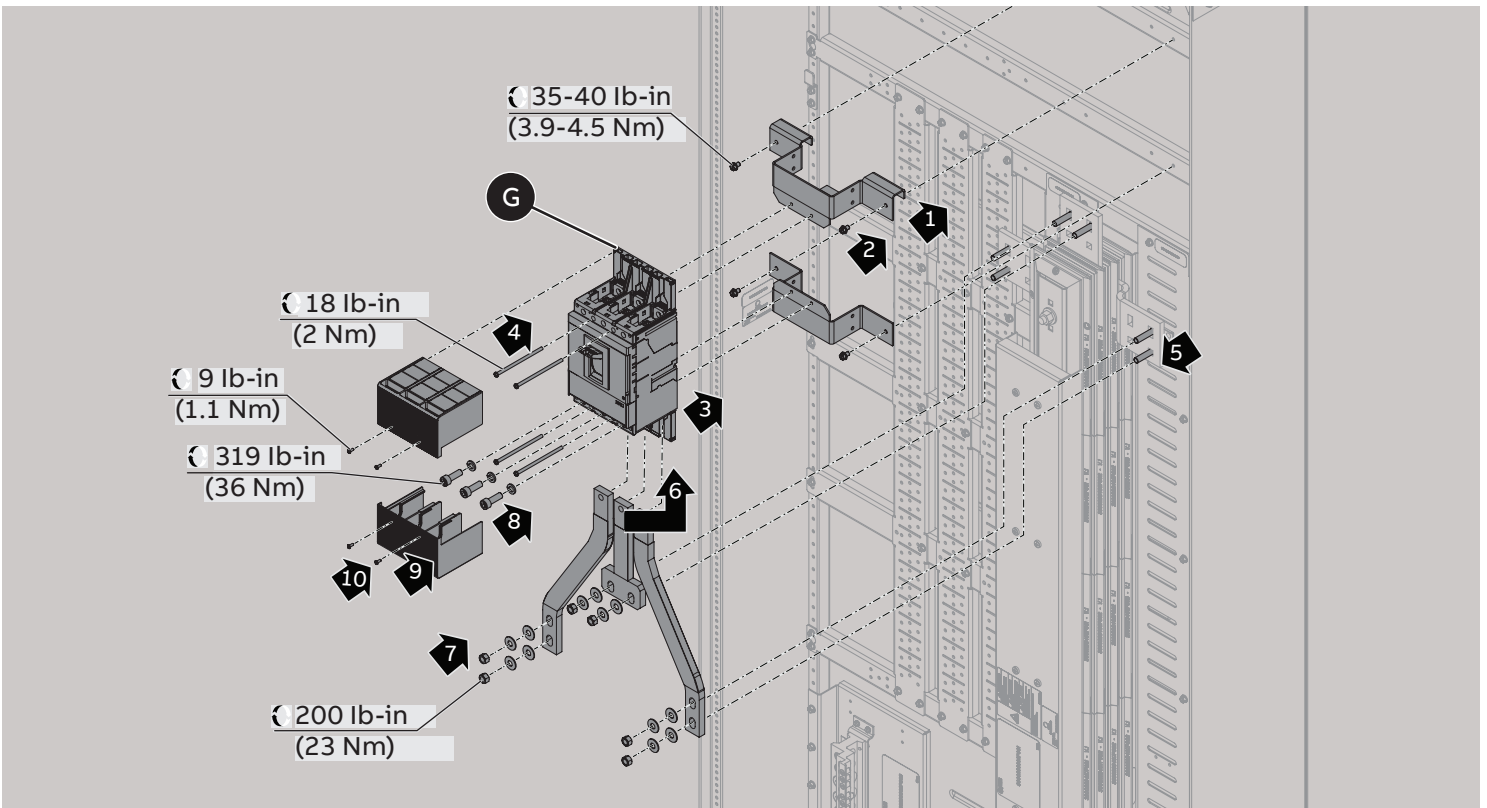

Horizontal main/feeder installation - XT7
B-phase components only included for 3-phase assemblies

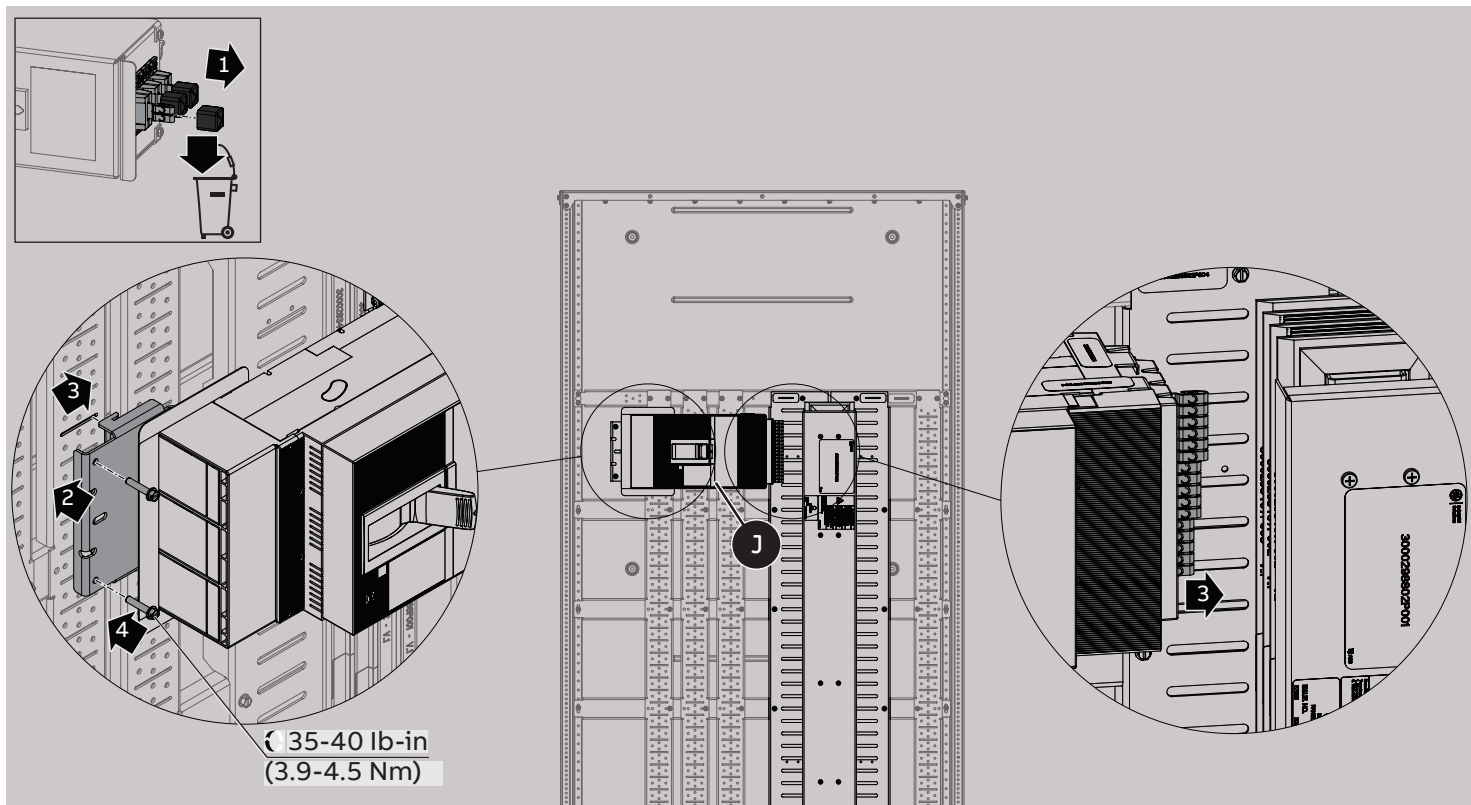


Horizontal main/feeder installation - XT6
B-phase components only included for 3-phase assemblies

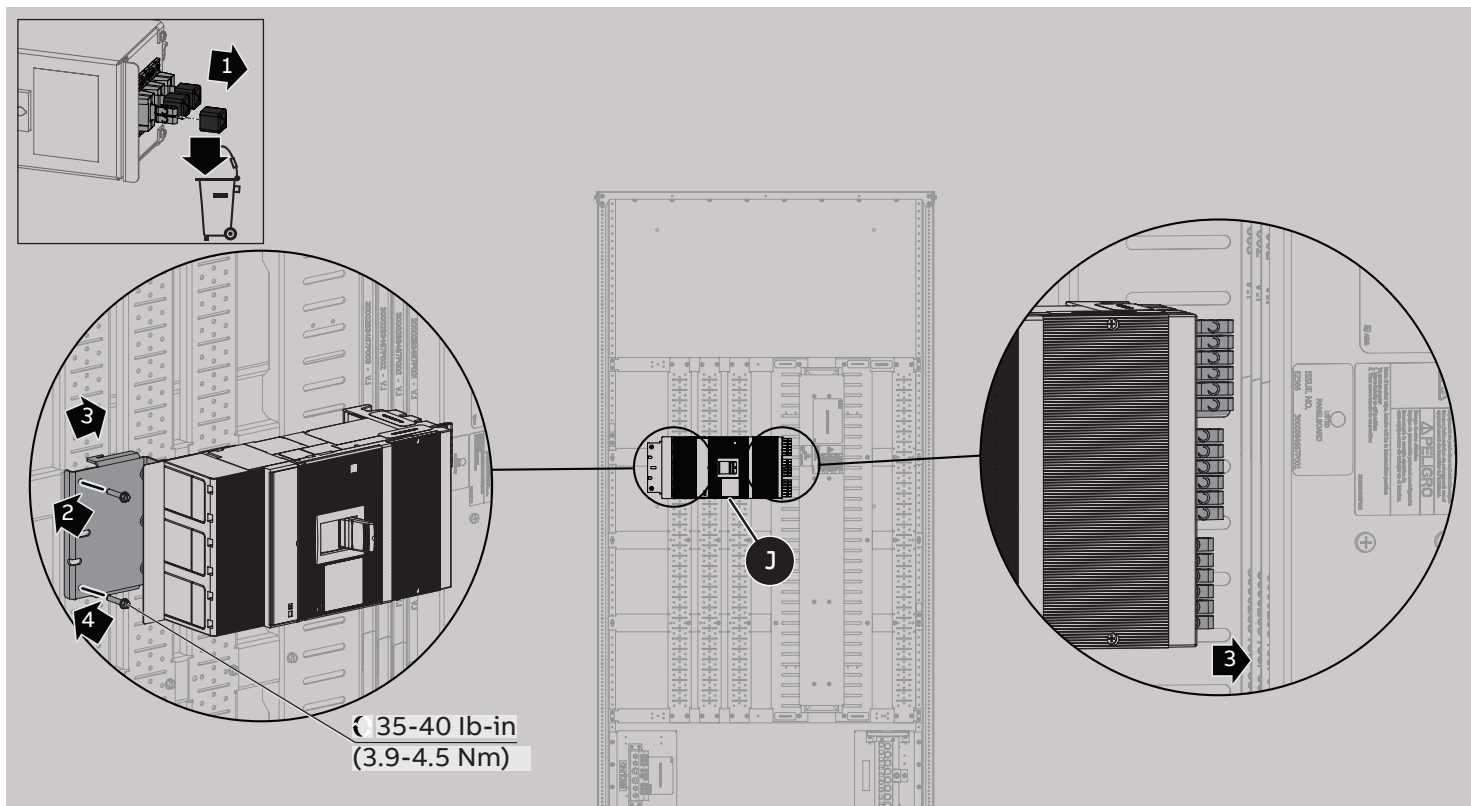


11

Horizontal main/feeder installation - XT5
B-phase components only included for 3-phase assemblies

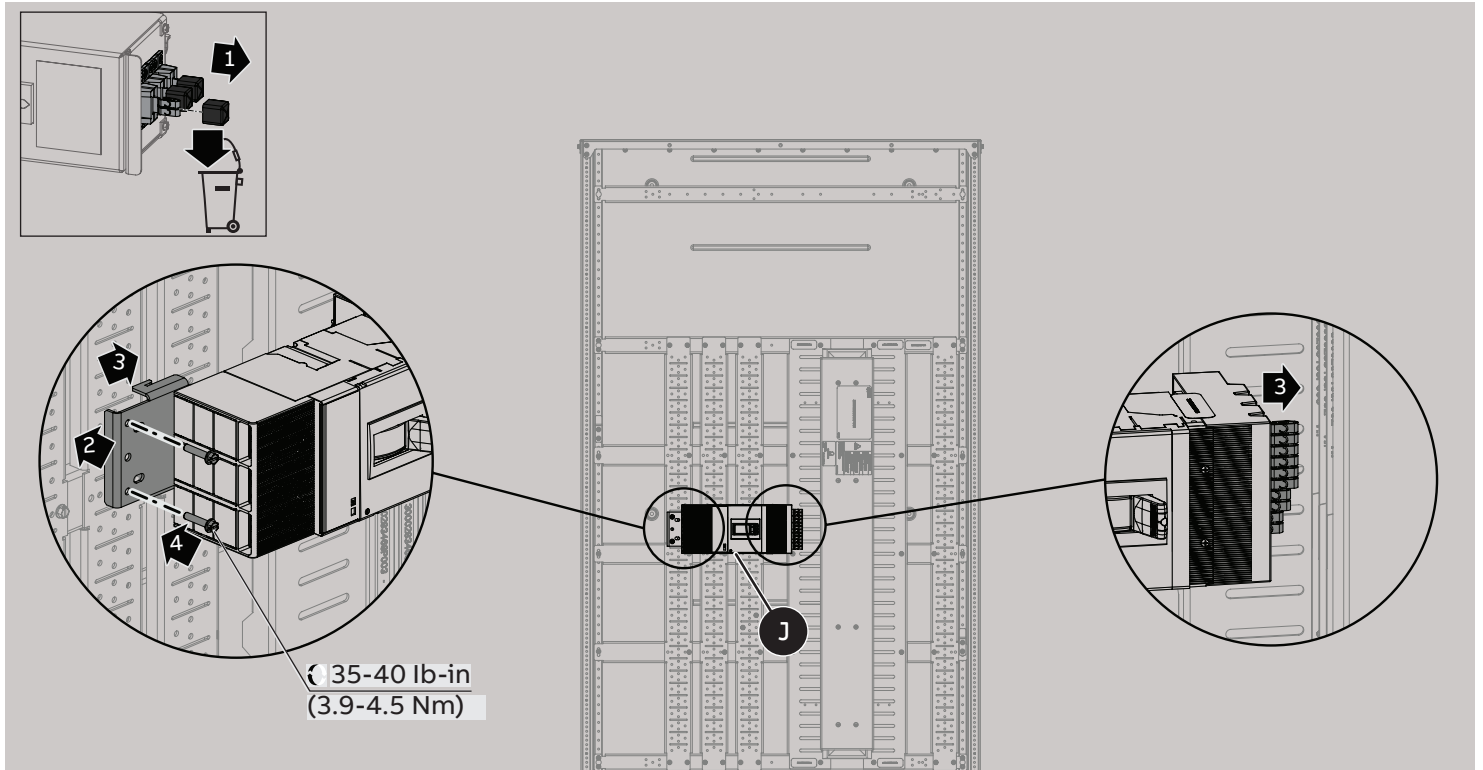


12

Horizontal main/feeder installation - XT4
B-phase components only included for 3-phase assemblies

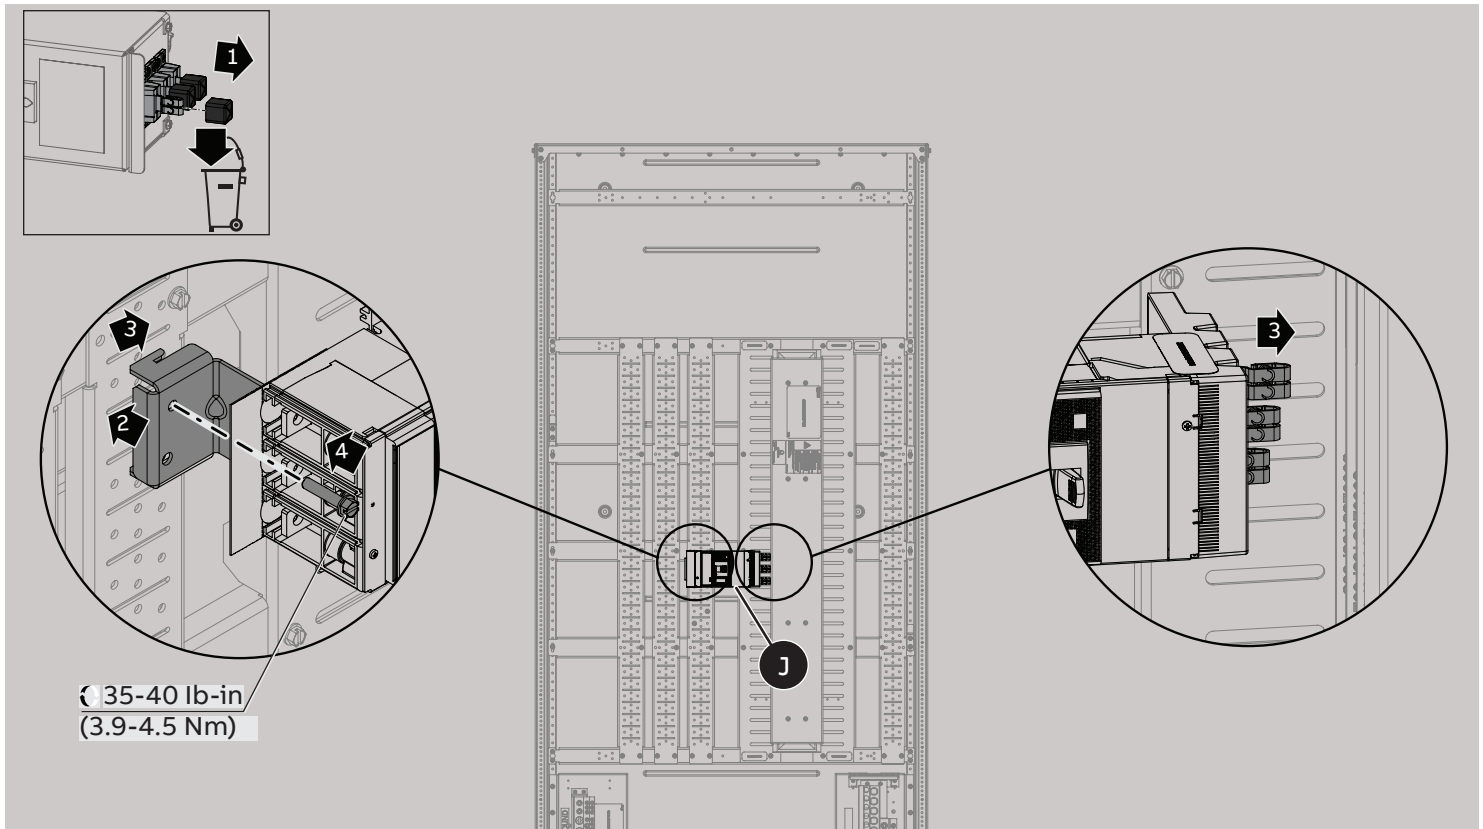


13

Feeder installation - XT2

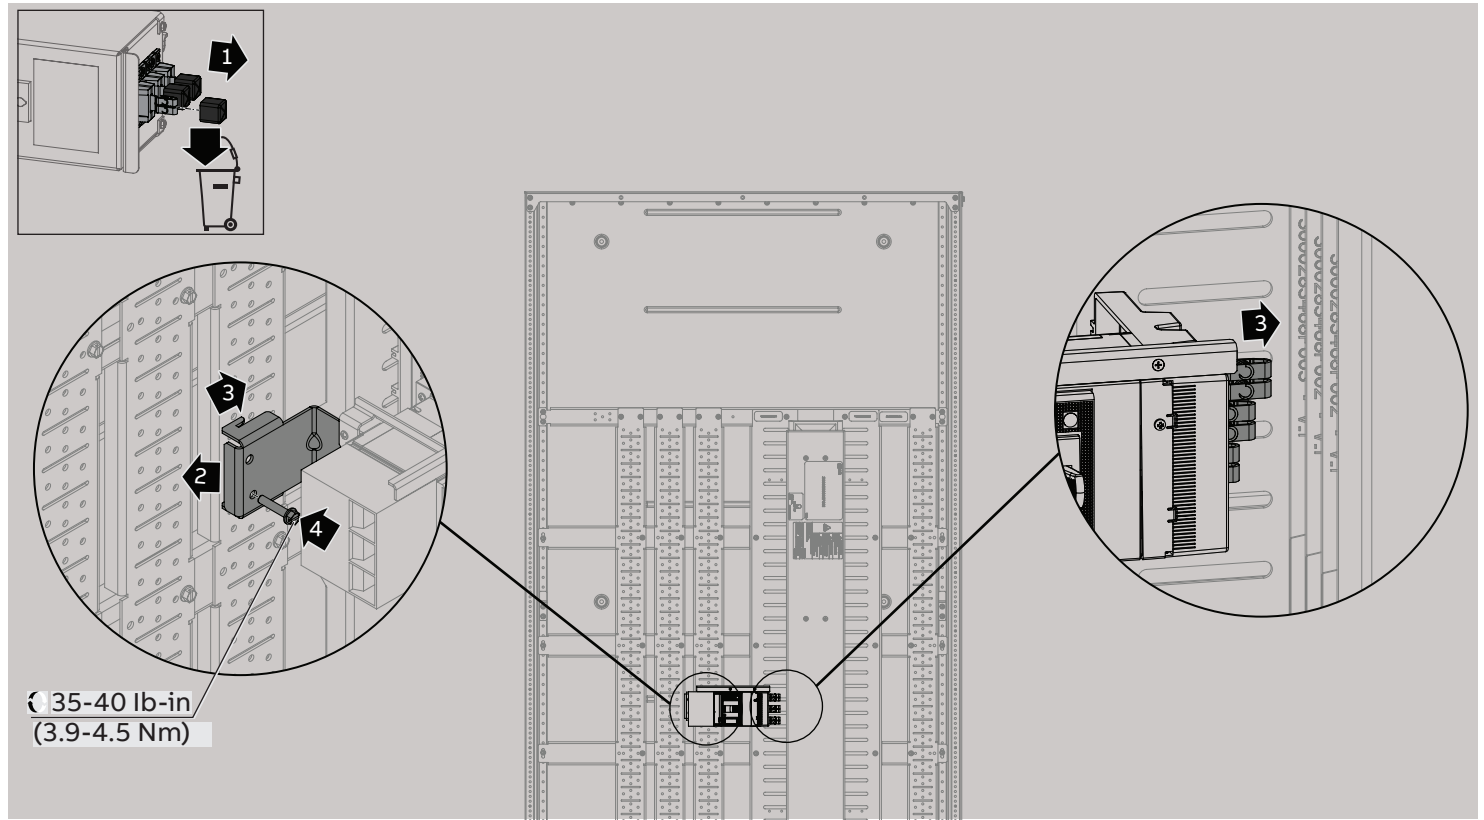


14

Feeder installation - XT1, single mount
B-phase components only included for 3-phase assemblies

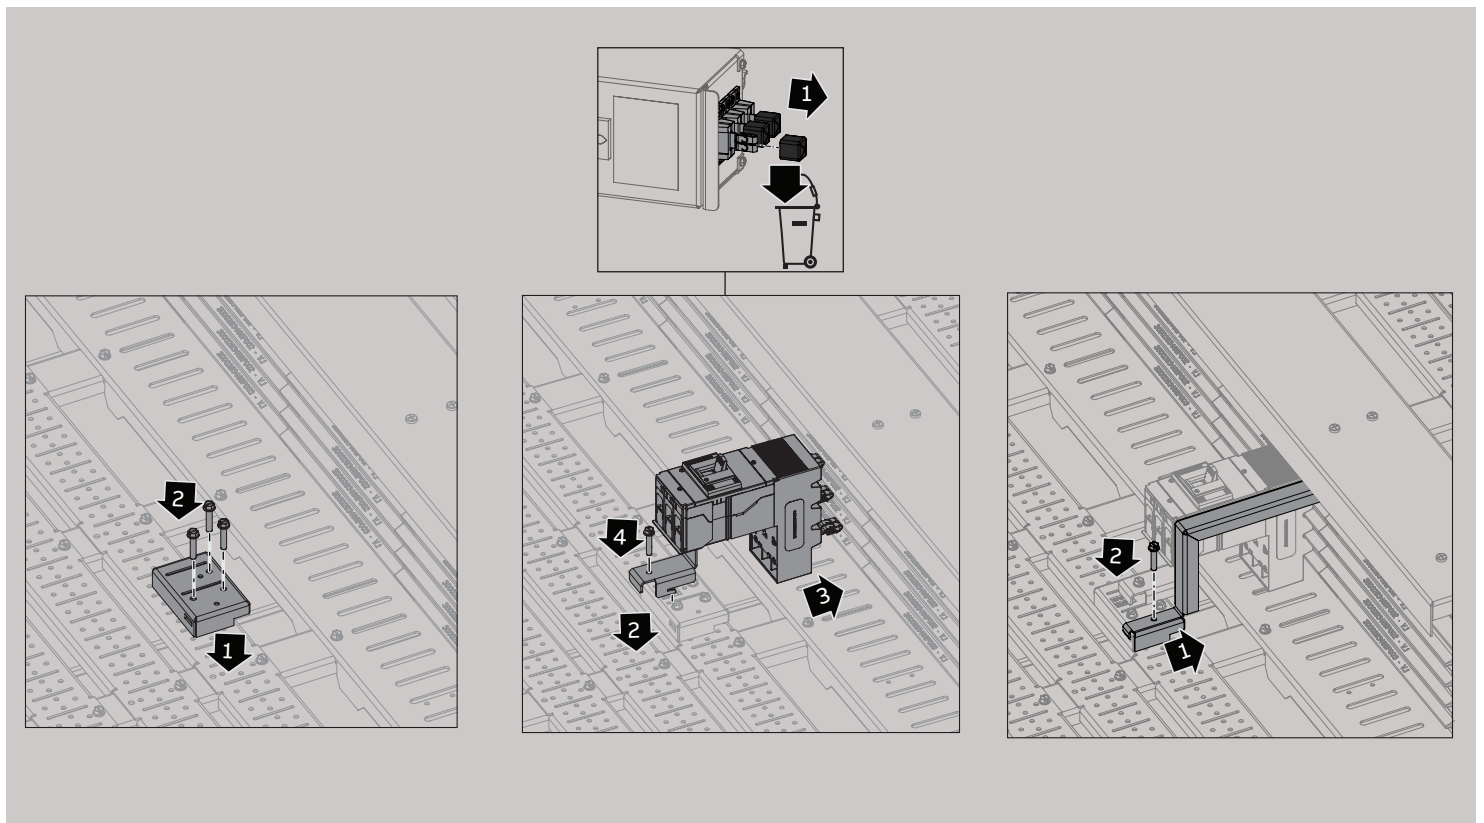


15



Feeder installation - XT1, group mounting of 2 adjacent breakers
B-phase components only included for 3-phase assemblies


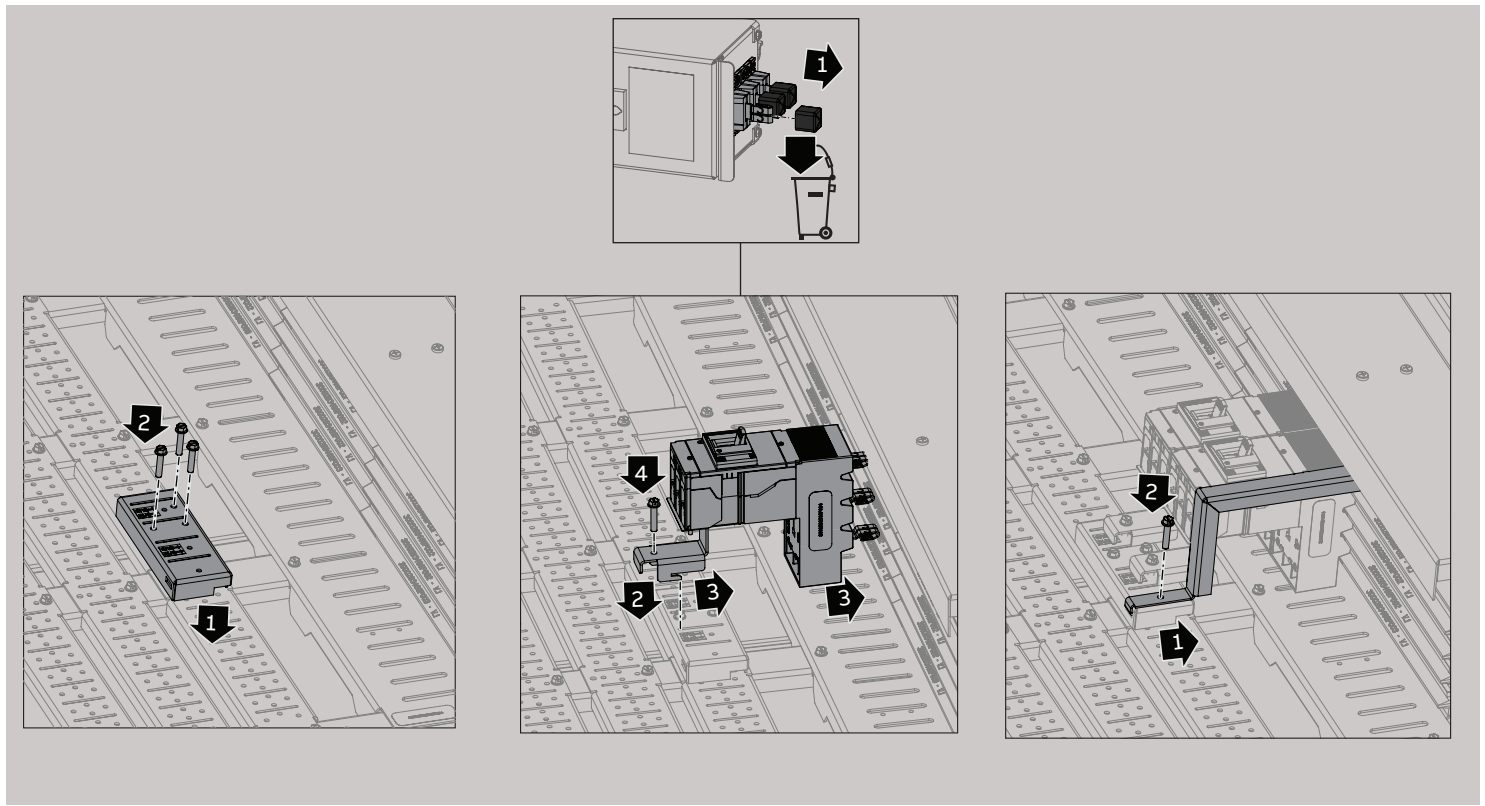




16



Feeder installation - XT1, group mounting of 5 adjacent breakers
B-phase components only included for 3-phase assemblies


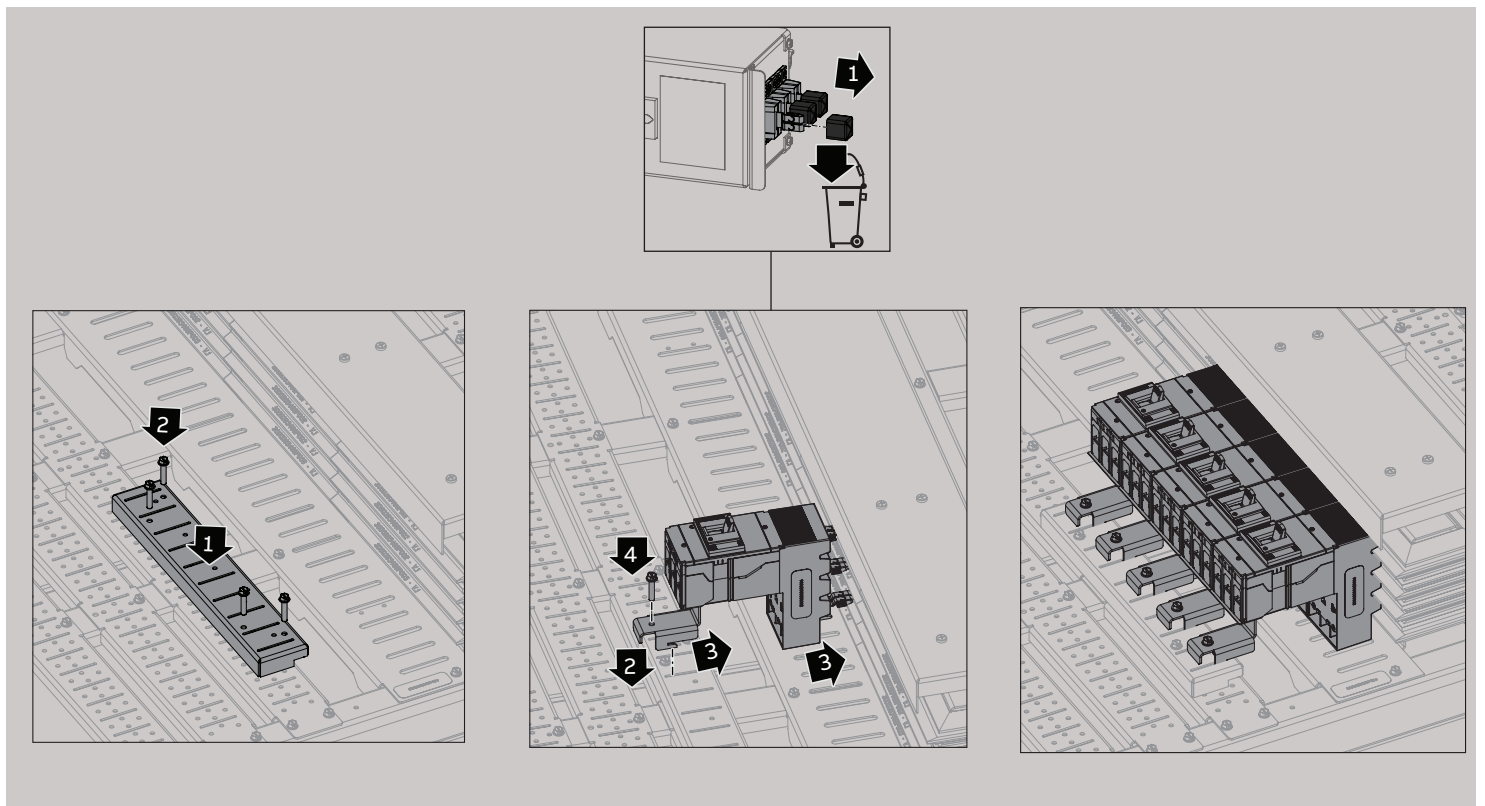


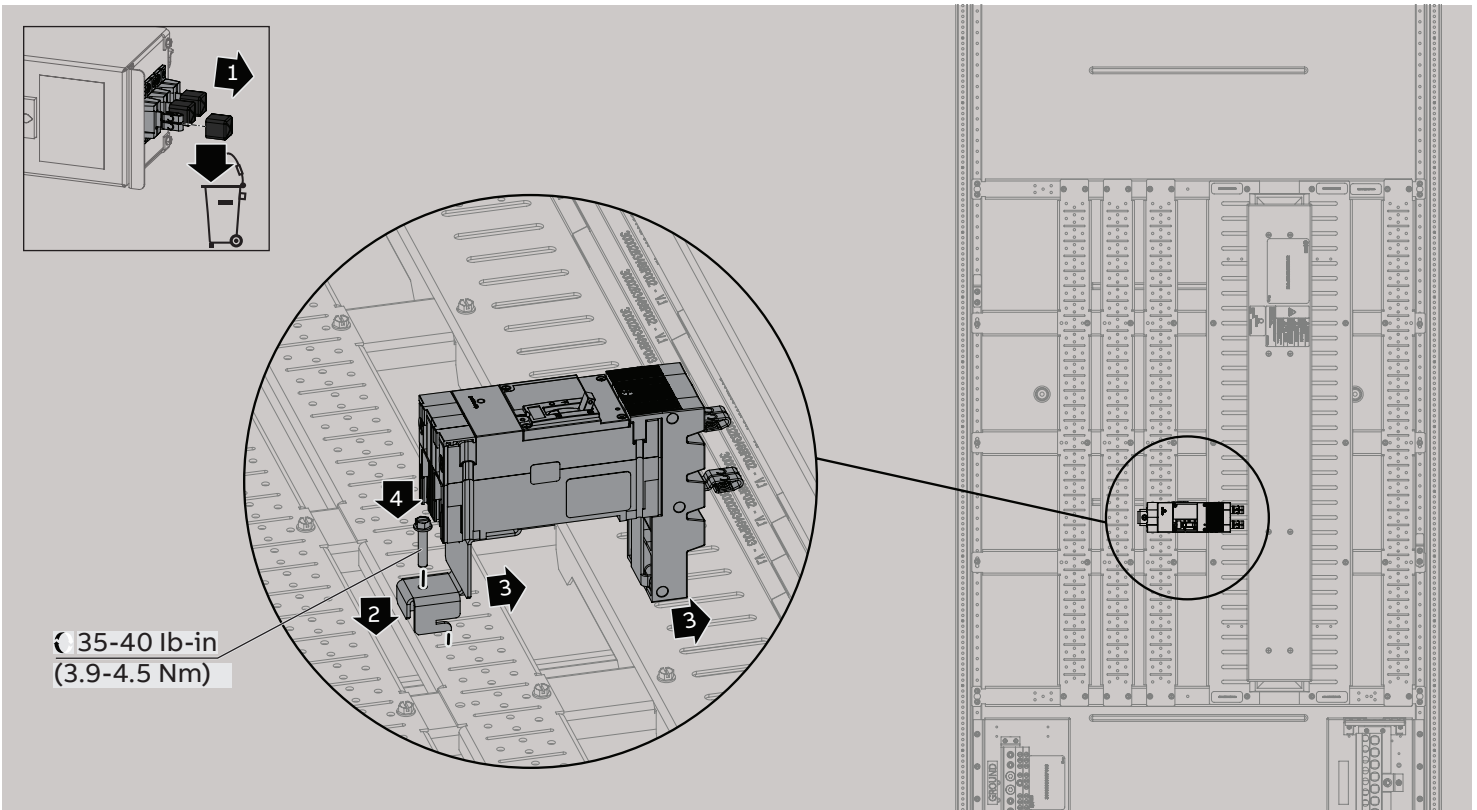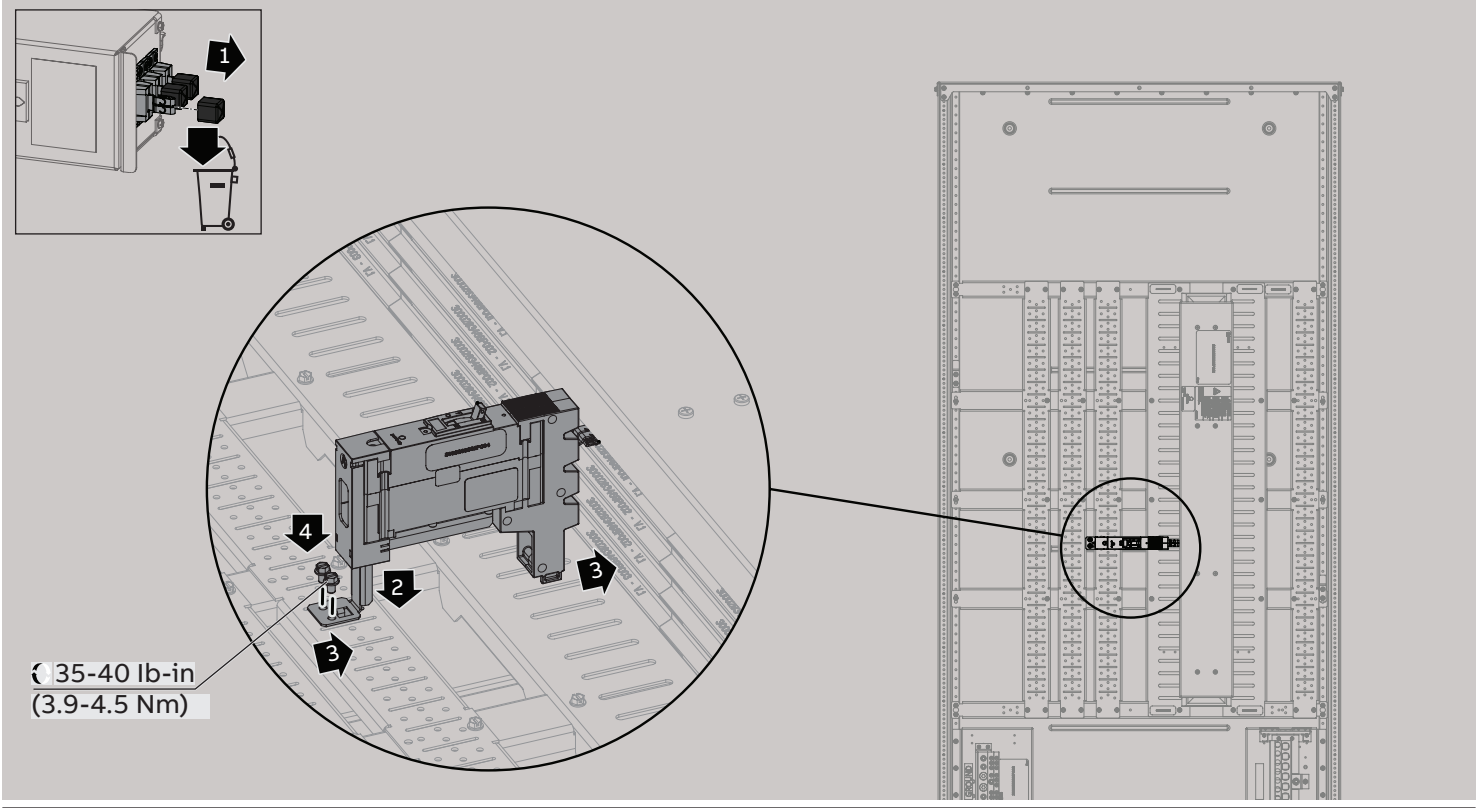


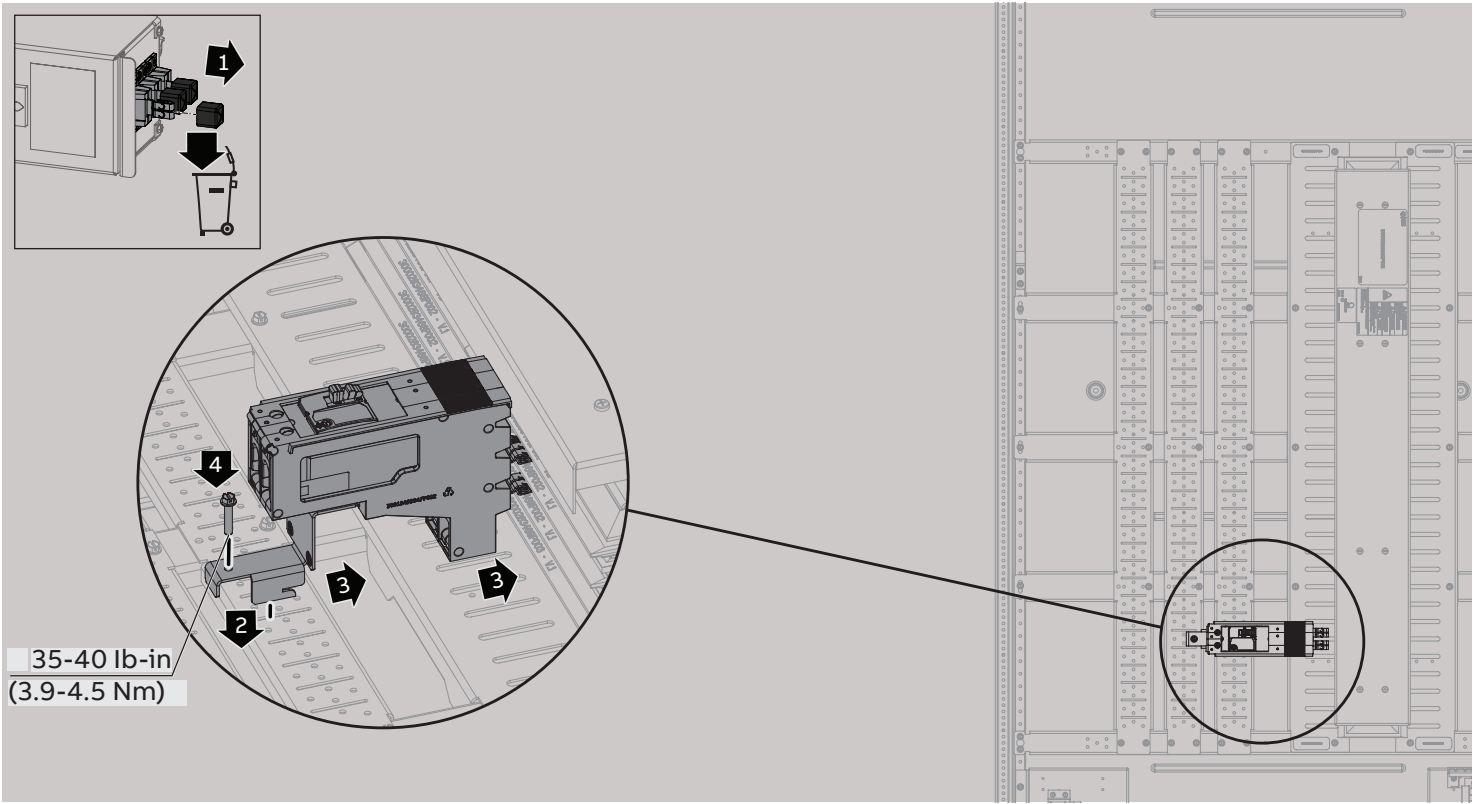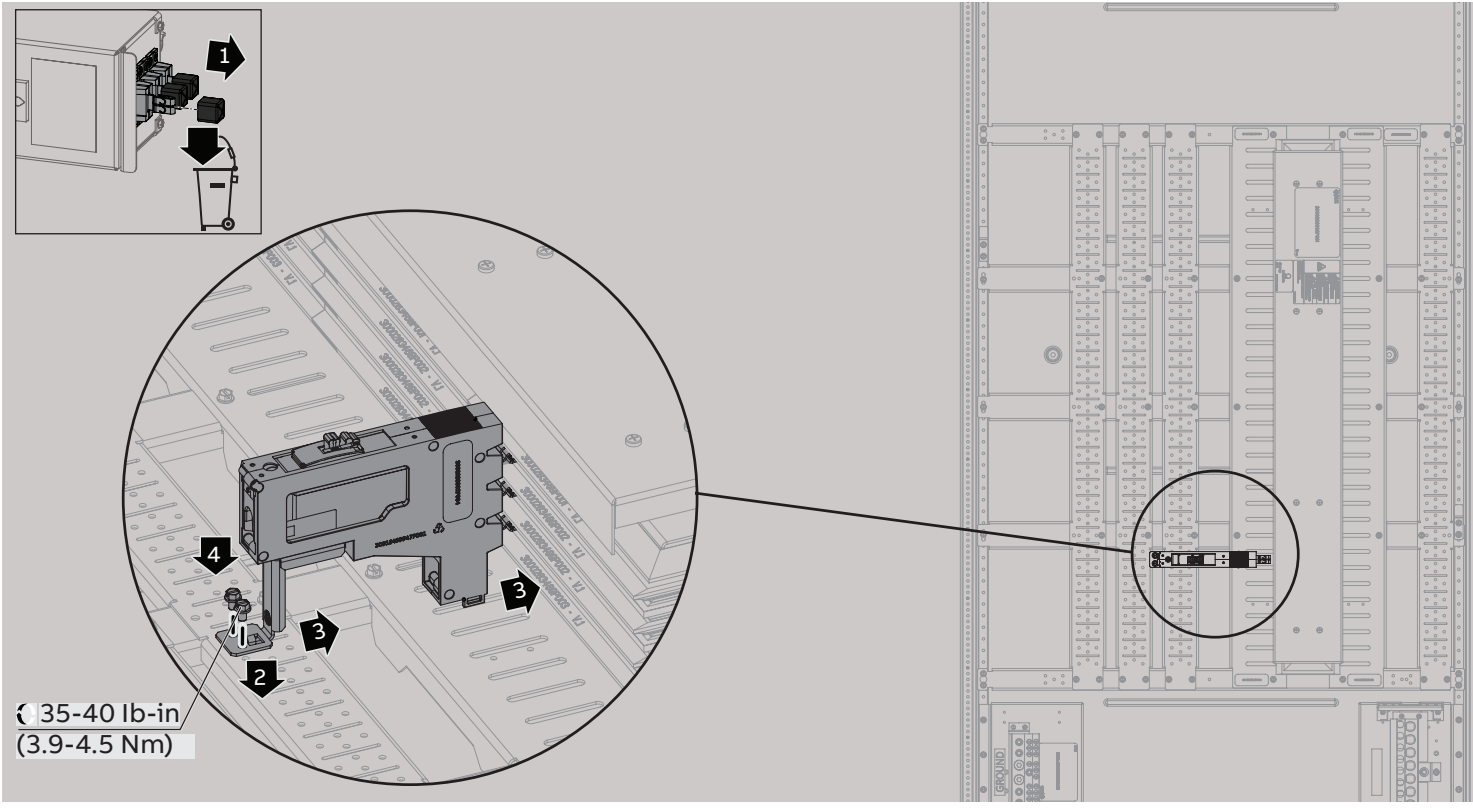

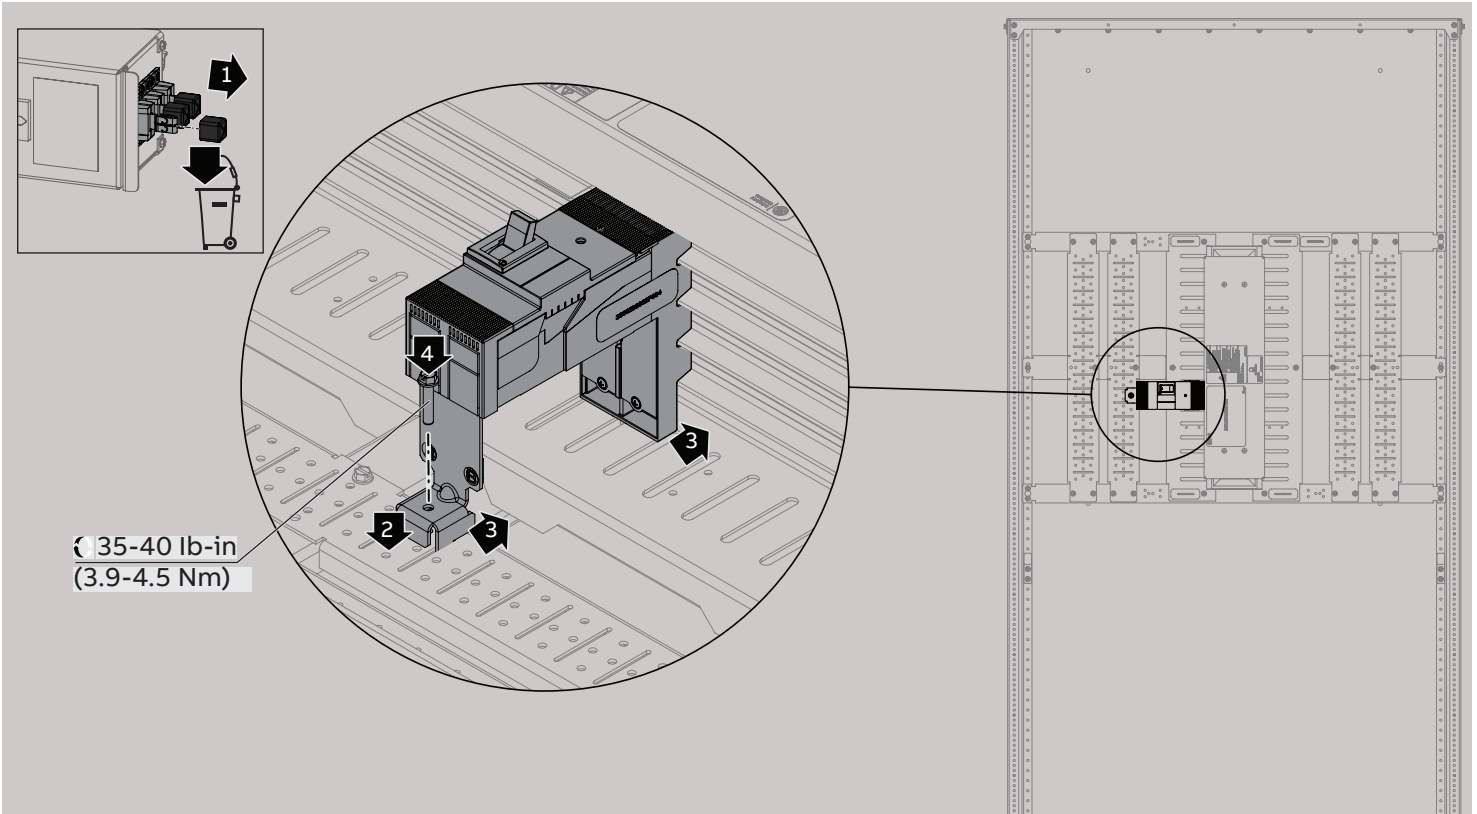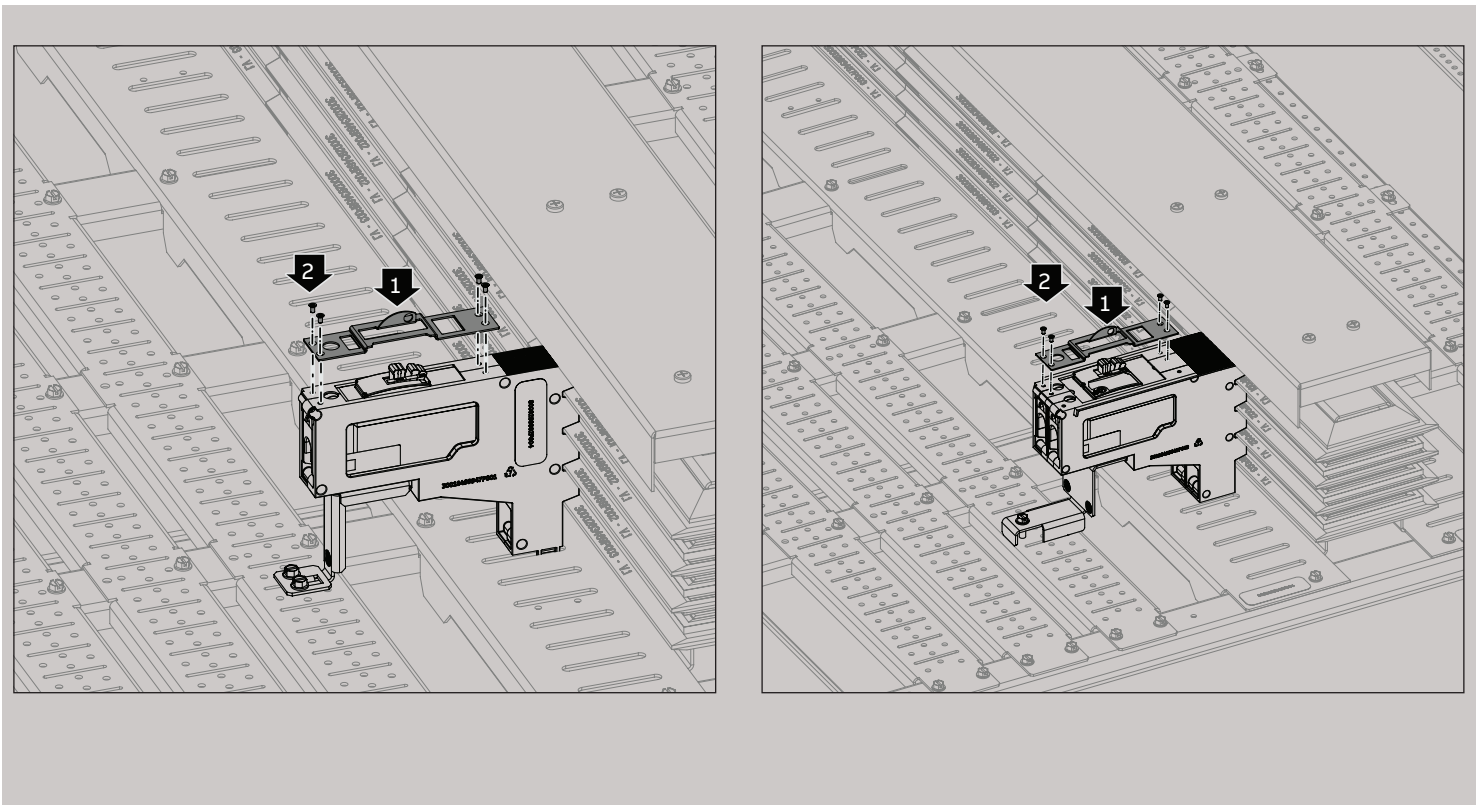

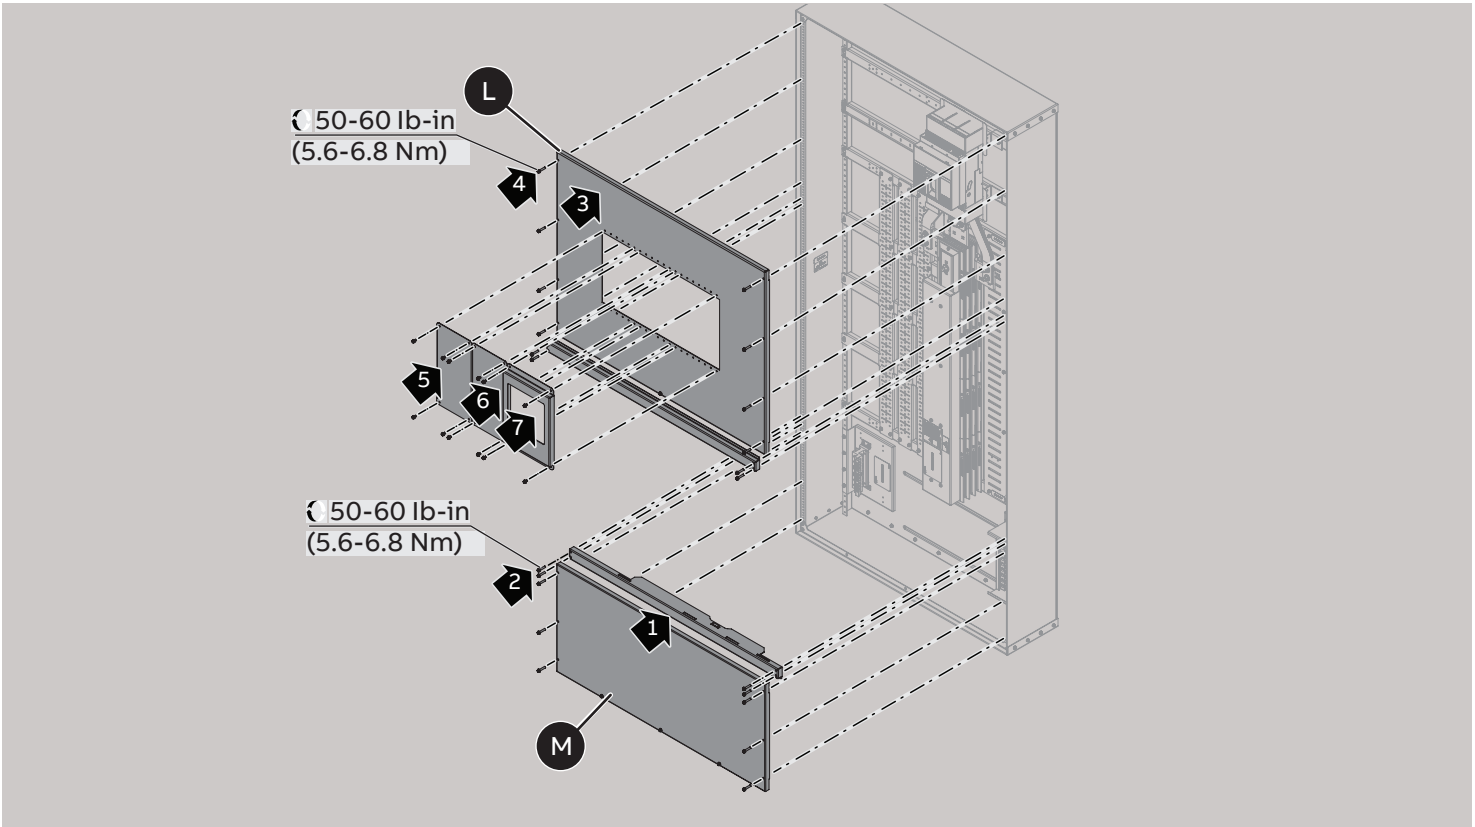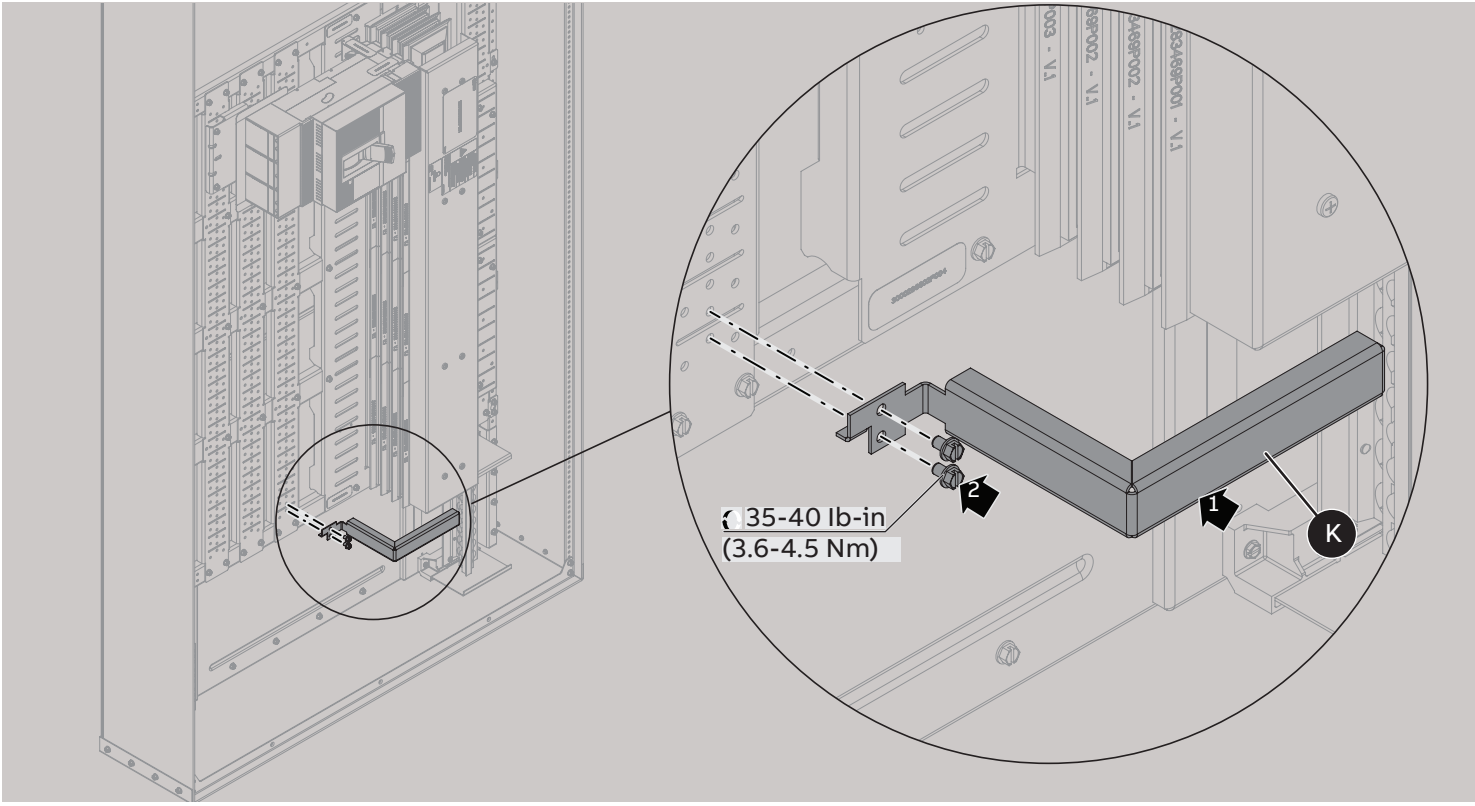

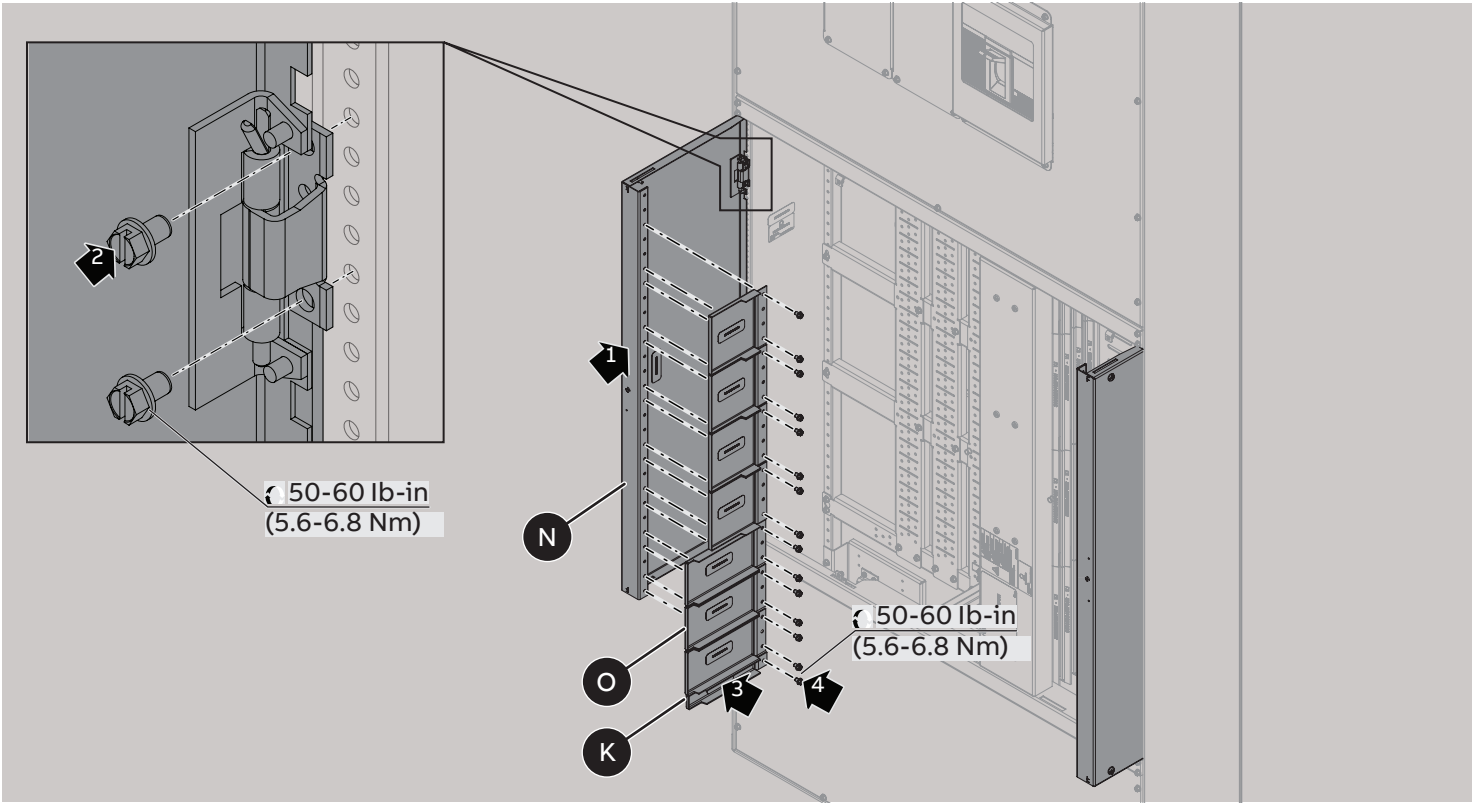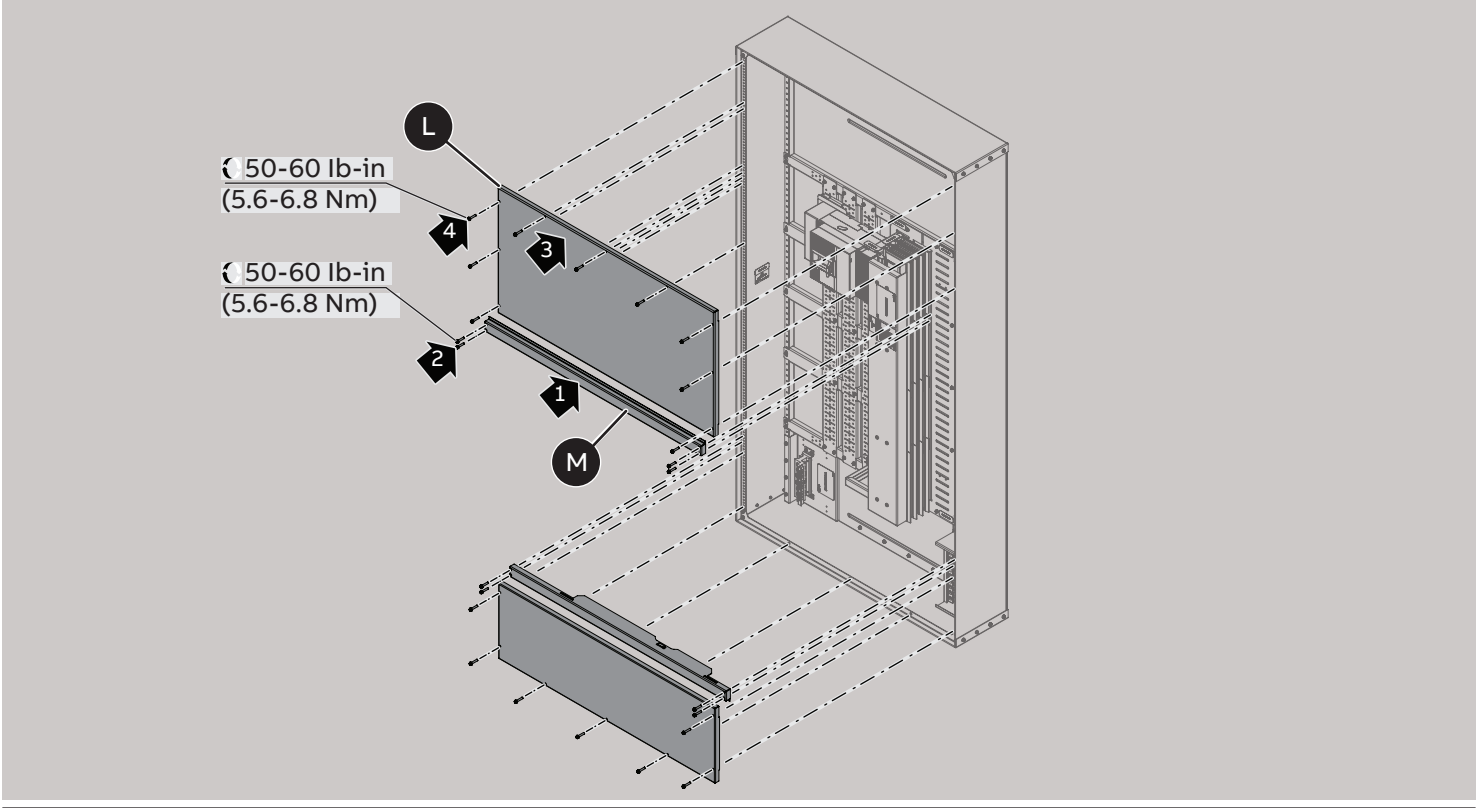

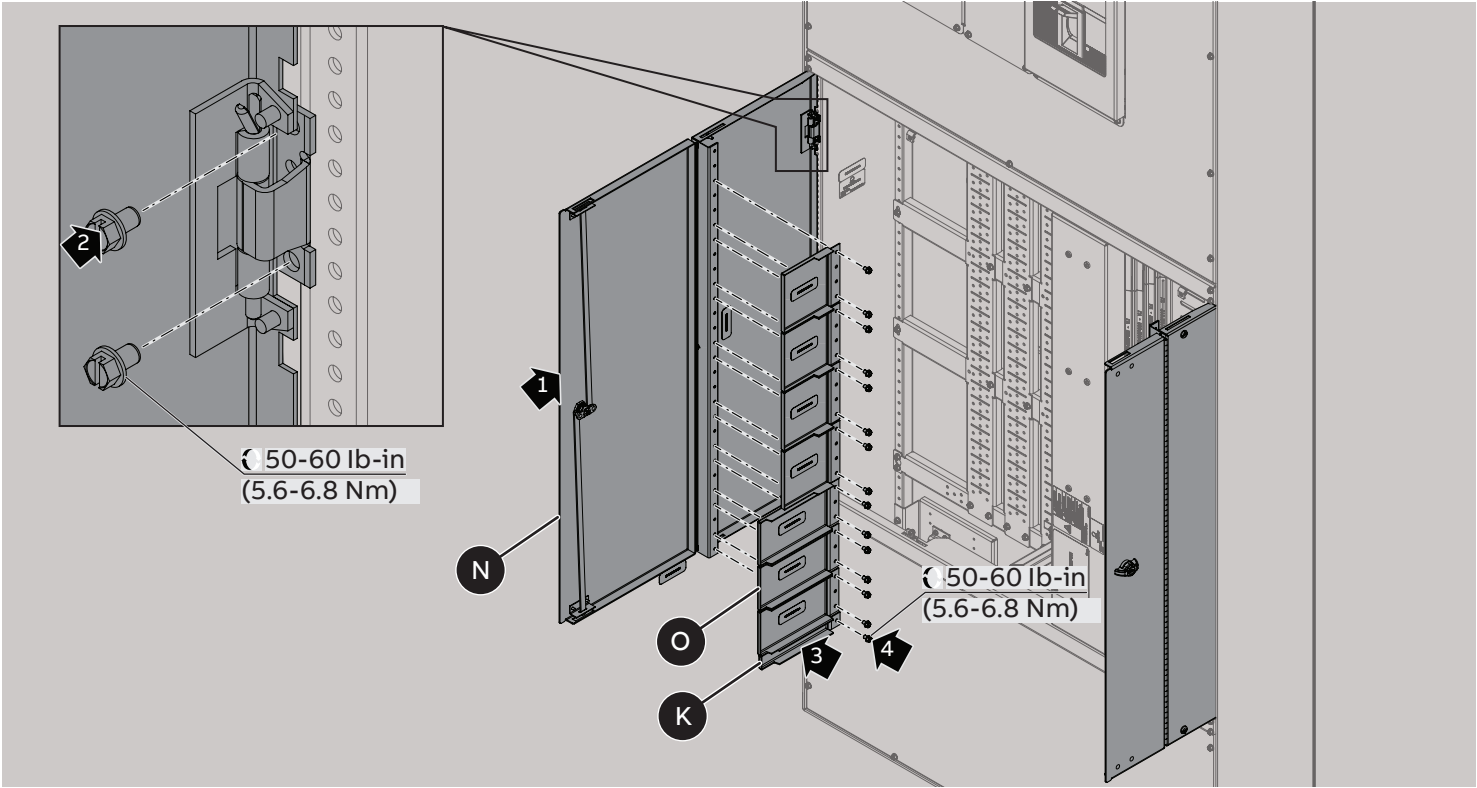

Disclaimer : These instructions do not cover all details or variations in equipment nor do they provide for every possible contingency that may be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise that are not covered sufficiently for the purchaser's purposes, the matter should be referred to the ABB Company.

—
ABB Inc.
305 Gregson Drive
Cary, NC 27511

abb.com

—
We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG. Copy-right© 2025 ABB
All rights reserved