


1,5 to 16 mm<sup>2</sup>

If the RCBO trips there are three possibilities:  
1) overload - 2) short circuit - 3) earth leakage current  
in any case before reset the RCBO check the installation.

**Every 6 months**

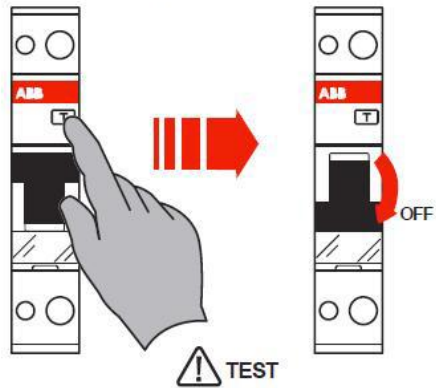

The proper IP safety level should be achieved during installation by employing appropriate enclosure meeting IEC 60364 standards.  
The RCBO can be cleaned with a damp, soapy cloth. No corrosive or similar solvent should be used.