50XM1000/M2 Magmeter Converter Universal Gasket Kit

INSTALLATION INSTRUCTIONS

Universal Gasket Replacement kit for Remote Housings

This kit consists of two gaskets, 333F028U01 and 333F028U02, which replace D333F011U01 and D333F013U01, respectively.

The supplied gaskets are flat with an adhesive backing. Use of these gaskets is as follows:

- 1. Remove the existing O-ring style gaskets from the grooves in the base of the housing.
- 2. Clean the surface of the housing that contains the grooves from which the gaskets were removed.
- 3. Remove the adhesive backing paper from one of the gaskets and place the gasket adhesive-side down in the proper location on the housing base. Press down firmly to properly adhere the gasket to the surface.
- 4. Repeat this process with the second gasket.
- 5. Clean the mating surface of the large and small covers.
- 6. Torque the screws of the covers evenly in a criss cross pattern until the gaskets are compressed to adequately seal the housing.

Copyright 2000 ABB Automation Inc. [December 2000]

PN24984

