

# WHAT IS THE PASSWORD FOR THE WEB PAGE IN THE FENA-01\_11\_21?

---

## **Description:**

What is the password for the web page in the FENA-01/11/21?

## **Answer:**

Default information is the following.

User Name: **admin**

Password: The **last six digits of the MAC ID of the adapter module**, without hyphens. The MAC ID is visible on the cover of the adapter module and in the ABB IP configuration tool.  
Example: If the MAC ID of the adapter module is 00-1C- 01-00-2F-73, the password is **002F73**.

If that does not work then follow the following steps below to reset the password.

- Step 1. Disconnect Ethernet cable from the FENA-xx.
- Step 2. 51.26 (Reserved) = 0
- Step 3. 51.27 (FBA PAR REFRESH) = 1 "Reset"
- Step 4. 51.26 (Reserved) = 17989
- Step 5. 51.27 (FBA PAR REFRESH) = 1 "Reset"
- Step 6. 51.26 (Reserved) = 20033
- Step 7. 51.27(FBA PAR REFRESH) = 1 "Reset"
- Step 8. 51.26 (Reserved) = 0

Author: Jeff Fell – Application Eng.		Date: April 21, 2015
External <a href="http://www.abb.us/drives">http://www.abb.us/drives</a>	Industry – Industrial	Document #: LVD-EOTN98U-EN
Product Categories: FENA-01, FENA-11, FENA-21		Revision: A



***Documents or other reference material:***

User's manual FENA-01/-11/-21 Ethernet adapter module

3AUA0000093568

***Corrective Actions:***

Follow the instructions above.

Author: Jeff Fell – Application Eng.		Date: April 21, 2015
External <a href="http://www.abb.us/drives">http://www.abb.us/drives</a>	Industry – Industrial	Document #: LVD-EOTN98U-EN
Product Categories: FENA-01, FENA-11, FENA-21		Revision: A